


## DISASSEMBLY


### 1. TILT/SWIVEL REMOVAL

- 1) Set the monitor face downward.
- 2) Pressing the latch (a), carefully remove the Tilt/Swivel by pulling it upward.

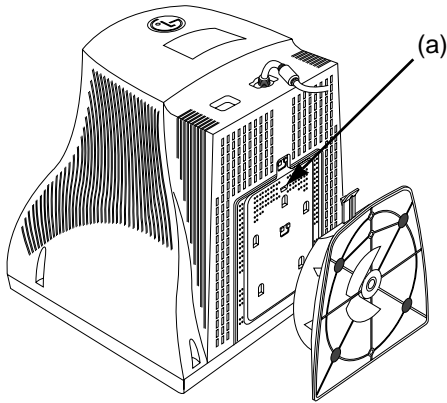


### 2. BACK COVER REMOVAL

- 1) Remove two screws cap (a).
- 2) Remove four screws (b) from the Back Cover.
- 3) Slide the Back Cover away from the Front Cabinet of the monitor.

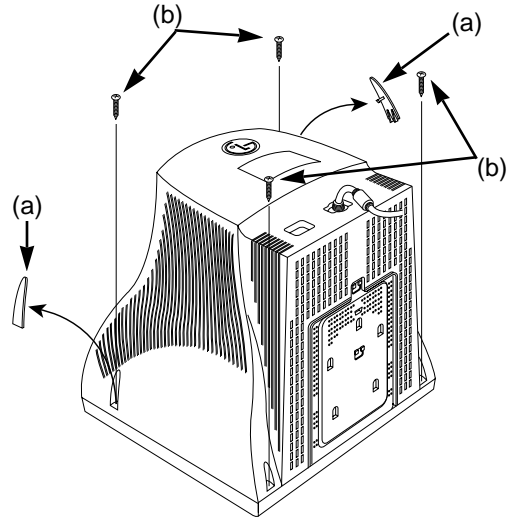


### 3. TOTAL CHASSIS ASSEMBLY REMOVAL

- 1) Disconnect P902(Degaussing pin), P704(DY pin), P501(Tilt pin), P502(Purity pin), P401, P402 and P701, P702, P703 from the Main PCB.
- 2) Remove eight connect (a).
- 3) Carefully separate the CDT Board Assembly from the CDT neck.
- 4) Discharge the remaining static electricity by shorting between the Anode Cap and the CDT ground.
- 5) Disconnect the Anode Cap from the CDT.
- 6) Remove two screws (b).
- 7) Remove the Total Chassis Assembly from the Main Frame.

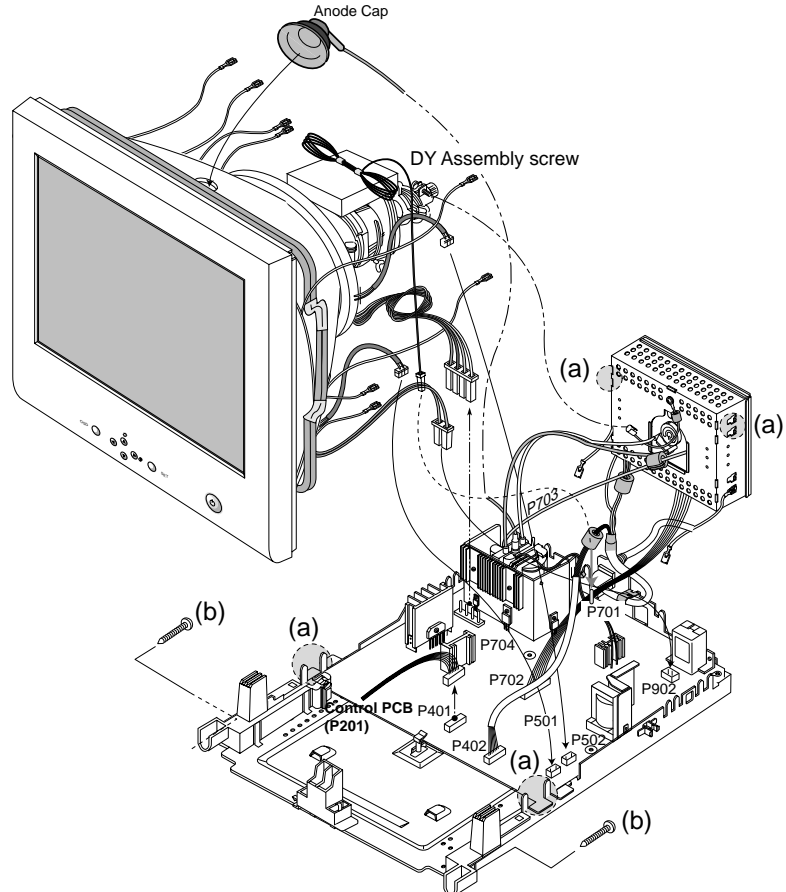


#### 4. VIDEO PCB ASSEMBLY REMOVAL

- 1) Remove three connect (a).
- 2) Disconnect P301, P302 from the Video PCB Assembly.
- 3) Remove screw (b).
- 4) Remove the Video PCB Assembly.

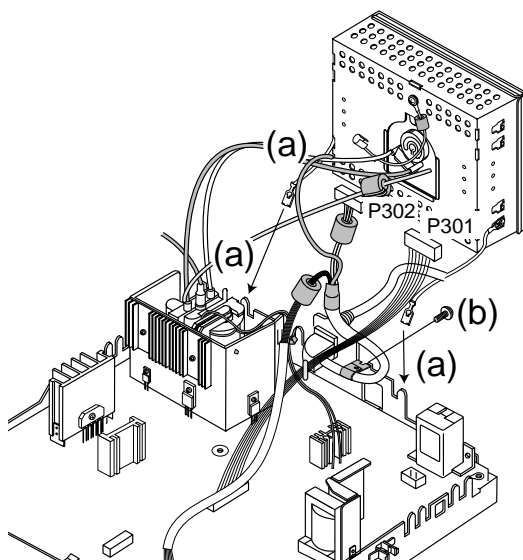

#### 5. CONTROL PCB ASSEMBLY REMOVAL

- 1) Remove three screws (a).
- 2) Remove the Control PCB Assembly from the Front Cabinet.

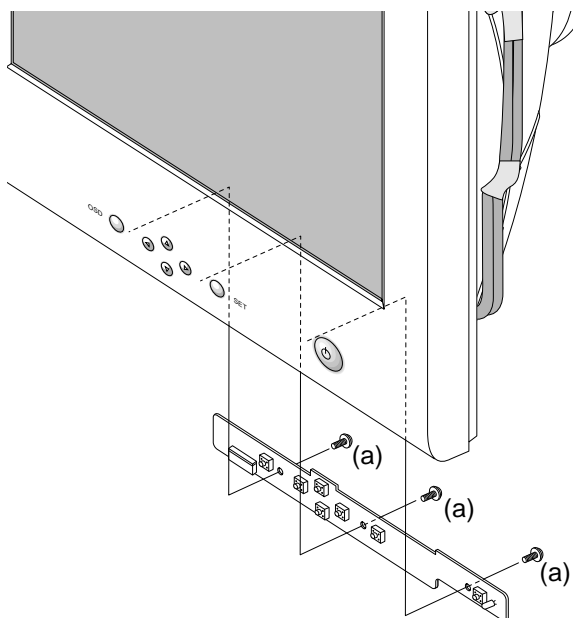

#### 6. MAIN PCB ASSEMBLY REMOVAL

- 1) Remove holder (a).
- 2) Remove the Bracket Guide.
- 3) Remove four screws (b).
- 4) Remove the Main PCB Assembly.

