



Remove the screw ❸ on the front side (below). Then, remove the one on the rear side.

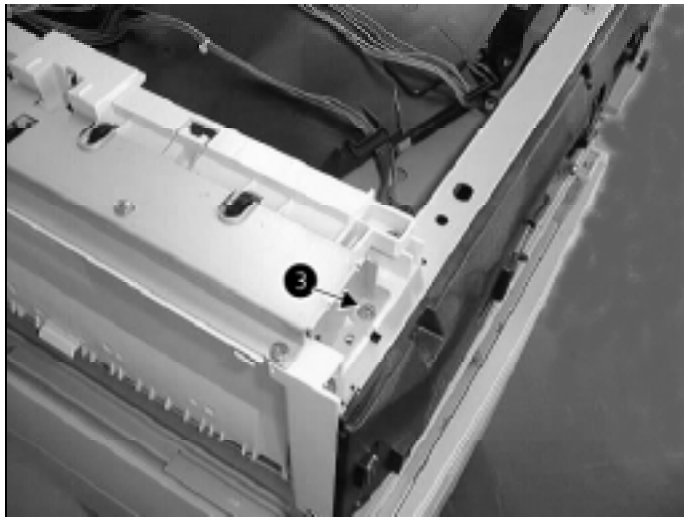

Removing the manual feed roller/Separator

While pressing the locking tab ❶ in, remove the manual feed roller.

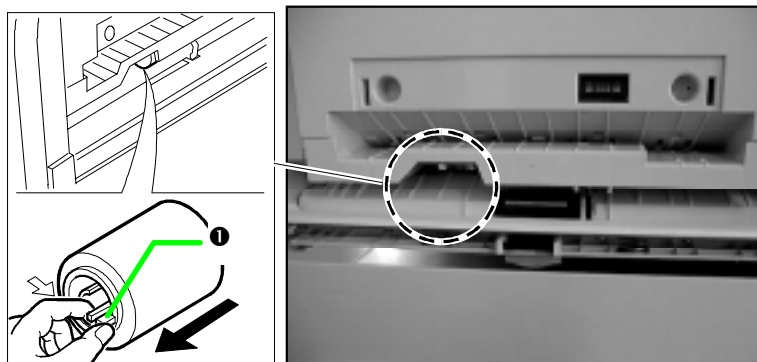


To remove the separator ❷, use a small flat blade screwdriver in the manner shown below.




Drive gears assembly


Begin removing the driver gear assembly by first removing the sub gears assembly C. This assembly mounts gears for driving the toner container and the waste toner conveyer. To remove this assembly, remove two screws ❶.

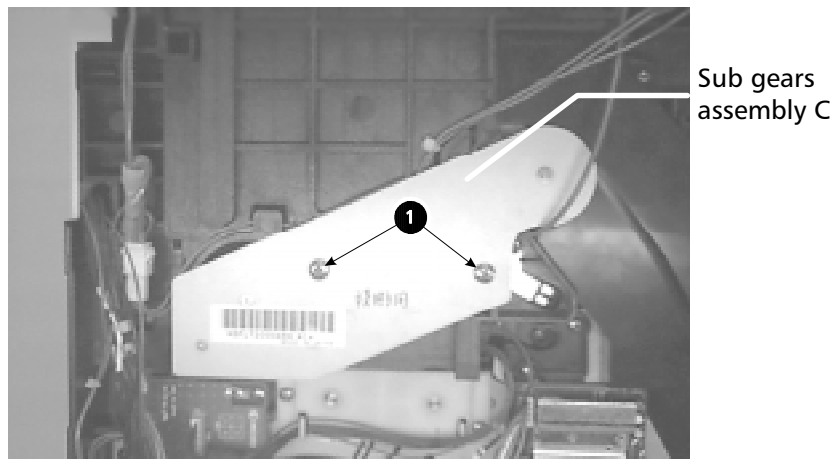


Then, remove the waste toner conveyer housing. To remove this part, remove three screws ❷. The right side cover must be removed first. Remove five screws. Detach two connectors. Then remove the drive assembly from the printer.

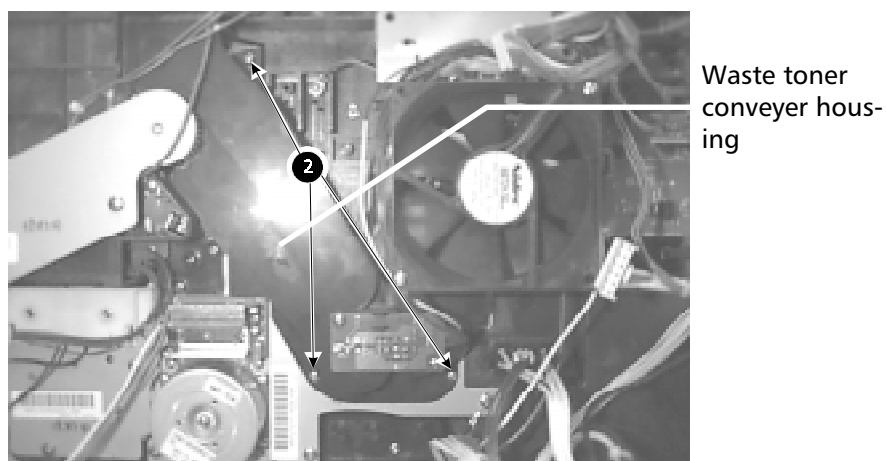

To remove the main motor assembly, remove all screws indicated as ③ below.

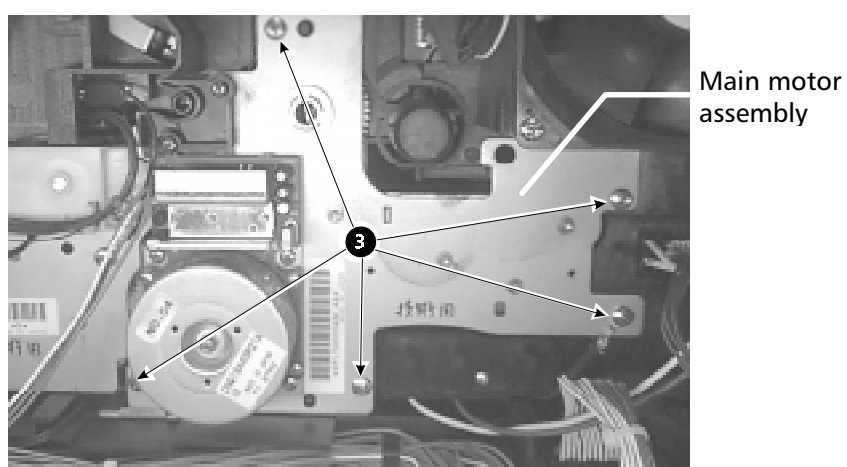

To remove the drive gears assembly, remove three screws ④ as shown below.

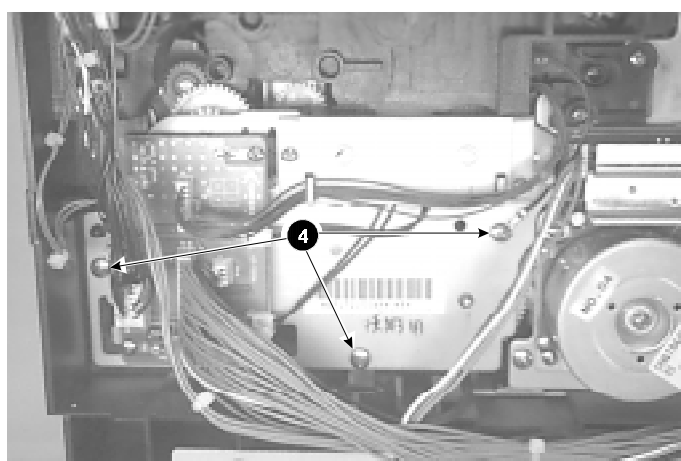


Removing the fuser unit


The fuser unit can be detached from the feed unit without needing a tool. To remove the fuser unit, first, open the feed unit. To open the feed unit, raise and hold the (green) handle and pull the feed unit frontwards gently.




Warning—The fuser is hot after the printer was running. Wait until it cools down.

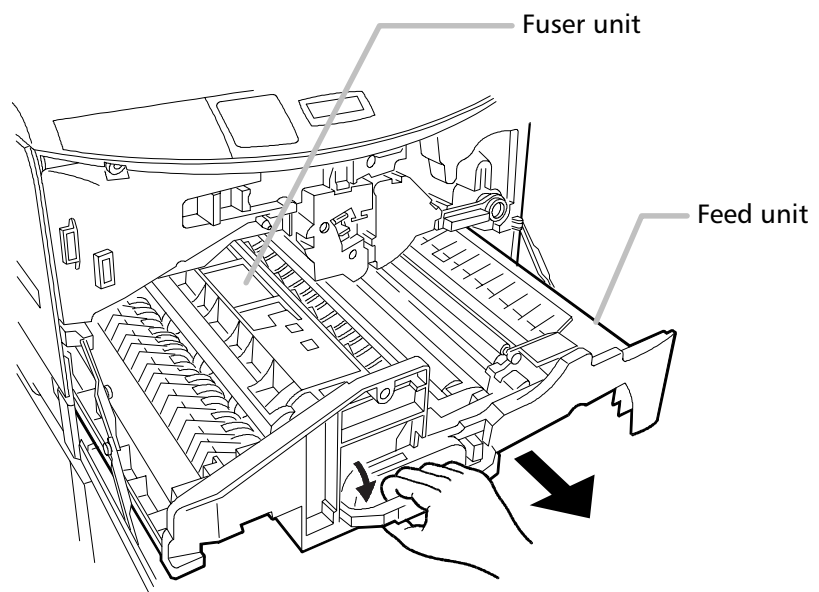

To remove the fuser unit, unlatch the fuser unit from the feed unit. This is done by releasing the latch at both sides of the fuser unit in the manner shown below.

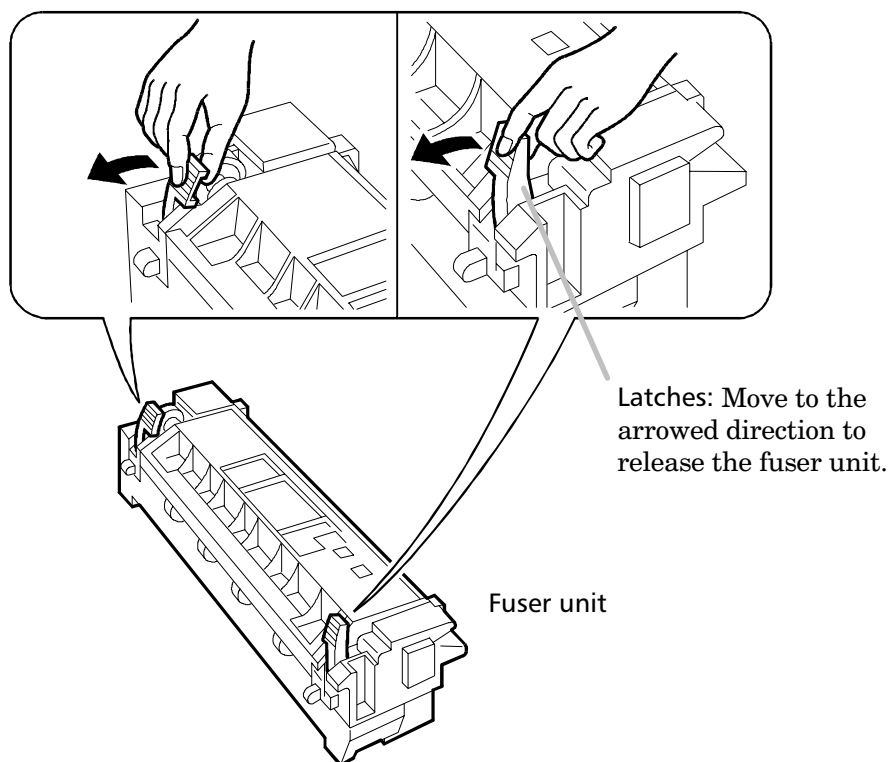


Then, hold the fuser unit using both hands and lift gently. Remove as shown below.

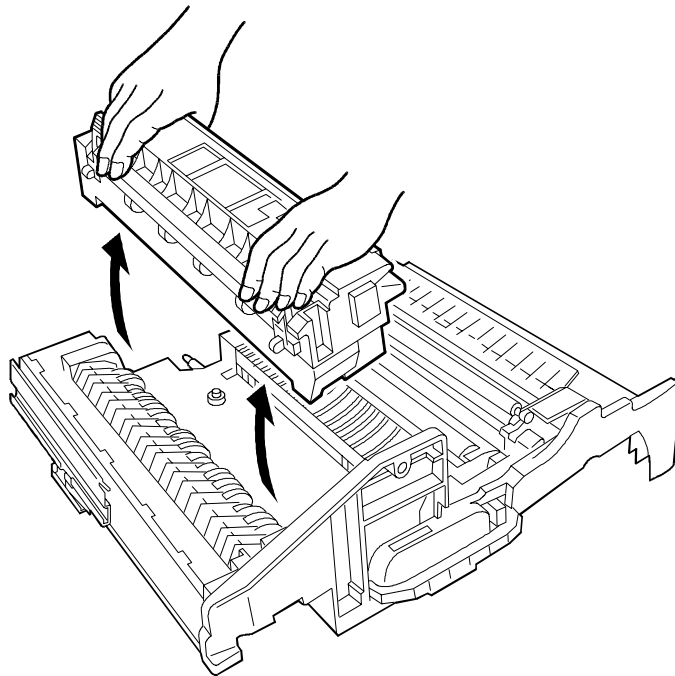


REMOVING HEATER LAMPS

The fuser unit includes two heater lamps which are different in function and shape (length). To gain access to the heater lamps in the fuser, first, remove the cover (on the connector side) as shown below, by removing two screws ❶.

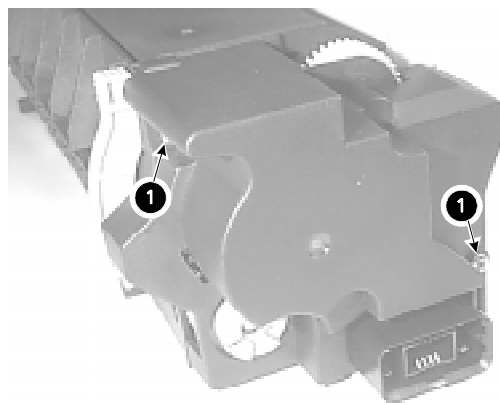


Fuser unit

Remove the screw ❷ shown below and remove the terminal.

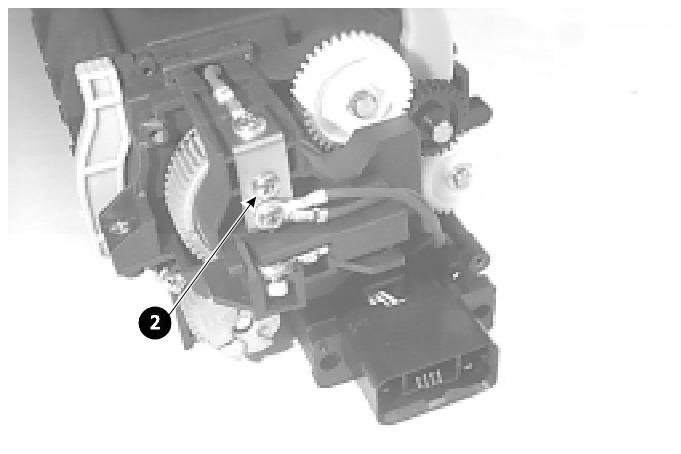

Remove the appropriate screw ③ to remove the lamp.

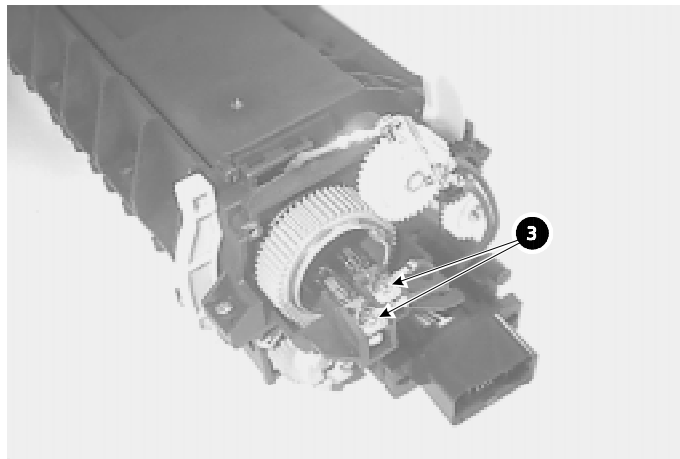

Warning—The heater is extremely hot immediately after the printer was running. Allow substantial period of time until it cools down. Also, the heater is fragile: Handle it with great care.

Caution—The heater lamps are fragile. Use extreme care when handling not to drop or break.

Caution—Do not directly touch on the heater lamp. Finger prints on the heater's outer surface can prevent proper fusing of toner on paper.

Removing the laser scanner

To remove the laser scanner, the top cover and the face-down unit must be removed first. For details, see page 5-15.



Warning—The laser scanner contains electrostatic-sensitive parts inside (laser diode, etc.). Before touching the laser scanner, provide an antistatic (discharging) device, such as a wrist strap, that can effectively discharge your body.

To remove the laser scanner, remove screws ❶ and ❷. Detach connectors as needed. **After removing the scanner, handle it carefully.**

