

DIAGRAMS MANUAL



MODEL 2100A COMPUTER

SERIAL NUMBERS COVERED

This manual applies directly to Model 2100A Computers having serial numbers prefixed 1136, 1140, 1145, 1146, 1147, 1148, 1150, 1202, 1203, 1215, 1224, 1230, 1238, 1243, 1244, 1249, 1250, 1304, 1306, 1312, and 1314. Computers with higher prefix numbers will be covered in manual updating supplements.

OPTIONS COVERED

This manual covers options 001, 004, 008, 012, 015, 016, 024, and 032 as well as the basic computer.

ACCESSORIES COVERED

This manual covers the following accessory kits:

12884A, 12884A-001 and 12884A-002

Memory (4K Increments) Accessory Kits

12885A, 12885A-001, 12885A-002, 12885A-003,
and 12885A-004 Memory (8K Increments)
Accessory Kits

12895A Direct Memory Access Accessory Kit

12899A Operator Panel Accessory Kit

12901A Floating-Point Hardware Accessory Kit

HP Computer Museum

www.hpmuseum.net

For research and education purposes only.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION			
1-1. Introduction	1-1	2-58. Schmitt Trigger Circuit	2-8
1-4. Scope	1-2	2-62. One-Shot Multivibrator	2-8
1-7. Major Assembly Configurations	1-2	2-67. Free-Running Multivibrator	2-8
		2-72. Amplifier	2-9
II LOGIC SYMBOLOGY		2-77. Capacitive Coupling	2-9
2-1. Introduction	2-1	2-79. Multipurpose Logic Symbol	2-9
2-4. Inversion	2-1	2-82. Integrated Circuit Characteristics and Diagrams	2-10
2-6. Gates	2-1		
2-9. "And" Gate	2-1	III WIRING INFORMATION	
2-11. "Or" Gate	2-1	3-1. Introduction	3-1
2-13. "Nand" Gate	2-2	3-3. Backplane Wiring	3-1
2-15. "Nor" Gate	2-2	3-8. Power Supply Wiring	3-1
2-17. Exclusive "Or" Gate	2-2	3-10. Plenum Chamber Wiring	3-1
2-21. Exclusive "Nor" Gate	2-2	3-13. Cable Assembly Wiring	3-1
2-23. Expander Gate	2-2		
2-26. Encoding Gate	2-3	IV DIAGRAMS	
2-29. Multivibrations	2-3	4-1. Introduction	4-1
2-32. Flip-Flop	2-4	4-3. Abbreviations and Mnemonics	4-1
2-35. R-S Flip-Flop	2-4	4-5. Assembly Locations	4-1
2-39. Clocked R-S Flip-Flop	2-4	4-7. Card Connectors	4-1
2-42. Toggle Flip-Flop	2-5	4-9. Replaceable Parts Lists	4-1
2-44. J-K Flip-Flop	2-6	4-14. Parts Location and Schematic Diagrams	4-1
2-45. Clocked J-K Flip-Flop	2-6	4-19. Reference Numbers	4-2
2-49. Latching Flip-Flop	2-6		
2-52. Delay Flip-Flop	2-7		
2-53. Gate Flip-Flop	2-7		

LIST OF ILLUSTRATIONS

Figure	Title	Page	Figure	Title	Page
1-1.	Hewlett-Packard 2100A Computer	1-1	2-36.	Integrated Circuit Diagrams	2-11
2-1.	Gate Symbols	2-1	2-37.	Nonstandard Integrated Circuit Descriptions	2-20
2-2.	Three-Input "And" Gate, Logic Symbol and Truth Table	2-1	3-1.	Backplane, Wiring Diagram	3-19
2-3.	Three-Input "Or" Gate, Logic Symbol and Truth Table	2-1	3-2.	Plenum Chamber A26, Wiring Diagram	3-21
2-4.	Three-Input "Nand" Gate, Logic Symbol and Truth Table	2-2	4-1.	Major Assembly Locations	4-17
2-5.	Three-Input "Nor" Gate, Logic Symbol and Truth Table	2-2	4-2.	Card Cage Loading Configuration for Each Memory Size	4-19
2-6.	Three-Input Exclusive "Or" Gate, Logic Symbol and Truth Table	2-2	4-3.	Particulars for Typical Printed Circuit Cards	4-20
2-7.	Three-Input Exclusive "Nor" Gate, Logic Symbol	2-2	4-4.	A1 Timing and Control Card, Parts Location and Schematic Diagrams	4-25
2-8.	Simplified Expander Gate, Logic Symbol	2-3	4-5.	A2 ROM Control Card, Parts Location and Schematic Diagrams	4-33
2-9.	Actual Expander Gate, Logic Symbol	2-3	4-6.	A3 Microinstruction Decoder 1 Card, Parts Location and Schematic Diagrams	4-43
2-10.	Three-Input Encoding Gate, Logic Symbol	2-3	4-7.	A4 Microinstruction Decoder 2 Card, Parts Location and Schematic Diagrams	4-49
2-11.	Circuit of Typical Encoding Gate	2-3	4-8.	A5 Arithmetic/Logic Card, Parts Location and Schematic Diagrams	4-55
2-12.	Basic Logic Symbol for Multivibrator	2-4	4-9.	A6 Instruction Register Decoder Card, Parts Location and Schematic Diagrams	4-61
2-13.	Flip-Flop Logic Symbol (General)	2-4	4-10.	A7 I/O Control Card, Parts Location and Schematic Diagrams	4-71
2-14.	R-S Flip-Flop, Logic Symbol and State Table	2-4	4-11.	A8 I/O Buffer Card, Parts Location and Schematic Diagrams	4-81
2-15.	Clocked R-S Flip-Flop, Logic Symbol and Switching Waveforms	2-5	4-12.	A9 Direct Memory Access Card (Accessory), Parts Location and Schematic Diagrams	4-87
2-16.	R-S Flip-Flop with Inverted Clock Input, Logic Symbol and Switching Waveforms	2-5	4-13.	A16 I/O Terminator Card, Parts Location and Schematic Diagrams	4-91
2-17.	Logic Symbol for Clocked R-S Flip-Flop with Direct Set and Direct Clear Inputs	2-5	4-14.	A24 Operator Panel Card, Parts Location and Schematic Diagrams	4-97
2-18.	Toggle Flip-Flop, Logic Symbol and Switching Waveforms	2-5	4-15.	A24 Controller Panel Card (Option 001), Parts Location and Schematic Diagrams	4-105
2-19.	Toggle Flip-Flop with Inverted Input, Logic Symbol and Switching Waveforms	2-6	4-16.	A101 X-Y Driver/Switch Card, Parts Location and Schematic Diagrams	4-109
2-20.	J-K Flip-Flop, Logic Symbol	2-6	4-17.	A102 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams	4-115
2-21.	Clocked J-K Flip-Flop, Logic Symbol and State Table	2-6	4-18.	A102 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams	4-125
2-22.	Latching Flip-Flop, Logic Symbol and Switching Waveforms	2-7	4-19.	A103 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams	4-127
2-23.	Delay Flip-Flop, Logic Symbol and Switching Waveforms	2-7	4-20.	A103 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams	4-135
2-24.	"Nand" Gate Flip-Flop, Logic Symbol	2-7	4-21.	A104 X-Y Driver/Switch Card, Parts Location and Schematic Diagrams	4-137
2-25.	"Nor" Gate Flip-Flop, Logic Symbol	2-8	4-22.	A105 Inhibit Driver Card (8K), Parts Location and Schematic Diagrams	4-143
2-26.	Schmitt Trigger Circuit, Logic Symbol	2-8	4-23.	A105 Inhibit Driver Card (16K), Parts Location and Schematic Diagrams	4-149
2-27.	One-Shot Multivibrator, Logic Symbol	2-8			
2-28.	Free-Running Multivibrator, Logic Symbol	2-8			
2-29.	Input and Output Waveforms of Controlled Free-Running Multivibrator	2-9			
2-30.	Amplifier, Logic Symbol	2-9			
2-31.	Differential Amplifier, Logic Symbol	2-9			
2-32.	Phase Splitter, Logic Symbol	2-9			
2-33.	Capacitive Coupling	2-9			
2-34.	Multipurpose Logic Symbol	2-10			
2-35.	Nonstandard Logic Symbols	2-10			

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page	Figure	Title	Page
4-24.	A106 Inhibit Driver Load Card, Parts Location and Schematic Diagrams	4-153	4-28.	A110 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams	4-173
4-25.	A107 Data Control Card, Parts Location and Schematic Diagrams	4-159	4-29.	A111 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams	4-177
4-26.	A108 Inhibit Driver Card (16K), Parts Location and Schematic Diagrams	4-167	4-30.	A112 X-Y Driver/Switch Card, Parts Location and Schematic Diagrams	4-179
4-27.	A109 X-Y Driver/Switch Card, Parts Location and Schematic Diagrams	4-169	4-31.	A26 Plenum Chamber Assembly, Schematic Diagram	4-182

LIST OF TABLES

Table	Title	Page	Table	Title	Page
1-1.	Major Assembly Configurations	1-3	4-9.	A7 I/O Control Card, Replaceable Parts	4-67
2-1.	Integrated Circuit Characteristics	2-18	4-10.	A8 I/O Buffer Card, Replaceable Parts	4-77
3-1.	Backplane, Functional Wiring List	3-3	4-11.	A9 Direct Memory Access Card (Accessory), Replaceable Parts	4-83
3-2.	Front Panel Connector XA24, Point-to-Point Wiring List	3-18	4-12.	A16 I/O Terminator Card, Replaceable Parts	4-89
3-3.	Power Distribution, Point-to-Point Wiring List	3-19	4-13.	A24 Operator Panel Card, Replaceable Parts	4-93
3-4.	Plenum Chamber A26, Point-to-Point Wiring List	3-21	4-14.	A24 Controller Panel Card (Option 001), Replaceable Parts	4-103
4-1.	Signal Index	4-3	4-15.	A101, A104, A109, A112 X-Y Driver/Switch Card, Replaceable Parts	4-107
4-2.	Memory Section Card Part Numbers	4-18	4-16.	A102, A103 Core Stack/Sense Amplifier Card (4K), Replaceable Parts	4-111
4-3.	A1 Timing and Control Card, Replaceable Parts	4-21	4-17.	A102, A103, A110, A111 Core Stack/Sense Amplifier Card (8K), Replaceable Parts	4-121
4-4.	A2 ROM Control Card, Replaceable Parts	4-29	4-18.	A105 Inhibit Driver Card (8K), Replaceable Parts	4-139
4-5.	A3 Microinstruction Decoder 1 Card, Replaceable Parts	4-39	4-19.	A105, A108 Inhibit Driver Card (16K), Replaceable Parts	4-145
4-6.	A4 Microinstruction Decoder 2 Card, Replaceable Parts	4-45	4-20.	A106 Inhibit Driver Load Card, Replaceable Parts	4-151
4-7.	A5 Arithmetic/Logic Card, Replaceable Parts	4-51	4-21.	A107 Data Control Card, Replaceable Parts	4-155
4-8.	A6 Instruction Register Decoder Card, Replaceable Parts	4-57	4-22.	A26 Plenum Chamber, Replaceable Parts	4-181


1-1. INTRODUCTION.

1-2. This Diagrams Manual, part no. 02100-90003, is one in a set of five manuals that document the Hewlett-Packard 2100A Computer (figure 1-1). The other manuals in the series are: the Power Supply Operating and Service Manual, part no. 5951-3038, the Reference Manual, part no. 02100-90001, the Installation and Maintenance Manual, part no. 02100-90002, and the Illustrated Parts Breakdown (IPB), part no. 02100-90004. The computer is documented in the five manuals as follows:

- a. This Diagrams Manual provides interconnecting information and schematic diagrams for all assemblies of the computer except the power supply.
- b. The Power Supply Manual contains all the information necessary to troubleshoot and repair the power supply. This includes installation instructions, schematic diagrams, and replaceable parts information.

- c. The Reference Manual contains specifications, operating instructions, and programming information for the computer.
- d. The Installation and Maintenance Manual contains instructions for installation, maintenance, troubleshooting, and repair of the computer, except as covered in the Power Supply Manual.
- e. The IPB Manual contains replaceable parts ordering information, replaceable parts lists, exploded views, part location diagrams, and numerical lists of parts for all assemblies of the computer except the power supply.

1-3. Unless otherwise stated in future updating supplements, information contained in this manual is applicable to 2100A Computers having serial numbers with the prefixes listed on the title page of this manual.

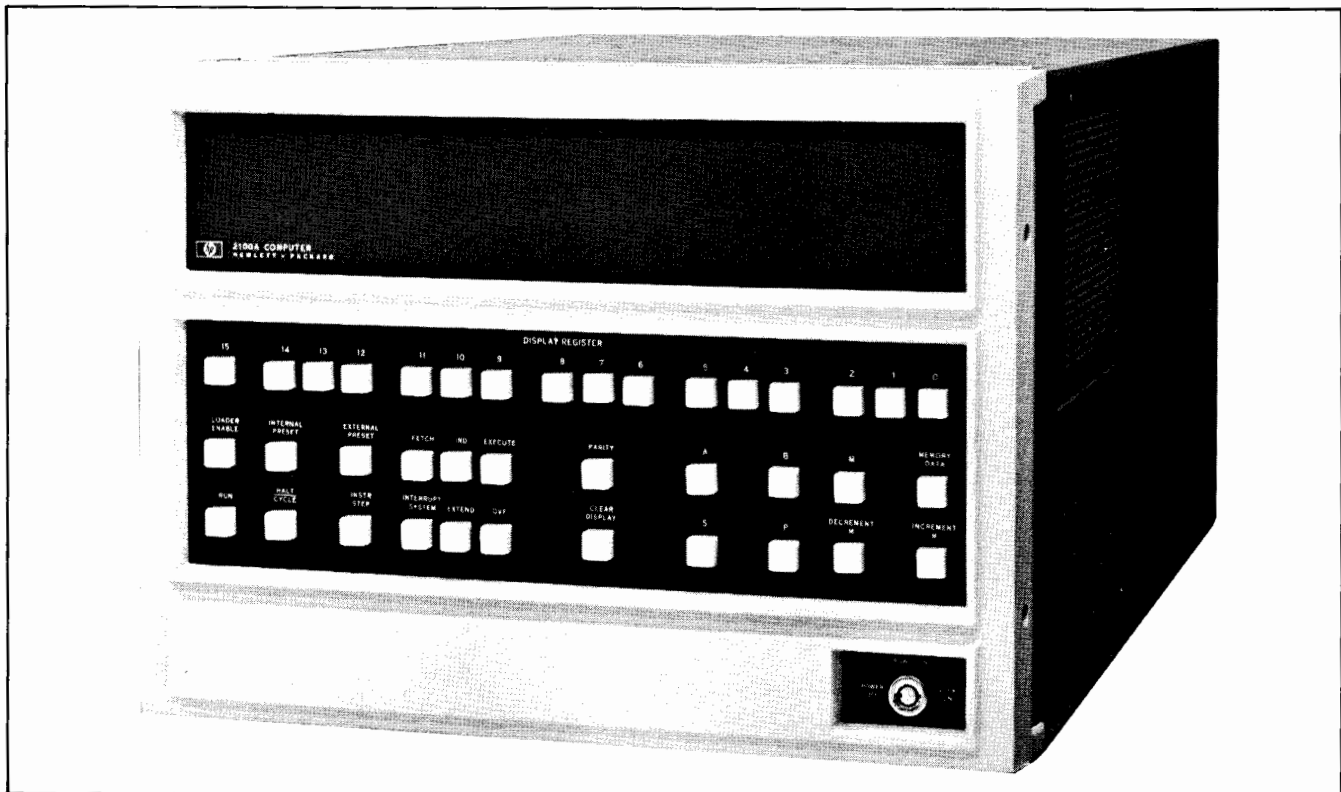

2133-7

Figure 1-1. Hewlett-Packard 2100A Computer

1-4. SCOPE.

1-5. This manual is intended for use by maintenance personnel who are familiar with the circuit theory and maintenance procedures of the 2100A. A thorough understanding of the information presented in the Reference Manual and the Installation and Maintenance Manual for the computer is essential to using the material presented in this manual.

1-6. Sections II, III, and IV of this manual contain the following information:

- a. Section II, Logic Symbolology. Section II describes and defines the logic symbolology used in this manual. It also includes integrated circuit diagrams and characteristics and descriptions of nonstandard integrated circuits.
- b. Section III, Wiring Information. Section III contains cable wiring information, wiring lists, and wiring diagrams.
- c. Section IV, Diagrams. Section IV contains parts location diagrams, replaceable parts lists, and schematic diagrams for each printed circuit card used in the computer, including the optional memory and control

cards. Lists of signal interconnections are included to enable quick signal tracing between cards. Use of these lists is described in Section IV. The section also includes an alphabetical list of the signal mnemonics used on the schematic diagrams and in the backplane wiring list.

- d. Updating Supplements. If required, updating supplements are included with this manual. These supplements make the manual applicable to computers with serial numbers prefixed higher than the prefixes given on the title page of this manual.

1-7. MAJOR ASSEMBLY CONFIGURATIONS.

1-8. Table 1-1 lists the serial number prefixes of the computers covered by this manual and the date codes of the circuit card and power supply assemblies originally installed in these computers at the factory. (The Identification paragraphs in the computer Installation and Maintenance Manual describe serial number prefixes and circuit-card date codes.)

1-9. The assembly configurations may vary from those shown in table 1-1 because of field modifications, repairs, or other reasons requiring assembly exchanges.

Table 1-1. Major Assembly Configurations

COMPUTER SERIAL NUMBER PREFIX	A1 02100- 60014	A2 02100- 60002	A3 02100- 60004	A4 02100- 60022	A4 —	A5 02100- 60001	A6 02100- 60003	A7 02100- 60024	A8 02100- 60007	A9 12895- 60001	A16 02100- 60060	A24 02100- 60015	A24 02100- 60017	A101 A104 A109 A112	A102 A103 A110 A111 8K CARD	A102 A103 A110 A111 8K CARD	A102 A103 A110 A111 8K CARD	A105 4K,8K MEMORY	A105 A108	A106 02100- 60010	A107 02100- 60011	A25 POWER SUPPLY
1136	1116	1106 or 1132	1124	1110	—	1051	1109	1116	1051	1116	1131	1123	1128	1121	1139	1126	—	1049	1049	1046	1132	1126 or 1140
1140	1116	1132	1124	1110	—	1051	1109	1116	1051	1116	1131	1123	1128	1121 or 1132	1139	1126 or 1136	—	1049	1049	1046	1132	1141
1145	1116	1132	1124	1110	—	1051	1109	1116	1051	1116	1131	1123	1128	1121 or 1132	1139	1126 or 1136	—	1049	1049	1046	1132	1141
1146	1116	1132 or 1144	1124	1110	—	1051	1109	1116	1051	1116	1131	1123	1128	1121 or 1132	1139	1126 or 1136	—	1049	1049	1046	1132	1146
1147	1116	1132 or 1144	1124	1110	—	1051	1109	1116	1051	1116	1131	1123	1128	1132	1139	1136	—	1049	1049	1046	1132	1146
1148	1116	1144	1124	1140	—	1051	1140	1144	1051	1116	1131	1123	1128	1132	1139	1136	—	1049	1049	1046	1132	1148 or 1149
1150	1116	1144	1124	1140	—	1051	1140	1144	1051	1116 or 1144	1131	1123	1128 or 1201	1132	1139	1136	—	1049	1049	1046	1132	1150
1202	1116	1144	1124	1140	—	1051	1202	1144	1051	1144	1131	1123	1201	1132 or 1152	1139	1136	—	1049	1049	1046	1132	1150
1203	1116	1144	1124 or 1144	1140	—	1051	1202	1144	1051	1144	1131	1123	1201	1152	1139	1136	1208	1049	1049	1046	1132	1150
1215	1116	1144	1144	1140	—	1051	1202	1215	1051	1144	1131	1123	1201	1152	1139	1136	1208	1049	1049	1046	1132	1215
1224	1116 or 1144	1144	1144	1140	—	1051	1202	1215	1051 or 1216	1144	1131	1123	1201	1152	1139 or 1148	—	1208	1049	1049	1046	1132	1220
1230 1238	1144 1144	1144 1144	1144 1144	1140 1140	— —	1051 1051	1238 1238	1215 1215	1216 1216	1144 1144	1131 1131	1123 1123	1201 1201	1152 1152	1148 1148	— —	1208 1208	1049 1049	1049 1049	1046 1046	1132 1132	1220 1229
1243	1144	1144	1144	1140	—	1051	1238	1215	1216	1144	1131	1123	1201	1152	1148	—	1208	1049	1049	1046	1132	1243
1244	1144	1144	1144	1140	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1208	1049	1049	1046	1132	1243
1249	1144	1144	1144	1140	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1208	1049	1049	1046	1132	1249
1250	1144	1144	1144	1140	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1208	1049	1049	1046	1132	1250
1304	1144	1144	1144	1144	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1208	1049	1049	1046	1132	1250
1306	1144	1144	1144	1144	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1301	1049	1049	1046	1132	1250
1312	1144	1144	1144	1144	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1301	1049	1049	1046	1312	1250
1314	1144	1144	1144	1144	—	1051	1238	1215	1216	1144	1131	1244	1201	1152	1148	—	1301	1049	1049	1046	1312	1314

NOTE: A separate Operating and Service Manual, part number 5951-3038, is supplied for the A25 Power Supply Assembly.

2-1. INTRODUCTION.

2-2. Three basic symbol shapes distinguish the major classes of logic circuits depicted in this manual. These classes are gates, regenerative switching elements, and amplifiers. Each symbol, and a brief explanation of its operation, is given below. Additional markings on the basic symbols aid in determining actual circuit operation.

2-3. In addition to the basic symbols, a general multi-purpose symbol is used wherever a standardized logic symbol does not exist. A brief explanation of this multi-purpose symbol is included below. Following the logic descriptions are a table of integrated circuit characteristics and a set of integrated circuit diagrams.

2-4. INVERSION.

2-5. Logic inversion is indicated by an inversion dot at the input or output of a logic symbol. When this dot appears at the input of a logic symbol, the input will be effective when the input signal is of the opposite polarity to that normally required. When the dot appears at the output of a logic symbol, the output will be of the opposite polarity to that normally delivered.

2-6. GATES.

2-7. A gate is a circuit which produces a binary output when certain input conditions are met. The gate symbol has input lines connecting to the flat side of the symbol, and output lines connecting to the curved side (see figure 2-1). Since the inputs and outputs are easily identifiable, the symbol may be shown left-facing, right-facing, or facing up or down.

2-8. There are four basic types of gates, "and," "or," "nand," and "nor," each named for the logic function that it performs. Each of these gates is described below. In addition, a brief explanation of an "expander" gate is given following the descriptions of the basic logic gates.

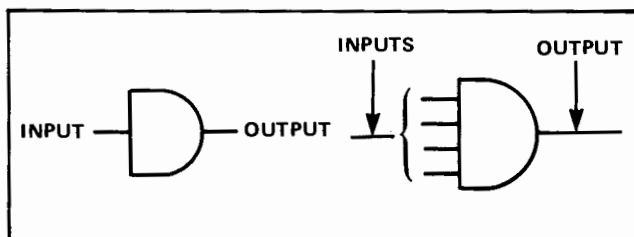


Figure 2-1. Gate Symbols

2-9. "AND" GATE.

2-10. The "and" gate (see figure 2-2) performs a logical "and" function. It will produce a logical-true output only when all of its input lines are true. Input A and input B and input C must be true for a true output to be generated.

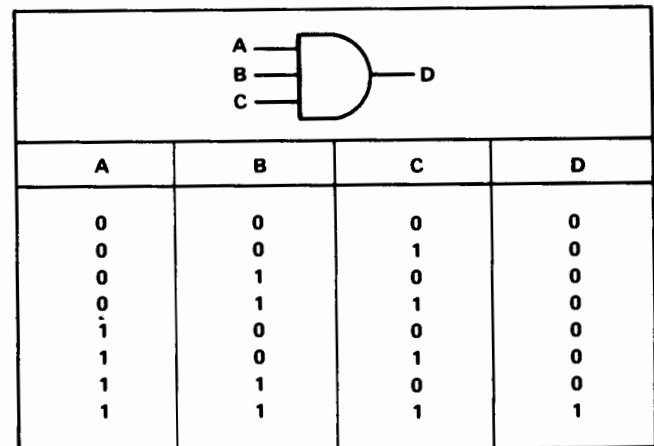


Figure 2-2. Three-Input "And" Gate, Logic Symbol and Truth Table

2-11. "OR" GATE.

2-12. The "or" gate (figure 2-3) performs a logical "or" function. It produces a true output when one or more inputs are true. The truth table in figure 2-3 shows the various states of a three-input "or" gate.

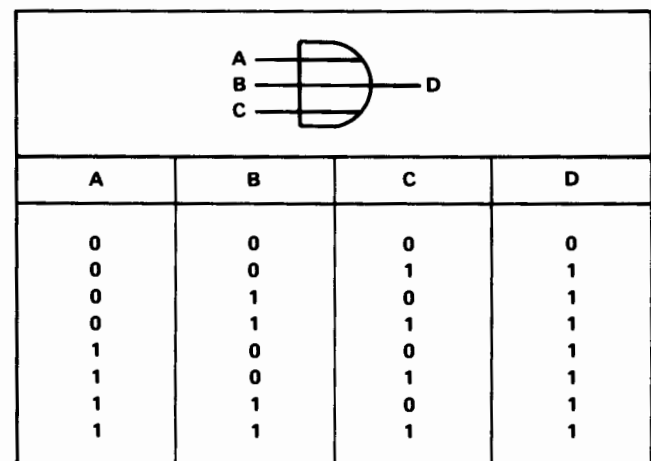


Figure 2-3. Three-Input "Or" Gate, Logic Symbol and Truth Table

2-13. "NAND" GATE.

2-14. The "nand" gate (figure 2-4) is similar to the "and" gate described previously, except that its output is inverted. The gate generates a false output when all inputs are true. The various states of a three-input "nand" gate are shown in the truth table in figure 2-4.

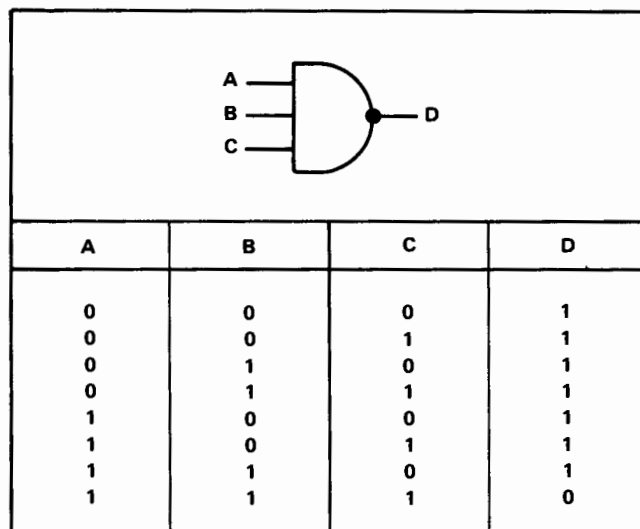


Figure 2-4. Three-Input "Nand" Gate, Logic Symbol and Truth Table

2-15. "NOR" GATE.

2-16. The "nor" gate (figure 2-5) is identical with the "or" gate described previously, except that its output is inverted. The gate generates a false output when one or more inputs are true. The various states of a three-input "nor" gate are shown in the truth table in figure 2-5.

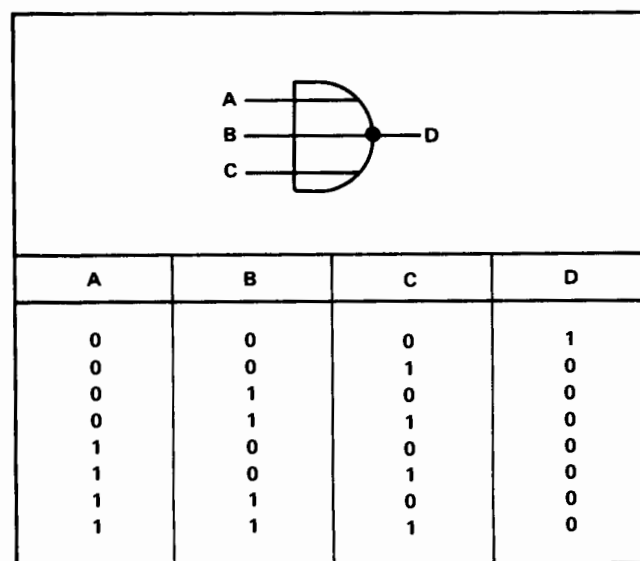


Figure 2-5. Three-Input "Nor" Gate, Logic Symbol and Truth Table

2-17. EXCLUSIVE "OR" GATE.

2-18. The exclusive "or" gate (figure 2-6) is a variation of the basic "or" gate. It has two or more input signals. The output is true when an odd number of inputs are true.

2-19. The truth table in figure 2-6 shows the functioning of a three-input exclusive "or" gate.

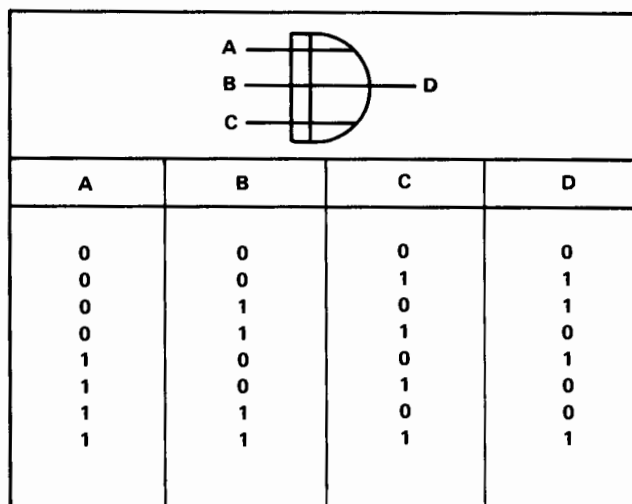


Figure 2-6. Three-Input Exclusive "Or" Gate, Logic Symbol and Truth Table

2-20. It will be noted that operation of the exclusive "or" gate is independent of the electrical polarity of the true and false conditions. The device therefore cannot be described as either positive-true or negative-true.

2-21. EXCLUSIVE "NOR" GATE.

2-22. The exclusive "nor" gate (figure 2-7) is similar to the exclusive "or" gate, except that its output is inverted. The output is therefore true when an even number of inputs are true.

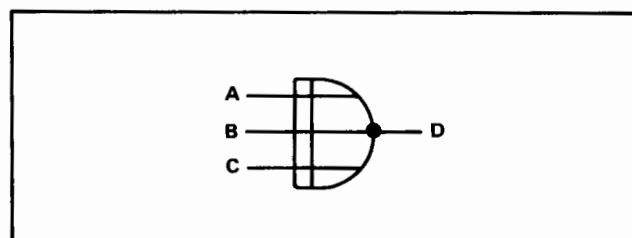


Figure 2-7. Three-Input Exclusive "Nor" Gate, Logic Symbol

2-23. EXPANDER GATE.

2-24. The expander gate provides a means for increasing the number of inputs to a gate. Figure 2-8 shows a simplified method of illustrating this type of gate, and figure 2-9 shows the actual connections between the gates involved.

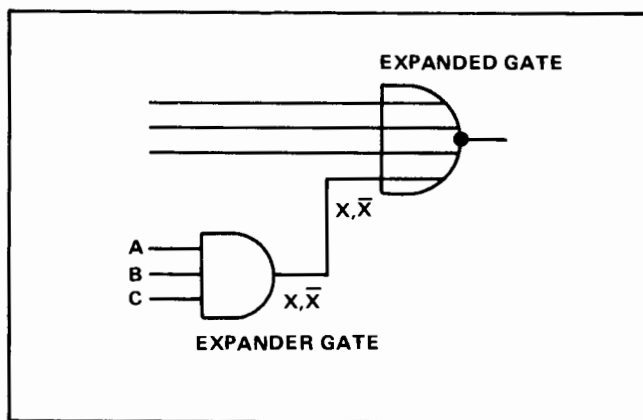


Figure 2-8. Simplified Expander Gate, Logic Symbol

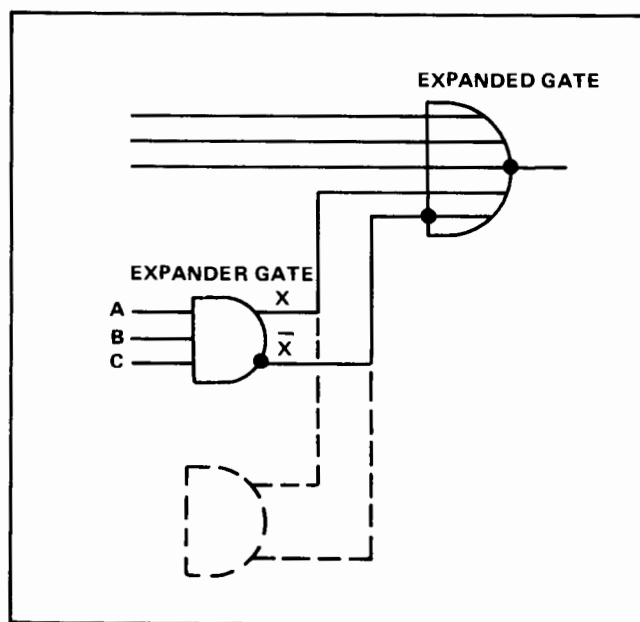


Figure 2-9. Actual Expander Gate, Logic Symbol

The X and \bar{X} outputs of the expander gate are not logical opposites, but they do carry a voltage differential with respect to each other. When one or more inputs to the expander gate are false, there is a voltage difference of a few volts between X and \bar{X} . When all inputs to the expander gate are true, the voltage difference decreases; the two outputs of the expander then act as a true input to the expanded gate. The actual output-voltage differential of the expander gate depends on the type used.

2-25. When more than one expander gate is used, the gate outputs are connected as in parallel, as shown by the dashed lines in figure 2-9.

2-26. ENCODING GATE.

2-27. The encoding gate (figure 2-10) has one input and multiple outputs. Assuming no inverting dot at input A to the symbol, when the input is true all outputs (B , C , and D)

are true. When the input is false, the outputs are either true or false, in accordance with the state of the logic element to which each is connected.

2-28. A typical circuit for an encoding gate is shown in figure 2-11. With A positive, all diodes conduct and all outputs are clamped positive. With A negative, each diode is practically an open circuit, and points B , C , and D assume the voltage level of the circuit to which each is connected.

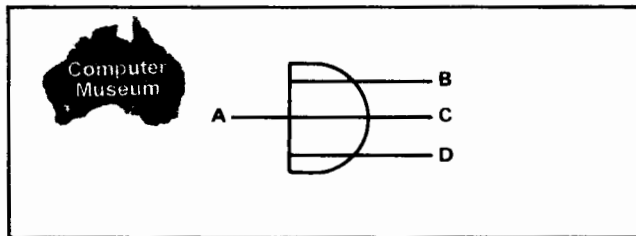


Figure 2-10. Three-Input Encoding Gate, Logic Symbol

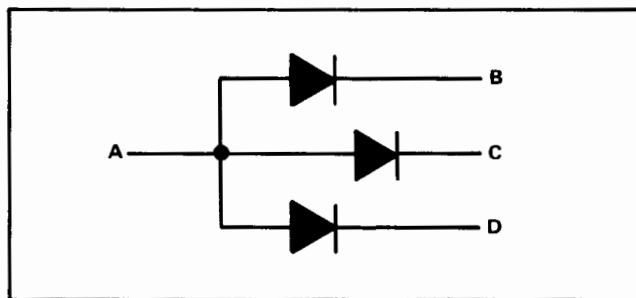


Figure 2-11. Circuit of Typical Encoding Gate

2-29. MULTIVIBRATORS.

2-30. The multivibrators described here are of four main types: flip-flops, Schmitt trigger circuits, one-shot multivibrators, and free-running multivibrators. All furnish a binary output. However, unlike gate circuits, the duration of a multivibrator output signal is not dependent on the duration of an input signal.

2-31. The basic logic symbol for a multivibrator is a rectangle (figure 2-12). Letters in the symbol indicate the type of multivibrator. The rectangle is divided horizontally, with the upper portion representing the "set side" of the unit, and the lower portion representing the "clear side". The multivibrator is "set" when the output from the set side is true. It is "clear" or "reset" when the output from the clear side is true. To avoid confusion, the symbol is always oriented as shown in figure 2-12. Inputs are on the left, outputs on the right.

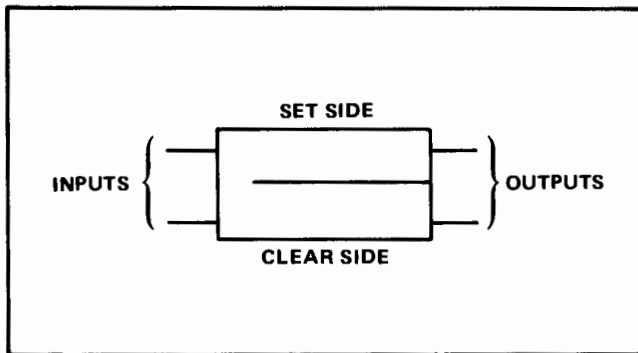


Figure 2-12. Basic Logic Symbol for Multivibrator

2-32. FLIP-FLOP.

2-33. The symbol for a flip-flop is shown in figure 2-13. The letters "FF", preceded by the name of the flip-flop, distinguish this symbol from other types of multivibrators. Additional identification, described later, identifies the particular type of flip-flop.

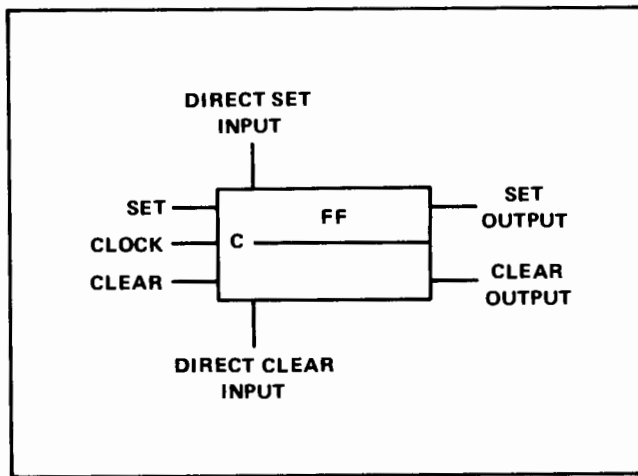


Figure 2-13. Flip-Flop Logic Symbol (General)

2-34. A flip-flop is a bistable switching device; an external signal is required to set the flip-flop, and another to clear it. The flip-flop remains in its current state until switched to the opposite state by the appropriate external signal. Various forms of flip-flop exist, of which seven are described here: the R-S (reset-set), clocked R-S, J-K, clocked J-K, toggle, latch, and delay flip-flops.

2-35. **R-S FLIP-FLOP.** The symbol for the R-S flip-flop (figure 2-14) can be recognized by the fact that there is no information in the symbol identifying it as one of the other six types. The R-S flip-flop has a minimum of two input terminals (A and B in figure 2-14) and one or two output terminals Q and \bar{Q} . One or two additional input terminals, C and D, may be used.

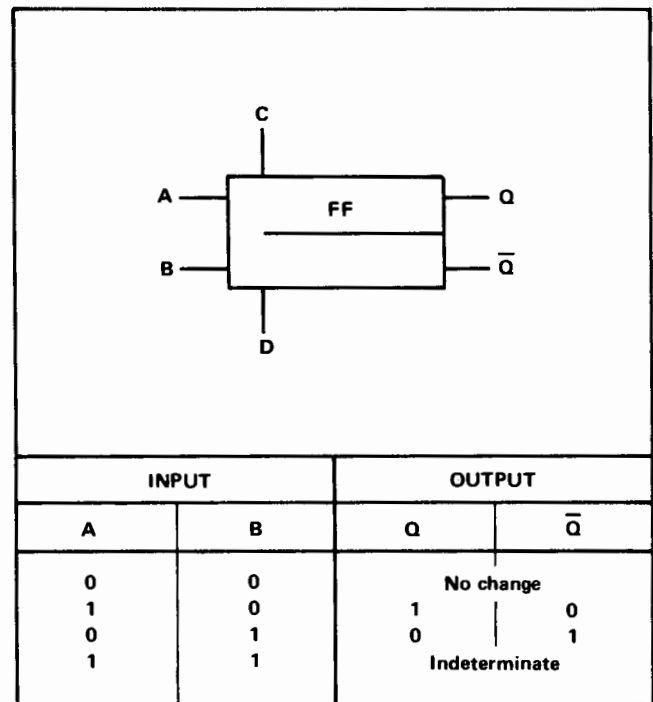


Figure 2-14. R-S Flip-Flop, Logic Symbol and State Table

2-36. The R-S flip-flop is set by a true input at A (assuming no inverting dot at this point). It can also be set by a true input at C, if this input terminal is present. The flip-flop is cleared by a true input at B or D. Figure 2-14 includes a state table, showing the flip-flop outputs resulting from various input conditions.

2-37. After being set or cleared, the R-S flip-flop remains in that condition after termination of the set or clear pulse. If the flip-flop is either set or clear and it receives an input to place it in the existing state, no change takes place in the flip-flop output signals.

2-38. Simultaneous set and clear input signals normally are not permitted, and circuit design usually prevents occurrence of this condition at a time when the flip-flop outputs are used. If simultaneous set and clear inputs are received, both outputs of the flip-flop are true for the duration of the simultaneous inputs. The eventual state of the flip-flop is determined by the input that remains longest in the activating condition.

2-39. **CLOCKED R-S FLIP-FLOP.** This flip-flop is similar to the R-S flip-flop, but it has a clock pulse input (figure 2-15). The logic symbol can be recognized by the letter "C" at this input terminal. At the true-going transition of the clock pulse, the flip-flop becomes set if input A is true, or it becomes clear if input B is true (assuming no inverting dot at the clock pulse input terminal). If inputs A and B are both false during the clock pulse, the flip-flop does not change state. It is not permissible that A and B both be true when true-going clock pulse transition takes place.

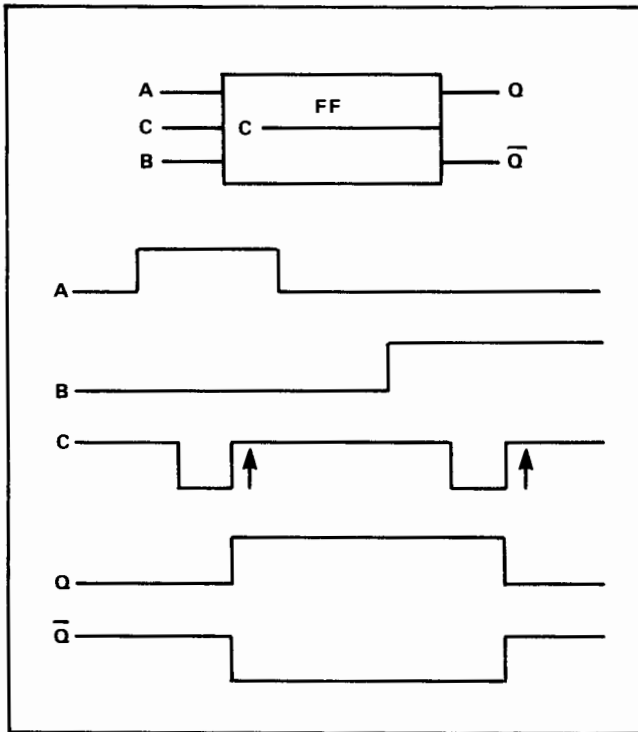


Figure 2-15. Clocked R-S Flip-Flop, Logic Symbol and Switching Waveforms

2-40. When the clocked R-S flip-flop has an inverting dot at the clock pulse input (figure 2-16), the false-going transition of the clock pulse is the transition that is effective in setting or clearing the flip-flop.

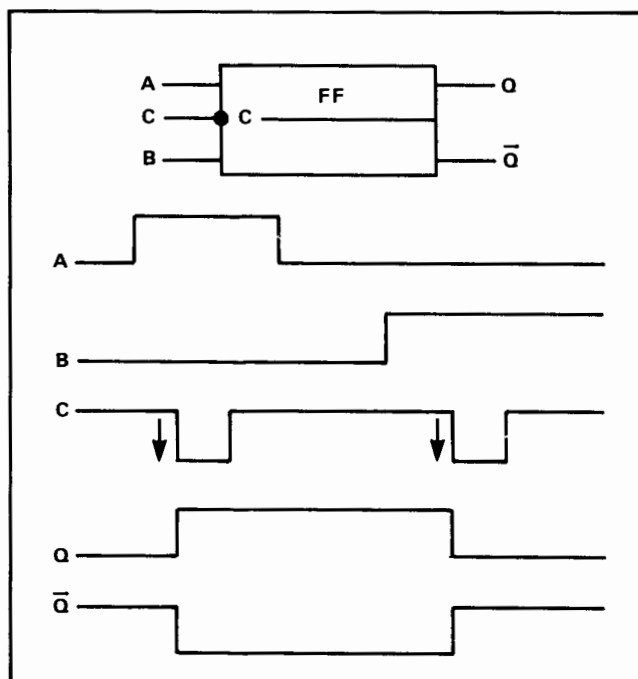


Figure 2-16. R-S Flip-Flop with Inverted Clock Input, Logic Symbol and Switching Waveforms

2-41. In some cases the clocked R-S flip-flop has a set and clear input at the top and bottom of the logic symbol (inputs D and E, figure 2-17). These inputs are independent of the clock pulse, and are referred to as the direct set and direct clear inputs. They function as a result of a true or false level, rather than a true- or false-going transition. An inverting dot at the direct set or clear input indicates that a false level is required to set or clear the flip-flop. No dot indicates that a true level is required. The direct set and clear input is also used on other types of flip-flops.

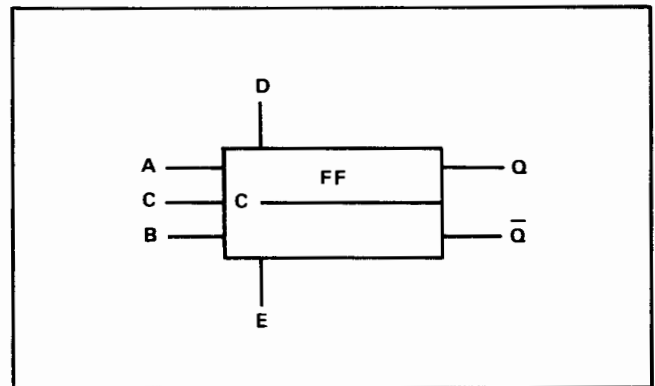


Figure 2-17. Logic Symbol for Clocked R-S Flip-Flop with Direct Set and Direct Clear Inputs

2-42. TOGGLE FLIP-FLOP. The symbol for the toggle flip-flop (figure 2-18) can be recognized by the letter "T" in the symbol. This flip-flop has a single input. If there is no inverting dot at this input, each time the input signal becomes true, outputs Q and \bar{Q} change state. Since two input pulses are required to produce one complete cycle of the output, the toggle flip-flop functions as a divide-by-two element, and is commonly used in groups in counting circuits, with the output of one flip-flop driving the next. Figure 2-18 shows the switching waveforms for one flip-flop.

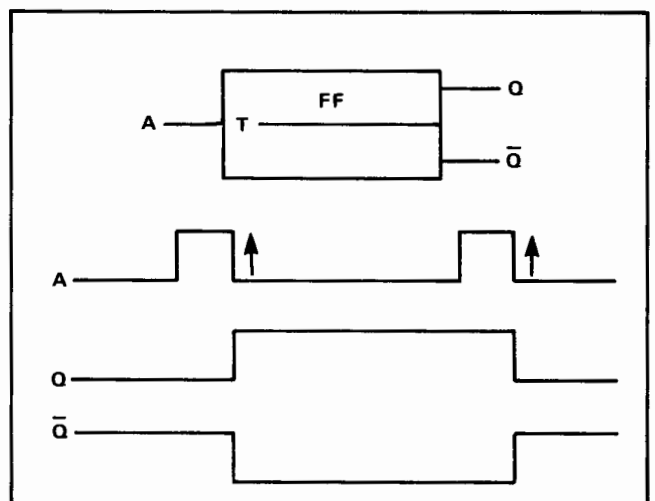


Figure 2-18. Toggle Flip-Flop, Logic Symbol and Switching Waveforms

2-43. If a toggle flip-flop symbol has an inverting dot at the input connection, the flip-flop changes state at the false-going transition of the input. The symbol and waveforms for this type of flip-flop are shown in figure 2-19.

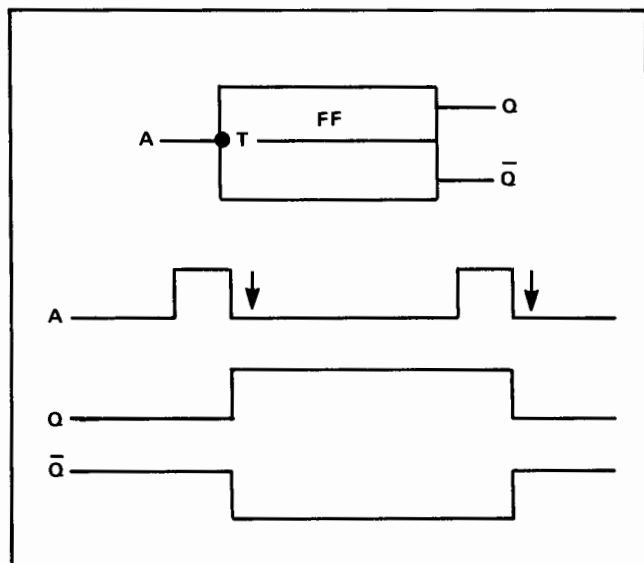


Figure 2-19. Toggle Flip-Flop with Inverted Input, Logic Symbol and Switching Waveforms

2-44. **J-K FLIP-FLOP.** In the J-K flip-flop, simultaneous true inputs for both set and clear will reverse the existing state of the flip-flop. This requires some method of storing two conditions, the previous output state and the new output state, until the clock pulse time. The set and clear inputs are labeled J and K respectively. In order to provide the necessary output storage the flip-flops are combined in a dual-rank configuration, together with the necessary gates to form a single logic element. For simplicity the internal dual-rank arrangement of the flip-flop is not usually shown (see figure 2-20).

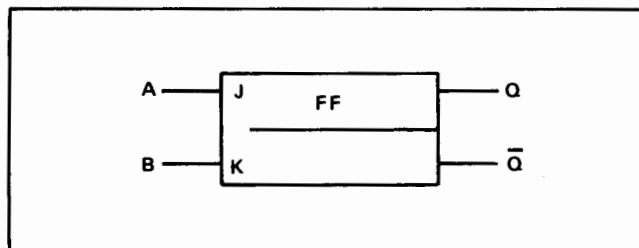


Figure 2-20. J-K Flip-Flop, Logic Symbol

2-45. **CLOCKED J-K FLIP-FLOP.** The clocked J-K flip-flop (figure 2-21) is similar to the clocked R-S flip-flop. However, simultaneous set and clear inputs to the J-K flip-flop are permissible. Under these conditions, the J-K flip-flop changes its state at the occurrence of each true-going clock pulse transition. With an inverting dot at the clock pulse input, the flip-flop changes state at the false-going clock pulse transition. If both J and K inputs are true when the clock pulse occurs, the flip-flop will toggle.

2-46. The J-K flip-flop can also be operated with one true input and one false input. It then functions in the same manner as the clocked R-S flip-flop.

2-47. Figure 2-21 includes a state table showing operation of the J-K flip-flop. Note that with both inputs true at the time of clock pulse transition, the final state of the flip-flop (after clock pulse transition) depends on the state before the transition. With only one input true, the initial state of the flip-flop is immaterial.

2-48. In some cases the J-K flip-flop consists of two separate flip-flops, with the output of one applied to the input of the other. Usually, a single flip-flop logic symbol is used to illustrate this circuit. The clock pulse inverting dot, or the lack of it, indicates the clock pulse transition that affects the output flip-flop of the pair.

2-49. **LATCHING FLIP-FLOP.** The latching flip-flop (figure 2-22) can be recognized by the letter "L" in the symbol. The flip-flop has a clock input and a data input. Although the logic symbol shows two input-signal connections to the flip-flop, these separate inside the integrated circuit container from a single input to the unit. After separation, one input is inverted (indicated by the inverting dot) before application to the flip-flop proper.

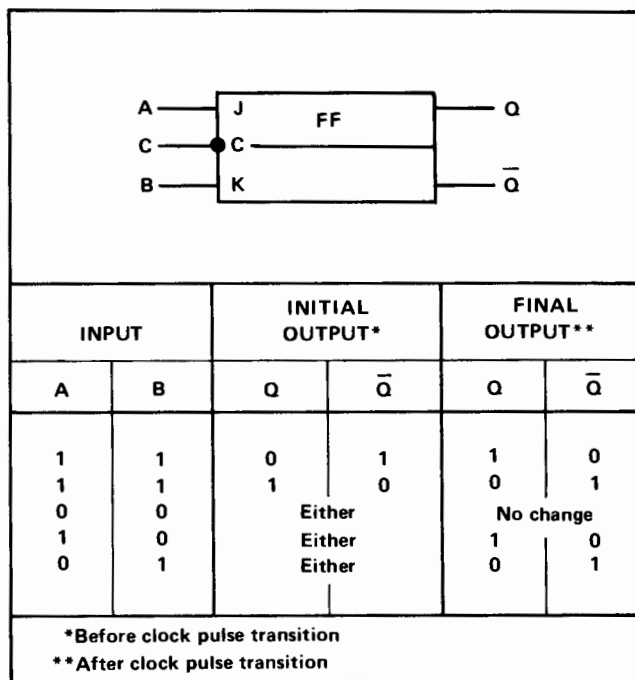


Figure 2-21. Clocked J-K Flip-Flop, Logic Symbol and State Table

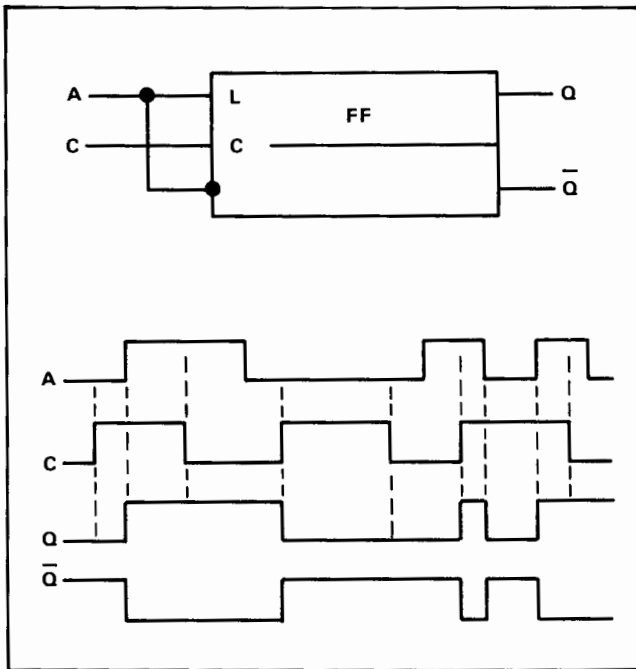


Figure 2-22. Latching Flip-Flop, Logic Symbol and Switching Waveforms

2-50. The set input is responsive to true signal levels at A (figure 2-22), and the clear input is responsive to false signal levels at A. If there is no inverting dot at the clock input, this response takes place when the clock pulse is true. While the clock pulse remains true, the outputs follow any changes in the logic level at A as these changes take place. When the clock pulse becomes false, the flip-flop retains its current state, and no longer responds to changes in the input signal.

2-51. If the clock input connection of a latching flip-flop has an inverting dot, the flip-flop responds to the input signal while the clock pulse is false.

2-52. **DELAY FLIP-FLOP.** The delay flip-flop (figure 2-23) is identified by a letter "D" inside the flip-flop symbol. This type of flip-flop is similar to the latching flip-flop, except that it responds to the input signal only at the transition of the clock pulse. The delay flip-flop thus does not follow changes in the input signal as these changes take place.

2-53. **GATE FLIP-FLOP.** The gate flip-flop is made up of two logic gates, connected as shown in figure 2-24. The number of inputs to each gate can vary from that shown. The flip-flop can also be made up of two "nor" gates. The circuit may have a set output, a clear output, or both.

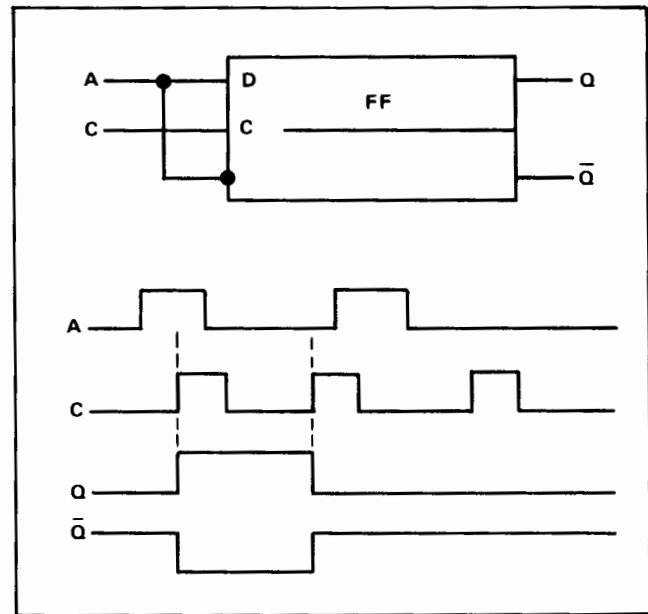


Figure 2-23. Delay Flip-Flop, Logic Symbol and Switching Waveforms

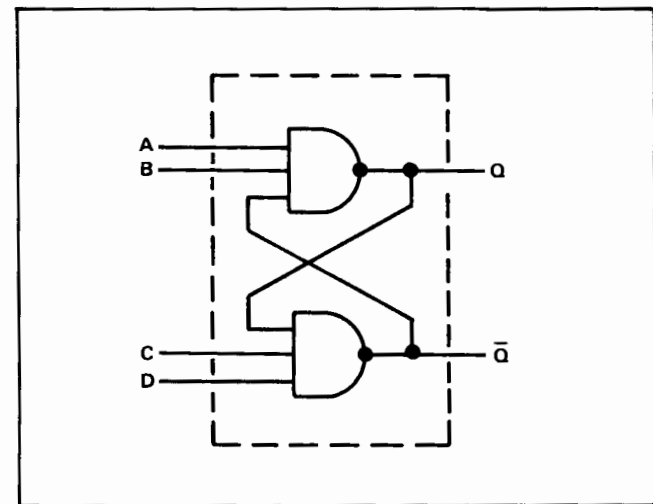


Figure 2-24. "Nand" Gate Flip-Flop, Logic Symbol

2-54. The gate flip-flop functions like an R-S flip-flop, but it has the advantage that it can "or" inputs without the addition of a separate "or" gate. Another reason for use of the gate flip-flop is that if two spare gates are available in integrated circuits on a circuit card, they can be employed as an R-S flip-flop without the need to add another integrated circuit to the card.

2-55. If the flip-flop is made up of two "nand" gates, as in figure 2-24, it is set by a false input at either A or B. Similarly, it is cleared by a false input at C or D. When the flip-flop is in the quiescent state (not undergoing transition), the inputs at A, B, C, and D are all true.

2-56. A "nor" gate flip-flop is illustrated in figure 2-25. In this type of flip-flop all inputs are false when the device is in the quiescent state. A true input at A sets the flip-flop, and a true input at B clears it. The outputs cross in the illustration in order to align the set and clear inputs with the set and clear outputs, respectively.

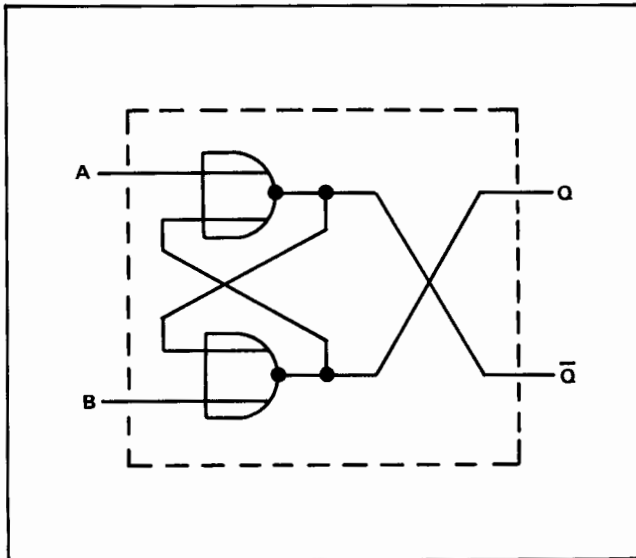


Figure 2-25. "Nor" Gate Flip-Flop, Logic Symbol

2-57. In most circuits using the "nand" or "nor" gate flip-flop, input signals are such that the flip-flop does not receive a set and clear input signal simultaneously. If circuit design does permit this to occur, both the set and the clear output are true for the duration of the condition. The eventual state of the flip-flop is determined by the input that remains longest in the activating condition.

2-58. SCHMITT TRIGGER CIRCUIT.

2-59. The Schmitt trigger circuit (figure 2-26) can be identified by the letters "ST" appearing in the logic-diagram symbol. Like the various types of flip-flop, this circuit is a two-state device which does not perform a Boolean function. It serves for level sensing or signal squaring. It may have a set output, a clear output, or both.

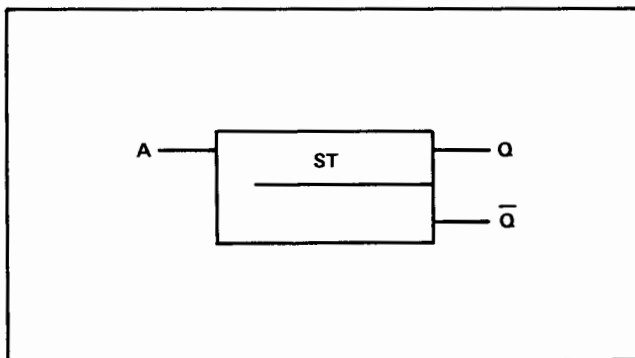


Figure 2-26. Schmitt Trigger Circuit, Logic Symbol

2-60. When the input voltage at A is below a certain level, the Schmitt trigger is in the clear state. When the input voltage rises above the reference level, the trigger assumes the set state. Circuit constants establish the reference level.

2-61. Switching between states takes place rapidly, and the Schmitt trigger is therefore useful for squaring signals that have poor rise and fall times. It can produce a square wave from a sine wave. Other uses of the Schmitt trigger are voltage level restoration, and detection of the rise of the input signal above a given level.

2-62. ONE-SHOT MULTIVIBRATOR.

2-63. The one-shot multivibrator (figure 2-27) is a monostable switching element, used to produce a pulse of predetermined duration. The device is triggered into its unstable state by an external signal. It returns to the stable state after a time interval determined by circuit constants.

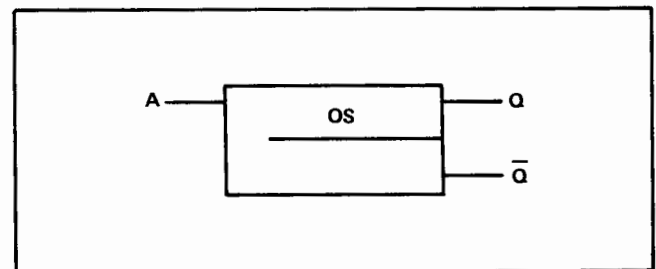


Figure 2-27. One-Shot Multivibrator, Logic Symbol

2-64. If there is no inverting dot at the input, triggering is accomplished when input A undergoes a true-going transition. If there is an inverting dot, a false-going transition is required.

2-65. The one-shot multivibrator may have a set output, a clear output, or both.

2-66. The symbol for the one-shot multivibrator is always drawn with the orientation shown in figure 2-27, with the input at the left and the output or outputs at the right.

2-67. FREE-RUNNING MULTIVIBRATOR.

2-68. The free-running multivibrator (figure 2-28) can be distinguished by the letters "MV" appearing in the symbol. This device produces trains of complementary pulses at Q and \bar{Q} . Pulse width is determined by circuit constants.

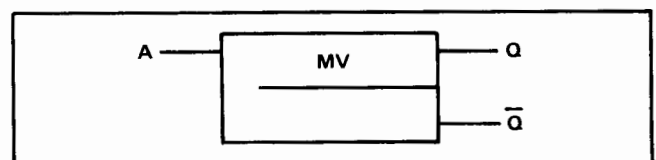


Figure 2-28. Free-Running Multivibrator, Logic Symbol

2-69. In some instances a control signal is applied to the free-running multivibrator. If there is no inverting dot at the signal input to the symbol, the multivibrator runs when the control signal is true, and stops when the signal is false. When it is stopped, the multivibrator is in the clear condition. If there is an inverting dot at the control signal input, a false input is required to bring the multivibrator into operation. This type of multivibrator is in the set condition when it is not running.

2-70. Figure 2-29 shows typical waveforms for a controlled free-running multivibrator that runs when the control signal is true. The true and false portions of the output waveforms need not be of equal duration.

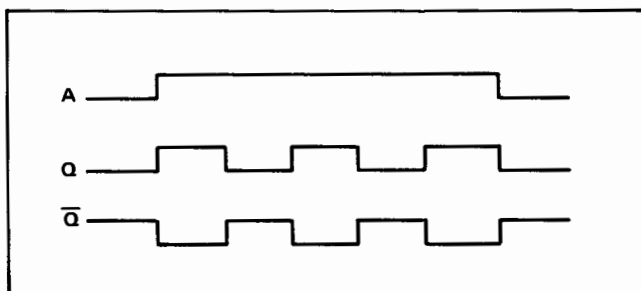


Figure 2-29. Input and Output Waveforms of Controlled Free-Running Multivibrator

2-71. The symbol for the free-running multivibrator is always drawn with the orientation shown in figure 2-28, with the input (if any) at the left, and the output or outputs at the right.

2-72. AMPLIFIER.

2-73. The symbol for an amplifier is shown in figure 2-30. A differential amplifier is illustrated in figure 2-31. Like gates, these symbols may be shown in any of four positions.

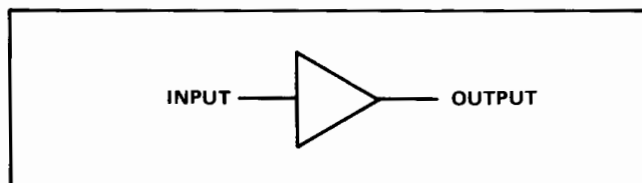


Figure 2-30. Amplifier, Logic Symbol

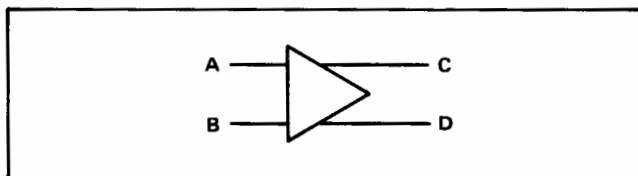


Figure 2-31. Differential Amplifier, Logic Symbol

2-74. In most instances, the amplifier symbol has a non-binary input. A circuit which restores the voltage level of a binary input, or which furnishes a low-impedance output from a binary input, is indicated by a one-input gate symbol.

2-75. An inverting dot at the output of an amplifier symbol indicates that the amplifier inverts the input signal.

2-76. Figure 2-32 is the symbol for a phase splitter.

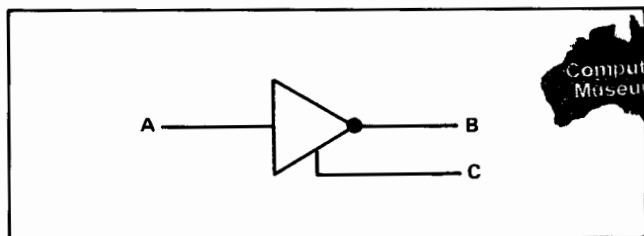


Figure 2-32. Phase Splitter, Logic Symbol

2-77. CAPACITIVE COUPLING.

2-78. Capacitive coupling to a logic element is indicated by an arrow, as shown in figure 2-33. When used with a gate or multivibrator, this type of coupling results in response only to a change in the logic level. Since the clock pulse input to multivibrators always uses capacitive coupling, the arrow is omitted from this type of input.


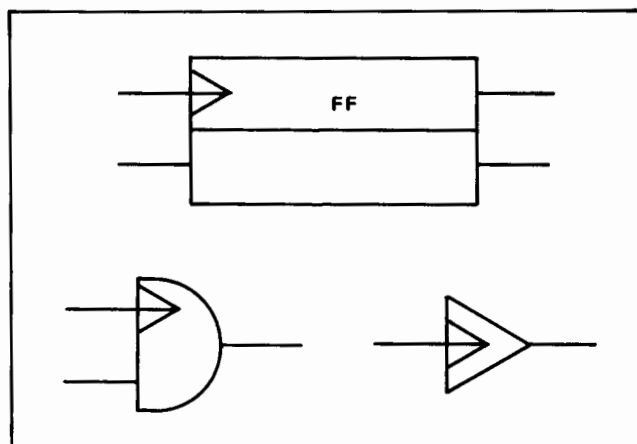


Figure 2-33. Capacitive Coupling

2-79. MULTIPURPOSE LOGIC SYMBOL.

2-80. The "multipurpose" logic symbol is used to indicate a logic function that has not received a standardized logic symbol. The multipurpose symbol is also used to depict multiple logic elements that act together to perform a single/overall logic function such as decoding, data storage, or counting. The symbol shown in figure 2-34 may be of varying proportions (most commonly 2:1 or 1:2), but

rectangular in shape. The symbol should include a descriptive name indicating the overall logic function performed. All active inputs should be labeled to indicate the effect on the overall function. Other descriptive information may be included as needed.

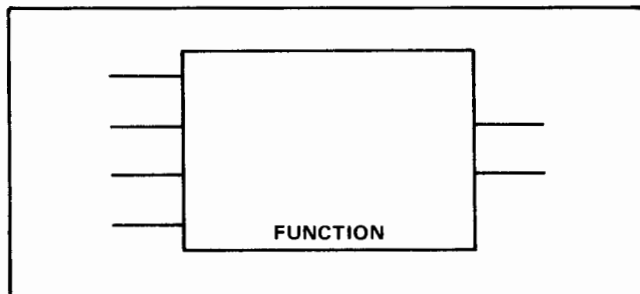

2039-52

Figure 2-34. Multipurpose Logic Symbol


2-81. Examples of nonstandard symbols are given in figure 2-35. Figure 2-35a shows a binary to octal decoder. Figure 2-35b shows a 4-bit up/down counter.

2-82. INTEGRATED CIRCUIT CHARACTERISTICS AND DIAGRAMS.

2-83. Contained in table 2-1 is a list of integrated circuit operating characteristics. This list of characteristics is keyed to the integrated circuit diagrams illustrated in figure 2-36. The circuit diagrams are shown in numerical order by Hewlett-Packard part number. Each circuit diagram has a characteristic number which identifies a particular operating characteristic in table 2-1.

2-84. Refer to any accompanying text, notes, or characteristic information concerning the operation of non-standard logic elements.

2-85. For additional information on the operation of selected nonstandard integrated circuits refer to figure 2-37. The integrated circuits are in numerical order by Hewlett-Packard part number. The typical schematic representation of each circuit is followed by a brief description of circuit operation.

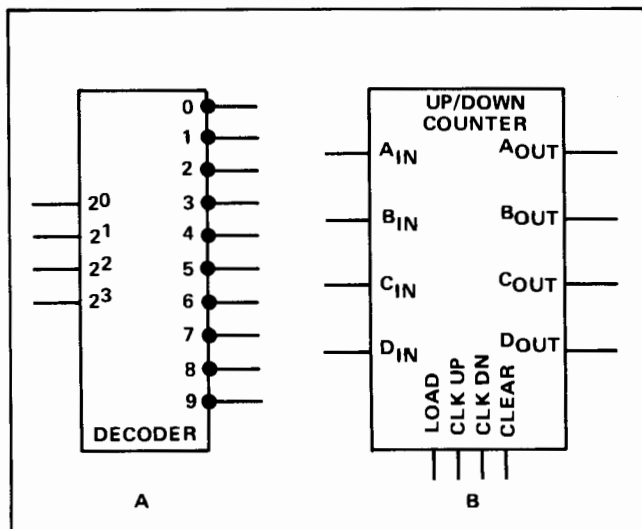

2039-53

Figure 2-35. Nonstandard Logic Symbols

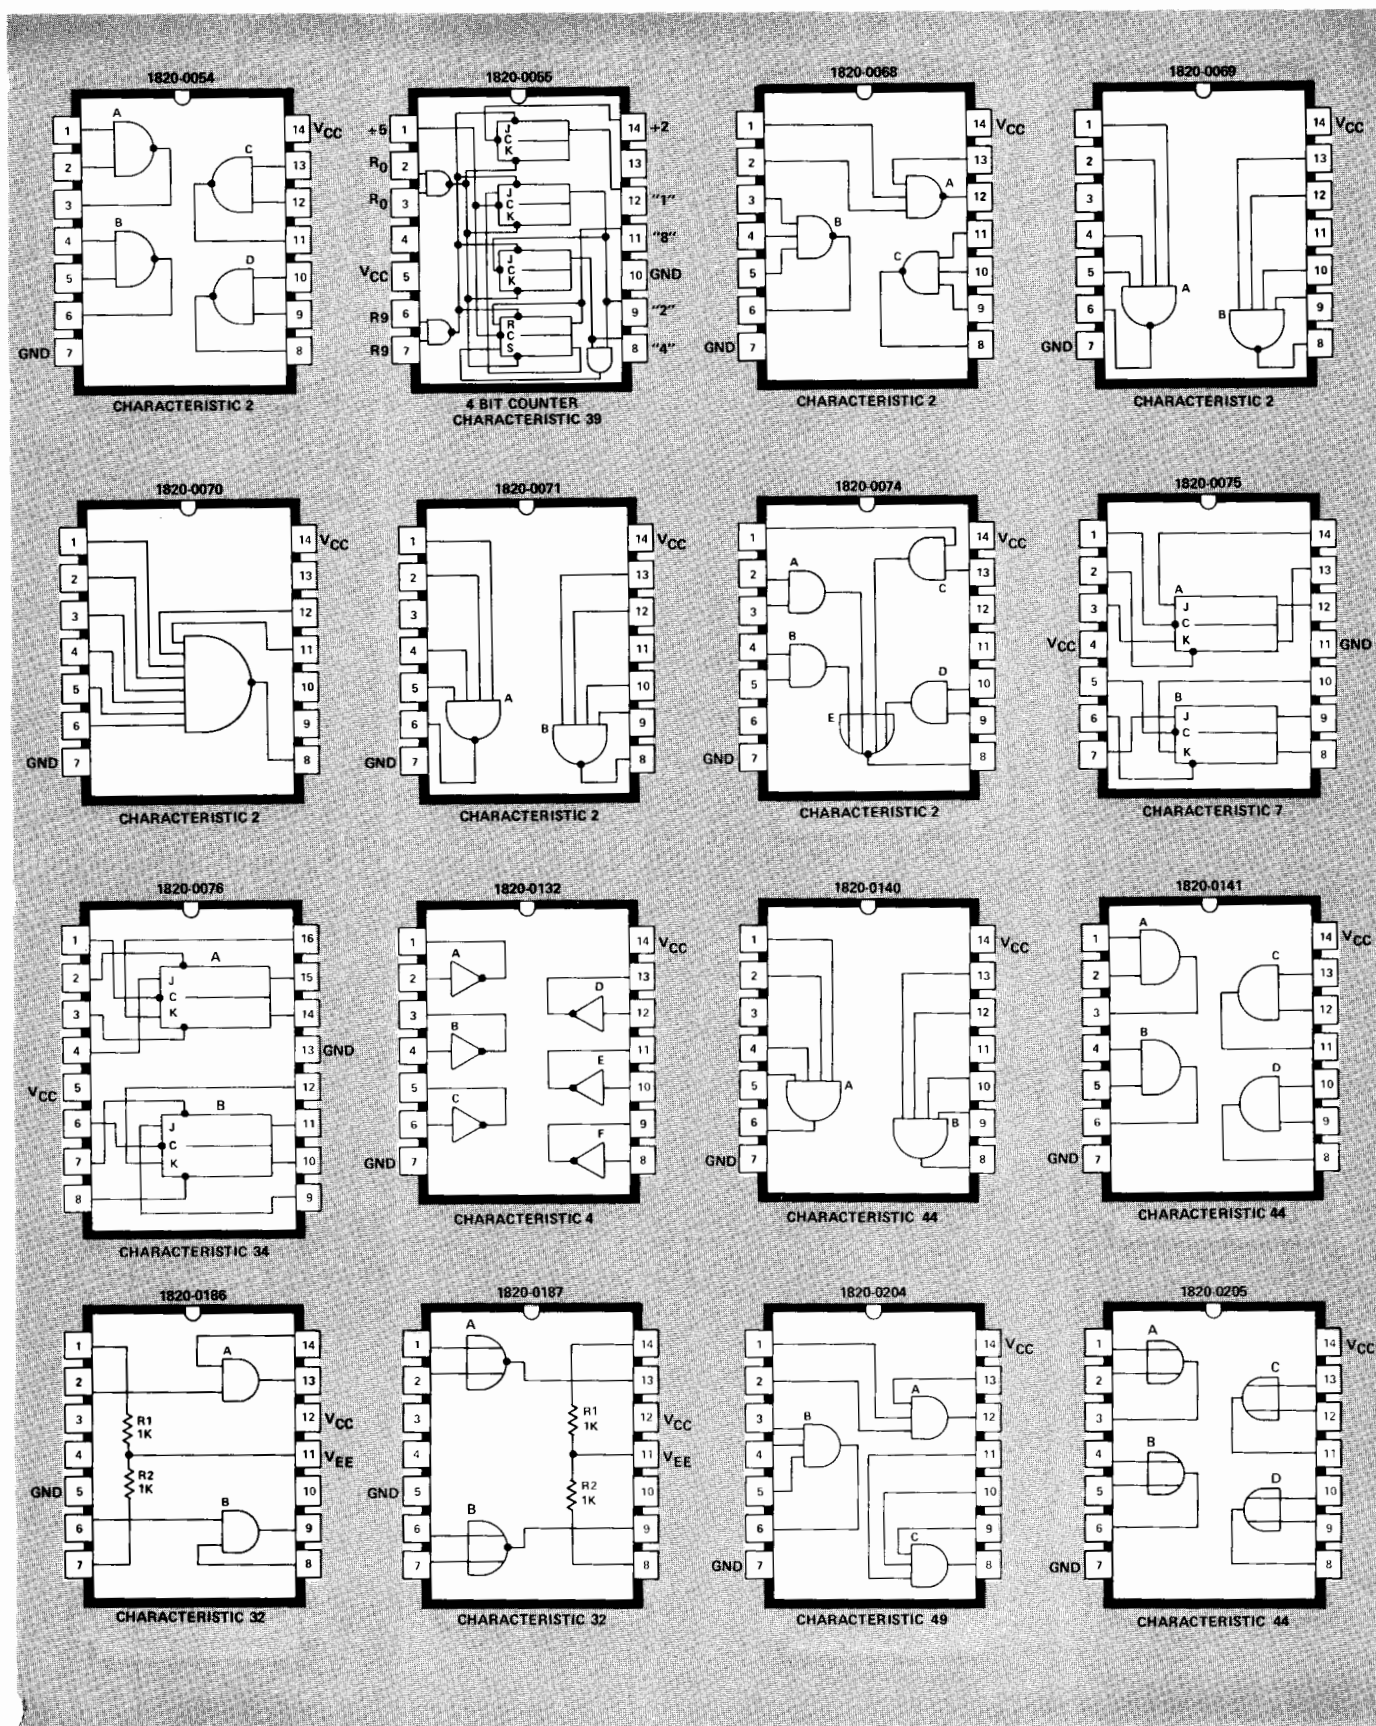


Figure 2-36. Integrated Circuit Diagrams (Sheet 1 of 7)

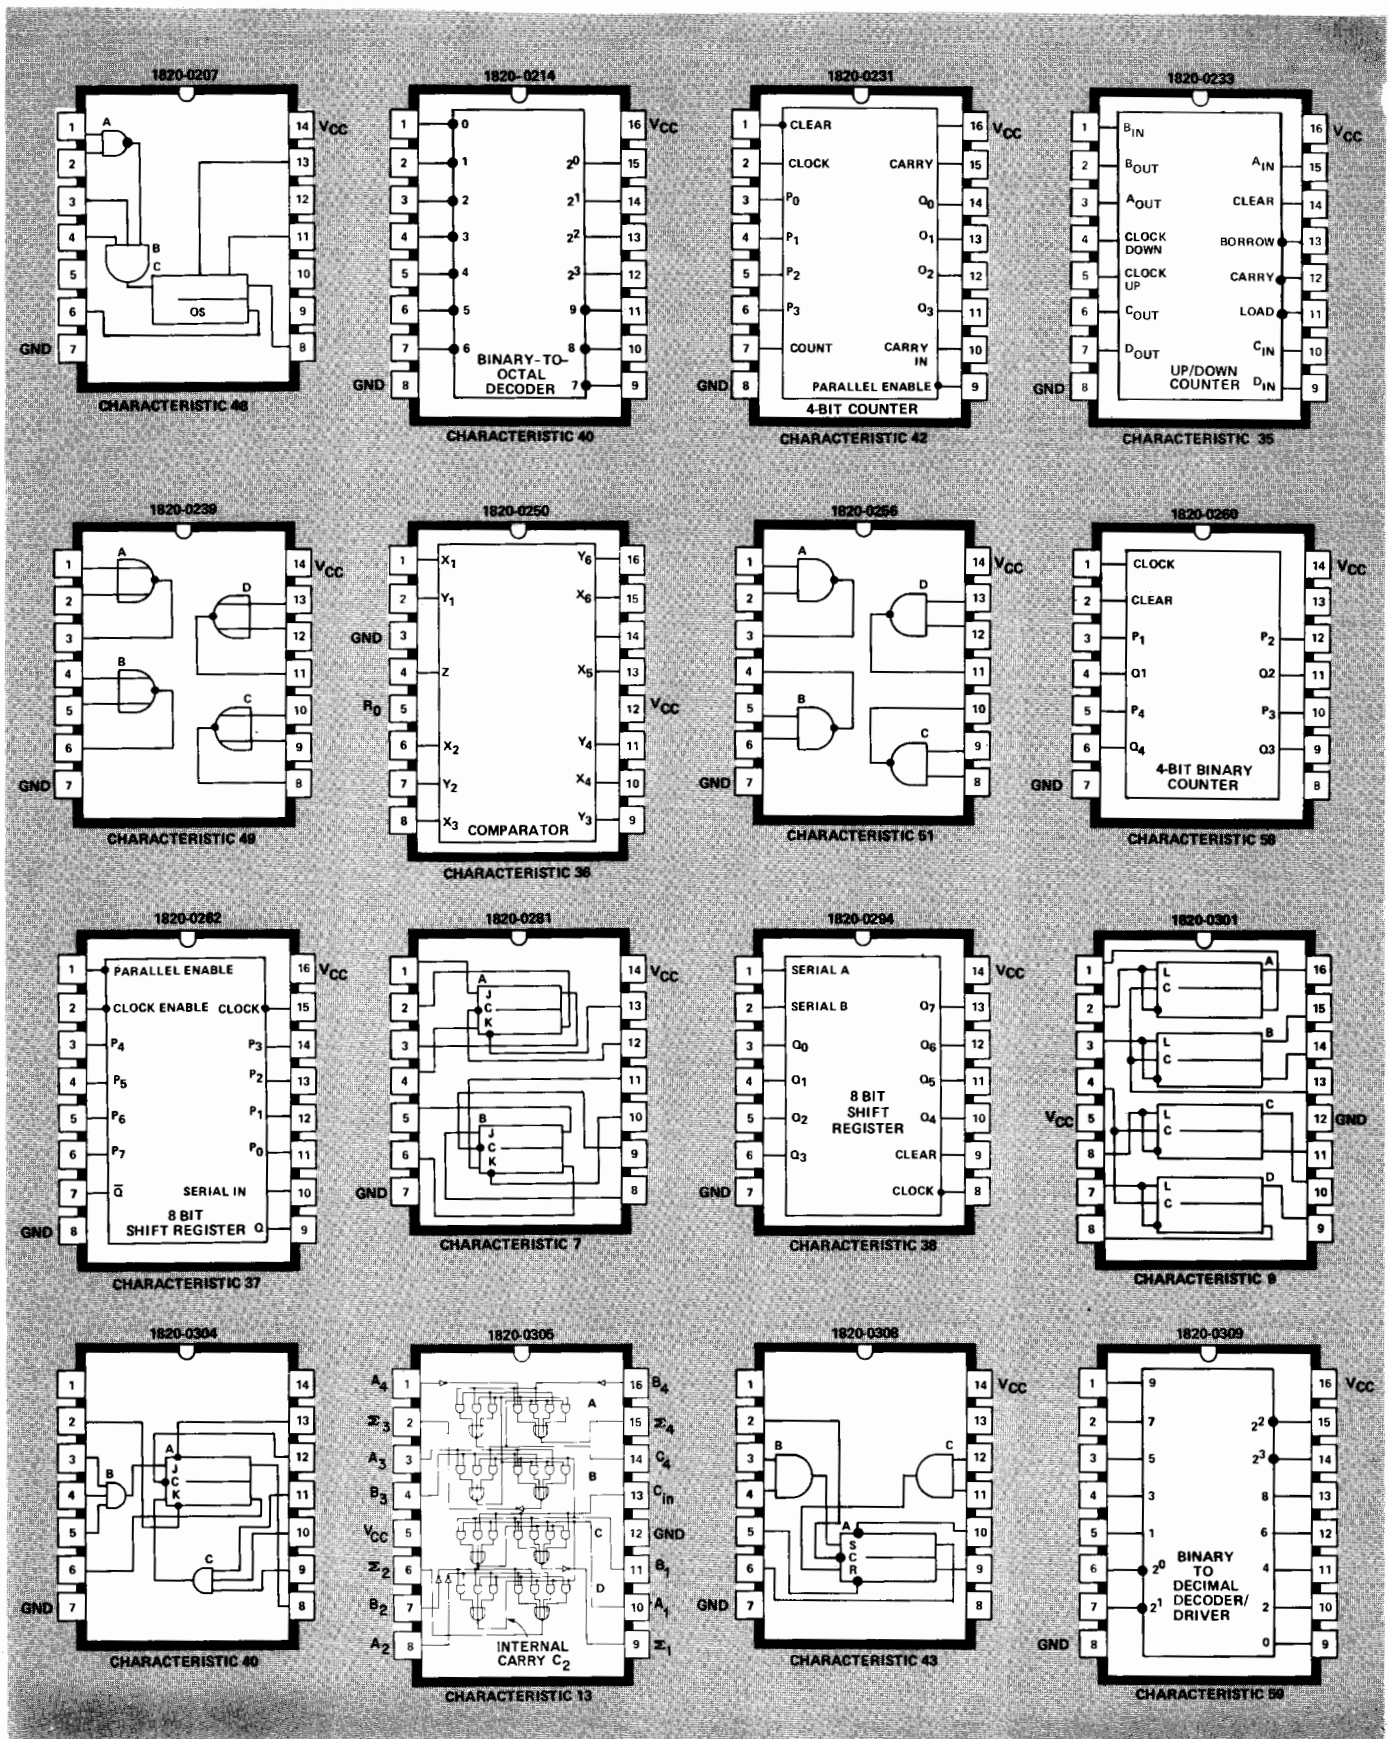


Figure 2-36. Integrated Circuit Diagrams (Sheet 2 of 7)

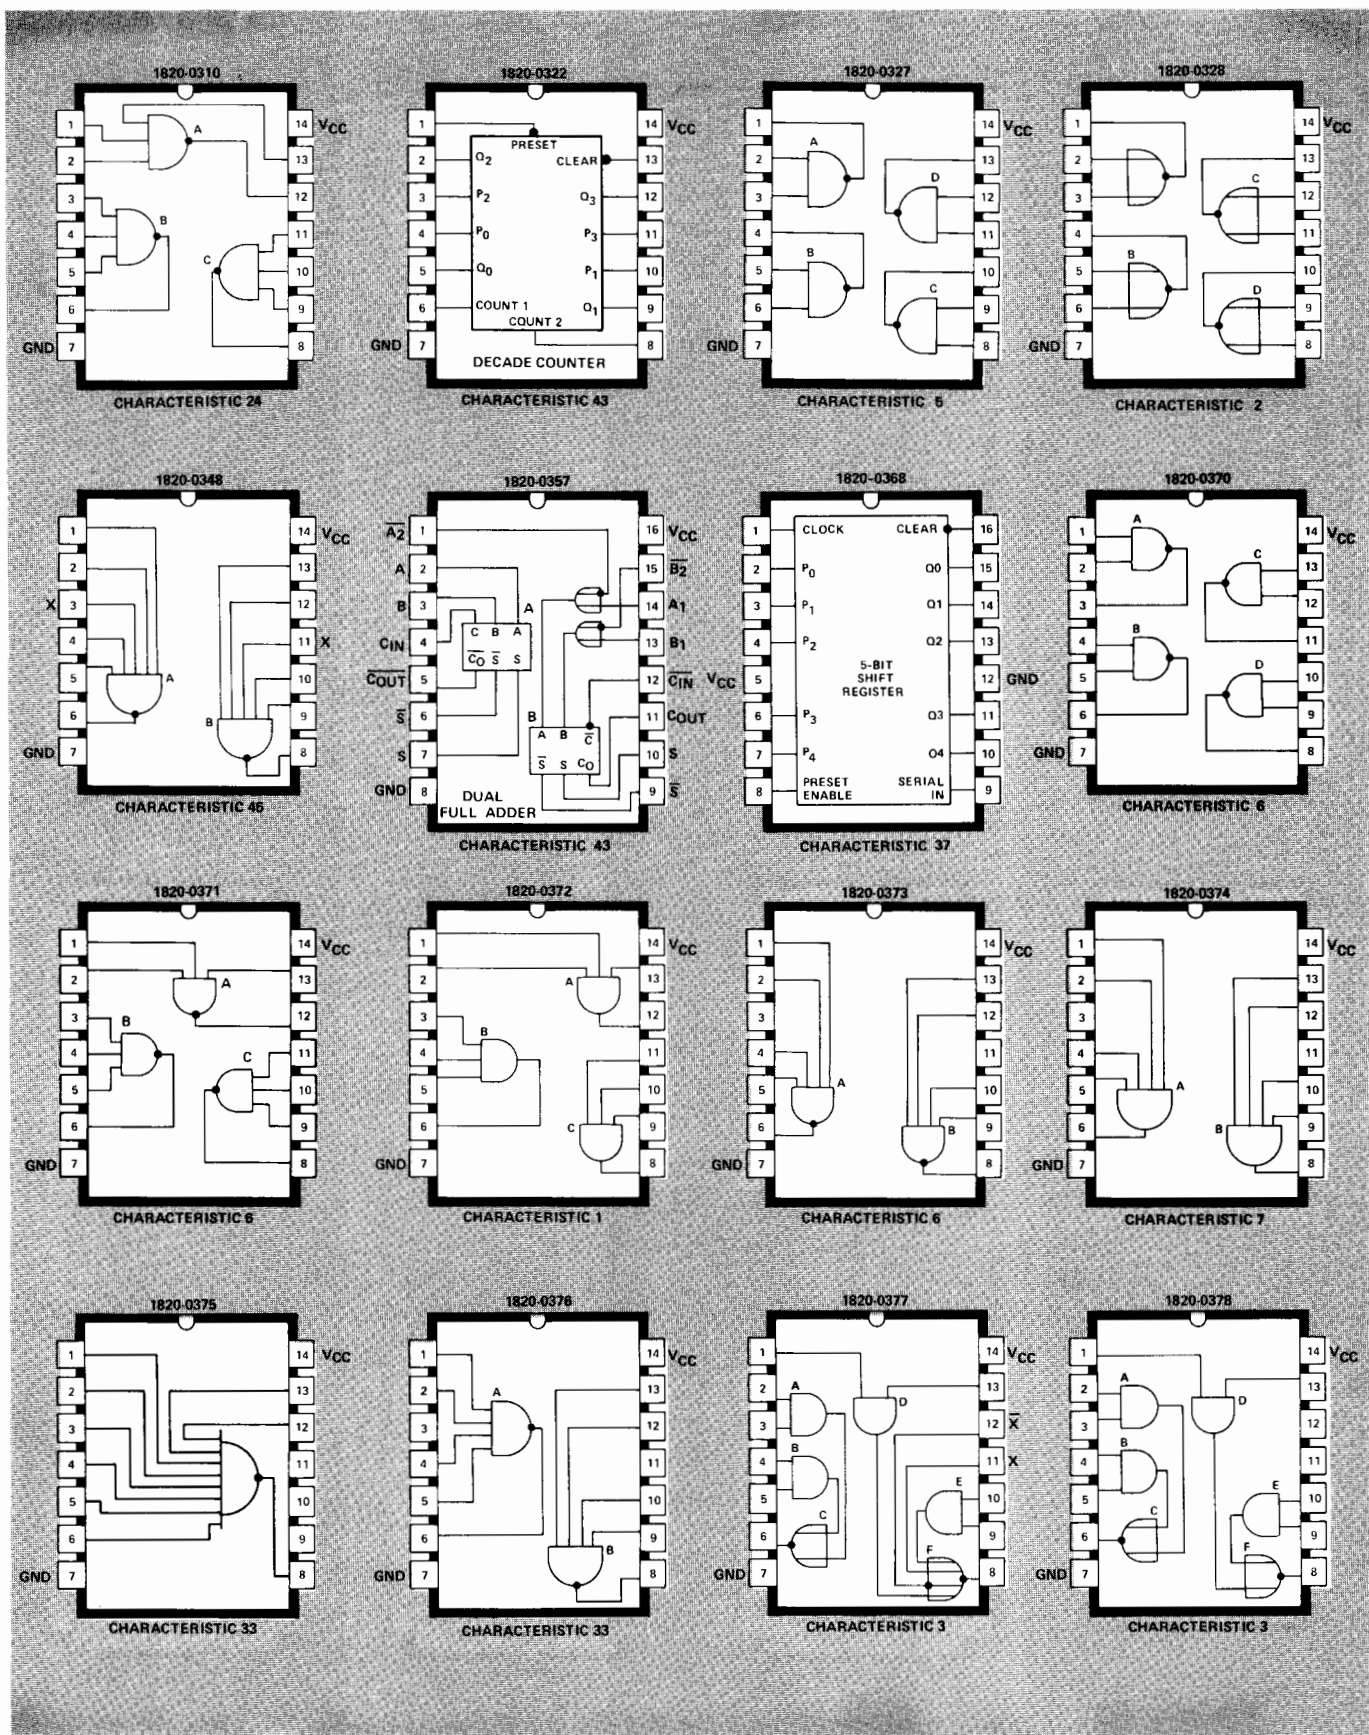


Figure 2-36. Integrated Circuit Diagrams (Sheet 3 of 7)

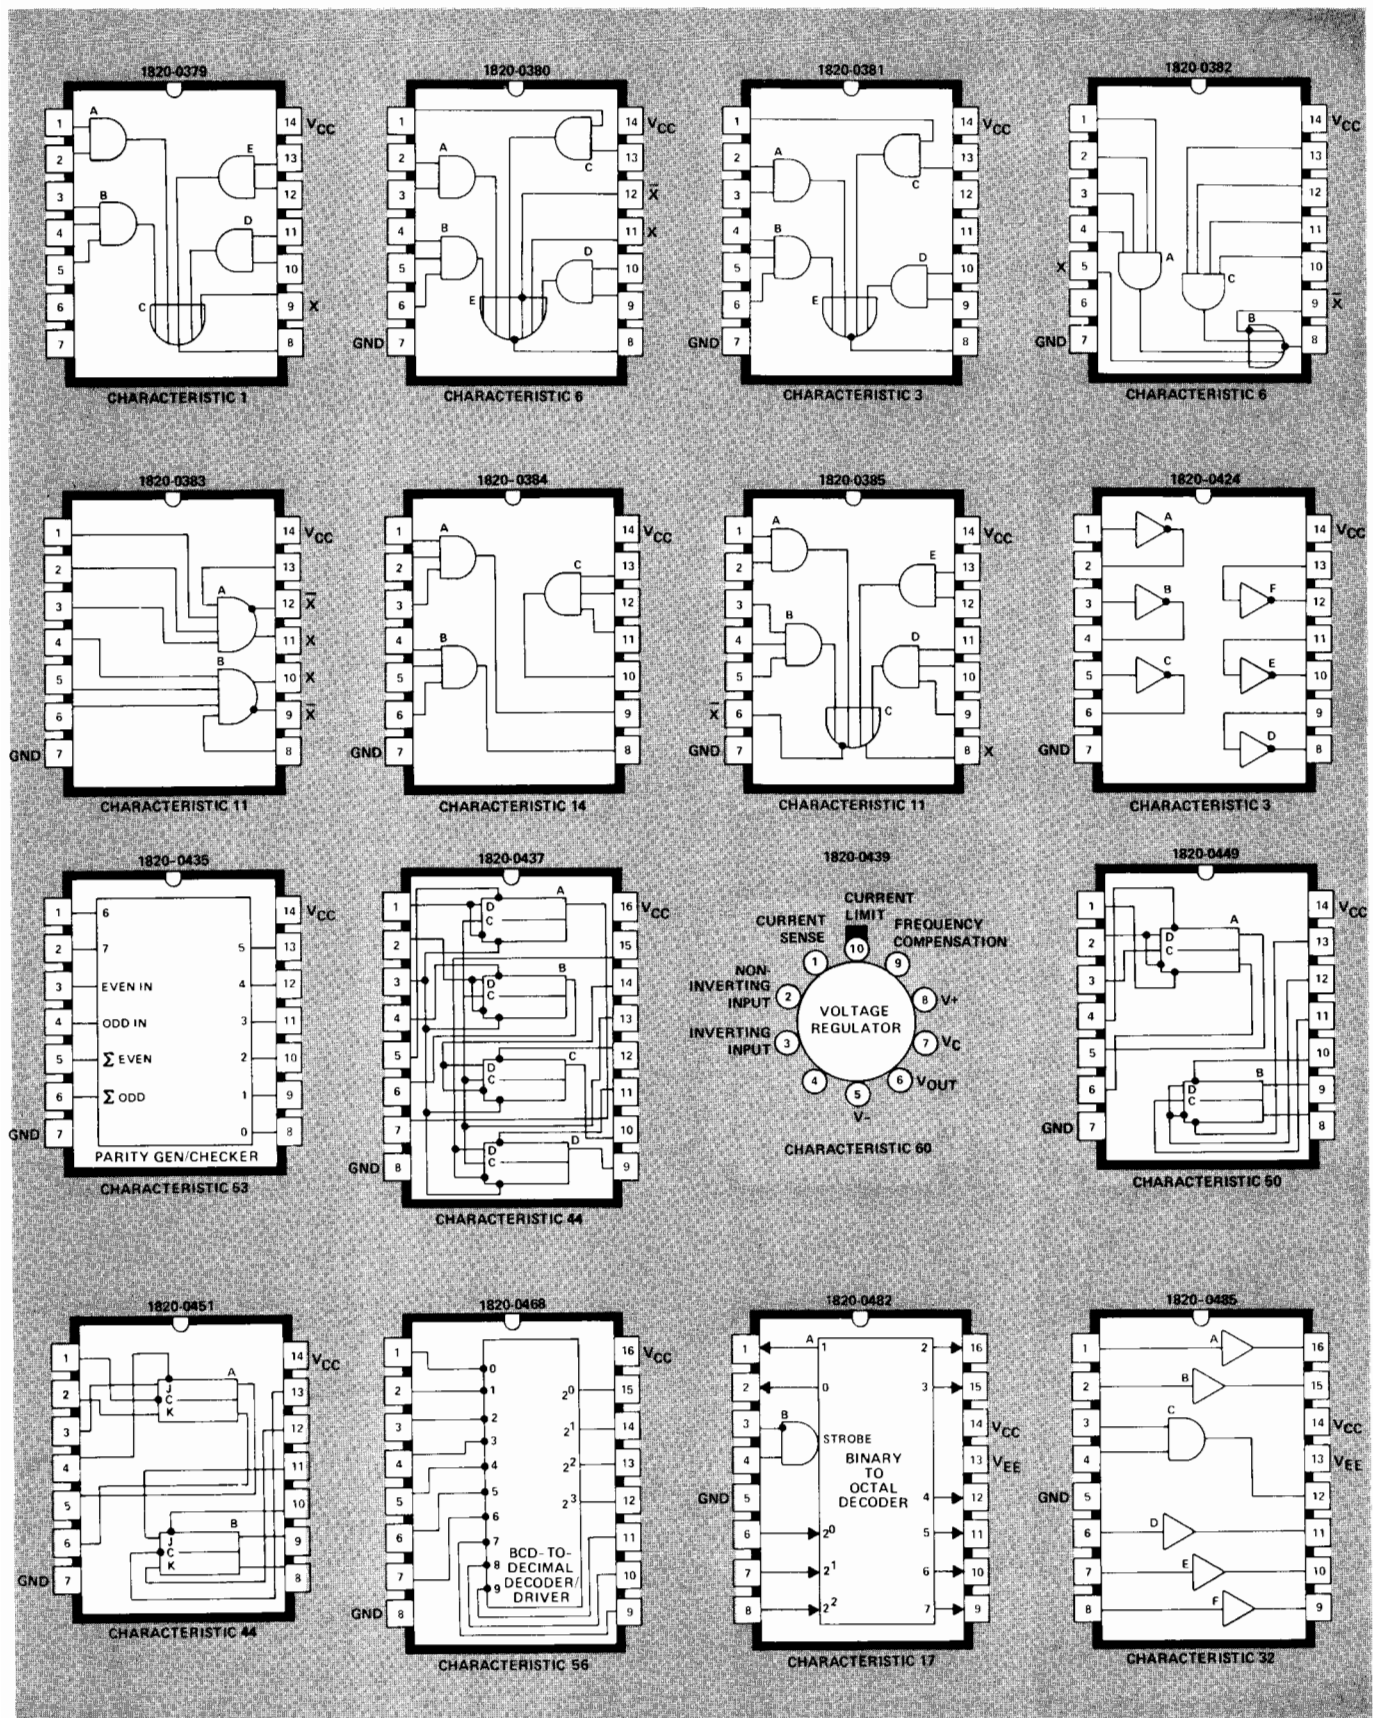


Figure 2-36. Integrated Circuit Diagrams (Sheet 4 of 7)

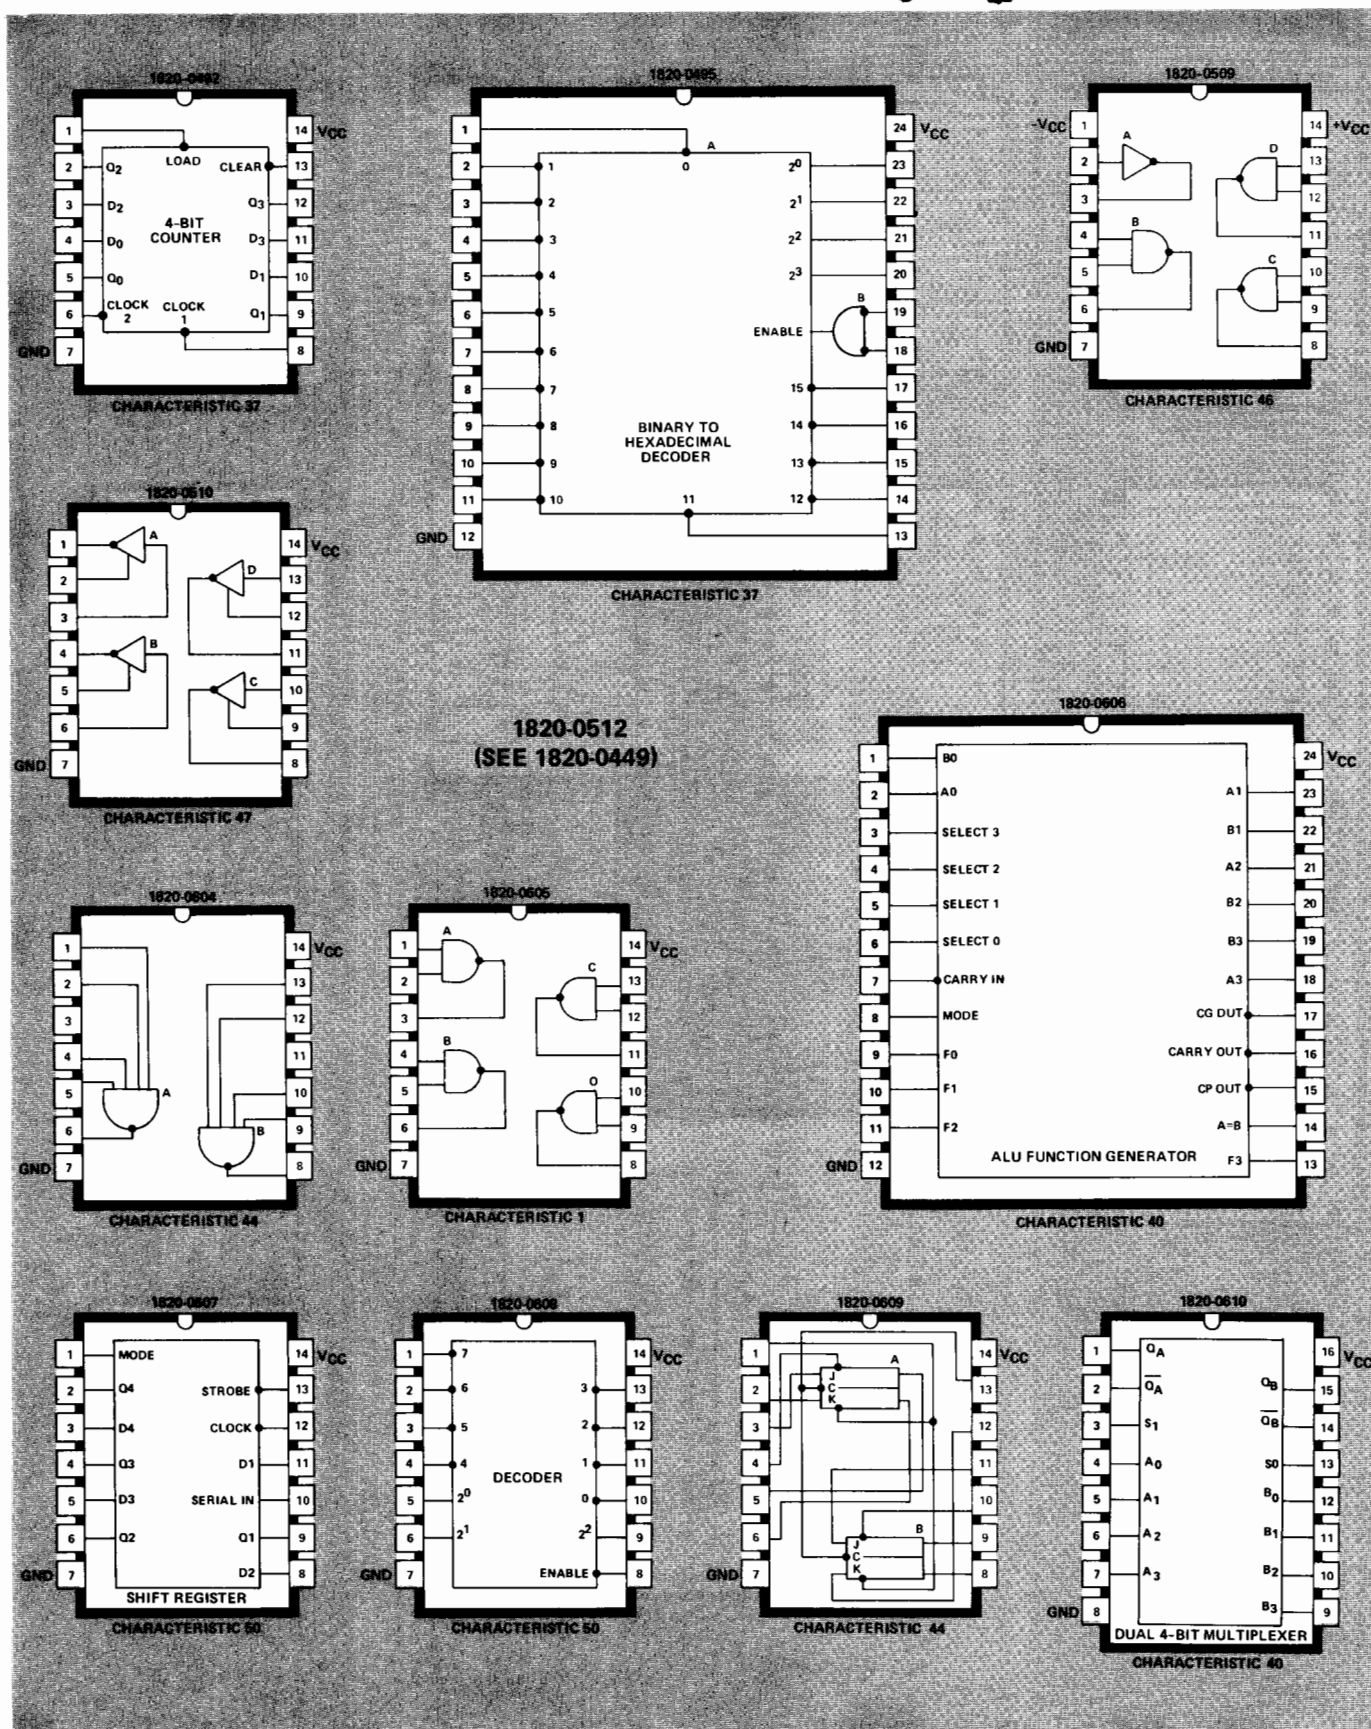


Figure 2-36. Integrated Circuit Diagrams (Sheet 5 of 7)

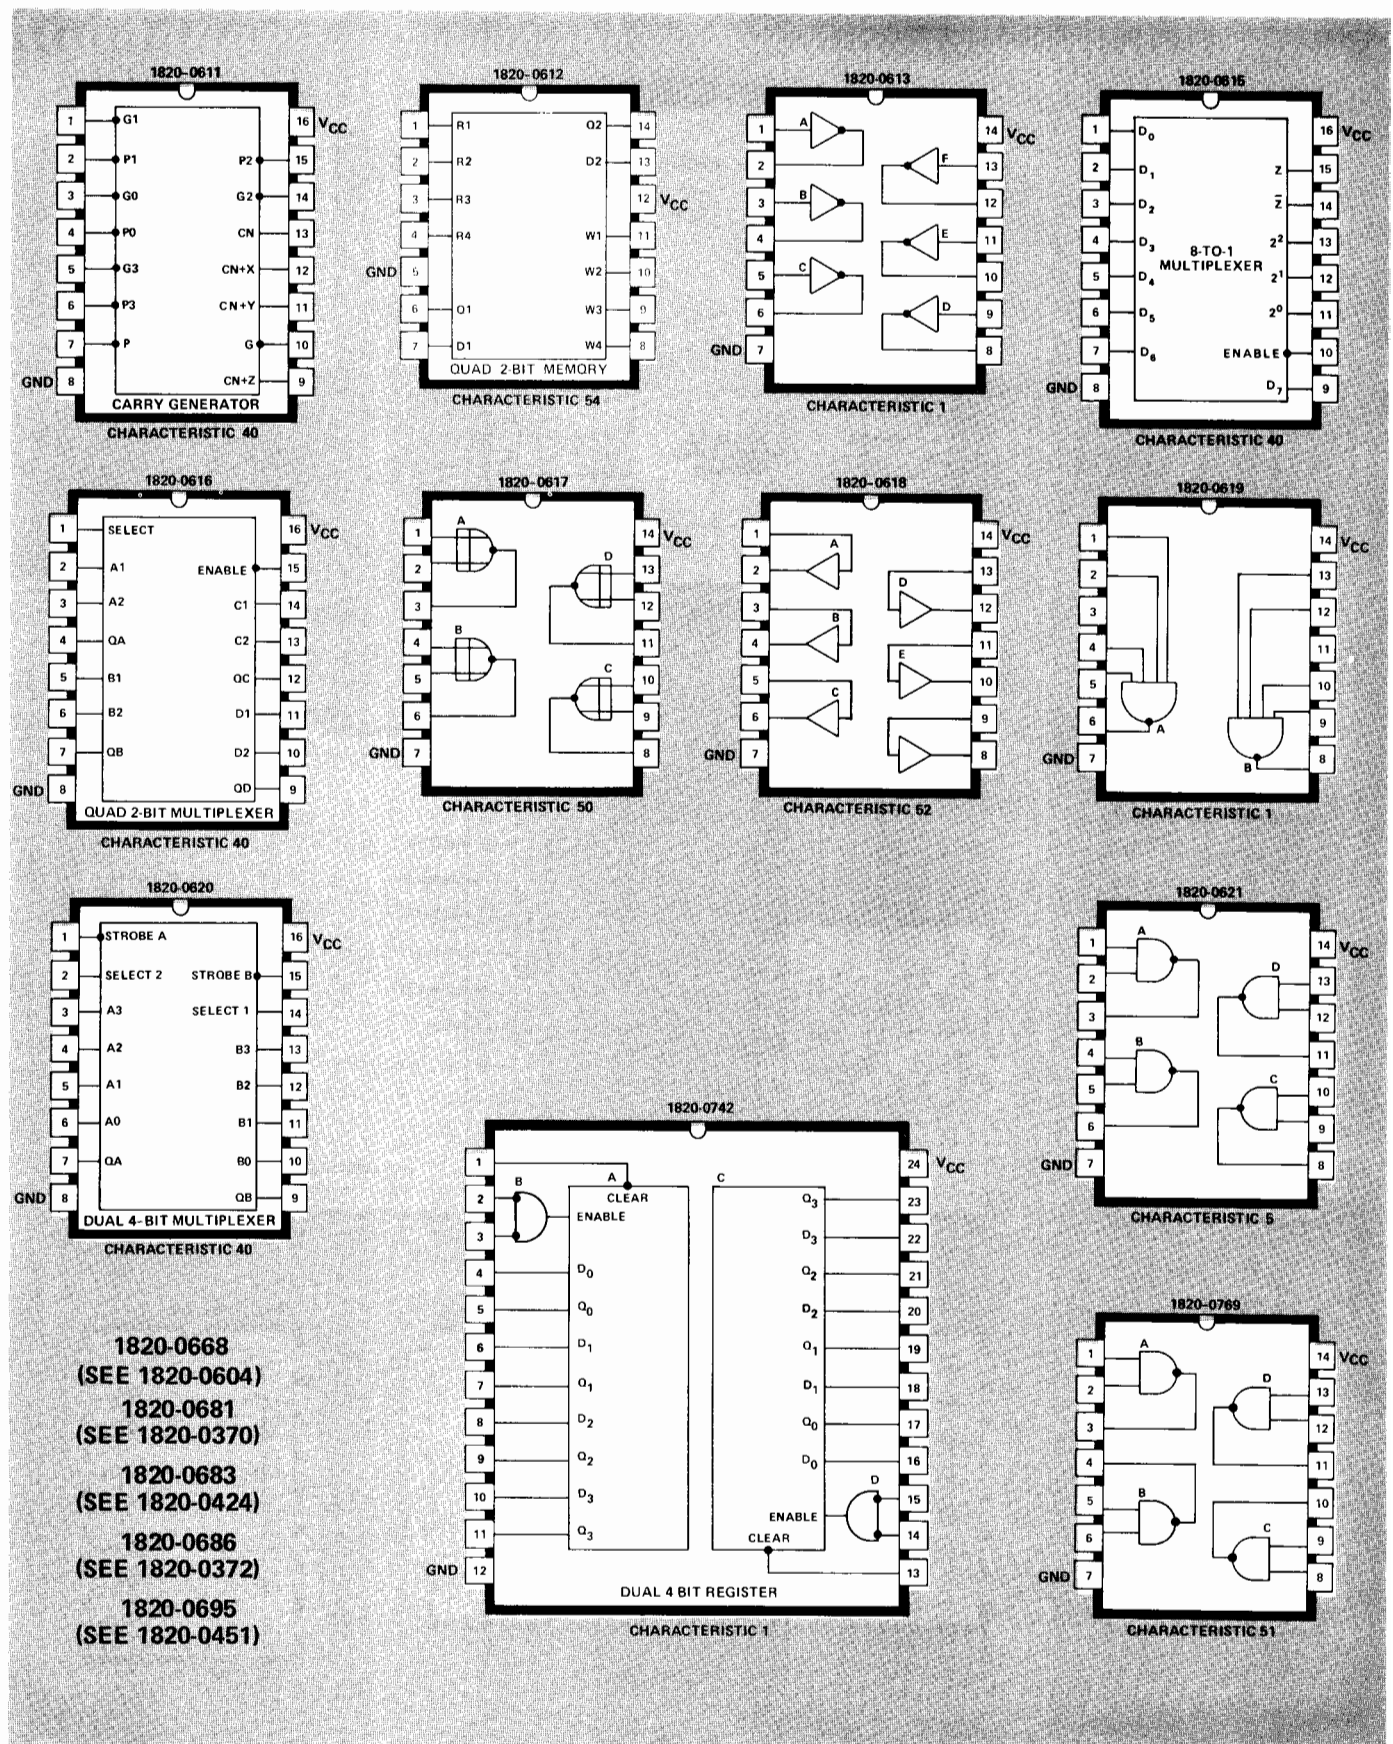


Figure 2-36. Integrated Circuit Diagrams (Sheet 6 of 7)

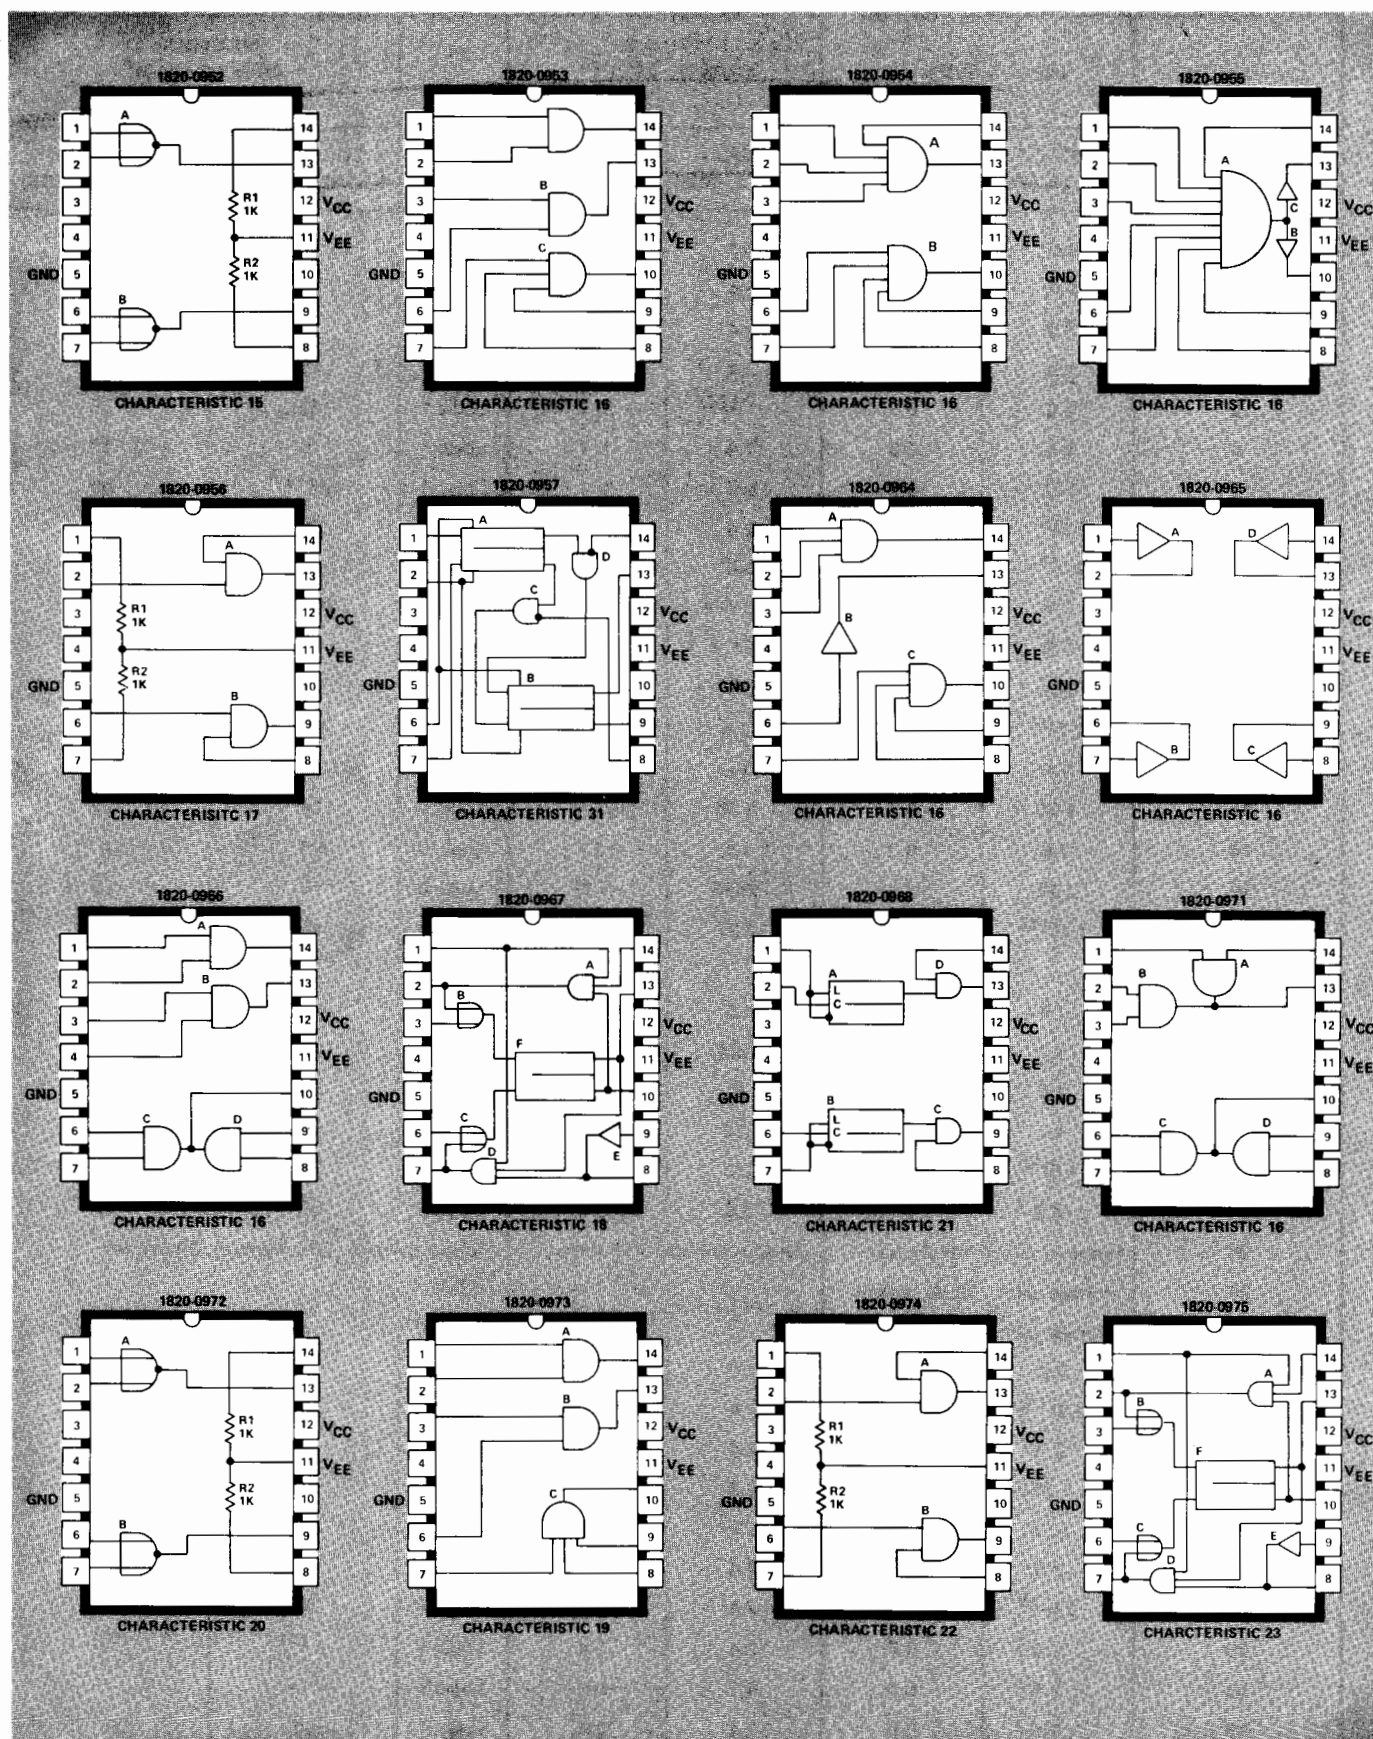


Figure 2-36. Integrated Circuit Diagrams (Sheet 7 of 7)

Table 2-1. Integrated Circuit Characteristics

CHARACTERISTIC	INPUT LEVEL		OUTPUT LEVEL		OPEN INPUT ACTS AS:	MAXIMUM PROPAGATION DELAY	
	LOGIC 1 (VOLTS, MIN)	LOGIC 0 (VOLTS, MAX)	LOGIC 1 (VOLTS, MIN)	LOGIC 0 (VOLTS, MAX)		TO LOGIC 1 (NANOSECONDS)	TO LOGIC 0 (NANOSECONDS)
1	2.0	0.8	2.4	0.4	Logic 1	15	15
2	2.0	0.8	2.4	0.4	Logic 1	29	15
3	2.0	0.8	2.4	0.4	Logic 1	12	10
4	1.9	0.8	2.4	0.45	Logic 1	15	13
5	2.0	0.8	(12)	0.4	Logic 1	45	15
6	2.0	0.8	2.4	0.4	Logic 1	10	10
7	2.0	0.8	2.4	0.4	Logic 1	50 ⁽²⁾	50
8	2.0 ⁽³⁾	0.8	2.4	0.4	Logic 1	35	50
9	2.0 ⁽⁴⁾	0.8	2.4	0.4	Logic 1	40	25
10	2.0	0.8	Output ON results in a max 0.4		Logic 1	34 ⁽¹⁾	20 ⁽¹⁾
11	2.0	0.8	across X & \bar{X}		Logic 1	17 ⁽¹⁾	13 ⁽¹⁾
12	2.0	0.8	2.4 ⁽⁵⁾	0.4	Logic 1	35	30
13	2.0 ⁽⁶⁾	0.8	2.4	0.4	Logic 1	55	60
14	2.0	0.8	1.0	0.0	Logic 1	19 ⁽¹⁾	19 ⁽¹⁾
15	1.25	0.5	2.35	-0.36	Logic 0	14	12
16	1.8	0.0	1.5	0.22	Logic 0	4.5	4
17	1.25	0.5	2.25	-0.36	Logic 0	18	18
18	1.35 ⁽⁶⁾	0.5	2.35	-0.36	Logic 0	15 J&K only	25 J&K only
19	1.8	0.0	1.5	0.22	Logic 0	5.5	6
20	1.5	0.4	2.25	-0.3	Logic 0	24	12
21	1.8	0.0	2	-0.16	Logic 0	25	4
22	1.5	0.4	2.2	-0.3	Logic 0	24	24
23	1.5 ⁽³⁾	0.4	2.2	-0.3	Logic 0	30	25
24	2.0	0.9	2.6	0.5	Logic 1	80	30
25	Input voltage = +35.0 max		Output voltage = +25.0 max		Output current - 20.0 ma max, 30 ma min		
26	Voltage gain: 32 db typical						
27	Voltage gain: 40 db typical						
28	2.0	0.9	2.6	0.5	Logic 1	80	40
29	2.0 ⁽¹³⁾	0.8 ⁽¹⁴⁾	2.4	0.4	Logic 1	135	135
30	2.0	0.8	2.4	0.4	Logic 1	10	10
31	1.25	0.5	2.5	2.2	Logic 0	15	30
32	1.25	0.5	2.35	-0.36	Logic 0	8	8
33	2.0	0.8	2.4	0.4	Logic 1	11	11
34	2.0 ⁽⁷⁾	0.8	2.4	0.4	Logic 1	30	45
35	2.0	0.8	2.4	0.4	Logic 1	(8)	(9)
36	2.0	0.8	4.7	0.5	Logic 1	—	—
37	2.0	0.8	2.4	0.4	Logic 1	30	35

Table 2-1. Integrated Circuit Characteristics (Continued)

CHARACTERISTIC	INPUT LEVEL		OUTPUT LEVEL		OPEN INPUT ACTS AS:	MAXIMUM PROPAGATION DELAY	
	LOGIC 1 (VOLTS, MIN)	LOGIC 0 (VOLTS, MAX)	LOGIC 1 (VOLTS, MIN)	LOGIC 0 (VOLTS, MAX)		TO LOGIC 1 (NANOSECONDS)	TO LOGIC 0 (NANOSECONDS)
38	2.0 ⁽¹¹⁾	0.8	2.4	0.4	Logic 1	40	(10)
39	2.0 ⁽¹⁵⁾	0.8	2.4	0.4	—	100	100
40	2.0	0.8	2.4	0.4	—	21	27
41	1.7	0.9	2.4	0.4	—	—	—
42	1.4	0.8	2.4	0.4	—	14	14
43	1.8	0.8	2.4	0.4	Logic 1	45	40
44	1.8	1.1	2.5	0.4	Logic 1	15	15
45	2.0	1.1	(12)	0.5	Logic 1	50	35
46	1.9	0.8	6.0	-6.0	1	50	25
47	3.0	-3.0	2.6	0.45	—	90	80
48	1.9	0.85	2.4	0.45	1	40	—
49	1.8	1.1	2.5	0.4	1	10	10
50	1.8	1.1	2.5	0.4	1	25	25
51	1.8	1.1	(12)	0.45	1	50	35
52	2.0	0.8	(12)	0.7	—	25	15
53	2.0	0.8	2.5	0.4	1	60	68
54	1.25	0.8	2.35	-0.36	—	45 WRITE	25 READ
55	2.0	0.8	Capable of sinking cathode current to 5ma at up to 60 volts.				
56			Not used at this time.				
57	2.0	0.8	2.6	0.5	—	35	45
58	1.8	0.5	2.5	0.5	—	5	5
59	1.0	0.4	Capable of sinking cathode current to 10ma at up to 50 volts.				
60	Input voltage = ± 40 max.		Output voltage = 37 volts max.			Output current = 150ma max.	

- Notes:
- (1) Through expanded gate.
 - (2) Required clock pulse width 20 ns min.; set-clear 25 ns min.
 - (3) Required pulse widths 30 ns min.
 - (4) Required pulse widths; clock 30 ns min., data 75 ns min.
 - (5) BCS0-BCS9 only one output = 0. BCD 9 all outputs = 1.
 - (6) Required pulse widths 16 ns min.
 - (7) Required clock pulse widths 20 ns min.
 - (8) Delay is 27 ns at output and 22 ns at carry/borrow.
 - (9) Delay is 37 ns at output and 18 ns at carry/borrow.
 - (10) Delay is 40 ns clock to output and 50 ns clear to output.
 - (11) Required clock and clear pulse width is typically 25 ns and 30 ns, respectively (45 ns max.). Time serial A and B data must be set up prior to clock pulse, typically 15 ns (30 ns max.).
 - (12) Level depends on load.
 - (13) +2.2V for pin 1.
 - (14) +0.6V for pin 1.
 - (15) Required input pulse width 50 ns min.

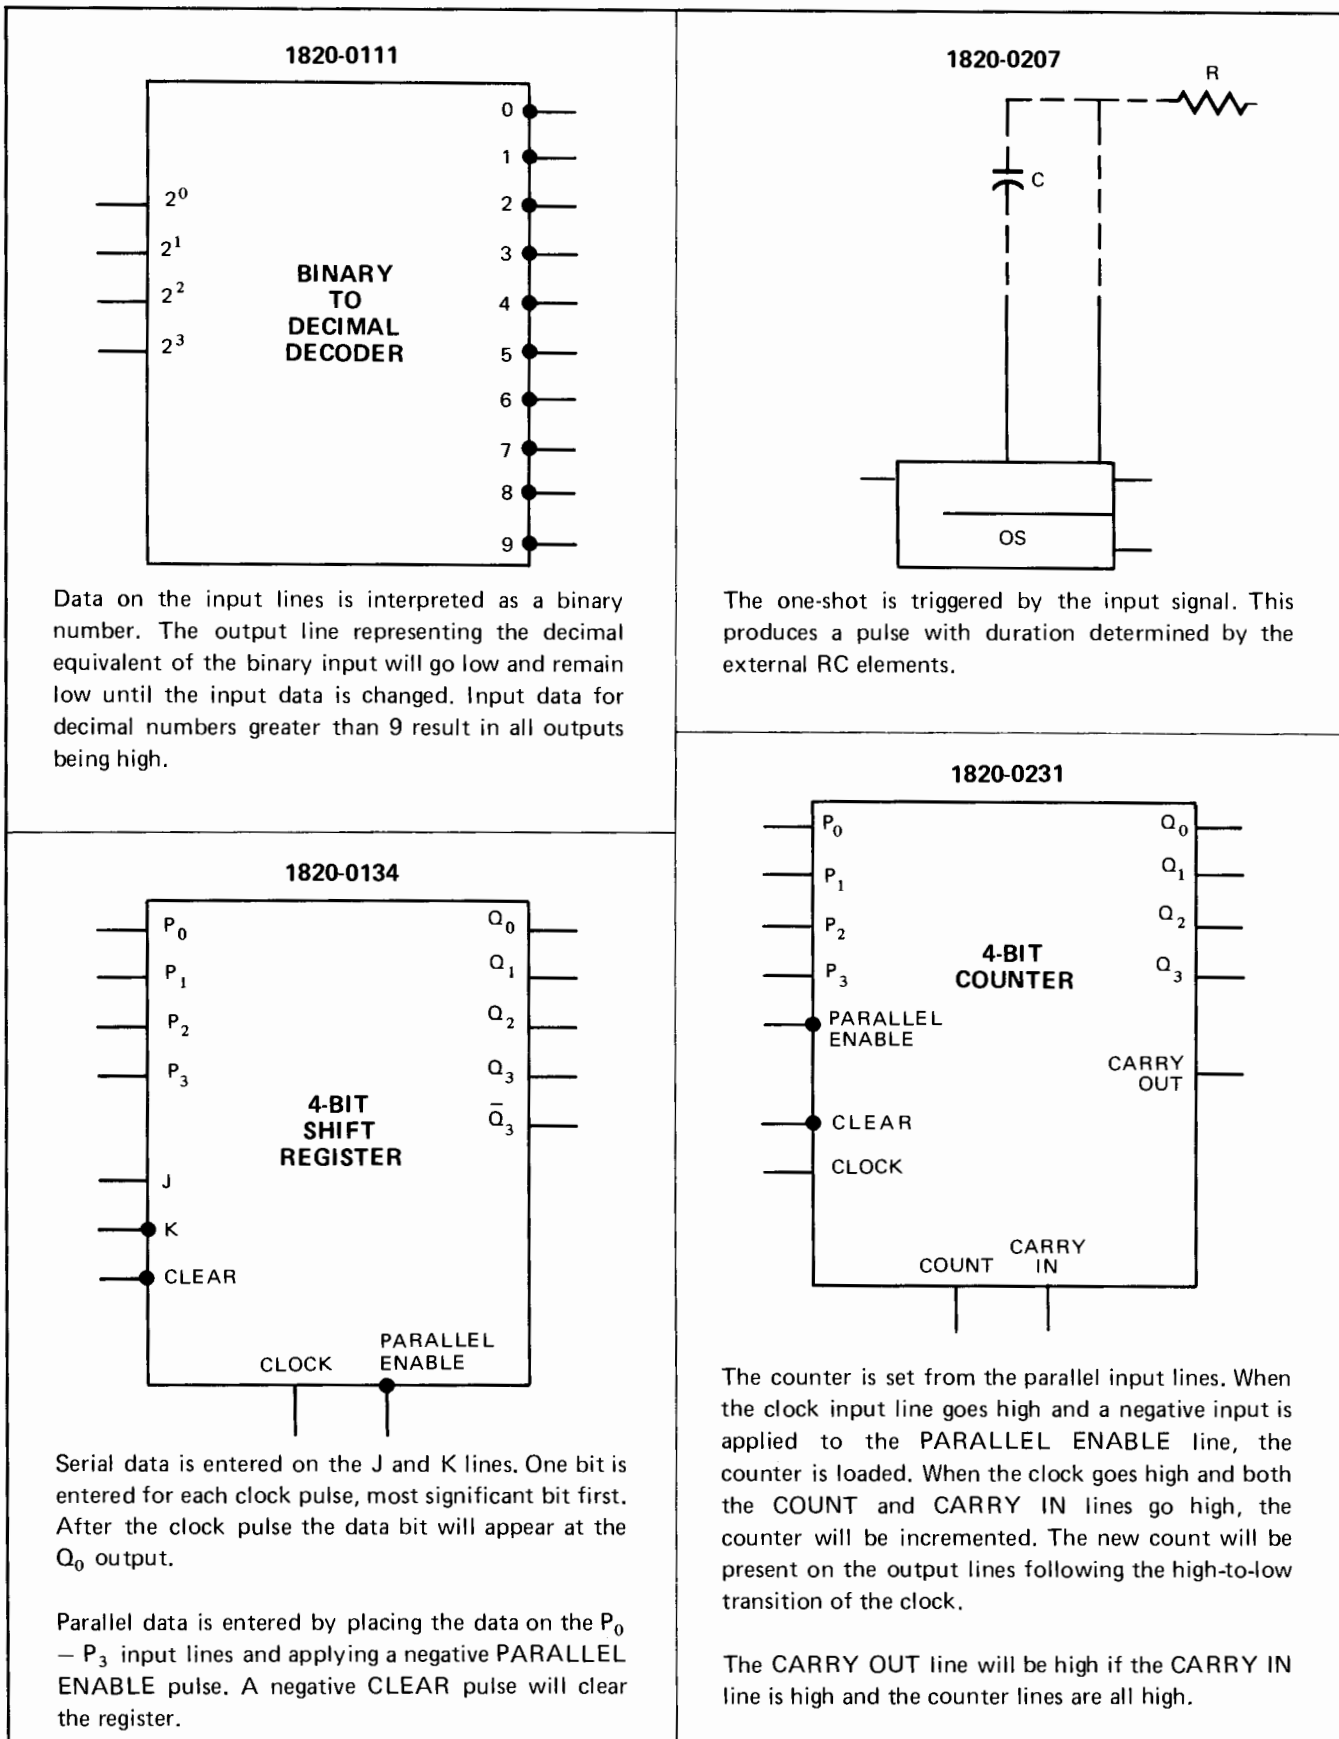


Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 1 of 7)

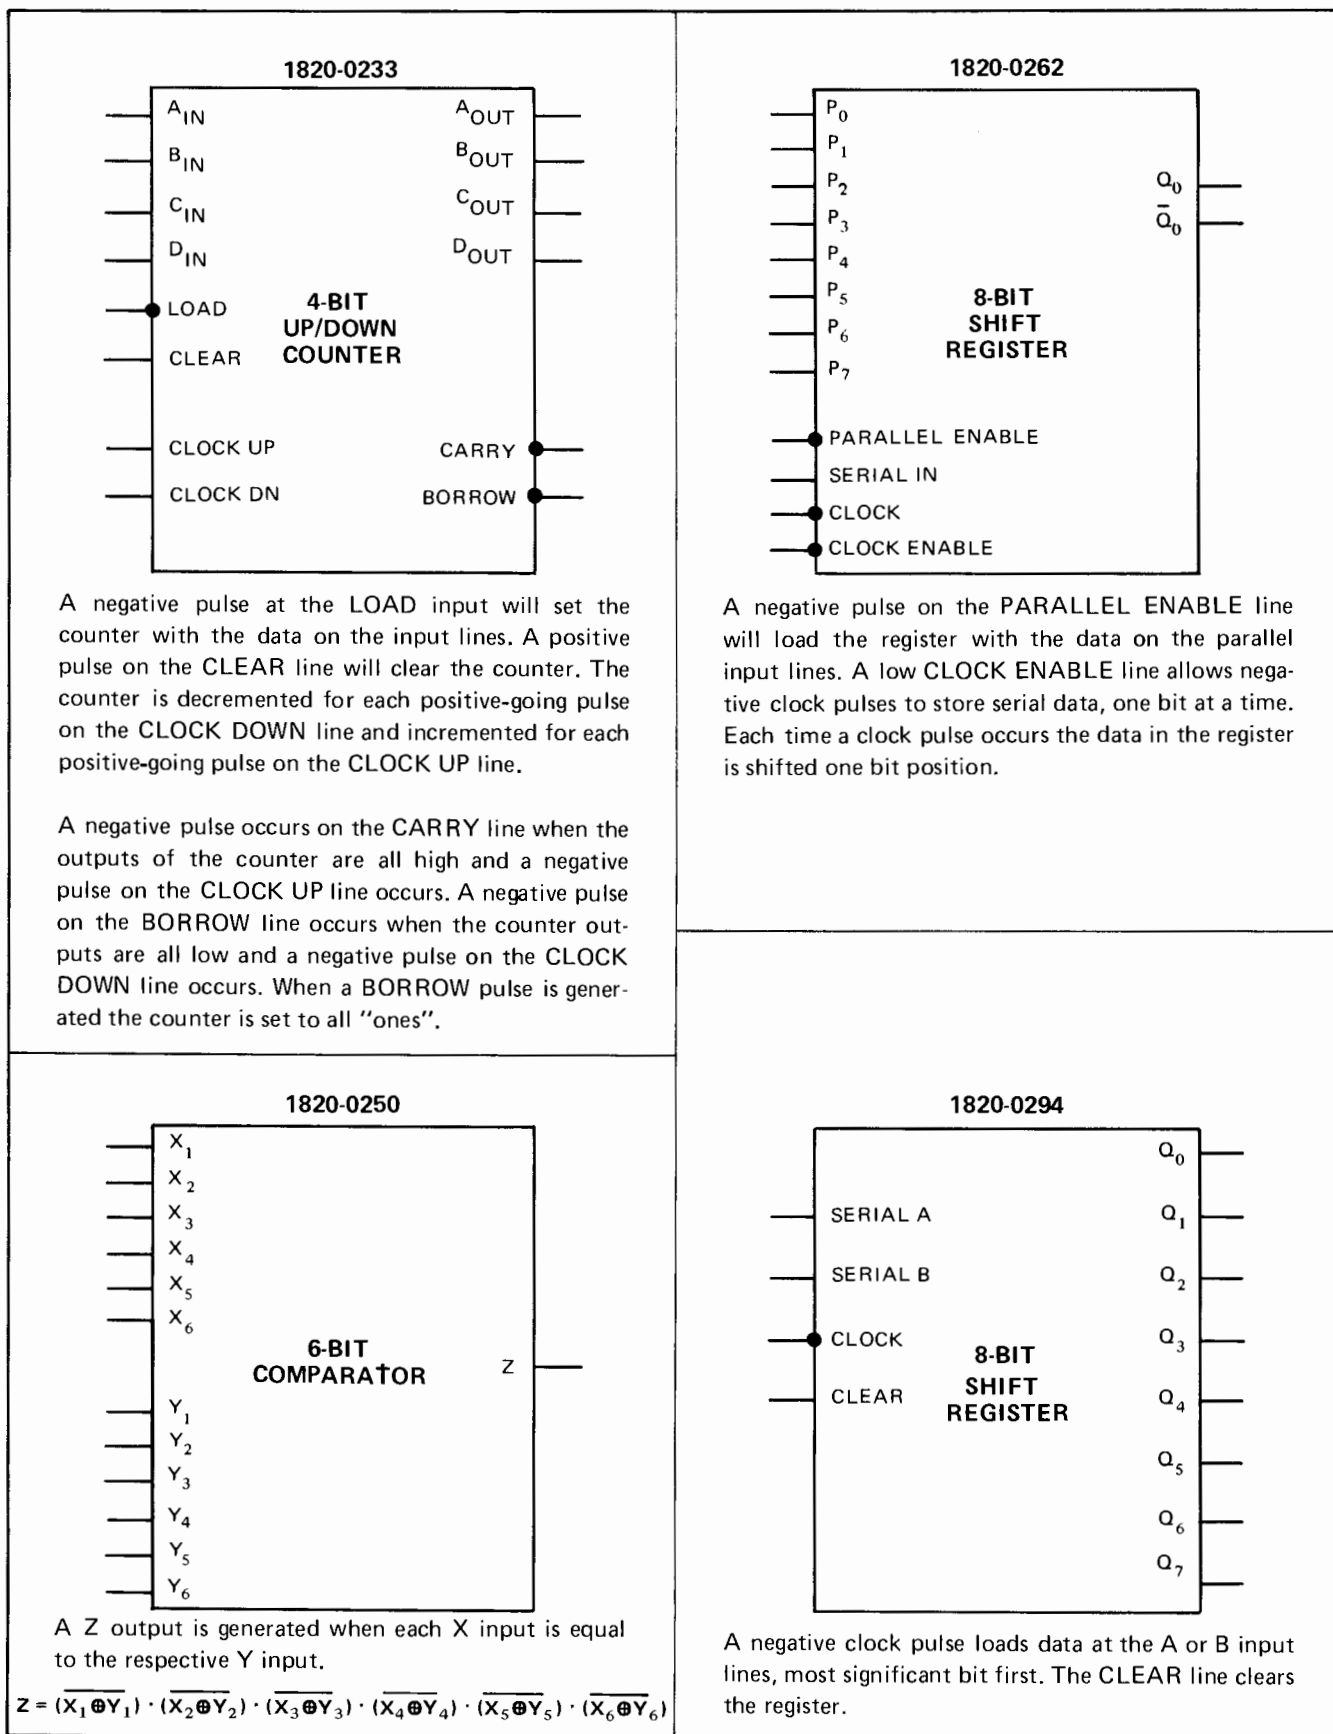


Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 2 of 7)

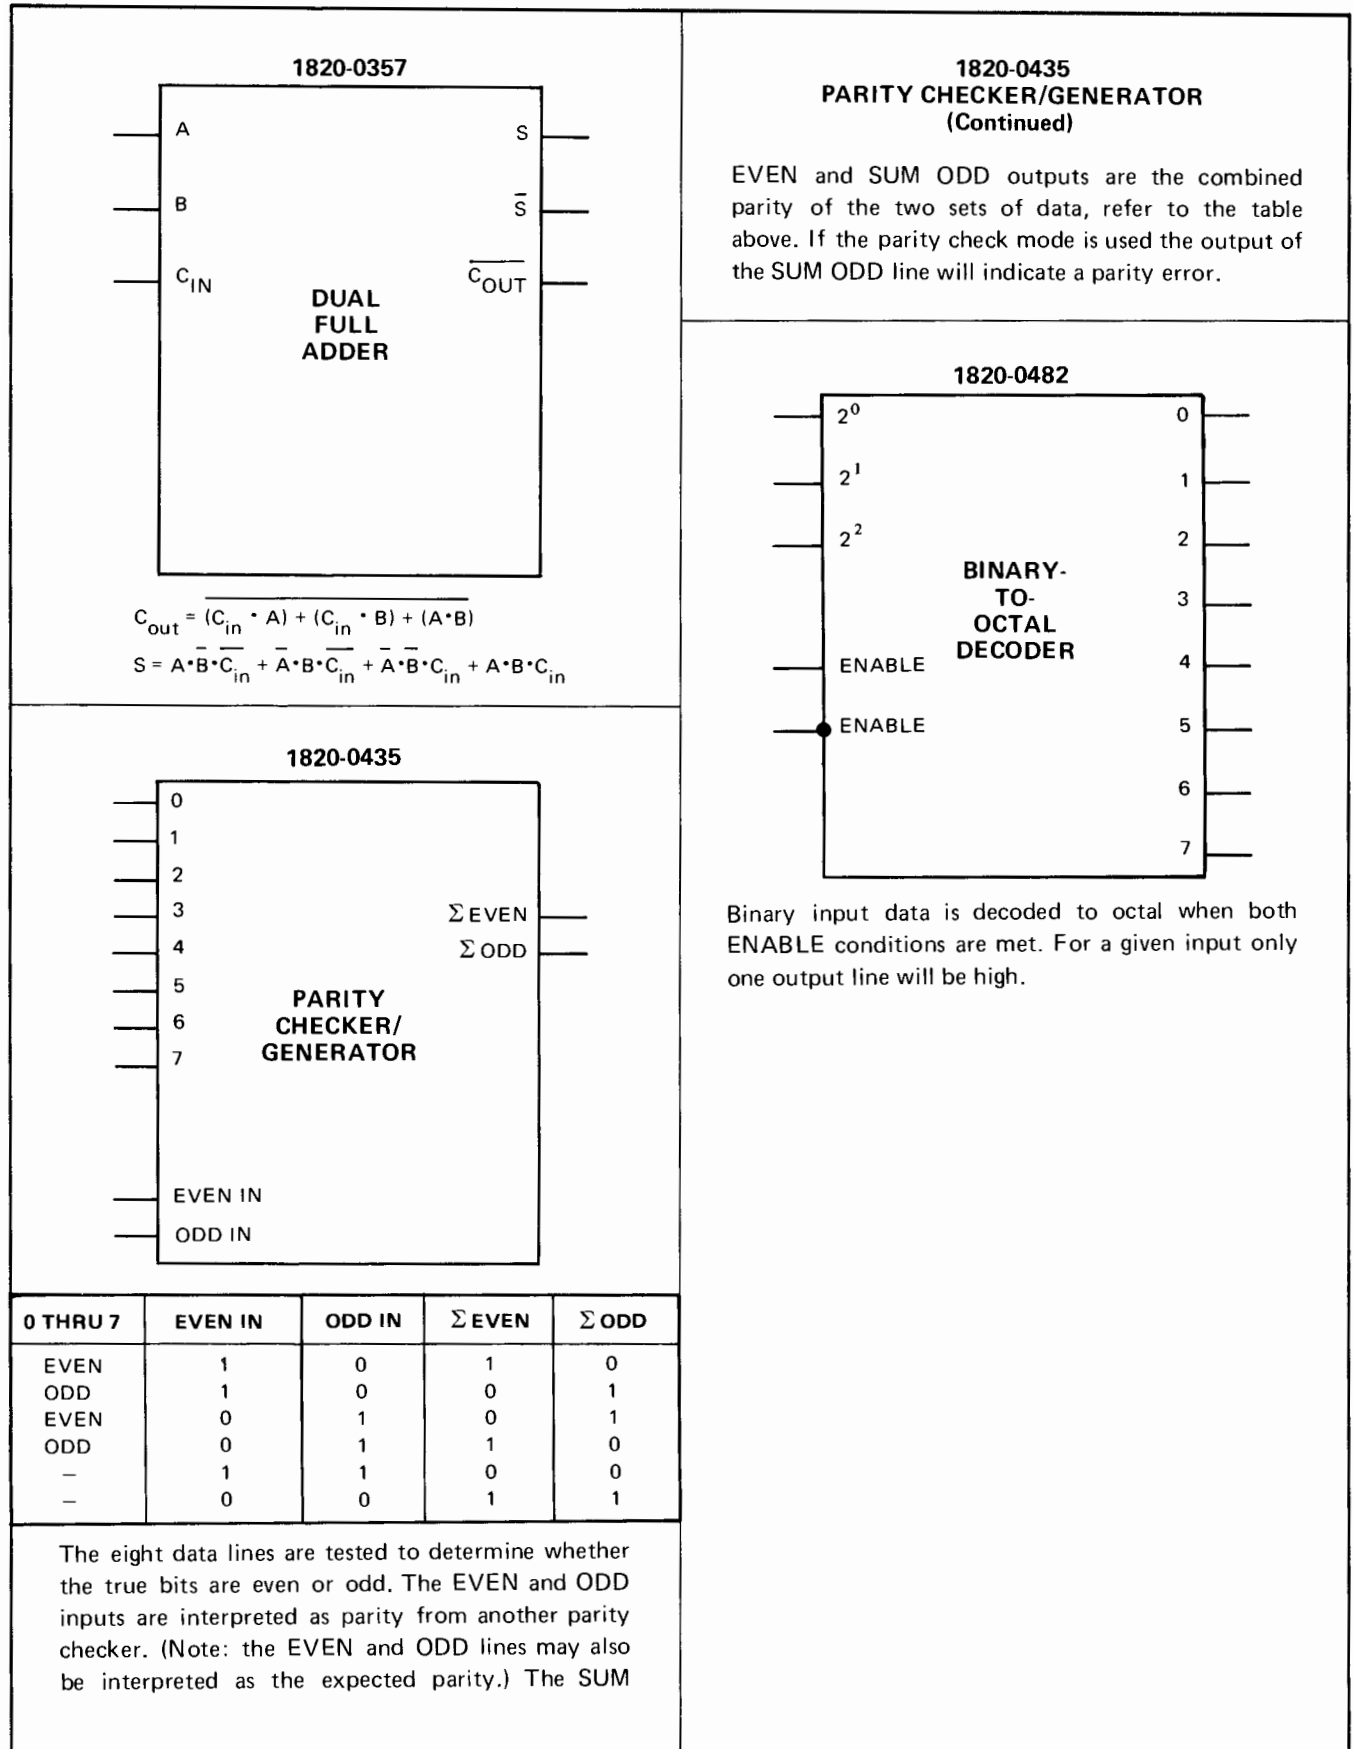


Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 3 of 7)





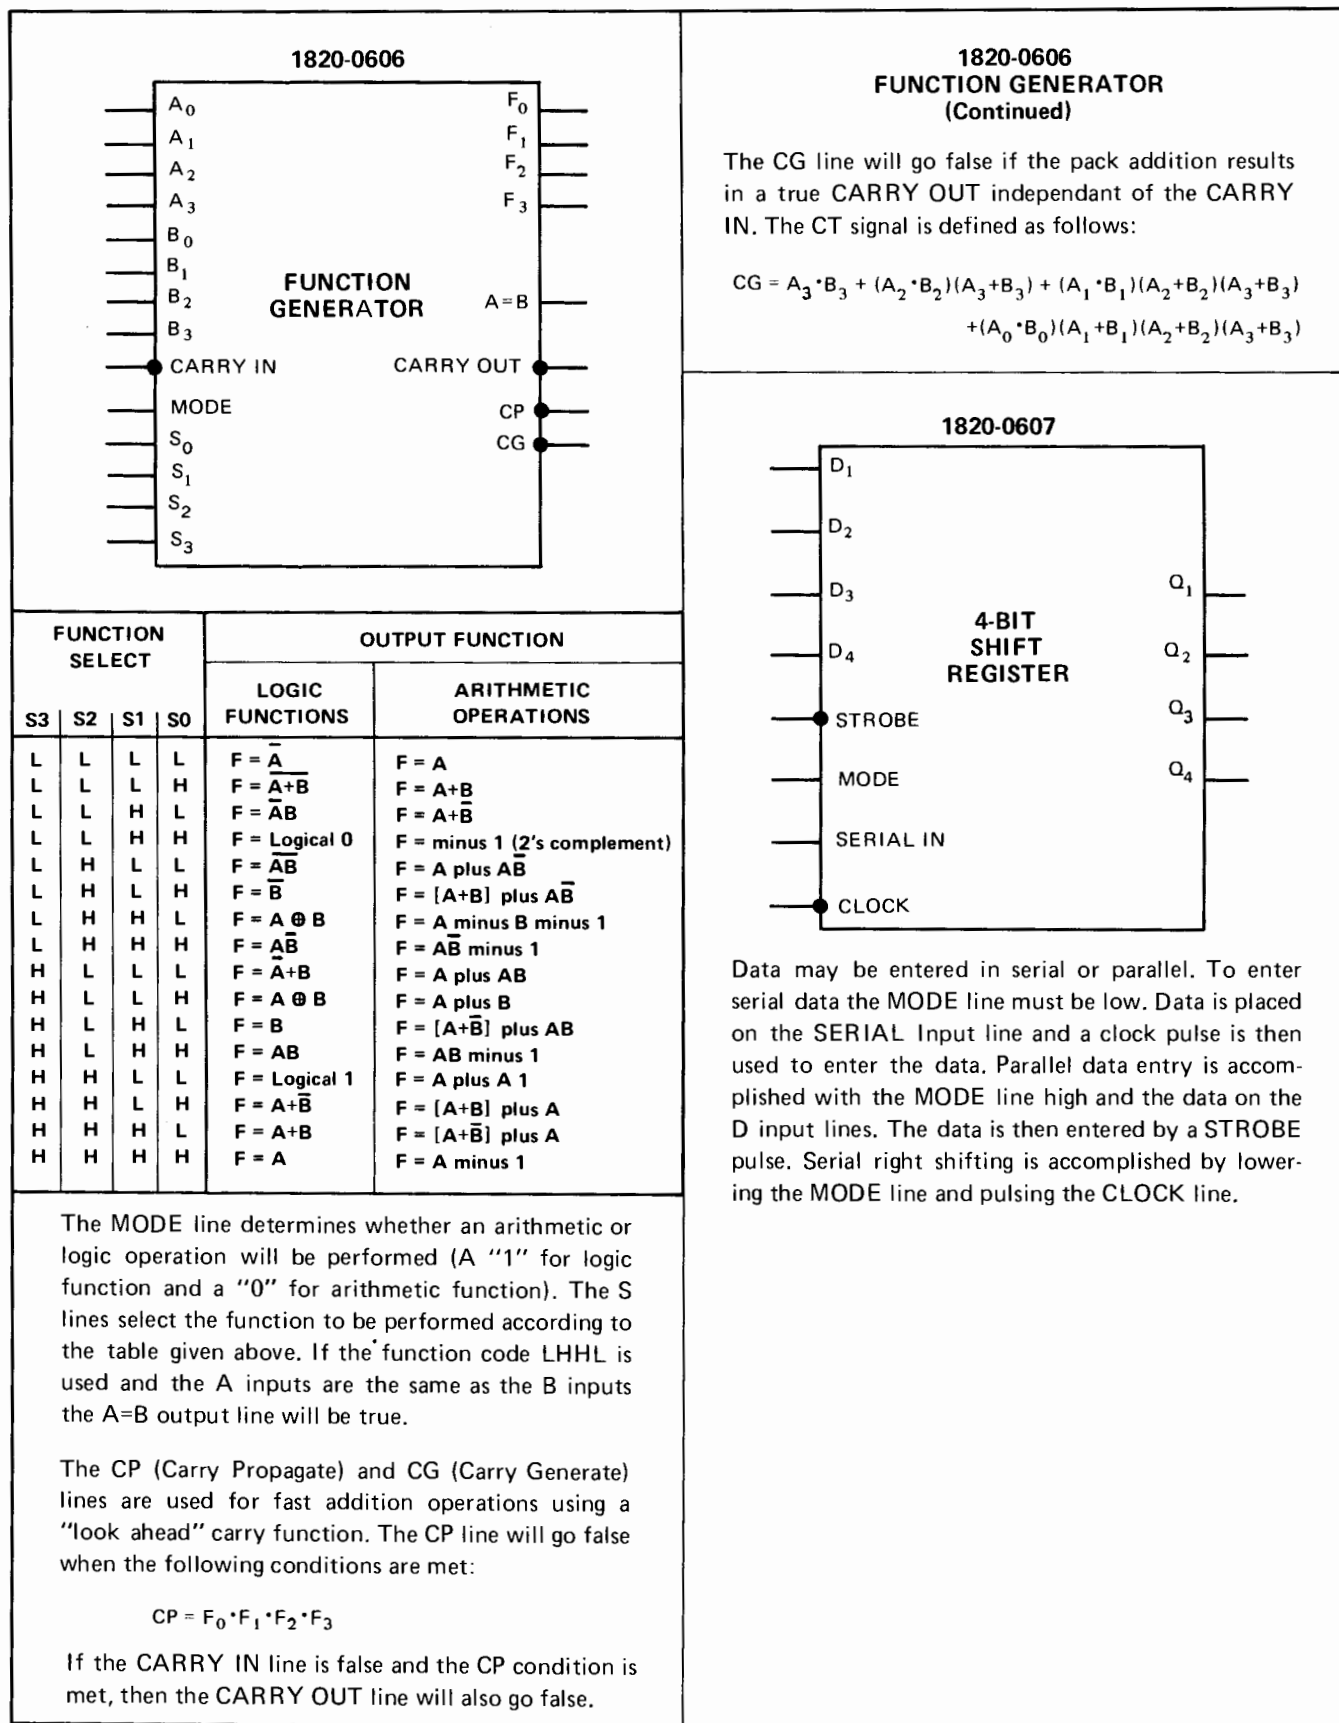


Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 4 of 7)

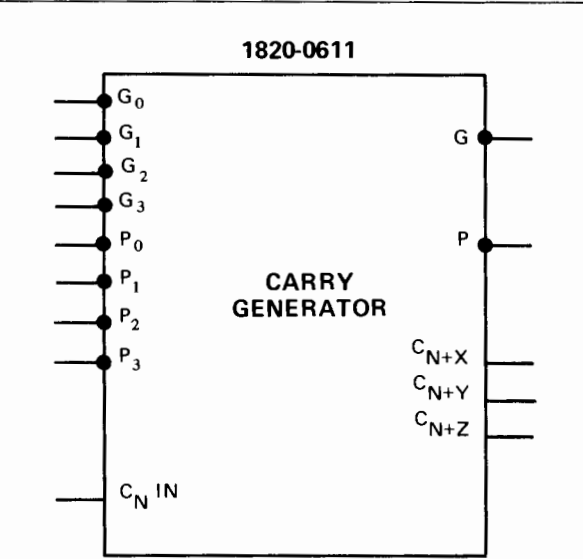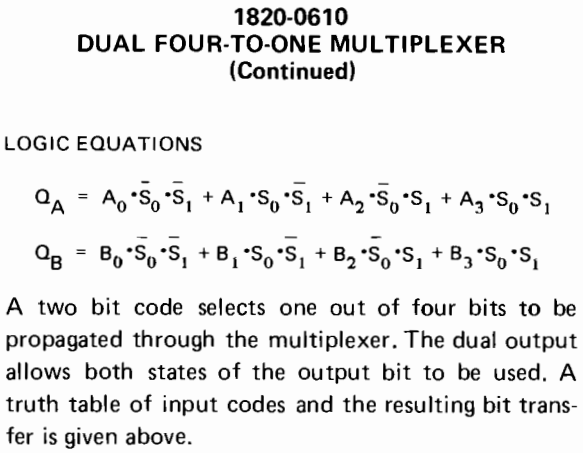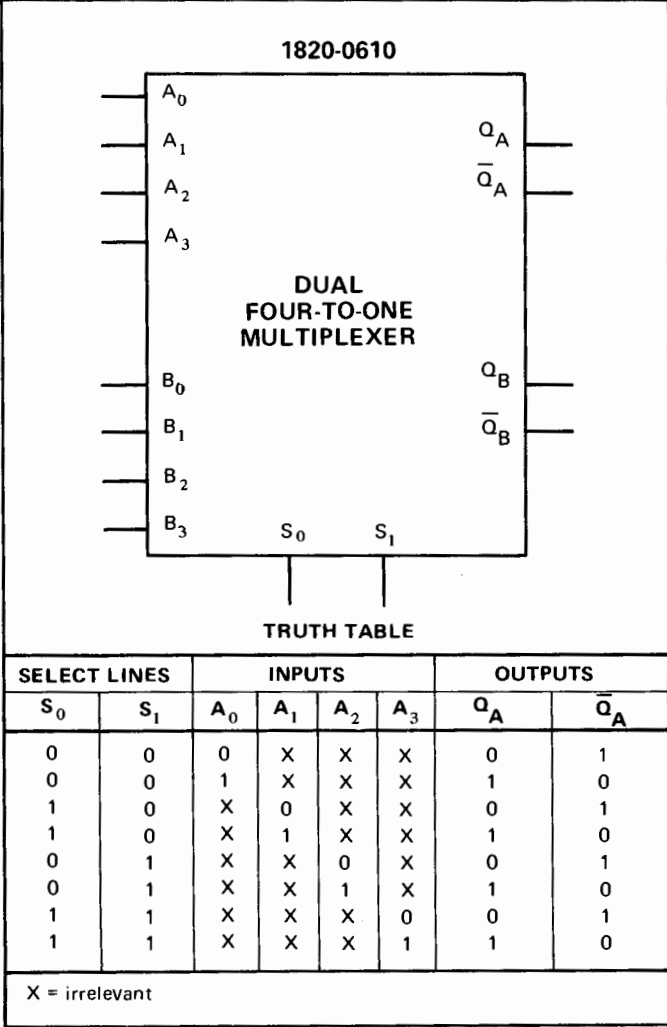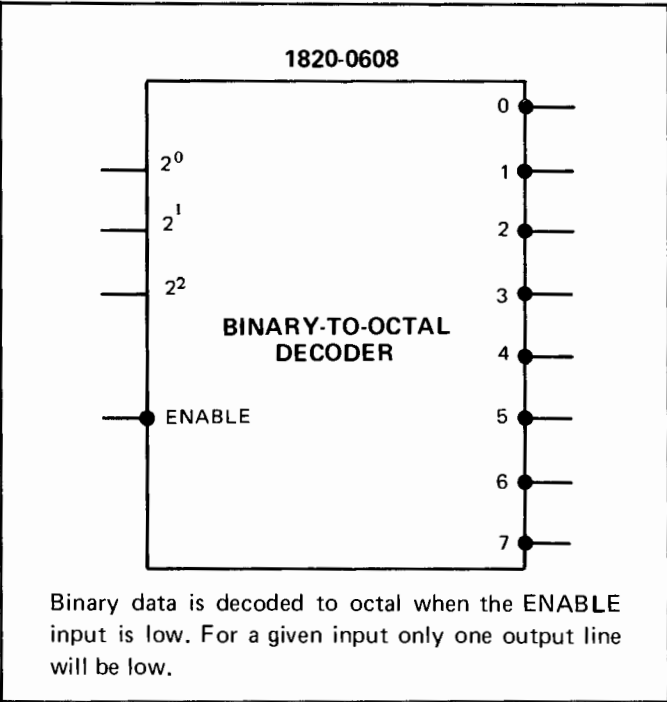

This circuit is used together with 1820-0606 to provide fast addition. The Carry Generator uses CP (Carry Propagate) and CG (Carry Generate) signals from the adder circuits (P₀-P₃ and G₀-G₃) as well as the Carry In signal to the first adder circuit to provide carry in signals to succeeding adder circuits. (C_{N+X}, C_{N+Y}, and C_{N+Z}). This is done without waiting for the "ripple carry" to propagate from adder to adder.

The G and P signals provide inputs to additional look ahead circuits if they are used. The output signals are defined as follows:

$$C_{N+X} = G_0 + P_0 C_N$$
$$C_{N+Y} = G_1 + P_1 G_0 + P_1 P_0 C_N$$
$$C_{N+Z} = G_2 + P_2 G_1 + P_2 P_1 G_0 + P_2 P_1 P_0 C_N$$
$$\bar{G} = \bar{G}_3 + \bar{P}_3 \bar{G}_2 + \bar{P}_3 \bar{P}_2 \bar{G}_1 + \bar{P}_3 \bar{P}_2 \bar{P}_1 \bar{G}_0$$
$$P = \bar{P}_3 \bar{P}_2 \bar{P}_1 \bar{P}_0$$

Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 5 of 7)

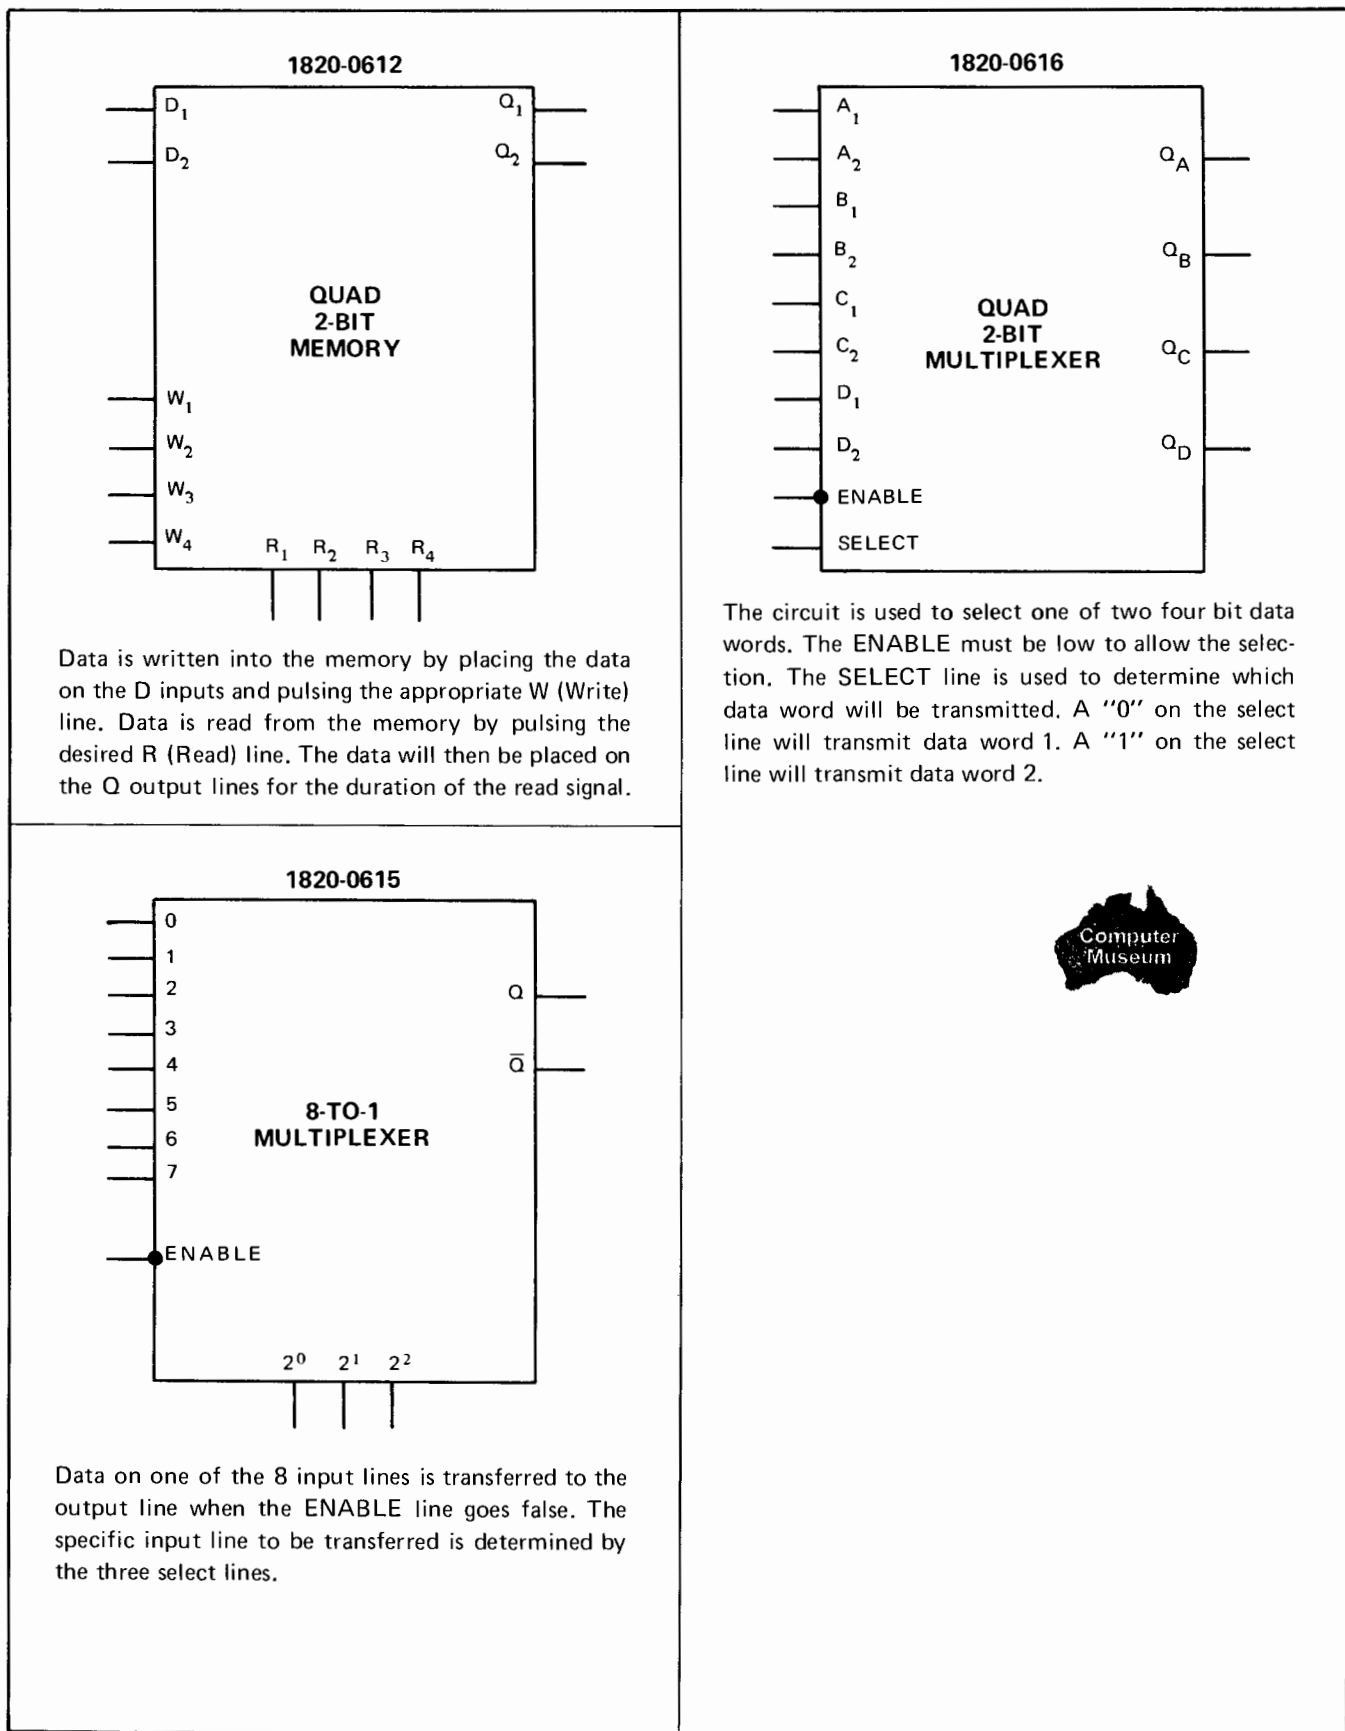


Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 6 of 7)

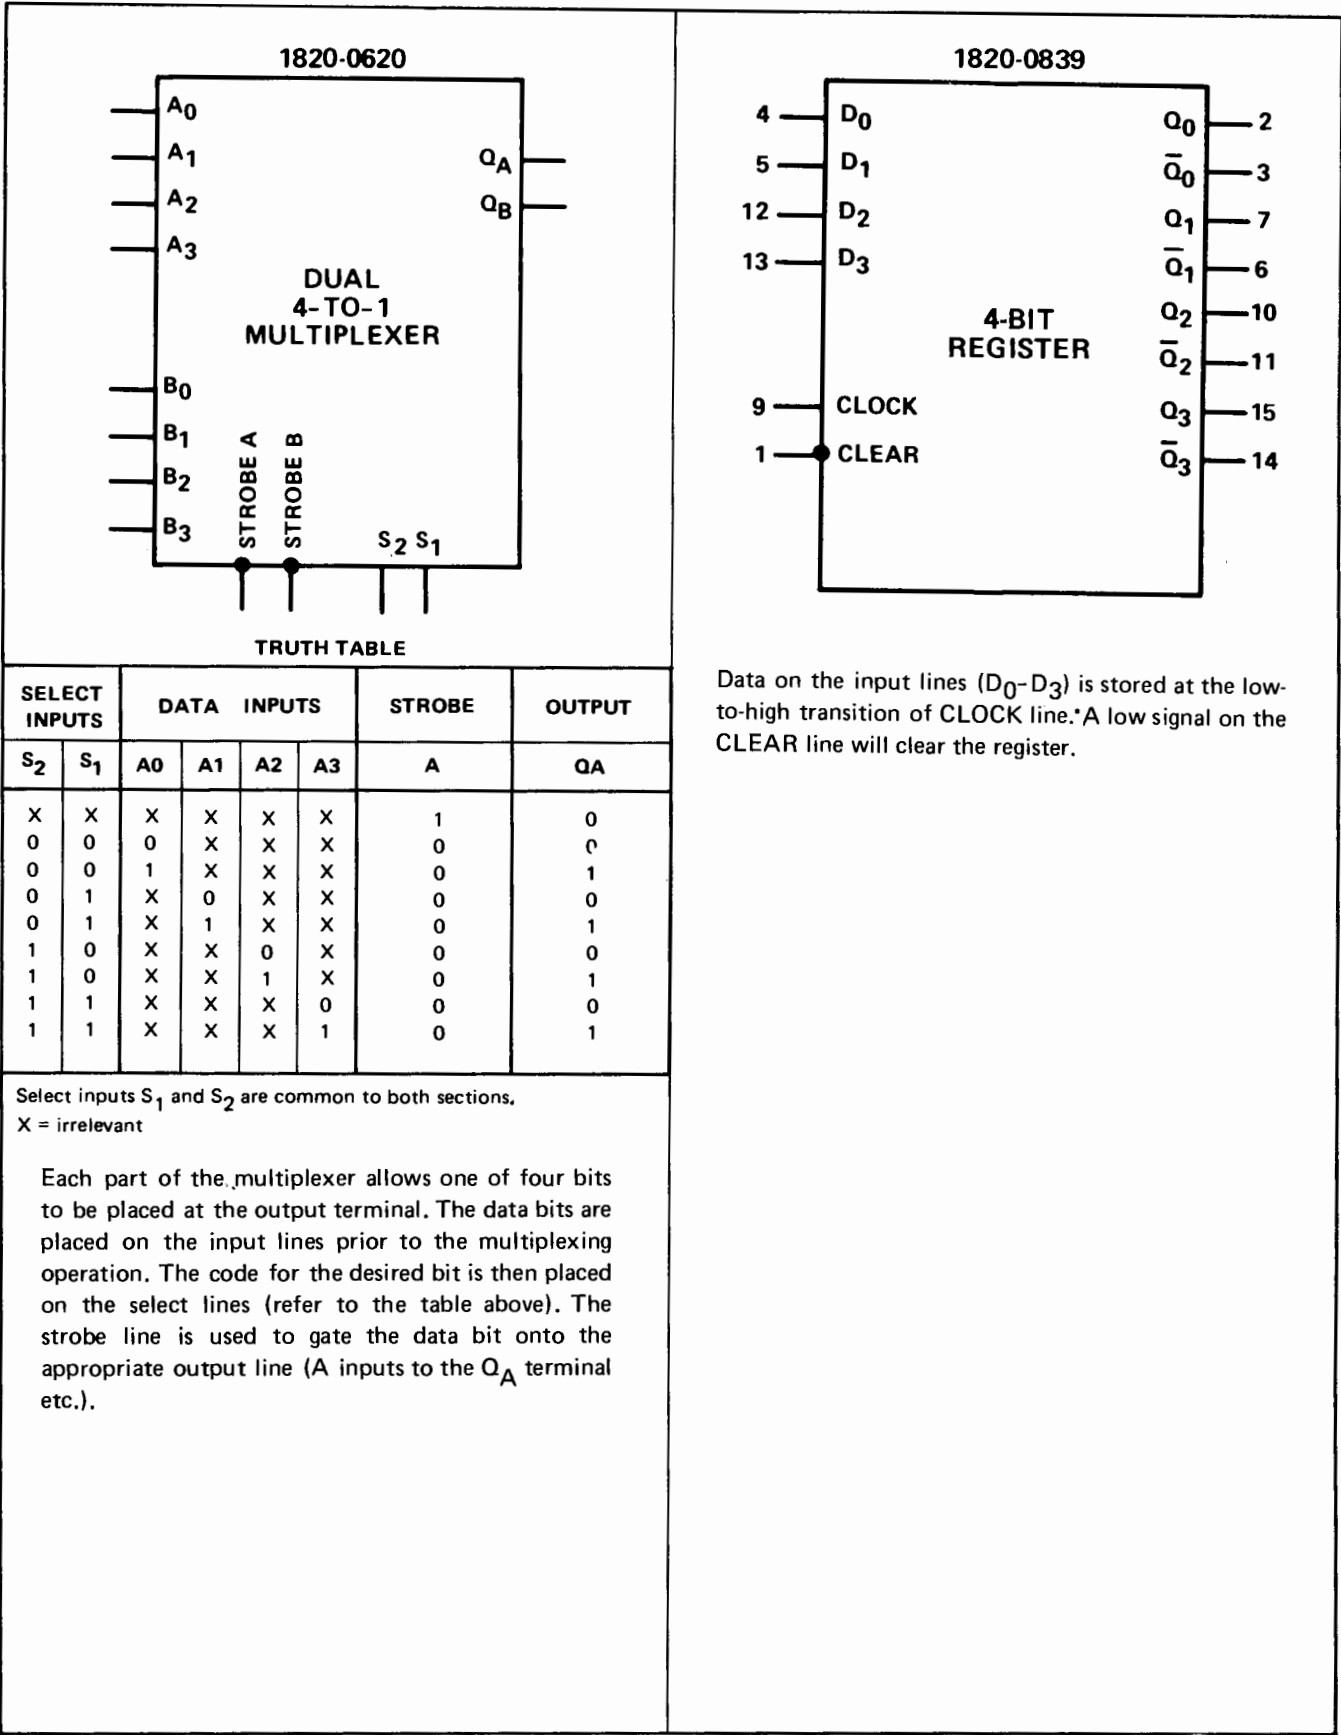


Figure 2-37. Nonstandard Integrated Circuit Descriptions (Sheet 7 of 7)

3-1. INTRODUCTION.

3-2. This section contains interconnecting wiring information for the computer. Replace wiring as described in the Installation and Maintenance Manual. Replace leadwires with the same color and size as on the original installation.

3-3. BACKPLANE WIRING.

3-4. Table 3-1 is a functional wiring list for the backplane and includes all connections between the backplane connectors, the front panel (A24), and the power supply (A25). The table is in numerical order of reference numbers which are assigned to the signal mnemonics. The reference numbers and signal mnemonics also appear in the signal index (table 4-1) and on the schematic diagrams in section IV. Refer to paragraph 4-21 for an explanation of how to use these reference numbers.

3-5. Table 3-2 lists the point-to-point wiring between the backplane connectors and front panel connector XA24. The list is in numerical order of connector XA24 pin numbers.

3-6. Table 3-3 lists the point-to-point wiring between the backplane connectors and the power supply and plenum chamber. The list is in alphanumeric order of reference designations. Each connection is listed twice to enable determining leadwire terminations from either end of the leadwire. For example, the wht-blk-red leadwire from A25TB1-1 to XA101-9,10 is also listed as from XA101-9,10 to A25TB1-1.

3-7. Figure 3-1 depicts the wiring between the backplane, the front panel (A24), the power supply (A25), the plenum chamber (A26), and other components. The diagram is not complete in itself but must be used with

tables 3-1, 3-2, and 3-3 to determine the point-to-point wiring between the components illustrated.

3-8. POWER SUPPLY WIRING.

3-9. This section contains information about the wiring that interconnects the computer and the power supply. For information concerning wiring that is internal to the power supply, refer to the separate power supply manual.

3-10. PLENUM CHAMBER WIRING.

3-11. Table 3-4 lists the point-to-point wiring between the assemblies and components in the plenum chamber. The table also includes the wiring between the plenum chamber and the backplane, power switch, and power supply. The list is in alphanumeric order of reference designations. Each connection, except to the backplane, power switch, and power supply, is listed twice to enable determining leadwire terminations from either end of the leadwire. For example, the blk leadwire from B1-J1 to TB2-1 is also listed as from TB2-1 to B1-J1.

3-12. The wiring diagram, figure 3-2, supports table 3-4 by identifying the plenum chamber assemblies and components and their connecting points.

3-13. CABLE ASSEMBLY WIRING.

3-14. The cable assemblies used to interconnect the 50-pin connector edges of the cards in the memory section (see figure 4-2) are wired pin-to-pin by 50-wire flat cables. The connector assemblies used to interconnect the 48-pin connector edges of the cards in the memory section are also wired pin-to-pin.

Table 3-1. Backplane, Functional Wiring List

PUT							MEMORY												REF NO.		
CODE 10	SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH		FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY
7	A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																					1
																					2
																					3
																					4
																					5
																					6
																					7
																					8
																					9
																					10
																					11
																					12
																					13
																					14
																					15
																					16
	21	21	21	21	21	21															17
	7	7	7	7	7	7															18
																					19
																					20
																					21
													(69)						(64)		22
																					23
																					24
																					25
																					26
																					27
																			43		28
																					29
	13	13	13	13	13	13															30
																					31
													(76)						(55)		32
													(6)						(60)		33
																					34
													(71)						76		35
	62	62	62	62	62	62															36
																					37
7	A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

ded leadwire.

3. Leadwires are from A1-78 to A24-64 and A7-56 to A107-69.

REF NO.	SIGNAL	CPU									INPUT/OUT								
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16	SELECT CODE 15
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	A18
1	AAB					26	78												
2	AAFF			52			5												
3	ABF			66	21														
4	ADR		68	16															
5	ALU0				13	58	79												
6	ALU14				38	22													
7	ALU15				35	21	77												
8	ALX14				41	7	3												
9	ALX16				9	23	17												
10	AR0				36	45													
11	ARS				84		18												
12	ARSS				33		25												
13	BAFF			43	32		7												
14	CIN				14	41	84												
15	CJMP	60			62														
16	CL		51	13															
17	CLC							10	66	44	21	21	21	21	21	21	21	21	21
18	CLF				76			5	51	24	7	7	7	7	7	7	7	7	7
19	CLK	51				61													
20	CLK1	72		79															
21	CLK2	84			69		31		70										
22	CLK3 Note 3	(78)		81				(56)	42	76									
23	CMEFF	70					55												
24	CMF0	77						25											
25	CMOV	76			61														
26	COND			20	11														
27	COUT			50	56	19	11												
28	CPEN	52			19														
29	CR		38	15															
30	CRS							19		82	13	13	13	13	13	13	13	13	13
31	CT3	10							64										
32	CW Note 4						(73)			(36)									
33	DECM Note 5	(42)																	
34	DIV			83	58														
35	DTRY			(25)															
36	EDT									15	62	62	62	62	62	62	62	62	62
37	EEOP		64	68															
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	A18

NOTES: 1. Shaded pin numbers indicate source of signal. 2. Indicates pins interconnected by a leadwire which is twisted with a ground wire.
 4. Leadwires are from A6-73 to A107-76 and A9-36 to A24-55. 5. Leadwires are from A1-42 to A107-6 and A1-42 to A24-60.

Table 3-1. Backplane, Functional Wiring List (Continued)

						MEMORY												FRONT PANEL	POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH			
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
6	46	46	46	46	46															38
																				39
																				40
																				41
																				42
																		12		43
																		22		44
																				45
																				46
																		21		47
																				48
49	4/49	4/49	4/49	4/49	4/49															49
																				50
																				51
																				52
																				53
																				54
																				55
																		74		56
0	10	10	10	10	10															57
										5/6										58
													4/5							59
								25		10										60
								27		7										61
								29		8										62
								31		9										63
								33		37										64
								35		32										65
								37		33										66
								41		34										67
								43		31										68
								45		46										69
								49		49										70
								51		50										71
								53		61										72
								55		69										73
18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

Source.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT									
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16	SELECT CODE 15	
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	A18	
38	ENF	50						4	57	29	46	46	46	46	46	46	46	46	46	
39	ENOV				51		83													
40	ENRM	58	63																	
41	ENSS			61			15													
42	EOP	46	65		55															
43	EPRSI							42												
44	EXTEND				10		82													
45	FBFF6							31		28										
46	FBFF7							28		30										
47	FETCH	67			64															
48	FLAG				23		80													
49	FLG1							71									4	4/49	4	
50	FLG2							34			4/49	4/49	4/49	4/49	4/49	4/49	49			
51	FN0				66	50														
52	FN1				3	46														
53	FN2				4	56														
54	FN3				5	55														
55	FRZ	80		35			43													
56	HIN (NOTE 3)	65						65	50											
57	HT6			75				9												
58	IAK							14	84		10	10	10	10	10	10	10	10		
59	IDEM0-3																			
60	IDEM4-7																			
61	ID0M0 *																			
62	ID1M0 *																			
63	ID2M0 *																			
64	ID3M0 *																			
65	ID4M0 *																			
66	ID5M0 *																			
67	ID6M0 *																			
68	ID7M0 *																			
69	ID8M0 *																			
70	ID9M0 *																			
71	ID10M0 *																			
72	ID11M0 *																			
73	ID12M0 *																			
74	ID13M0 *																			
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	A18	

NOTES: 1.  Shaded pin numbers indicate source of signal. 2. * Indicates two leadwires per connection. 3. A24-74 pin may also be a source of signal.

Table 3-1. Backplane, Functional Wiring List (Continued)

PUT						MEMORY														REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
								57		70										75
								59		71										76
								61		15										77
								26		14										78
								28		11										79
								30		12										80
								32		13										81
								34		38										82
								36		43										83
								38		41										84
								42		42										85
								44		72										86
								46		68										87
								50		66										88
								52		67										89
								54		65										90
								56		62										91
								58		63										92
								60		64										93
								62		16										94
							25			26										95
							27			19										96
							29			25										97
							31			24										98
							33			53										99
							35			60										100
							37			59										101
							41			58										102
							43			52										103
							45			44										104
							49			51										105
							51			45										106
							53			76										107
							55			73										108
							57			74										109
							59			75										110
							61			17										111
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

REF NO.	SIGNAL	CPU									INPUT/OUT								
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16	
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	
75	ID14M0 *																		
76	ID15M0 *																		
77	ID16M0 *																		
78	ID0M1 *																		
79	ID1M1 *																		
80	ID2M1 *																		
81	ID3M1 *																		
82	ID4M1 *																		
83	ID5M1 *																		
84	ID6M1 *																		
85	ID7M1 *																		
86	ID8M1 *																		
87	ID9M1 *																		
88	ID10M1 *																		
89	ID11M1 *																		
90	ID12M1 *																		
91	ID13M1 *																		
92	ID14M1 *																		
93	ID15M1 *																		
94	ID16M1 *																		
95	ID0M2 *																		
96	ID1M2 *																		
97	ID2M2 *																		
98	ID3M2 *																		
99	ID4M2 *																		
100	ID5M2 *																		
101	ID6M2 *																		
102	ID7M2 *																		
103	ID8M2 *																		
104	ID9M2 *																		
105	ID10M2 *																		
106	ID11M2 *																		
107	ID12M2 *																		
108	ID13M2 *																		
109	ID14M2 *																		
110	ID15M2 *																		
111	ID16M2 *																		
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	


NOTES: 1.  Shaded pin numbers indicate source of signal. 2. * Indicates two leadwires per connection.

Table 3-1. Backplane, Functional Wiring List (Continued)

						MEMORY														REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
							26			20										112
							28			23										113
							30			22										114
							32			21										115
							34			57										116
							36			54										117
							38			56										118
							42			55										119
							44			78										120
							46			79										121
							50			81										122
							52			80										123
							54			84										124
							56			77										125
							58			83										126
							60			82										127
							62			18										128
													10		25					129
													7		27					130
													8		29					131
													9		31					132
													37		33					133
													32		35					134
													33		37					135
													34		41					136
													31		43					137
													46		45					138
													49		49					139
													50		51					140
													61		53					141
													69		55					142
													70		57					143
													71		59					144
													15		61					145
													14		26					146
													11		28					147
													12		30					148
18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

REF NO.	SIGNAL	CPU									INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
112	ID0M3 *																	
113	ID1M3 *																	
114	ID2M3 *																	
115	ID3M3 *																	
116	ID4M3 *																	
117	ID5M3 *																	
118	ID6M3 *																	
119	ID7M3 *																	
120	ID8M3 *																	
121	ID9M3 *																	
122	ID10M3 *																	
123	ID11M3 *																	
124	ID12M3 *																	
125	ID13M3 *																	
126	ID14M3 *																	
127	ID15M3 *																	
128	ID16M3 *																	
129	ID0M4 *																	
130	ID1M4 *																	
131	ID2M4 *																	
132	ID3M4 *																	
133	ID4M4 *																	
134	ID5M4 *																	
135	ID6M4 *																	
136	ID7M4 *																	
137	ID8M4 *																	
138	ID9M4 *																	
139	ID10M4 *																	
140	ID11M4 *																	
141	ID12M4 *																	
142	ID13M4 *																	
143	ID14M4 *																	
144	ID15M4 *																	
145	ID16M4 *																	
146	ID0M5 *																	
147	ID1M5 *																	
148	ID2M5 *																	


NOTES: 1.  Shaded pin numbers indicate source of signal. 2. * Indicates two leadwires per connection.

Table 3-1. Backplane, Functional Wiring List (Continued)

PUT						MEMORY													REF NO.	
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	FRONT PANEL (OPERATOR OR CONTROLLER)		POWER SUPPLY
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
													13		32					149
													38		34					150
													43		36					151
													41		38					152
													42		42					153
													72		44					154
													68		46					155
													66		50					156
													67		52					157
													65		54					158
													62		56					159
													63		58					160
													64		60					161
													16		62					162
													26			25				163
													19			27				164
													25			29				165
													24			31				166
													53			33				167
													60			35				168
													59			37				169
													58			41				170
													52			43				171
													44			45				172
													51			49				173
													45			51				174
													76			53				175
													73			55				176
													74			57				177
													75			59				178
													17			61				179
													20			26				180
													23			28				181
													22			30				182
													21			32				183
													57			34				184
													54			36				185
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

REF NO.	SIGNAL	CPU									INPUT/OUT								
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16	
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	
149	ID3M5 *																		
150	ID4M5 *																		
151	ID5M5 *																		
152	ID6M5 *																		
153	ID7M5 *																		
154	ID8M5 *																		
155	ID9M5 *																		
156	ID10M5 *																		
157	ID11M5 *																		
158	ID12M5 *																		
159	ID13M5 *																		
160	ID14M5 *																		
161	ID15M5 *																		
162	ID16M5 *																		
163	ID0M6 *																		
164	ID1M6 *																		
165	ID2M6 *																		
166	ID3M6 *																		
167	ID4M6 *																		
168	ID5M6 *																		
169	ID6M6 *																		
170	ID7M6 *																		
171	ID8M6 *																		
172	ID9M6 *																		
173	ID10M6 *																		
174	ID11M6 *																		
175	ID12M6 *																		
176	ID13M6 *																		
177	ID14M6 *																		
178	ID15M6 *																		
179	ID16M6 *																		
180	ID0M7 *																		
181	ID1M7 *																		
182	ID2M7 *																		
183	ID3M7 *																		
184	ID4M7 *																		
185	ID5M7 *																		
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	


NOTES: 1.  Shaded pin numbers indicate source of signal. 2. * Indicates two leadwires per connection.

Table 3-1. Backplane, Functional Wiring List (Continued)

T						MEMORY												FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH			
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
													56			38				186
													55			42				187
													78			44				188
													79			46				189
													81			50				190
													80			52				191
													84			54				192
													77			56				193
													83			58				194
													82			60				195
													18			62				196
																				197
																		24		198
																				199
												79						33		200
																				201
																				202
																				203
																				204
3/35	26/35	26/35	26/35	26/35	26/35													71		205
9/38	29/38	29/38	29/38	29/38	29/38													70		206
0/41	30/41	30/41	30/41	30/41	30/41													68		207
4/45	64/45	64/45	64/45	64/45	64/45													72		208
7/42	77/42	77/42	77/42	77/42	77/42													54		209
0/51	80/51	80/51	80/51	80/51	80/51													53		210
1/53	81/53	81/53	81/53	81/53	81/53													63		211
4/52	84/52	84/52	84/52	84/52	84/52													61		212
7/54	27/54	27/54	27/54	27/54	27/54													32		213
3/56	28/56	28/56	28/56	28/56	28/56													34		214
1/58	31/58	31/58	31/58	31/58	31/58													46		215
0/55	60/55	60/55	60/55	60/55	60/55													44		216
3/57	78/57	78/57	78/57	78/57	78/57													14		217
9/61	79/61	79/61	79/61	79/61	79/61													16		218
2/65	82/65	82/65	82/65	82/65	82/65													20		219
3/74	83/74	83/74	83/74	83/74	83/74													18		220
18	18	18	18	18	18															221
15	15	15	15	15	15													6		222
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

connected by a leadwire which is twisted with a grounded leadwire.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
186	ID6M7 *																	
187	ID7M7 *																	
188	ID8M7 *																	
189	ID9M7 *																	
190	ID10M7 *																	
191	ID11M7 *																	
192	ID12M7 *																	
193	ID13M7 *																	
194	ID14M7 *																	
195	ID15M7 *																	
196	ID16M7 *																	
197	Spare																	
198	IEN5							35	79									
199	IMPV	24							68									
200	INCM	37																
201	INCP	43				3												
202	INM		67	3	7													
203	INT	22						45										
204	INT5							66	77									
205	IOB0								13		26/35	26/35	26/35	26/35	26/35	26/35	26/35	26/35
206	IOB1								12		29/38	29/38	29/38	29/38	29/38	29/38	29/38	29/38
207	IOB2								11		30/41	30/41	30/41	30/41	30/41	30/41	30/41	30/41
208	IOB3								17		64/45	64/45	64/45	64/45	64/45	64/45	64/45	64/45
209	IOB4								16		77/42	77/42	77/42	77/42	77/42	77/42	77/42	77/42
210	IOB5								15		80/51	80/51	80/51	80/51	80/51	80/51	80/51	80/51
211	IOB6								10		81/53	81/53	81/53	81/53	81/53	81/53	81/53	81/53
212	IOB7								32		84/52	84/52	84/52	84/52	84/52	84/52	84/52	84/52
213	IOB8								31		27/54	27/54	27/54	27/54	27/54	27/54	27/54	27/54
214	IOB9								29		28/56	28/56	28/56	28/56	28/56	28/56	28/56	28/56
215	IOB10								28		31/58	31/58	31/58	31/58	31/58	31/58	31/58	31/58
216	IOB11								27		60/55	60/55	60/55	60/55	60/55	60/55	60/55	60/55
217	IOB12								26		78/57	78/57	78/57	78/57	78/57	78/57	78/57	78/57
218	IOB13								25		79/61	79/61	79/61	79/61	79/61	79/61	79/61	79/61
219	IOB14								30		82/65	82/65	82/65	82/65	82/65	82/65	82/65	82/65
220	IOB15								34		83/74	83/74	83/74	83/74	83/74	83/74	83/74	83/74
221	IOB16										18	18	18	18	18	18	18	18
222	IOG			76				43	46	45	15	15	15	15	15	15	15	15
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17

NOTES: 1.

Shaded pin numbers indicate source of signal.

2. * Indicates two leadwires per connection.


3. ○ Indicates pins into

Table 3-1. Backplane, Functional Wiring List (Continued)

PUT						MEMORY												FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH			
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																				223
																				224
24	24	24	24	24	24													4/80		225
20	20	20	20	20	20													10		226
																				227
																				228
																				229
																				230
																				231
																				232
																				233
																				234
																				235
																				236
																				237
																				238
																				239
																				240
																				241
																				242
																				243
																				244
				6	33															245
			6	33																246
		6	33																	247
	6	33																		248
6	33																			249
33																				250
																				251
																				252
																				253
																				254
59	59	59	59	59	59															255
												77								256
												77								257
																		78		258
																				259
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

interconnected by a leadwire which is twisted with a grounded leadwire.

REF NO.	SIGNAL	CPU										INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16	
																			A1
223	IOG1	83					21	38											
224	IOGE							37	83										
225	IOI							53	82		24	24	24	24	24	24	24	24	
226	IOO			77					78	32	20	20	20	20	20	20	20	20	
227	Spare																		
228	IR0		42				35	68											
229	IR1		45				36	63											
230	IR2		26				56	67											
231	IR3		50				34	30											
232	IR4		72				62	26											
233	IR5		66				70	29											
234	IR6		84				69		41										
235	IR7		75				75		38										
236	IR8		76				57		45										
237	IR9		61		54		63		65										
238	IR10		83	17			59												
239	IR11	9	80	71	24		58		63										
240	IR12	3	79				44												
241	IR13	7	78				49												
242	IR14	5	81				46												
243	IR15	12	82				45												
244	IRAR	56	52																
245	IRQ1							79							6	33			
246	IRQ2							82						6	33				
247	IRQ3							78					6	33					
248	IRQ4							80				6	33						
249	IRQ5							83	67		6	33							
250	IRQ6							81			33							6	
251	IRQ7							84									6	33	
252	JMPS	73			46														
253	JMPF			36	49														
254	JSB		69		18														
255	Spare										59	59	59	59	59	59	59	59	
256	LPE								76										
257	LSI				8	24	20												
258	MBSY			29															
259	MC				28	12													
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	

NOTES: 1.  Shaded pin numbers indicate source of signal.

2. * Indicates two leadwires per connection.

3. ○ Indicates pins

Table 3-1. Backplane, Functional Wiring List (Continued)

T						MEMORY												FRONT PANEL OPERATOR OR CONTROLLER		POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH				
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25		
								3				68								260	
								4				63								261	
							3					55								262	
							4					56								263	
												57			3					264	
												58			4					265	
												54				3				266	
												53				4				267	
									46			59								268	
						46						60								269	
												62		46						270	
												61					46			271	
							5	5				80			5	5				272	
							5					80								273	
																				274	
																				275	
																				276	
						35			35			3		35			35			277	
						36			36			5		36			36			278	
						37			37			8		37			37			279	
						33			33			10		33			33			280	
						32			32			24		32			32			281	
						31			31			23		31			31			282	
						49			49			25		49			49			283	
						52			52			26		52			52			284	
						51			51			27		51			51			285	
						53			53			4		53			53			286	
						56			56			30		56			56			287	
						55			55			32		55			55			288	
						54/57			54/57			84		54/57			54/57			289	
							6	6				83			6	6				290	
						50/58			50/58			28		50/58			50/58			291	
																		51		292	
																				293	
																		52		294	
																				295	
																		49		296	
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25		

REF NO.	SIGNAL	CPU									INPUT/OUTPUT								
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16	
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	
260	MOD0																		
261	MOD1																		
262	MOD2																		
263	MOD3																		
264	MOD4																		
265	MOD5																		
266	MOD6																		
267	MOD7																		
268	MOD0/1																		
269	MOD2/3																		
270	MOD4/5																		
271	MOD6/7																		
272	MOD0T/2T																		
273	Spare																		
274	MPC						13		80										
275	MPV						4		36										
276	MPY			59	60														
277	MR0																		
278	MR1																		
279	MR2																		
280	MR3																		
281	MR4																		
282	MR5																		
283	MR6																		
284	MR7																		
285	MR8																		
286	MR9																		
287	MR10																		
288	MR11																		
289	MRTY																		
290	MSG																		
291	MWTY																		
292	OVFF				68		8												
293	P1A	81			65														
294	PEH								69										
295	PEX	63		27					58										
296	PH1A	41							53										
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	



NOTES: 1.  Shaded pin numbers indicate source of signal.

Table 3-1. Backplane, Functional Wiring List (Continued)

JT						MEMORY														REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																		50		297
																		28		298
																		30		299
																		56		300
																		(79)		301
																		38		302
																		41		303
																		36		304
66	66	66	66	66	66				42			(70)						(67)		305
17	17	17	17	17	17													65		306
																				307
																				308
																				309
																				310
				23	3															311
			23	3																312
		23	3																	313
	23	3																		314
23	3																			315
3																				316
																				317
																				318
																				319
																				320
																				321
																				322
																				323
																		7		324
																		13		325
																	26	TB2-5		326
																				327
																				328
																				329
																				330
																				331
																				332
																				333
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	



adwire. 3. Connection is to SIA-8. 4. Leadwires are from A7-8 to A24-67 and A10-66 to A107-70.

Leadwire.

3. Connection is to SIA-8.

4. Leadwires are from A7-8 to A24-67 and A10-66 to A107-70.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
297	PH1B	30						12	71									
298	PH2	28																
299	PH3	26																
300	PH5			41				13										
301	PINH Note 3																	
302	PNLA			60	28													
303	PNLB			72	26													
304	PNLP			32														
305	PON Note 4	6						8			66	66	66	66	66	66	66	66
306	POPIO							23			17	17	17	17	17	17	17	17
307	Spare																	
308	Spare																	
309	PRH5/PRL4							41	37	62								
310	PRH6/PRL5							51	73									
311	PRH11/PRL10																	
312	PRH12/PRL11																	
313	PRH13/PRL12																	
314	PRH14/PRL13																	
315	PRH15/PRL14																	
316	PRH16/PRL15																	23
317	PRH17/PRL16																23	3
318	PRH21/PRL20														23	3		
319	PRH22/PRL21													23	3			
320	PRH23/PRL22												23	3				
321	PRH24/PRL23											23	3					
322	PRH25/PRL24										23	3						
323	PRL17							52									3	
324	PRSE							22										
325	PRSI	4																
326	PWU							7										
327	QSI				42	83												
328	RB15				74	9												
329	RBE				22	5												
330	RBS1				15	64												
331	RBS2				25	62												
332	RCIR			33				54										
333	RCTR			19			81											
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17

NOTES: 1. Shaded pin numbers indicate source of signal.

2. ○ Indicates pins interconnected by a leadwire which is twisted with a grounded

Table 3-1. Backplane, Functional Wiring List (Continued)

UT						MEMORY														REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
												72						77		334
												82								335
																				336
																				337
																				338
																				339
																				340
																				341
																				342
																				343
																				344
																				345
																				346
																				347
																				348
																				349
																				350
																				351
																				352
																				353
																				354
																				355
																				356
																				357
																				358
																				359
																				360
																				361
																				362
																				363
																				364
																				365
																				366
																				367
																		23		368
																				369
																				370
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

adwire.

adwire.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
334	READ	54		28	27					31								
335	RESET	8	70		30		9	20	75									
336	RFE				67		68											
337	RIOB			34					61	42								
338	RIR0		32				16											
339	RIR1		33				14											
340	RIR2		28				10											
341	RIR3		27				12											
342	RIR4		22				22											
343	RIR5		23				23											
344	RIR6		16				24											
345	RIR7		17				26											
346	RIR12		58		82													
347	RIR17		57	12														
348	RJMP	75	56															
349	ROM8		15	57														
350	ROM9		18	58														
351	ROM10		24	54														
352	ROM11		25	51														
353	ROM12		37		78													
354	ROM13		36		77													
355	ROM14		35		80													
356	ROM15		34		79													
357	ROM16		14		43													
358	ROM17		13	11														
359	ROM18		8	14														
360	ROM19		7	4														
361	ROM20		3	9														
362	ROM21		4		37													
363	ROM22		5		34													
364	ROM23		6		29													
365	RP9			21		27												
366	RPHI			23		28												
367	RPLO			6		57												
368	RRSB			24	57	35/36												
369	RSBV	71	41		17													
370	RSP1			10		17												
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17

NOTES: 1. Shaded pin numbers indicate source of signal. 2. ○ Indicates pins interconnected by a leadwire which is twisted with a grounded lead.

Table 3-1. Backplane, Functional Wiring List (Continued)

UT						MEMORY												REF NO.		
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH		FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																				371
																				372
																				373
																				374
50	50	50	50	50	50															375
												(75)						57		376
																				377
							15	15				13			15	15				378
							18	18				11			18	18				379
							17	17				7			17	17				380
							20	20				9			20	20				381
							19	19				17			19	19				382
							22	22				15			22	22				383
							21	21				19			21	21				384
							63	63				21			63	63				385
							64	64				31			64	64				386
							65	65				33			65	65				387
							66	66				35			66	66				388
							67	67				37			67	67				389
							68	68				41			68	68				390
							69	69				43			69	69				391
							70	70				45			70	70				392
							71	71				49			71	71				393
							72	72				71			72	72				394
																				395
												16								396
												18								397
												12								398
												14								399
												29								400
												38								401
												20								402
												22								403
												44								404
												46								405
												34								406
												36								407
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

1 leadwire.

leadwire.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
371	RSP2			7		15												
372	RSP3			5		13												
373	RSP4			8		11												
374	RSSP	69						46										
375	RUN	49									50	50	50	50	50	50	50	50
376	RW						74			34								
377	RWCW			31			27											
378	SA0																	
379	SA1																	
380	SA2																	
381	SA3																	
382	SA4																	
383	SA5																	
384	SA6																	
385	SA7																	
386	SA8																	
387	SA9																	
388	SA10																	
389	SA11																	
390	SA12																	
391	SA13																	
392	SA14																	
393	SA15																	
394	SA16																	
395	SAM			67		77												
396	SB0		46			78	32	62	3	16								
397	SB1		44			80	60	61	4	14								
398	SB2		29			76	61	60	5	18								
399	SB3		30			59	33	59	6	13								
400	SB4		19			52	65	64	7	12								
401	SB5		20			51	64	57	8	10								
402	SB6		12			49	67		9	20								
403	SB7		9			43	66		24	11								
404	SB8		53			31	52		14	5								
405	SB9		54			32	51		18	3								
406	SB10		43			25	54		19	9								
407	SB11		49			30	53		20	7								
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17

NOTES: 1.  Shaded pin numbers indicate source of signal. 2.  Indicates pins interconnected by a leadwire which is twisted with a ground.

Table 3-1. Backplane, Functional Wiring List (Continued)

T						MEMORY												FRONT PANEL	POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH			
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
												51								408
												42								409
												(50)								410
												52								411
																		8		412
																				413
																				414
																				415
																		11		416
																		5		417
					16															418
				16	34															419
			16	34																420
		16	34																	421
	16	34																		422
16	34																			423
34																				424
																				425
																				426
4/37	14/37	14/37	14/37	14/37	14/37															427
																				428
																		3		429
												(66)						42		430
												(74)								431
																				432
5	5	5	5	5	5															433
																				434
25	25	25	25	25	25															435
73	73	73	73	73	73															436
																				437
																		75		438
32	32	32	32	32	32															439
12	12	12	12	12	12															440
																				441
																				442
																				443
68	68	68	68	68	68															444
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

adwire.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
408	SB12		31			10	38		21	8								
409	SB13		21			8	37		22	4								
410	SB14		10			6	42		23	6								
411	SB15	14	11		75	4	41		33	84								
412	SC1				71			49	74									
413	SC5			73				44	35									
414	SC6							33		50								
415	SC7							36		49								
416	SCE	66																
417	SCF0	68																
418	SCL0							69		51						16	34	
419	SCL1							70		52					16	34		
420	SCL2							72		59				16	34			
421	SCL3							73		58			16	34				
422	SCL4							74		60		16	34					
423	SCL5							75		56	16	34						
424	SCL6							76		54	34							16
425	SCL7							77		57							16	34
426	SCM0							16		55								
427	SCM1							15		53							14	14/37
428	SCM2							18		61	14/37	14/37	14/37	14/37	14/37	14/37	37	
429	SCO	79																
430	SCRY	44					28											
431	SELM	53		22					60	38								
432	SELT			30	59					41								
433	SFC				70			17	52		5	5	5	5	5	5	5	5
434	SFM			74		82												
435	SFS				72			24	59		25	25	25	25	25	25	25	25
436	SFSB										73	73	73	73	73	73	73	73
437	SHIFT			78	83													
438	SIOB			46					62	33								
439	SIR								56		32	32	32	32	32	32	32	32
440	SKF	17			16			21			12	12	12	12	12	12	12	12
441	SKIP		77	84	81		6											
442	SL1			65	6		71											
443	SL4				50		50											
444	Spare										68	68	68	68	68	68	68	68
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17

NOTES: 1.  Shaded pin numbers indicate source of signal. 2.  Indicates pins interconnected by a leadwire which is twisted with a grounded lead.

Table 3-1. Backplane, Functional Wiring List (Continued)

PUT						MEMORY												FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH			
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																				445
																				446
																				447
																				448
																				449
																				450
																				451
																				452
																		62		453
																				454
																				455
																				456
																				457
																				458
																				459
																				460
																				461
																				462
																				463
																				464
																				465
																				466
																				467
																				468
																				469
																				470
																				471
																				472
																				473
																				474
																				475
																				476
																				477
																				478
																				479
																				480
																				481
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

d leadwire.



REF NO.	SIGNAL	CPU									INPUT/OUT							
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17
445	Spare																	
446	SPH1B	31	74															
447	SPH2	34	73						72									
448	SPH3	35	55															
449	SPH5			38						46								
450	SQM			70		75												
451	SR1			62	12		72											
452	SRAR	61	60															
453	SRH	74																
454	SRIR	55	62	42	52		76											
455	SRQ10									72								
456	SRQ11									73								
457	SRQ12									70								
458	SRQ13									71								
459	SRQ14									63								
460	SRQ15									65								
461	SRQ16									75								19
462	SRQ17									77							19	
463	SRQ20									64						19		
464	SRQ21									68					19			
465	SRQ22									67				19				
466	SRQ23									66			19					
467	SRQ24									69		19						
468	SRQ25									74	19							
469	SSCY	62																
470	SSIN	64																
471	STA			69		81												
472	STB			63		79												
473	STC							3	55	43	22	22	22	22	22	22	22	22
474	STCLK	36	59	18														
475	STF				73			6	49		9	9	9	9	9	9	9	9
476	STI			44			30											
477	STORE			53						38								
478	STOF			82		84												
479	STP			64		63												
480	STQ			80		73												
481	T3								54	37	11	11	11	11	11	11	11	11
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17

NOTES: 1. Shaded pin numbers indicate source of signal. 2. ○ Indicates pins interconnected by a leadwire which is twisted with a ground.

Table 3-1. Backplane, Functional Wiring List (Continued)

						MEMORY														REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	FRONT PANEL (OPERATOR OR CONTROLLER)	POWER SUPPLY	
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																				482
																		66		483
																				484
																				485
																				486
																				487
																				488
																				489
																				490
																				491
																				492
							30/38			30/38		65		30/38			30/38			493
							29/34			29/34		64		29/34			29/34			494
												(67)						9		495
8	8	8	8	8	8/23															496
																				497
																				498
																		35		499
																				500
																				501
																				502
																				503
																				504
																				505
																				506
																				507
																				508
																				509
																				510
																				511
																				512
																				513
																				514
																				515
																				516
																				517
																				518
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	

adwire.

REF NO.	SIGNAL	CPU									INPUT/OUTPUT									
		TIMING AND CONTROL	ROM CONTROL	MICRO-INSTRUCTION DECODER 1	MICRO-INSTRUCTION DECODER 2	ARITHMETIC/ LOGIC	INSTRUCTION REGISTER DECODER	I/O CONTROL	I/O BUFFER	DIRECT MEMORY ACCESS	SELECT CODE 25	SELECT CODE 24	SELECT CODE 23	SELECT CODE 22	SELECT CODE 21	SELECT CODE 20	SELECT CODE 17	SELECT CODE 16		
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17		
482	T4	16							44	80										
483	T6			26				58	43	81										
484	TBS1				45	53														
485	TBS2				44	54														
486	TBZ					25	19													
487	WCR1							32		83										
488	WCR2							27		79										
489	WSP1			55		65														
490	WSP2			56		67														
491	WSP3			45		69														
492	WSP4			49		71														
493	XT1																			
494	XT2																			
495	LOAD																			
496	IEN10							50									8	8		
497	IEN20							55			8	8	8	8	8	8/23				
498	T5			37				11	81	26										
499	PNLT				63															
500	UABF	59			31															
501	ZABF	57			53															
502	P1SK	13					29													
503	Spare																			
504	Spare																			
505	Spare																			
506	Spare																			
507	Spare																			
508	Spare																			
509	Spare																			
510	Spare																			
511	Spare																			
512	Spare																			
513	Spare																			
514	Spare																			
515	Spare																			
516	Spare																			
517	Spare																			
518	Spare																			
		A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17		
NOTES: 1.  Shaded pin numbers indicate source of signal. 2.  Indicates pins interconnected by a leadwire which is twisted with a grounded lead.																				

NOTES: 1.  Shaded pin numbers indicate source of signal. 2.  Indicates pins interconnected by a leadwire which is twisted with a grounded lead.

Table 3-1. Backplane, Functional Wiring List (Continued)

UT						MEMORY												FRONT PANEL OPERATOR OR (CONTROLLER)	POWER SUPPLY	REF NO.
SELECT CODE 15	SELECT CODE 14	SELECT CODE 13	SELECT CODE 12	SELECT CODE 11	SELECT CODE 10	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH	INHIBIT DRIVER	INHIBIT DRIVER LOAD	DATA CONTROL	INHIBIT DRIVER	X-Y DRIVER/ SWITCH	CORE STACK/ SENSE AMPLIFIER	CORE STACK/ SENSE AMPLIFIER	X-Y DRIVER/ SWITCH			
A18	A19	A20	A21	A22	A23	A101	A102	A103	A104	A105	A106	A107	A108	A109	A110	A111	A112	A24	A25	
																				519
				➔	47/48	47/48	←				— BUS —					➔	47/48	47/48	TB1-2,3	520
				➔	69/70	73/74	73/74	73/74							73/74	73/74	73/74		TB2-2	521
						75/76	75/76	75/76	75/76	35/36			35/36	75/76	75/76	75/76	75/76		TB2-1	522
				➔	39/40	39/40	←				— BUS —					➔	39/40	39/40	TB1-4,5	523
																		81/82	TB1-4,5	524
				➔	43/44	13/14	13/14	13/14							13/14	13/14	13/14		TB2-3	525
						9/10			9/10		*			9/10			9/10		TB1-1	526
36	36	36	36	36	36														TB2-4	527
				➔	1/2	1/2	←				— BUS —					➔	1/2	1/2	TB1-6,7	528
				➔	85/86	85/86	←				— BUS —					➔	85/86	85/86	TB1-6,7	529
																		83/84	TB1-6,7	530
							9/10	9/10				1/2			9/10	9/10			TB1-6,7	531
											#85								TB1-6,7	532
											51								TB2-7	533
											53								TB2-9	534
						81													TB2-6	535

All odd numbered pins except 1, and 33 thru 53.

[illegible]

NOTES: 1. Shaded pin numbers indicate source of signal.

2. * All even numbered pins except 2, 40, 48, and 86.

3. $\frac{1}{2}$

Table 3-2. Front Panel Connector XA24, Point-to-Point Wiring List

FROM XA24, PIN	TO	FROM XA24, PIN	TO	FROM XA24, PIN	TO
1,2	XA16-1,2	31	NC	62	XA1-74
3	XA1-79	32	XA11-27	63	XA15-53
4	XA7-53	33	XA1-37	64	XA1-78*
5	XA1-68	34	XA11-28	65	XA12-17
6	XA10-15	35	XA4-63	66	XA8-43
7	XA7-22	36	XA3-32	67	XA7-8*
8	XA8-74	37	NC	68	XA15-30
9	XA107-67*	38	XA4-28	69	XA24-86
10	XA8-78*	39,40	XA23-39,40	70	XA16-29
11	XA1-66	41	XA4-26	71	XA16-26
12	XA7-42	42	XA9-35	72	XA16-64
13	XA1-4	43	XA4-19	73	XA9-38
14	XA10-57	44	XA12-55	74	XA8-50
15	NC	45	XA24-2	75	XA9-33
16	XA16-61	46	XA13-31	76	XA3-25
17	NC	47,48	XA23-47,48	77	XA9-31
18	XA8-34	49	XA8-53	78	XA3-29*
19	NC	50	XA7-12	79	S1A-8*
20	XA8-30	51	XA6-8	80	XA24-4
21	XA4-64	52	XA8-69	81,82	XA22-39,40
22	XA4-10	53	XA14-51	83,84	XA17-1,2
23	XA5-36	54	XA14-77	85,86	XA18-1,2
24	XA7-35	55	XA9-36*		
25	NC	56	XA7-13		
26	NC	57	XA9-34*		
27	NC	58	XA1-62		
28	XA1-28	59	XA1-64		
29	NC	60	XA1-42*		
30	XA1-26	61	XA15-52		

* Indicates leadwire which is twisted with a grounded leadwire.





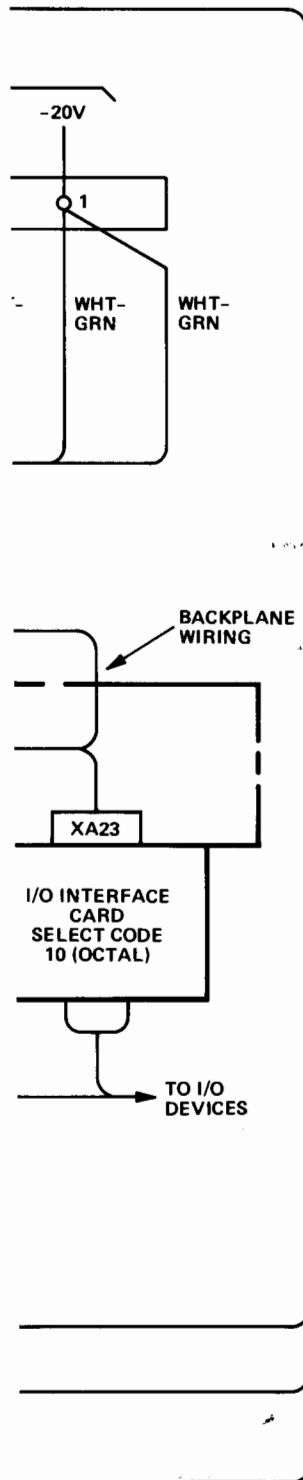




Figure 3-1. Backplane, Wiring Diagram

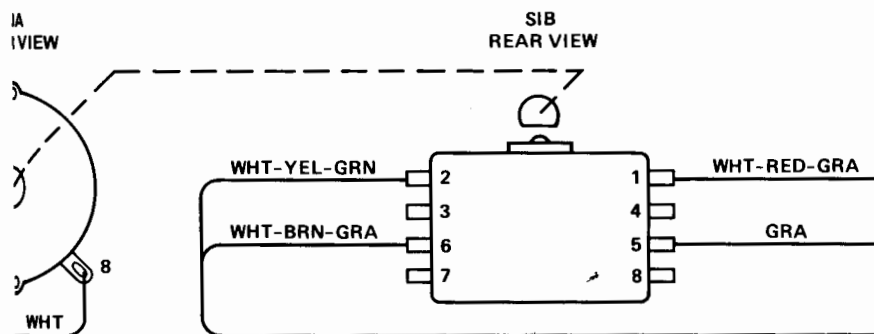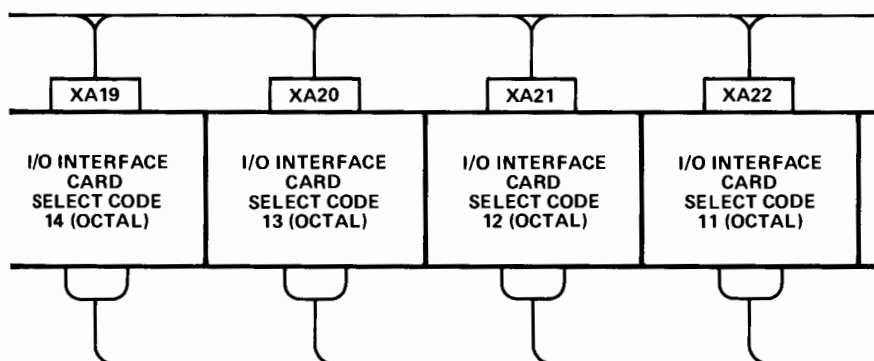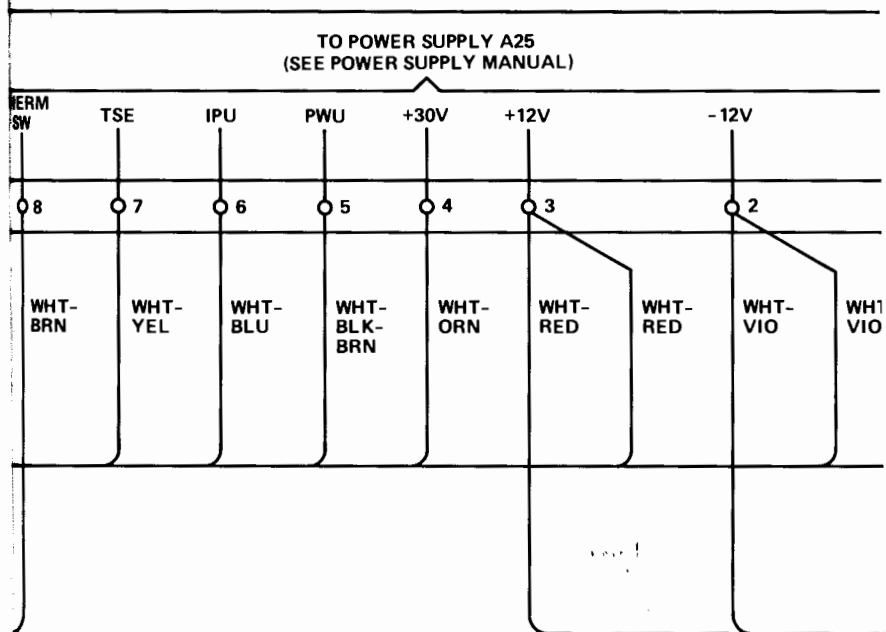

NUM CHAMBER A26
EE FIGURE 3-2)

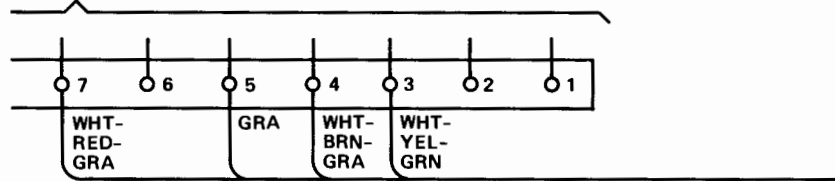


NER SUPPLY A25
(R SUPPLY MANUAL)

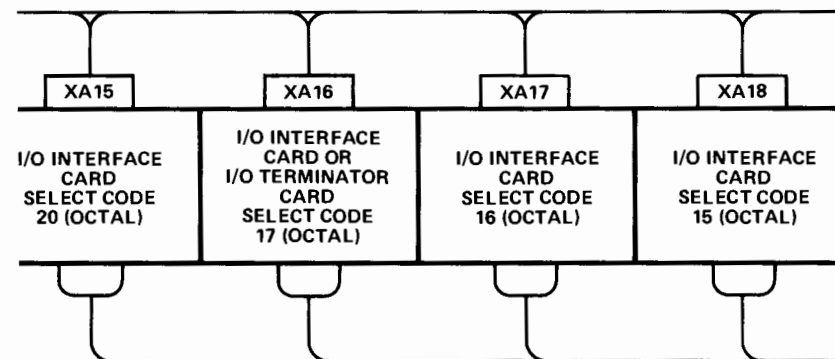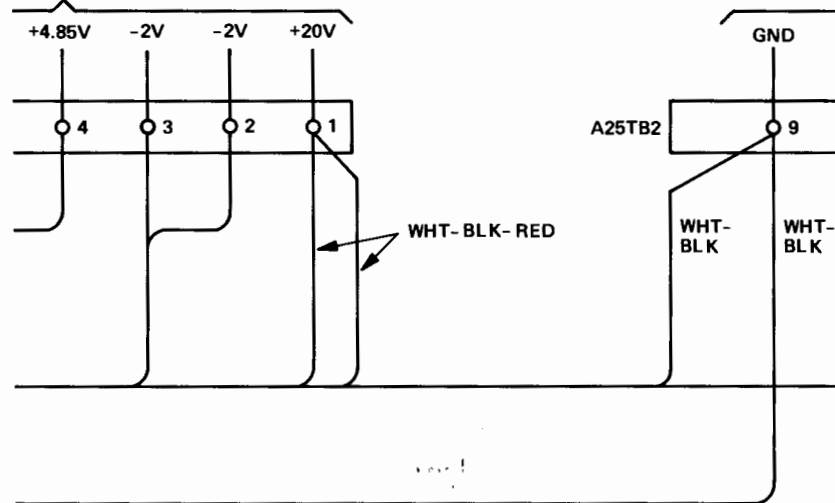

TO PLE
(S)

A26TB1



TO PO1
(SEE POWE

GND GND +4.85V

A25TB1



NOTE 2

BACKPLANE
WIRING

XA11

XA12

XA13



XA14


INTERFACE
CARD
SELECT CODE
23 (OCTAL)

I/O INTERFACE
CARD
SELECT CODE
23 (OCTAL)

I/O INTERFACE
CARD
SELECT CODE
22 (OCTAL)


I/O INTERFACE
CARD
SELECT CODE
21 (OCTAL)

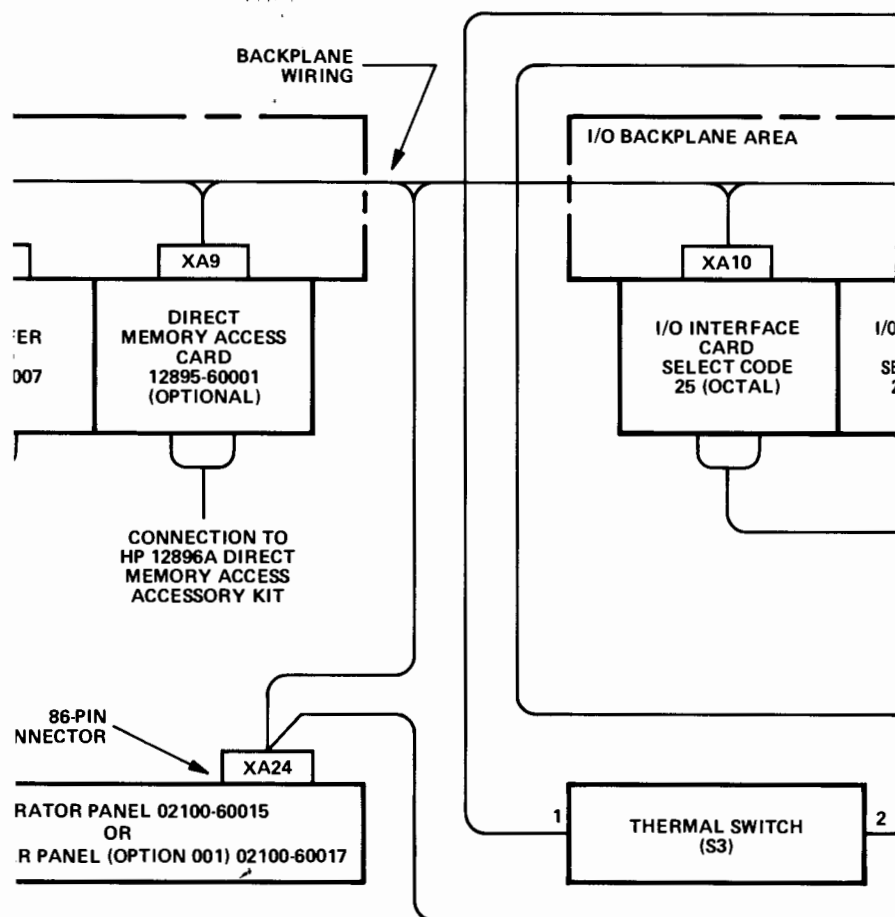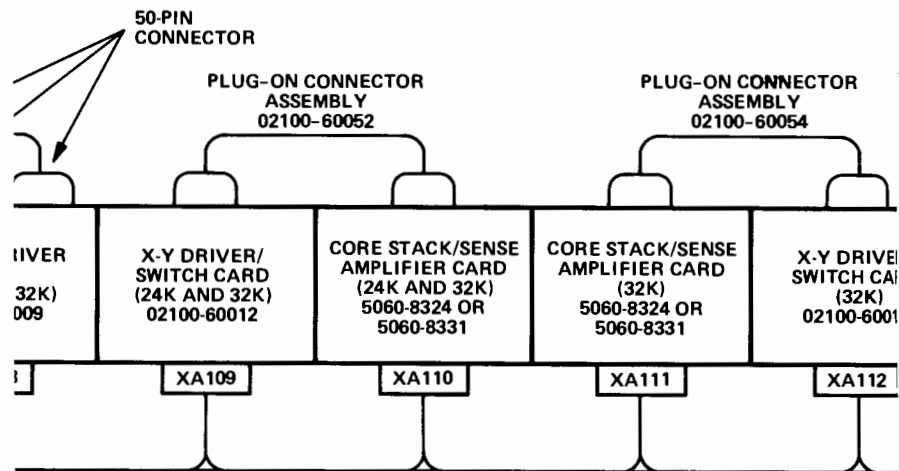

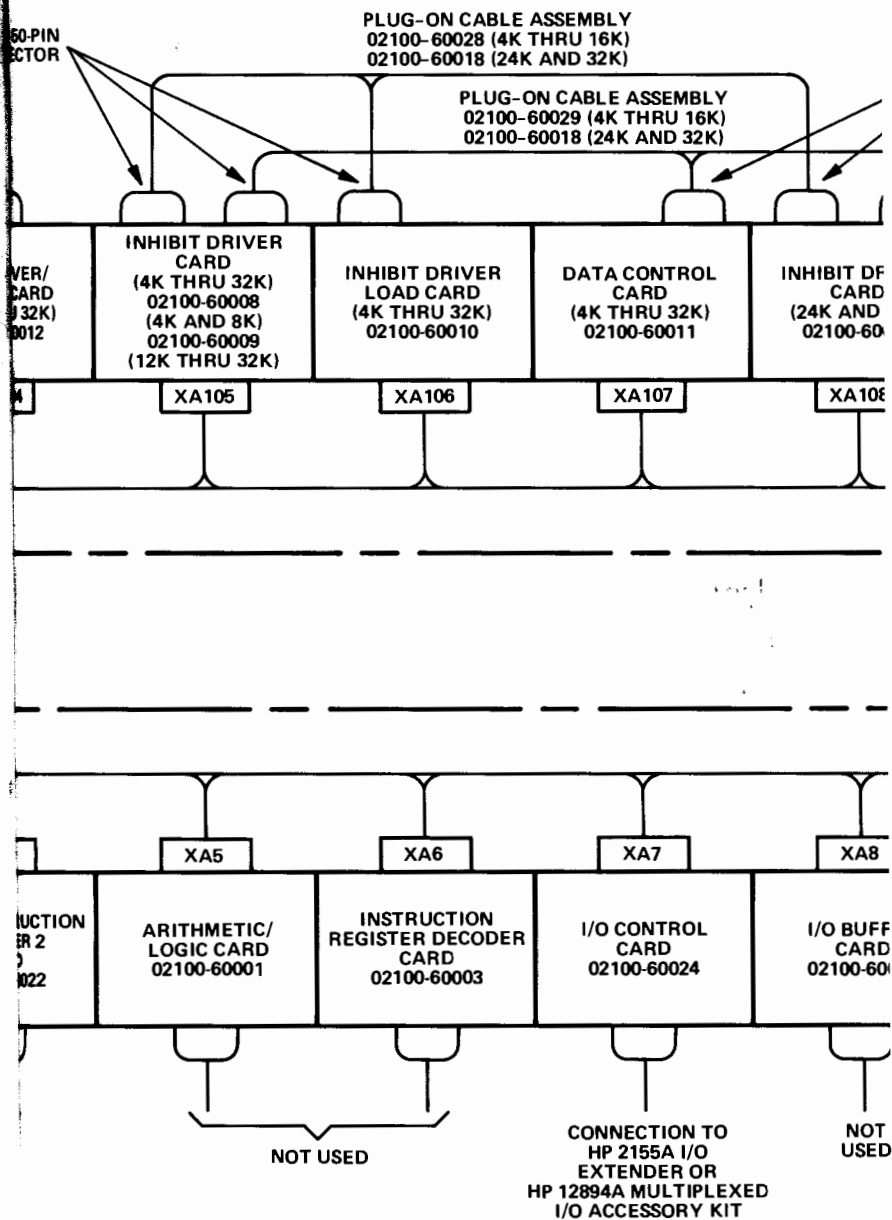

COI

OPE
CONTROLE

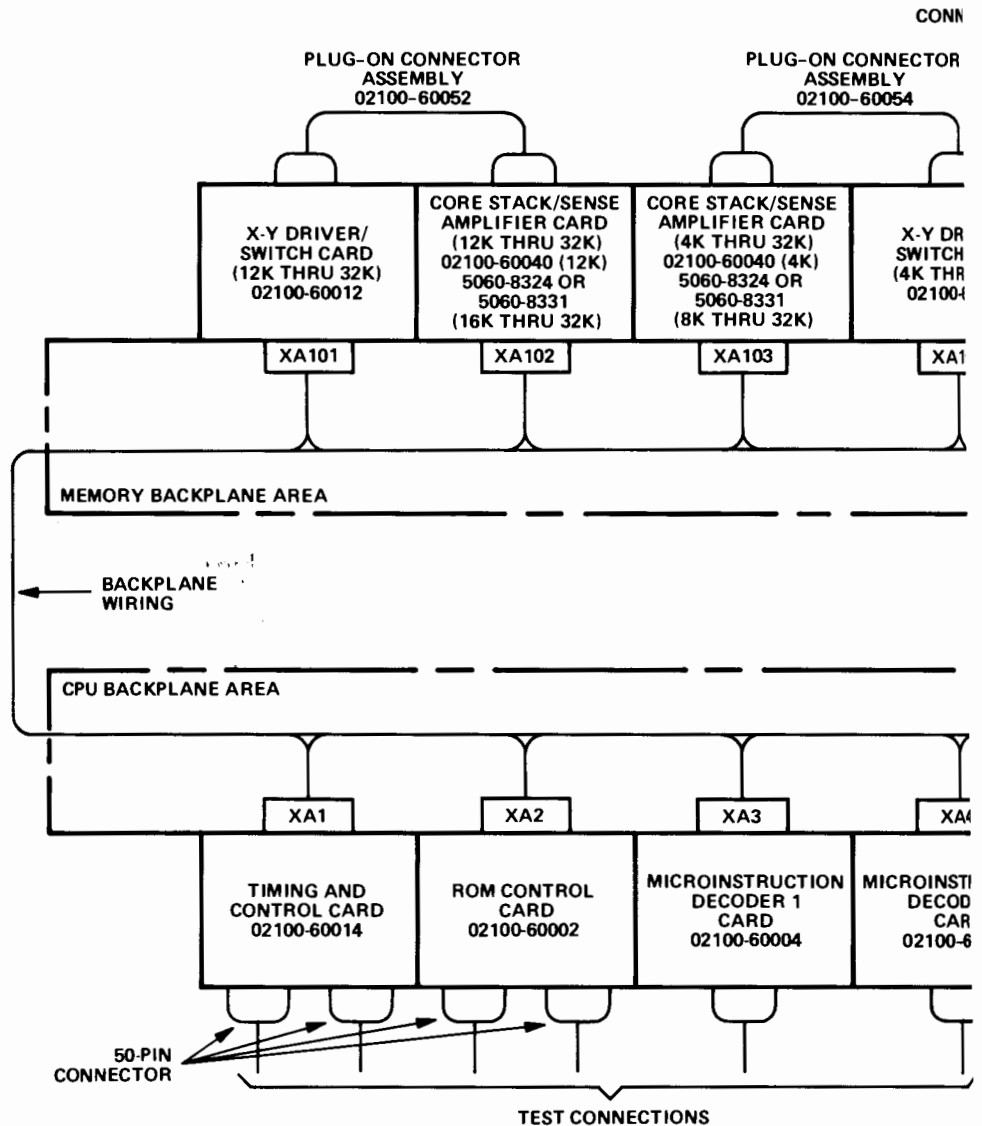

NOTES:

1. ALL BACKPLANE CONNECTIONS TO PRINTED-CIRCUIT CARDS ARE MADE THROUGH 86-PIN CONNECTORS. UNLESS OTHERWISE SPECIFIED, OTHER CONNECTIONS TO A PRINTED-CIRCUIT CARD ARE MADE THROUGH A 48-PIN CONNECTOR.
2. UNLESS OTHERWISE SPECIFIED, ALL CONDUCTORS TO TERMINAL BOARD A25TB1 ARE BUSBAR.

Table 3-3. Power Distribution, Point-to-Point Wiring List

FROM	TO	COLOR	FROM	TO	COLOR
A25TB1-1	XA101-9,10	wht-blk-red	S1B-5	A26TB1-5	gra
A25TB1-1	XA112-9,10	wht-blk-red	S1B-6	A26TB1-4	wht-brn-gra
A25TB2-1	XA102-75,76	wht-grn	S3-1	A25TB2-9	wht-blk
A25TB2-1	XA111-75,76	wht-grn	S3-2	A25TB2-8	wht-brn
A25TB2-2	XA23-69,70	wht-vio	XA23-43,44	A25TB2-3	wht-red
A25TB2-2	XA112-73,74	wht-vio	XA23-69,70	A25TB2-2	wht-vio
A25TB2-3	XA23-43,44	wht-red	XA101-9,10	A25TB1-1	wht-blk-red
A25TB2-3	XA112-13,14	wht-red	XA101-13,14	XA111-13,14	wht-red
A25TB2-4	XA112-18	wht-orn	XA101-40	A26A1E5	orn
A25TB2-5	XA112-26	wht-blk-brn	XA101-48	A26A1E4	vio
A25TB2-6	XA112-22	wht-blu	XA101-73,74	XA110-73,74	wht-vio
A25TB2-7	XA106-51	wht-yel	XA101-85	A26A1E1	blk
A25TB2-8	S3-2	wht-brn	XA102-14	A26A1E6	wht-red
A25TB2-9	S3-1	wht-blk	XA102-73	A26A1E3	wht-vio
A25TB2-9	XA106-53	wht-blk	XA102-75,76	A25TB2-1	wht-grn
A26A1E1	XA101-85	blk	XA103-75	A26A1E2	wht-grn
A26A1E2	XA103-75	wht-grn	XA104-10	A26A1E7	wht-blk-red
A26A1E3	XA102-73	wht-vio	XA106-51	A25TB2-7	wht-yel
A26A1E4	XA101-48	vio	XA106-53	A25TB2-9	wht-blk
A26A1E5	XA101-40	orn	XA110-73,74	XA101-73,74	wht-vio
A26A1E6	XA102-14	wht-red	XA111-13,14	XA101-13,14	wht-red
A26A1E7	XA104-10	wht-blk-red	XA111-75,76	A25TB2-1	wht-grn
A26A1E8	XA112-18	wht-orn	XA112-9,10	A25TB1-1	wht-blk-red
A26J1	XA112-22	wht-blu	XA112-13,14	A25TB2-3	wht-red
A26TB1-3	S1B-2	wht-yel-grn	XA112-18	A25TB2-4	wht-orn
A26TB1-4	S1B-6	wht-brn-gra	XA112-18	A26A1E8	wht-orn
A26TB1-5	S1B-5	gra	XA112-22	A25TB2-6	wht-blu
A26TB1-7	S1B-1	wht-red-gra	XA112-22	A26J1	wht-blu
S1B-1	A26TB1-7	wht-red-gra	XA112-26	A25TB2-5	wht-blk-brn
S1B-2	A26TB1-3	wht-yel-grn	XA112-73,74	A25TB2-2	wht-vio

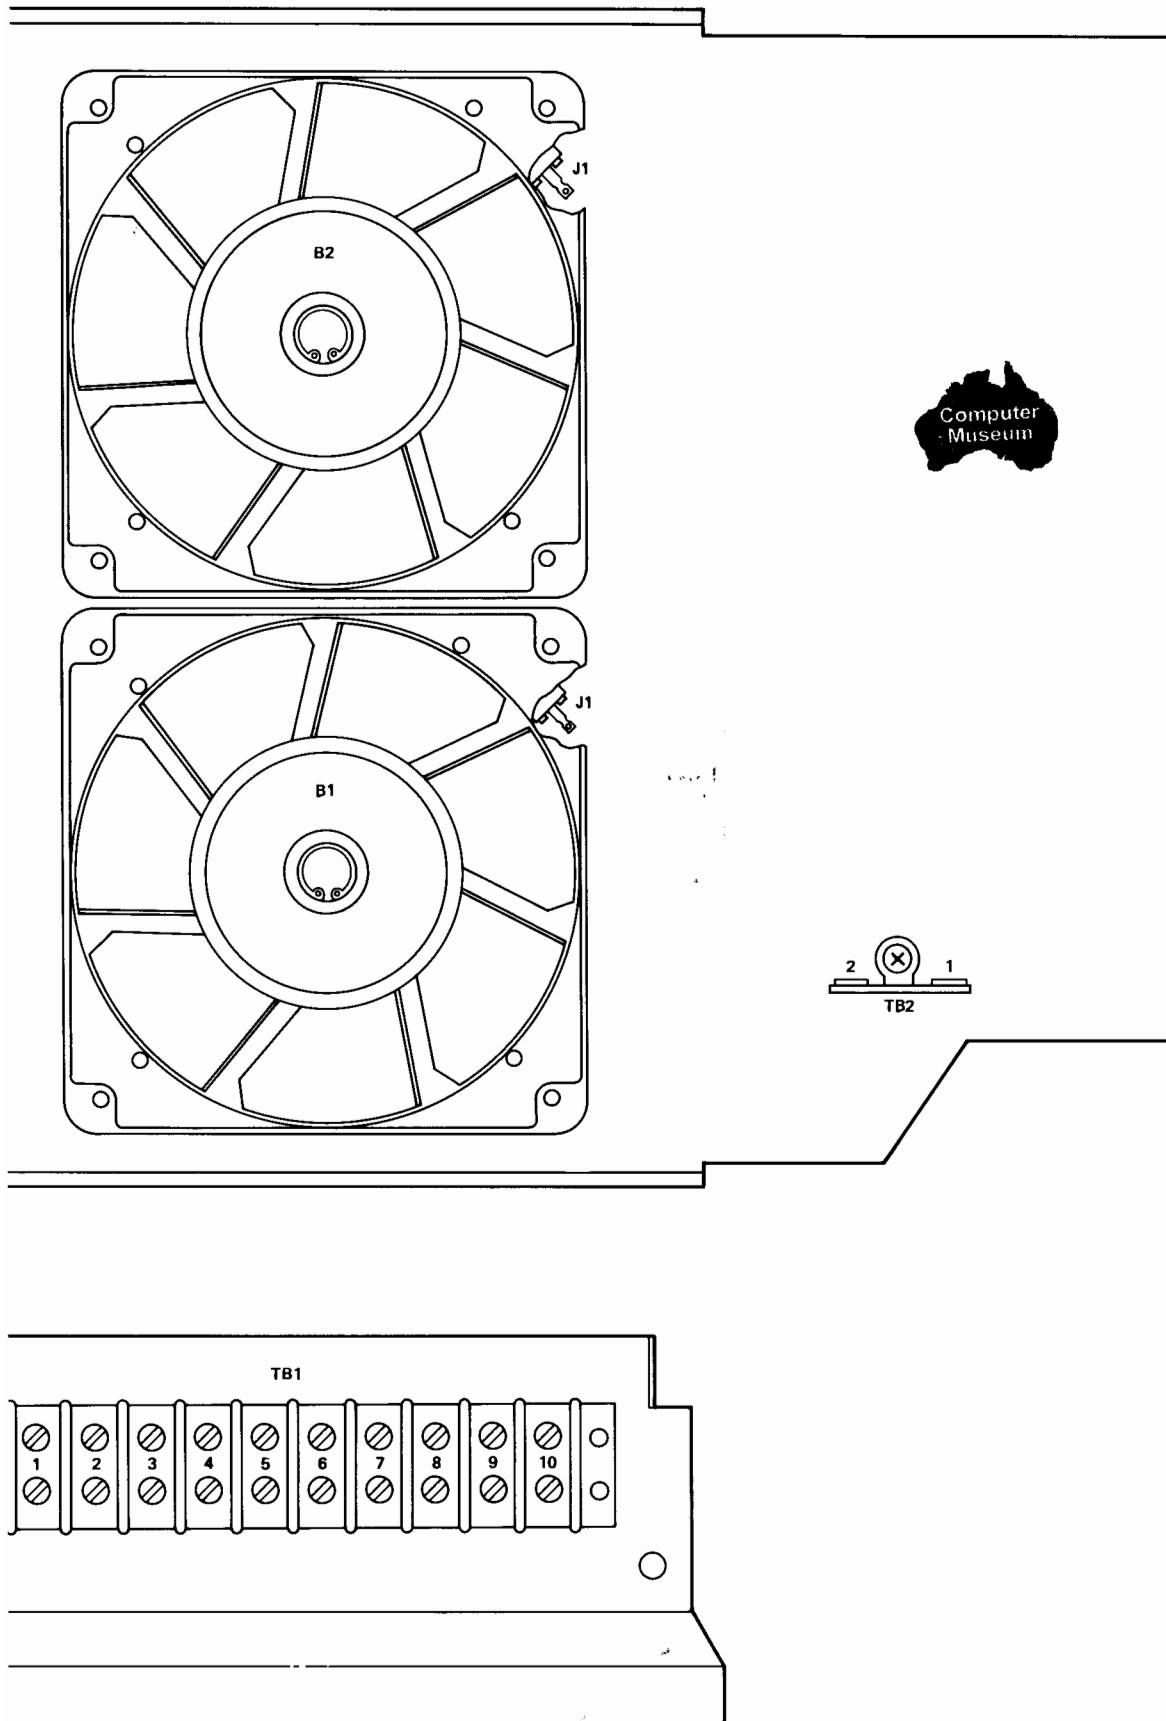


Figure 3-2. Plenum Chamber A26, Wiring Diagram

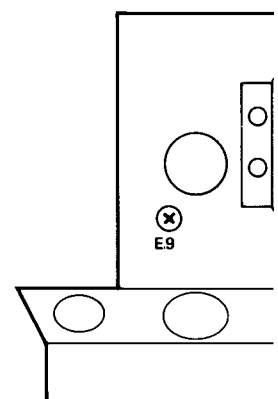
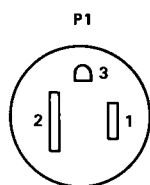
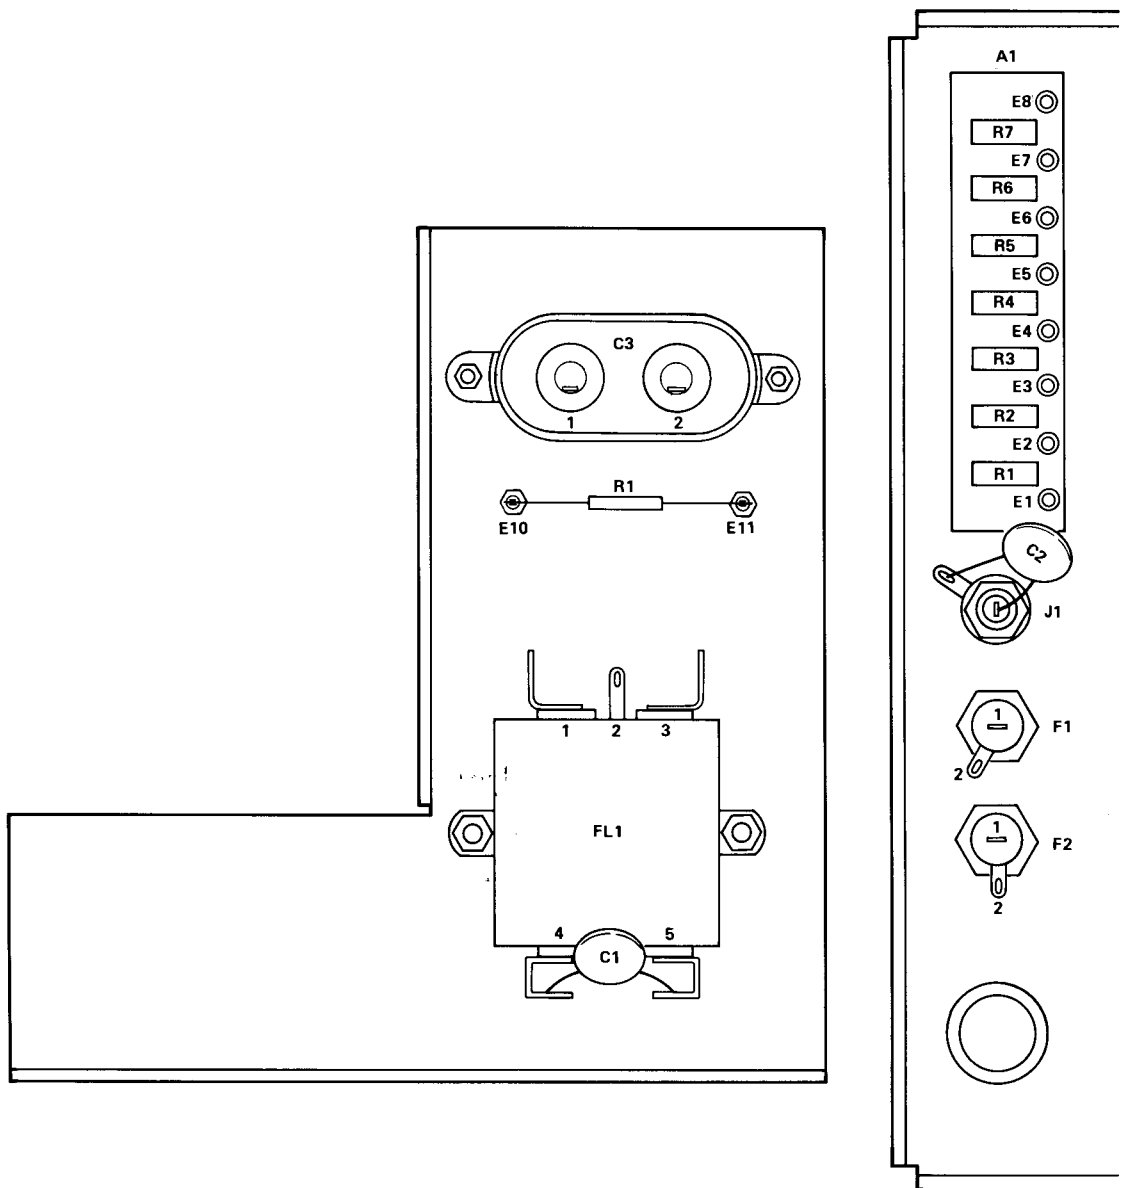


Table 3-4. Plenum Chamber A26, Point-to-Point Wiring List

FROM	TO	COLOR		FROM	TO	COLOR
A1E1	XA101-85	blk		TB1-2	XF1-1	wht-blk-gra
A1E2	XA103-75	wht-grn		TB1-2	P1-1	blk
A1E3	XA102-73	wht-vio		TB1-3	S1B-2	wht-yel-grn
A1E4	XA101-48	vio		TB1-3	FL1-4	wht-yel-grn
A1E5	XA101-40	orn		TB1-4	FL1-5	wht-brn-gra
A1E6	XA102-14	wht-red		TB1-4	S1B-6	wht-brn-gra
A1E7	XA104-10	wht-blk-red		TB1-5	S1B-5	gra
A1E8	XA112-18	wht-orn		TB1-5	XF2-1	wht-yel
B1-J1	TB2-1	blk		TB1-5	A25A6E1	gra
B1-J1	TB2-2	blk		TB1-6	A25A6E3	wht-blu-gra
B2-J1	TB2-1	blk		TB1-7	S1B-1	wht-red-gra
B2-J1	TB2-2	blk		TB1-7	TB2-1	wht-red-gra
C3-1	E10	wht-grn-gra		TB1-7	A25A6E2	wht-red-gra
C3-2	TB1-1	wht-red-gra		TB1-7	A25TB3-11	wht-red-gra
E9	P1-3	grn		TB1-8	A25TB3-6	wht-yel-gra
E9	FL1-2	grn-yel		TB1-9	TB2-2	wht-grn-gra
E9	Shield*	grn-yel		TB1-9	A25TB3-12	wht-grn-gra
E10	C3-1	wht-grn-gra		TB1-10	XF2-2	wht-vio
E11	XF2-1	gra		TB1-10	A25TB3-5	wht-vio-gra
FL1-1	TB1-1	wht-gra		TB2-1	B1-J1	blk
FL1-2	E9	grn-yel		TB2-1	B2-J1	blk
FL1-3	XF1-2	gra		TB2-1	TB1-7	wht-red-gra
FL1-4	TB1-3	wht-yel-grn		TB2-2	B1-J1	blk
FL1-5	TB1-4	wht-brn-gra		TB2-2	B2-J1	blk
J1	XA101-81	wht-blu		TB2-2	TB1-9	wht-grn-gra
P1-1	TB1-2	blk		XF1-1	TB1-2	wht-blk-gra
P1-2	TB1-1	wht		XF1-2	FL1-3	gra
P1-3	E9	grn		XF2-1	TB1-5	wht-yel
TB1-1	C3-2	wht-red-gra		XF2-1	E11	gra
TB1-1	FL1-1	wht-gra		XF2-2	TB1-10	wht-vio
TB1-1	P1-2	wht				

* Shield is located on wiring to switch S1B.

4-1. INTRODUCTION.

4-2. This section contains replaceable parts lists, parts location diagrams, and schematic diagrams for the printed circuit cards in the computer. The section also contains additional illustrations and listings which are intended to help locate parts and facilitate using the diagrams.

4-3. ABBREVIATIONS AND MNEMONICS.

4-4. Abbreviations of signal names (mnemonics) used in this manual are defined in table 4-1, together with a reference number (see paragraph 4-19) if the signal appears at the 86-pin backplane connector. Signals that appear at the front edge 48- or 50-pin connector of the card do not include a reference number.

4-5. ASSEMBLY LOCATIONS.

4-6. Figure 4-1 shows the location of the major assemblies of the computer, including optional controller panel card A24 and direct memory access card A9. I/O terminator card A16 is shown installed in slot 16 and must be removed when the eighth I/O card is installed in the I/O section. The memory section loading reflects 32K memory size. Refer to table 4-2 and figure 4-2 for other memory size loading configurations.

Note: The card cage and the extractor handles on the cards are color coded. This is intended to prevent accidental installation of a card into a slot not intended for that card. (Installing a card in a wrong slot can result in damage to the computer.)

4-7. CARD CONNECTORS.

4-8. Figure 4-3 identifies the connector pin numbers of the two types of printed circuit cards used in the computer card cage. Pin numbers for the 86-pin connector on the operator and controller panel cards are the same as for the 86-pin connector of the cards shown in figure 4-3, i.e. pin number one is to the left on the component side. The 86-pin connectors of the cards for the card cage are notched so that they cannot be plugged in backwards. This will not prevent plugging cards in the wrong slot, however, so be sure that cards are in the correct slot before inserting them.

4-9. REPLACEABLE PARTS LISTS.

4-10. Tables 4-3 through 4-21 are the replaceable parts lists for the printed circuit cards used in the card cage and

on the front panel and are included in this manual to supplement the parts location and schematic diagrams. The Illustrated Parts Breakdown (IPB) Manual provides a complete list of replaceable parts for the computer, descriptions of the table columns, and parts ordering information.

4-11. Parts are listed by complete reference designation and include an HP part number, quantity per card, description, manufacturer's code, and manufacturer's part number. The total quantity of a part used on the card is listed with the first entry for that part number.

4-12. Replaceable parts are tabulated only once for each type of card even though that type may be used in more than one slot. The table of replaceable parts is located near the diagram for the lowest numbered slot in which the card is used. For example, an X-Y driver/switch card is used in slots 101, 104, 109, and 112. Table 4-15 applies to all four cards and is located near the parts location and schematic diagrams for A101 X-Y driver/switch card. Reference to table 4-15 is included under the card parts location diagram for the four slot locations. A replaceable parts table reference is included under all card parts location diagrams.

4-13. Replaceable parts lists for the power supply are provided in the 02100-60053 Power Supply Operating and Service Manual, part number 5951-3038.

4-14. PARTS LOCATION AND SCHEMATIC DIAGRAMS.

4-15. Figures 4-4 through 4-30 are the parts location and schematic diagrams for the printed circuit cards used in the card cage and on the front panel. The illustrations are arranged in order by reference designation i.e. A1, A2, etc. The parts location diagram for each card is located adjacent to the schematic diagram and is repeated if the schematic diagram has more than one sheet. In cases where a card type is used in more than one slot, the parts location diagram is repeated but the replaceable parts list is not (see paragraph 4-12). The schematic diagrams for identical cards used in different slots are the same except for mnemonics and signals used.

4-16. Refer to table 4-1 for definitions of the mnemonics used on the schematic diagrams and to paragraph 4-19 for a description of the bracketed reference numbers located adjacent to the mnemonics.

4-17. Each card in the computer contains a revision code (see figure 4-3). The first character of the code is a letter which identifies the etched-foil pattern on the card. The next four digits, referred to as a date code, identify the electrical characteristics of the card with components

mounted. The entire revision code is either stamped on the card with marking ink, or as part of the etched-foil pattern. If both a stamped and an etched code are used, the stamped revision code identifies the card with components mounted, and the etched revision code identifies the card without components.

4-18. The date code portion of the card revision code is also shown on the schematic diagram as part of the card title and part number, usually in the upper left-hand corner of the diagram. Always check the date code on both the card and the schematic diagram. If they do not agree, the schematic diagram does not apply to the card. In these cases, refer to manual supplements for applicable information.

4-19. REFERENCE NUMBERS.

4-20. Reference numbers within brackets are located on the schematic diagrams adjacent to the signal mnemonic. These numbers are intended as an aid in tracing signals

between the schematic diagrams. For example, the PON signal at pin 6 near the top left of figure 4-4 has the reference number 305. The reference number list to the left of the schematic diagram shows that the signal source is pin 8 of card A7 as indicated by A7-8 and an asterisk. Locate the schematic diagram for card A7, I/O control (IOC) card. The schematic diagram for card A7 has two sheets and a check of the reference number list for sheet 1 indicates that reference number 305 is on sheet 1. This is because only the reference numbers found on sheet 1 are listed in the reference number list for sheet 1.

4-21. The reference numbers are also included in the signal index, table 4-1, and in the backplane wiring list, table 3-1. To trace a signal when only the signal mnemonic is known, first find the reference number of the signal in table 4-1. Then refer to table 3-1 to determine which schematic diagrams contain the signal. Table 4-1 is in alphabetical order of signal mnemonics and table 3-1 is in numerical order of reference numbers.

Table 4-1. Signal Index

SIGNAL MNEMONIC	DEFINITION	REF NO.
AAB	Address A- or B-register	1
AAFF	"not" A Addressable FF	2
ABF	"not" A or B Addressable FFs	3
ADR	operand Address (S-bus field decoded)	4
ALU0	Arithmetic Logic Unit bit 0	5
ALU14	Arithmetic Logic Unit bit 14	6
ALU15	Arithmetic Logic Unit bit 15	7
ALX14	gated ALU bit 15	8
ALX16	gated ALU bit 15	9
AR0	A-Register, bit 0	10
ARS	"not" Arithmetic Shift (function field decoded)	11
ARSS	"not" Arithmetic Shift Sign bit	12
BAFF	B-Addressable FF	13
C0X	Common 0, X	—
C0Y	Common 0, Y	—
C1X	Common 1, X	—
C1Y	Common 1, Y	—
C2X	Common 2, X	—
C2Y	Common 2, Y	—
C3X	Common 3, X	—
C3Y	Common 3, Y	—
C4X	Common 4, X	—
C4Y	Common 4, Y	—
C5X	Common 5, X	—
C5Y	Common 5, Y	—
C6X	Common 6, X	—
C6Y	Common 6, Y	—
C7X	Common 7, X	—
C7Y	Common 7, Y	—
CA0X	Common Anode 0, X	—
CA0Y	Common Anode 0, Y	—
CA1X	Common Anode 1, X	—
CA1Y	Common Anode 1, Y	—
CA2X	Common Anode 2, X	—
CA2Y	Common Anode 2, Y	—
CA3X	Common Anode 3, X	—
CA3Y	Common Anode 3, Y	—
CA4X	Common Anode 4, X	—
CA4Y	Common Anode 4, Y	—
CA5X	Common Anode 5, X	—
CA5Y	Common Anode 5, Y	—
CA6X	Common Anode 6, X	—
CA6Y	Common Anode 6, Y	—
CA7X	Common Anode 7, X	—
CA7Y	Common Anode 7, Y	—
CC0X	Common Cathode 0, X	—
CC0Y	Common Cathode 0, Y	—
CC1X	Common Cathode 1, X	—
CC1Y	Common Cathode 1, Y	—
CC2X	Common Cathode 2, X	—
CC2Y	Common Cathode 2, Y	—
CC3X	Common Cathode 3, X	—
CC3Y	Common Cathode 3, Y	—
CC4X	Common Cathode 4, X	—
CC4Y	Common Cathode 4, Y	—
CC5X	Common Cathode 5, X	—
CC5Y	Common Cathode 5, Y	—

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
CC6X	Common Cathode 6, X	—
CC6Y	Common Cathode 6, Y	—
CC7X	Common Cathode 7, X	—
CC7Y	Common Cathode 7, Y	—
CIN	"not" Carry In	14
CJMP	"not" Conditional Jump (function field decoded)	15
CL	Constant to Left half (S-bus field decoded)	16
CLC	Clear Control (I/O)	17
CLF	Clear Flag (I/O)	18
CLK	Clock	19
CLKX	Clock, external	—
CLK1	"not" Clock 1	20
CLK2	"not" Clock 2	21
CLK3	"not" Clock 3	22
CMEFF	Complement Extend FF	23
CMF0	Complement Flag 0 (I/O)	24
CMOV	Complement Overflow	25
COND	Conditional (S-bus field decoded)	26
COUT	"not" Carry Out	27
CPEN	Control Panel Enable	28
CR	Constant to Right half (S-bus field decoded)	29
CRS	Control Reset (I/O)	30
CT3	Count of indirect phase 3	31
CW	Clear-Write	32
DECM	"not" Decrement M-register	33
DIV	"not" Divide (function field decoded)	34
DTRY	Data Ready	35
EDT	End Data Transfer	36
EEOP	Enable End Of Phase	37
ENF	Enable Flag (I/O)	38
ENOV	Enable Overflow	39
ENRM	Enable ROM	40
ENRMX	Enable ROM, external	—
ENSS	Enable Special and Skip fields	41
ENX	Enable, external	—
EOP	End Of Phase (skip field decoded)	42
EPRSI	External Preset Indicator	43
EREQ1	Enable Request 1	—
EREQ2	Enable Request 2	—
EXTEND	Extend	44
FBFF6	Flag Buffer FF s.c. 6	45
FBFF7	Flag Buffer FF s.c. 7	46
FETCH	Fetch	47
FLAG	Flag (CPU)	48
FLG1	Flag bit 1 (I/O)	49
FLG2	Flag bit 2 (I/O)	50
FLG2X	Flag bit 2, external	—
FLG3	Flag bit 3, external	—
FLG4	Flag bit 4, external	—
FLG5	Flag bit 5, external	—
FLG6	Flag bit 6, external	—
FN0	Function Number 0	51
FN1	Function Number 1	52
FN2	Function Number 2	53
FN3	Function Number 3	54
FRZ	"not" Freeze	55
HIN	Halt Instruction (I-register decoded)	56

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
HT6	Hold time T6	57
IA0	"not" Interrupt Address, bit 0	—
IA1	"not" Interrupt Address, bit 1	—
IA2	"not" Interrupt Address, bit 2	—
IA3	"not" Interrupt Address, bit 3	—
IA4	"not" Interrupt Address, bit 4	—
IA5	"not" Interrupt Address, bit 5	—
IAK	Interrupt Acknowledge	58
IDC0	Inhibit Driver Collector, bit 0	—
IDC1	Inhibit Driver Collector, bit 1	—
IDC2	Inhibit Driver Collector, bit 2	—
IDC3	Inhibit Driver Collector, bit 3	—
IDC4	Inhibit Driver Collector, bit 4	—
IDC5	Inhibit Driver Collector, bit 5	—
IDC6	Inhibit Driver Collector, bit 6	—
IDC7	Inhibit Driver Collector, bit 7	—
IDC8	Inhibit Driver Collector, bit 8	—
IDC9	Inhibit Driver Collector, bit 9	—
IDC10	Inhibit Driver Collector, bit 10	—
IDC11	Inhibit Driver Collector, bit 11	—
IDC12	Inhibit Driver Collector, bit 12	—
IDC13	Inhibit Driver Collector, bit 13	—
IDC14	Inhibit Driver Collector, bit 14	—
IDC15	Inhibit Driver Collector, bit 15	—
IDC16	Inhibit Driver Collector, bit 16	—
IDEM0-3	Inhibit Driver Enable Modules 0 thru 3	59
IDEM0-3X	Inhibit Driver Enable Modules 0 thru 3, external	—
IDEM4-7	Inhibit Driver Enable Modules 4 thru 7	60
IDEM4-7X	Inhibit Driver Enable Modules 4 thru 7, external	—
ID0M0	Inhibit Driver, bit 0, Module 0	61
ID0M1	Inhibit Driver, bit 0, Module 1	78
ID0M2	Inhibit Driver, bit 0, Module 2	95
ID0M3	Inhibit Driver, bit 0, Module 3	112
ID0M4	Inhibit Driver, bit 0, Module 4	129
ID0M5	Inhibit Driver, bit 0, Module 5	146
ID0M6	Inhibit Driver, bit 0, Module 6	163
ID0M7	Inhibit Driver, bit 0, Module 7	180
ID1M0	Inhibit Driver, bit 1, Module 0	62
ID1M1	Inhibit Driver, bit 1, Module 1	79
ID1M2	Inhibit Driver, bit 1, Module 2	96
ID1M3	Inhibit Driver, bit 1, Module 3	113
ID1M4	Inhibit Driver, bit 1, Module 4	130
ID1M5	Inhibit Driver, bit 1, Module 5	147
ID1M6	Inhibit Driver, bit 1, Module 6	164
ID1M7	Inhibit Driver, bit 1, Module 7	181
ID2M0	Inhibit Driver, bit 2, Module 0	63
ID2M1	Inhibit Driver, bit 2, Module 1	80
ID2M2	Inhibit Driver, bit 2, Module 2	97
ID2M3	Inhibit Driver, bit 2, Module 3	114
ID2M4	Inhibit Driver, bit 2, Module 4	131
ID2M5	Inhibit Driver, bit 2, Module 5	148
ID2M6	Inhibit Driver, bit 2, Module 6	165
ID2M7	Inhibit Driver, bit 2, Module 7	182
ID3M0	Inhibit Driver, bit 3, Module 0	64
ID3M1	Inhibit Driver, bit 3, Module 1	81
ID3M2	Inhibit Driver, bit 3, Module 2	98
ID3M3	Inhibit Driver, bit 3, Module 3	115

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
ID3M4	Inhibit Driver, bit 3, Module 4	132
ID3M5	Inhibit Driver, bit 3, Module 5	149
ID3M6	Inhibit Driver, bit 3, Module 6	166
ID3M7	Inhibit Driver, bit 3, Module 7	183
ID4M0	Inhibit Driver, bit 4, Module 0	65
ID4M1	Inhibit Driver, bit 4, Module 1	82
ID4M2	Inhibit Driver, bit 4, Module 2	99
ID4M3	Inhibit Driver, bit 4, Module 3	116
ID4M4	Inhibit Driver, bit 4, Module 4	133
ID4M5	Inhibit Driver, bit 4, Module 5	150
ID4M6	Inhibit Driver, bit 4, Module 6	167
ID4M7	Inhibit Driver, bit 4, Module 7	184
ID5M0	Inhibit Driver, bit 5, Module 0	66
ID5M1	Inhibit Driver, bit 5, Module 1	83
ID5M2	Inhibit Driver, bit 5, Module 2	100
ID5M3	Inhibit Driver, bit 5, Module 3	117
ID5M4	Inhibit Driver, bit 5, Module 4	134
ID5M5	Inhibit Driver, bit 5, Module 5	151
ID5M6	Inhibit Driver, bit 5, Module 6	168
ID5M7	Inhibit Driver, bit 5, Module 7	185
ID6M0	Inhibit Driver, bit 6, Module 0	67
ID6M1	Inhibit Driver, bit 6, Module 1	84
ID6M2	Inhibit Driver, bit 6, Module 2	101
ID6M3	Inhibit Driver, bit 6, Module 3	118
ID6M4	Inhibit Driver, bit 6, Module 4	135
ID6M5	Inhibit Driver, bit 6, Module 5	152
ID6M6	Inhibit Driver, bit 6, Module 6	169
ID6M7	Inhibit Driver, bit 6, Module 7	186
ID7M0	Inhibit Driver, bit 7, Module 0	68
ID7M1	Inhibit Driver, bit 7, Module 1	85
ID7M2	Inhibit Driver, bit 7, Module 2	102
ID7M3	Inhibit Driver, bit 7, Module 3	119
ID7M4	Inhibit Driver, bit 7, Module 4	136
ID7M5	Inhibit Driver, bit 7, Module 5	153
ID7M6	Inhibit Driver, bit 7, Module 6	170
ID7M7	Inhibit Driver, bit 7, Module 7	187
ID8M0	Inhibit Driver, bit 8, Module 0	69
ID8M1	Inhibit Driver, bit 8, Module 1	86
ID8M2	Inhibit Driver, bit 8, Module 2	103
ID8M3	Inhibit Driver, bit 8, Module 3	120
ID8M4	Inhibit Driver, bit 8, Module 4	137
ID8M5	Inhibit Driver, bit 8, Module 5	154
ID8M6	Inhibit Driver, bit 8, Module 6	171
ID8M7	Inhibit Driver, bit 8, Module 7	188
ID9M0	Inhibit Driver, bit 9, Module 0	70
ID9M1	Inhibit Driver, bit 9, Module 1	87
ID9M2	Inhibit Driver, bit 9, Module 2	104
ID9M3	Inhibit Driver, bit 9, Module 3	121
ID9M4	Inhibit Driver, bit 9, Module 4	138
ID9M5	Inhibit Driver, bit 9, Module 5	155
ID9M6	Inhibit Driver, bit 9, Module 6	172
ID9M7	Inhibit Driver, bit 9, Module 7	189
ID10M0	Inhibit Driver, bit 10, Module 0	71
ID10M1	Inhibit Driver, bit 10, Module 1	88
ID10M2	Inhibit Driver, bit 10, Module 2	105
ID10M3	Inhibit Driver, bit 10, Module 3	122
ID10M4	Inhibit Driver, bit 10, Module 4	139

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
ID10M5	Inhibit Driver, bit 10, Module 5	156
ID10M6	Inhibit Driver, bit 10, Module 6	173
ID10M7	Inhibit Driver, bit 10, Module 7	190
ID11M0	Inhibit Driver, bit 11, Module 0	72
ID11M1	Inhibit Driver, bit 11, Module 1	89
ID11M2	Inhibit Driver, bit 11, Module 2	106
ID11M3	Inhibit Driver, bit 11, Module 3	123
ID11M4	Inhibit Driver, bit 11, Module 4	140
ID11M5	Inhibit Driver, bit 11, Module 5	157
ID11M6	Inhibit Driver, bit 11, Module 6	174
ID11M7	Inhibit Driver, bit 11, Module 7	191
ID12M0	Inhibit Driver, bit 12, Module 0	73
ID12M1	Inhibit Driver, bit 12, Module 1	90
ID12M2	Inhibit Driver, bit 12, Module 2	107
ID12M3	Inhibit Driver, bit 12, Module 3	124
ID12M4	Inhibit Driver, bit 12, Module 4	141
ID12M5	Inhibit Driver, bit 12, Module 5	158
ID12M6	Inhibit Driver, bit 12, Module 6	175
ID12M7	Inhibit Driver, bit 12, Module 7	192
ID13M0	Inhibit Driver, bit 13, Module 0	74
ID13M1	Inhibit Driver, bit 13, Module 1	91
ID13M2	Inhibit Driver, bit 13, Module 2	108
ID13M3	Inhibit Driver, bit 13, Module 3	125
ID13M4	Inhibit Driver, bit 13, Module 4	142
ID13M5	Inhibit Driver, bit 13, Module 5	159
ID13M6	Inhibit Driver, bit 13, Module 6	176
ID13M7	Inhibit Driver, bit 13, Module 7	193
ID14M0	Inhibit Driver, bit 14, Module 0	75
ID14M1	Inhibit Driver, bit 14, Module 1	92
ID14M2	Inhibit Driver, bit 14, Module 2	109
ID14M3	Inhibit Driver, bit 14, Module 3	126
ID14M4	Inhibit Driver, bit 14, Module 4	143
ID14M5	Inhibit Driver, bit 14, Module 5	160
ID14M6	Inhibit Driver, bit 14, Module 6	177
ID14M7	Inhibit Driver, bit 14, Module 7	194
ID15M0	Inhibit Driver, bit 15, Module 0	76
ID15M1	Inhibit Driver, bit 15, Module 1	93
ID15M2	Inhibit Driver, bit 15, Module 2	110
ID15M3	Inhibit Driver, bit 15, Module 3	127
ID15M4	Inhibit Driver, bit 15, Module 4	144
ID15M5	Inhibit Driver, bit 15, Module 5	161
ID15M6	Inhibit Driver, bit 15, Module 6	178
ID15M7	Inhibit Driver, bit 15, Module 7	195
ID16M0	Inhibit Driver, bit 16, Module 0	77
ID16M1	Inhibit Driver, bit 16, Module 1	94
ID16M2	Inhibit Driver, bit 16, Module 2	111
ID16M3	Inhibit Driver, bit 16, Module 3	128
ID16M4	Inhibit Driver, bit 16, Module 4	145
ID16M5	Inhibit Driver, bit 16, Module 5	162
ID16M6	Inhibit Driver, bit 16, Module 6	179
ID16M7	Inhibit Driver, bit 16, Module 7	196
IEN5	Interrupt Enable s.c. 5	198
IEN10	Interrupt Enable s.c. 10	496
IEN20	Interrupt Enable s.c. 20	497
IMPV	"not" Interrupt due to Memory Protect Violation	199
INCM	"not" Increment M-register	200
INCP	Increment P-register	201

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
INM	Index Mode	202
INT	Interrupt	203
INTX	"not" Interrupt, external	—
INT5	Interrupt from s.c. 5	204
IOB0	Input/Output Bus bit 0	205
IOB1	Input/Output Bus bit 1	206
IOB2	Input/Output Bus bit 2	207
IOB3	Input/Output Bus bit 3	208
IOB4	Input/Output Bus bit 4	209
IOB5	Input/Output Bus bit 5	210
IOB6	Input/Output Bus bit 6	211
IOB7	Input/Output Bus bit 7	212
IOB8	Input/Output Bus bit 8	213
IOB9	Input/Output Bus bit 9	214
IOB10	Input/Output Bus bit 10	215
IOB11	Input/Output Bus bit 11	216
IOB12	Input/Output Bus bit 12	217
IOB13	Input/Output Bus bit 13	218
IOB14	Input/Output Bus bit 14	219
IOB15	Input/Output Bus bit 15	220
IOB16	Input/Output Bus Input bit 16	221
IOG	Input/Output Group	222
IOG1	Input/Output Group (special field decoded)	223
IOGE	Input/Output Group Enable	224
IOI	Input/Output group Input	225
IOO	Input/Output group Output	226
IPU	Internal Power Up	535
IR0	I-Register bit 0	228
IR1	I-Register bit 1	229
IR2	I-Register bit 2	230
IR3	I-Register bit 3	231
IR4	I-Register bit 4	232
IR5	I-Register bit 5	233
IR6	I-Register bit 6	234
IR7	I-Register bit 7	235
IR8	I-Register bit 8	236
IR9	I-Register bit 9	237
IR10	I-Register bit 10	238
IR11	I-Register bit 11	239
IR12	I-Register bit 12	240
IR13	I-Register bit 13	241
IR14	I-Register bit 14	242
IR15	I-Register bit 15	243
IRAR	Increment ROM Address Register	244
IRQ1	Interrupt Request 1	245
IRQ1X	Interrupt Request 1, external	—
IRQ2	Interrupt Request 2	246
IRQ2X	Interrupt Request 2, external	—
IRQ3	Interrupt Request 3	247
IRQ3X	Interrupt Request 3, external	—
IRQ4	Interrupt Request 4	248
IRQ4X	Interrupt Request 4, external	—
IRQ5	Interrupt Request 5	249
IRQ5X	Interrupt Request 5, external	—
IRQ6	Interrupt Request 6	250
IRQ6X	Interrupt Request 6, external	—
IRQ7	Interrupt Request 7	251
JMPS	"not" Jump (skip field decoded)	252

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
<u>JMPF</u>	"not" Jump (function field decoded)	253
<u>JSB</u>	"not" Jump to Subroutine (function field decoded)	254
LOAD	Load Memory	495
LPE	Loader Protect Enable	256
LSI	Left Shift Input	257
MBSY	Memory Busy	258
MC	Mode Control	259
MIT	Memory Inhibit Time	—
MOD0	Module 0	260
MOD0, 4	Modules 0 and 4	—
MOD1	Module 1	261
MOD1, 5	Modules 1 and 5	—
MOD2	Module 2	262
MOD2,6	Modules 2 and 6	—
MOD3	Module 3	263
MOD3, 7	Modules 3 and 7	—
MOD4	Module 4	264
MOD5	Module 5	265
MOD6	Module 6	266
<u>MOD7</u>	Module 7	267
<u>MOD0/1</u>	"not" Modules 0 and 1	268
<u>MOD2/3</u>	"not" Modules 2 and 3	269
<u>MOD4/5</u>	"not" Modules 4 and 5	270
<u>MOD6/7</u>	"not" Modules 6 and 7	271
MOD0T/2T	Module 0/2 Time	272
MPC	Memory Protect Control	274
<u>MPV</u>	"not" Memory Protect Violation	275
MPY	"not" Multiply	276
MR0	M-Register bit 0	277
MR1	M-Register bit 1	278
MR2	M-Register bit 2	279
MR3	M-Register bit 3	280
MR4	M-Register bit 4	281
MR5	M-Register bit 5	282
MR6	M-Register bit 6	283
MR7	M-Register bit 7	284
MR8	M-Register bit 8	285
MR9	M-Register bit 9	286
MR10	M-Register bit 10	287
MR11	M-Register bit 11	288
MRTY	Memory Read Time Y	289
MSG	Memory Sense Gate	290
MWTY	Memory Write Time Y	291
OVFF	Overflow FF	292
P1A	Phase 1A (function field decoded)	293
P1SK	Phase 1 Skip	502
PEH	Parity Error Halt (indicator)	294
PEX	Parity Error	295
PH1A	Phase 1A	296
PH1B	Phase 1B	297
PH2	Phase 2	298
PH3	Phase 3	299
PH5	Phase 5	300
PINH	Panel Inhibit	301
PNLA	Panel Select A-register	302
PNLB	Panel Select B-register	303
PNLP	Panel Select P-register	304

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
PNLT	Panel select T-register	499
PON	Power On Normal	305
POPIO	Power On Preset I/O	306
PRH5/PRL4	Priority High s.c. 5, Priority Low s.c. 4	309
PRH6/PRL5	Priority High s.c. 6, Priority Low s.c. 5	310
PRH11/PRL10	Priority High s.c. 11, Priority Low s.c. 10	311
PRH12/PRL11	Priority High s.c. 12, Priority Low s.c. 11	312
PRH13/PRL12	Priority High s.c. 13, Priority Low s.c. 12	313
PRH14/PRL13	Priority High s.c. 14, Priority Low s.c. 13	314
PRH15/PRL14	Priority High s.c. 15, Priority Low s.c. 14	315
PRH16/PRL15	Priority High s.c. 16, Priority Low s.c. 15	316
PRH17/PRL16	Priority High s.c. 17, Priority Low s.c. 16	317
PRH21/PRL20	Priority High s.c. 21, Priority Low s.c. 20	318
PRH22/PRL21	Priority High s.c. 22, Priority Low s.c. 21	319
PRH23/PRL22	Priority High s.c. 23, Priority Low s.c. 22	320
PRH24/PRL23	Priority High s.c. 24, Priority Low s.c. 23	321
PRH25/PRL24	Priority High s.c. 25, Priority Low s.c. 24	322
PRL17	Priority Low s.c. 17	323
PRSE	Preset External	324
PRSI	Preset Internal	325
PWU	Power Up	326
PWUX	Power Up, external	—
QSI	Q-register Shift Input	327
RA0	ROM Address bit 0	—
RA1	ROM Address bit 1	—
RA2	ROM Address bit 2	—
RA3	ROM Address bit 3	—
RA4	ROM Address bit 4	—
RA5	ROM Address bit 5	—
RA6	ROM Address bit 6	—
RA7	ROM Address bit 7	—
RA8	ROM Address bit 8	—
RA9	ROM Address bit 9	—
RAR0	ROM Address Register bit 0	—
RAR1	ROM Address Register bit 1	—
RAR2	ROM Address Register bit 2	—
RAR3	ROM Address Register bit 3	—
RAR4	ROM Address Register bit 4	—
RAR5	ROM Address Register bit 5	—
RAR6	ROM Address Register bit 6	—
RAR7	ROM Address Register bit 7	—
RAR8	ROM Address Register bit 8	—
RAR9	ROM Address Register bit 9	—
RB15	R-Bus bit 15	328
$\overline{\text{RBE}}$	"not" R-bus Enable	329
RBS1	R-Bus Select 1	330
RBS1X	R-Bus Select 1, external	—
RBS2	R-Bus Select 2	331
RBS2X	R-Bus Select 2, external	—
RCIR	Read Central Interrupt Register	332
RCTR	Read Counter	333
READ	Read	334
RESET	system Reset	335
RFE	Rotate Flag and Extend bits (CPU)	336
RIOB	Read I/O Bus	337
RIR0	ROM Instruction Register bit 0	338
RIR1	ROM Instruction Register bit 1	339

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
RIR2	ROM Instruction Register bit 2	340
RIR3	ROM Instruction Register bit 3	341
RIR4	ROM Instruction Register bit 4	342
RIR5	ROM Instruction Register bit 5	343
RIR6	ROM Instruction Register bit 6	344
RIR7	ROM Instruction Register bit 7	345
RIR12	ROM Instruction Register bit 12	346
RIR17	ROM Instruction Register bit 17	347
RJMP	ROM Jump	348
RMX	ROM External	—
ROM8	ROM bit 8	349
ROM9	ROM bit 9	350
ROM10	ROM bit 10	351
ROM11	ROM bit 11	352
ROM12	ROM bit 12	353
ROM13	ROM bit 13	354
ROM14	ROM bit 14	355
ROM15	ROM bit 15	356
ROM16	ROM bit 16	357
ROM17	ROM bit 17	358
ROM18	ROM bit 18	359
ROM19	ROM bit 19	360
ROM20	ROM bit 20	361
ROM21	ROM bit 21	362
ROM22	ROM bit 22	363
ROM23	ROM bit 23	364
ROMX0	ROM bit 0, external	—
ROMX1	ROM bit 1, external	—
ROMX2	ROM bit 2, external	—
ROMX3	ROM bit 3, external	—
ROMX4	ROM bit 4, external	—
ROMX5	ROM bit 5, external	—
ROMX6	ROM bit 6, external	—
ROMX7	ROM bit 7, external	—
ROMX8	ROM bit 8, external	—
ROMX9	ROM bit 9, external	—
ROMX10	ROM bit 10, external	—
ROMX11	ROM bit 11, external	—
ROMX12	ROM bit 12, external	—
ROMX13	ROM bit 13, external	—
ROMX14	ROM bit 14, external	—
ROMX15	ROM bit 15, external	—
ROMX16	ROM bit 16, external	—
ROMX17	ROM bit 17, external	—
ROMX18	ROM bit 18, external	—
ROMX19	ROM bit 19, external	—
ROMX20	ROM bit 20, external	—
ROMX21	ROM bit 21, external	—
ROMX22	ROM bit 22, external	—
ROMX23	ROM bit 23, external	—
RP9	Read P-register bit 9	365
RPHI	Read P-register High bits (10 through 15)	366
RPLO	Read P-register Low bits (0 through 9)	367
RRSB	Read R-bus to S-bus	368
RRSBX	Read R-bus to S-bus, external	—
RSBV	Read Save-Register	369
RSP1	Read SP1-register	370

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
RSP1X	Read SP1-register, external	—
RSP2	Read SP2-register	371
RSP2X	Read SP2-register, external	—
RSP3	Read SP3-register	372
RSP3X	Read SP3-register, external	—
RSP4	Read SP4-register	373
RSP4X	Read SP4-register, external	—
RSSP	Restart Pulse	374
RUN	Run signal	375
RUNX	Run signal, external	—
RW	Read-Write	376
RWCW	Read-Write/Clear-Write	377
SA0	Sense Amplifier bit 0	378
SA1	Sense Amplifier bit 1	379
SA2	Sense Amplifier bit 2	380
SA3	Sense Amplifier bit 3	381
SA4	Sense Amplifier bit 4	382
SA5	Sense Amplifier bit 5	383
SA6	Sense Amplifier bit 6	384
SA7	Sense Amplifier bit 7	385
SA8	Sense Amplifier bit 8	386
SA9	Sense Amplifier bit 9	387
SA10	Sense Amplifier bit 10	388
SA11	Sense Amplifier bit 11	389
SA12	Sense Amplifier bit 12	390
SA13	Sense Amplifier bit 13	391
SA14	Sense Amplifier bit 14	392
SA15	Sense Amplifier bit 15	393
SA16	Sense Amplifier bit 16	394
SAM	Select A-register Mode	395
SB0	S-Bus bit 0	396
SB1	S-Bus bit 1	397
SB2	S-Bus bit 2	398
SB3	S-Bus bit 3	399
SB4	S-Bus bit 4	400
SB5	S-Bus bit 5	401
SB6	S-Bus bit 6	402
SB7	S-Bus bit 7	403
SB8	S-Bus bit 8	404
SB9	S-Bus bit 9	405
SB10	S-Bus bit 10	406
SB11	S-Bus bit 11	407
SB12	S-Bus bit 12	408
SB13	S-Bus bit 13	409
SB14	S-Bus bit 14	410
SB15	S-Bus bit 15	411
SC1	Select Code 1	412
SC5	Select Code 5	413
SC6	Select Code 6	414
SC7	Select Code 7	415
SCE	Set/Clear Extend	416
SCF0	Set/Clear Flag Zero	417
SCL0	Select Code Least significant bit 0	418
SCL0X	Select Code Least significant bit 0, external	—
SCL0X	“not” Select Code Least significant bit 0, external	—
SCL1	Select Code Least significant bit 1	419
SCL1X	Select Code Least significant bit 1, external	—

Table 4-1. Signal Index (Continued)




SIGNAL MNEMONIC	DEFINITION	REF NO.
<u>SCL1X</u>	"not" Select Code Least significant bit 1, external	—
<u>SCL2</u>	Select Code Least significant bit 2	420
<u>SCL2X</u>	Select Code Least significant bit 2, external	—
<u>SCL2X</u>	"not" Select Code Least significant bit 2, external	—
<u>SCL3</u>	Select Code Least significant bit 3	421
<u>SCL3X</u>	Select Code Least significant bit 3, external	—
<u>SCL3X</u>	"not" Select Code Least significant bit 3, external	—
<u>SCL4</u>	Select Code Least significant bit 4	422
<u>SCL4X</u>	Select Code Least significant bit 4, external	—
<u>SCL4X</u>	"not" Select Code Least significant bit 4, external	—
<u>SCL5</u>	Select Code Least significant bit 5	423
<u>SCL5X</u>	Select Code Least significant bit 5, external	—
<u>SCL5X</u>	"not" Select Code Least significant bit 5, external	—
<u>SCL6</u>	Select Code Least significant bit 6	424
<u>SCL6X</u>	Select Code Least significant bit 6, external	—
<u>SCL6X</u>	"not" Select Code Least significant bit 6, external	—
<u>SCL7</u>	Select Code Least significant bit 7	425
<u>SCL7X</u>	Select Code Least significant bit 7, external	—
<u>SCL7X</u>	"not" Select Code Least significant bit 7, external	—
<u>SCM0</u>	Select Code Most significant bit 0	426
<u>SCM0X</u>	"not" Select Code Most significant bit 0, external	—
<u>SCM1</u>	Select Code Most significant bit 1	427
<u>SCM1X</u>	"not" Select Code Most significant bit 1, external	—
<u>SCM2</u>	Select Code Most significant bit 2	428
<u>SCM2X</u>	Select Code Most significant bit 2, external	—
<u>SCM2X</u>	"not" Select Code Most significant bit 2, external	—
<u>SCM3</u>	Select Code Most significant bit 3	—
<u>SCM3</u>	"not" Select Code Most significant bit 3	—
<u>SCM4</u>	Select Code Most significant bit 4	—
<u>SCM4</u>	"not" Select Code Most significant bit 4	—
<u>SCM5</u>	Select Code Most significant bit 5	—
<u>SCM5</u>	"not" Select Code Most significant bit 5	—
<u>SCM6</u>	Select Code Most significant bit 6	—
<u>SCM6</u>	"not" Select Code Most significant bit 6	—
<u>SCM7</u>	Select Code Most significant bit 7	—
<u>SCM7</u>	"not" Select Code Most significant bit 7	—
<u>SCO</u>	Set/Clear Overflow	429
<u>SCRY</u>	Set Carry	430
<u>SELM</u>	Select M-register	431
<u>SELT</u>	Select T-register	432
<u>SFC</u>	Skip if Flag is Clear (I/O)	433
<u>SFM</u>	Select F-register Mode	434
<u>SFS</u>	Skip if Flag is Set (I/O)	435
<u>SFSB</u>	Skip if Flag is Set (I/O) (buffered)	436
<u>SHIFT</u>	Shift	437
<u>SIOB</u>	S-bus to I/O-bus	438
<u>SIR</u>	Set Interrupt Request	439
<u>SKF</u>	Skip on Flag (I/O)	440
<u>SKIP</u>	Skip (ROM instruction)	441
<u>SL1</u>	Shift Left 1	442
<u>SL4</u>	"not" Shift Left 4	443
<u>SPH1B</u>	Set Phase 1B	446
<u>SPH2</u>	Set Phase 2	447
<u>SPH3</u>	Set Phase 3	448
<u>SPH5</u>	Set Phase 5	449
<u>SQM</u>	Select Q-register Mode	450
<u>SR1</u>	Shift Right 1	451

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
SRAR	"not" Set ROM Address Register	452
SRH	Set Run Halt logic	453
SRHX	Set Run Halt logic, external	—
SRIR	Set ROM Instruction Register	454
SRQ10	Service Request s.c. 10	455
SRQ11	Service Request s.c. 11	456
SRQ12	Service Request s.c. 12	457
SRQ13	Service Request s.c. 13	458
SRQ14	Service Request s.c. 14	459
SRQ15	Service Request s.c. 15	460
SRQ16	Service Request s.c. 16	461
SRQ17	Service Request s.c. 17	462
SRQ20	Service Request s.c. 20	463
SRQ21	Service Request s.c. 21	464
SRQ22	Service Request s.c. 22	465
SRQ23	Service Request s.c. 23	466
SRQ24	Service Request s.c. 24	467
SRQ25	Service Request s.c. 25	468
SRQ25X	Service Request s.c. 25, external	—
SRQ26X	Service Request s.c. 26, external	—
SRQ27X	Service Request s.c. 27, external	—
SSCY	Set Single Cycle	469
SSCYX	Set Single Cycle, external	—
SSIN	Set Single Instruction	470
SSSR1	Set Service Select Register, Channel 1	—
SSSR2	Set Service Select Register, Channel 2	—
STA	Store in A-register	471
STB	Store in B-register	472
STC	Set Control	473
STCLK	Store Clock	474
STF	Set Flag (I/O)	475
STI	Store in I-Register	476
STORE	Store (T- or M-register)	477
STOF	Store in F-register	478
STP	Store in P-register	479
STQ	Store in Q-register	480
SYNX	Sync External	—
T3	Time period 3 to I/O	481
T4	Time period 4	482
T5	Time period 5	498
T6	Time period 6	483
TBS1	T-Bus Select 1	484
TBS2	T-Bus Select 2	485
TBZ	T-Bus all Zeros	486
TR0	"not" T-Register bit 0	—
TR1	"not" T-Register bit 1	—
TR2	"not" T-Register bit 2	—
TR3	"not" T-Register bit 3	—
TR4	"not" T-Register bit 4	—
TR5	"not" T-Register bit 5	—
TR6	"not" T-Register bit 6	—
TR7	"not" T-Register bit 7	—
TR8	"not" T-Register bit 8	—
TR9	"not" T-Register bit 9	—
TR10	"not" T-Register bit 10	—
TR11	"not" T-Register bit 11	—
TR12	"not" T-Register bit 12	—

Table 4-1. Signal Index (Continued)

SIGNAL MNEMONIC	DEFINITION	REF NO.
$\overline{\text{TR13}}$	"not" T-Register bit 13	—
$\overline{\text{TR14}}$	"not" T-Register bit 14	—
$\overline{\text{TR15}}$	"not" T-Register bit 15	—
$\overline{\text{TR16}}$	"not" T-Register bit 16	—
UABF	Update A/B addressable FF	500
$\overline{\text{WCR1}}$	"not" Word Count Register 1	487
$\overline{\text{WCR2}}$	"not" Word Count Register 2	488
WSP1	Write SP1-register	489
WSP2	Write SP2-register	490
WSP3	Write SP3-register	491
WSP4	Write SP4-register	492
XENRM	External Enable ROM	—
XT1	X-line Time 1	493
XT2	X-line Time 2	494
ZABF	Zero A- and B-register FF	501

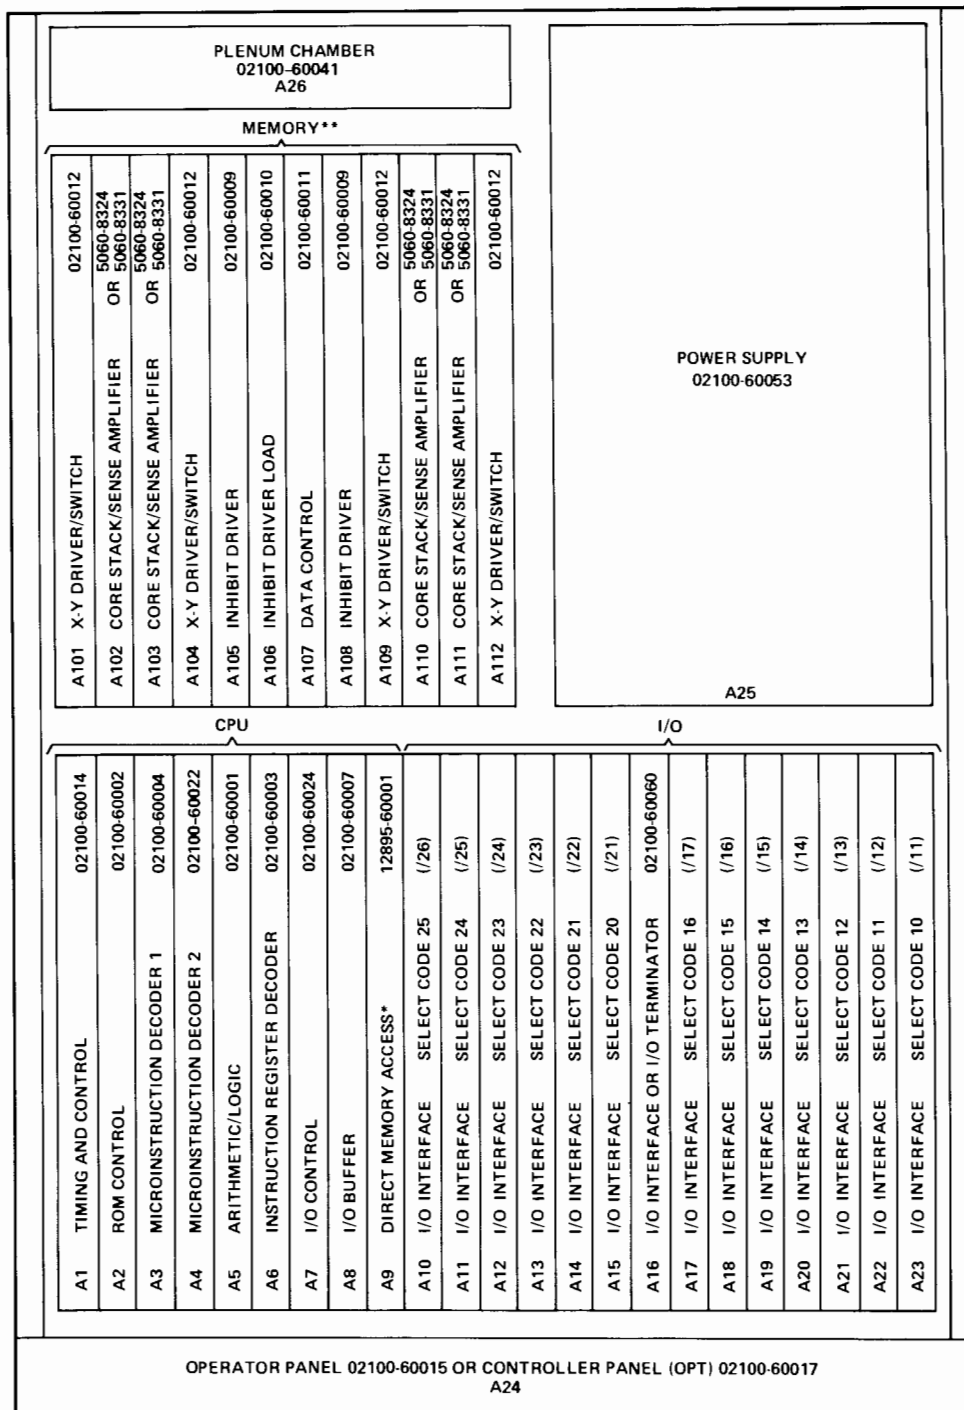

FRONT


NOTES: *DIRECT MEMORY ACCESS CARD IS AN ACCESSORY TO THE COMPUTER AND IS NOT PART OF THE BASIC CONFIGURATION.

**MEMORY SECTION LOADING SHOWN IS FOR 32K MEMORY. REFER TO FIGURE 4-2 FOR OTHER MEMORY SIZE LOADING.

Figure 4-1. Major Assembly Locations


Table 4-2. Memory Section Card Part Numbers

CARD	MEMORY SIZE					
	4K	8K	12K	16K	24K	32K
4K Core Stack/Sense Amplifier (02100-60040)	A103	—	A102	—	—	—
8K Core Stack/Sense Amplifier (5060-8324) or (5060-8331)	—	A103	A103	A102, A103	A102, A103, A110	A102, A103, A110, A111
X-Y Driver/Switch (02100-60012)	A104	A104	A101, A104	A101, A104	A101, A104, A109	A101, A104, A109, A112
Inhibit Driver (02100-60008)	A105	A105	—	—	—	—
Inhibit Driver (02100-60009)	—	—	A105	A105	A105, A108	A105, A108
Inhibit Driver Load (02100-60010)	A106	A106	A106	A106	A106	A106
Data Control (02100-60011)	A107	A107	A107	A107	A107	A107

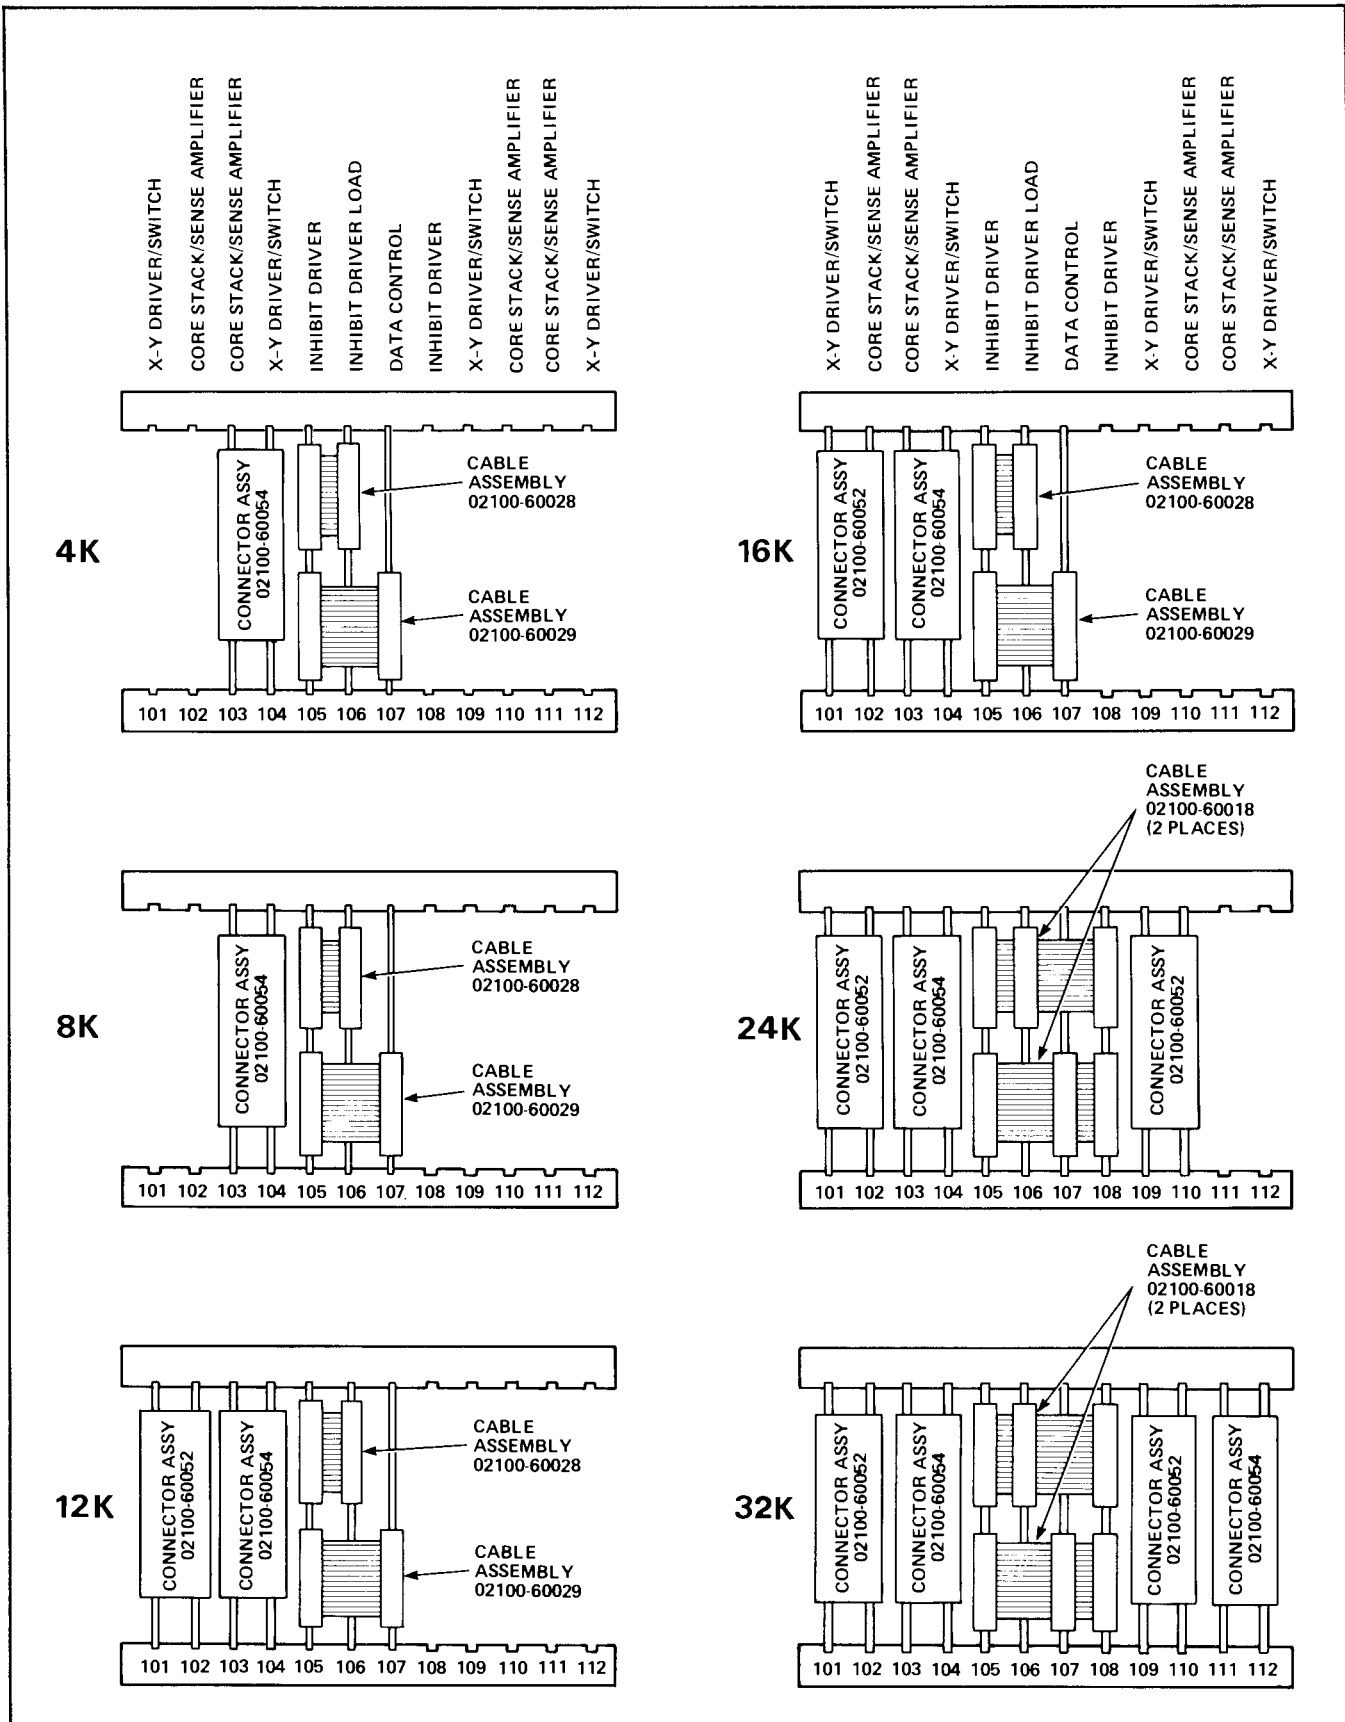


2133-2

Figure 4-2. Card Cage Loading Configuration for Each Memory Size

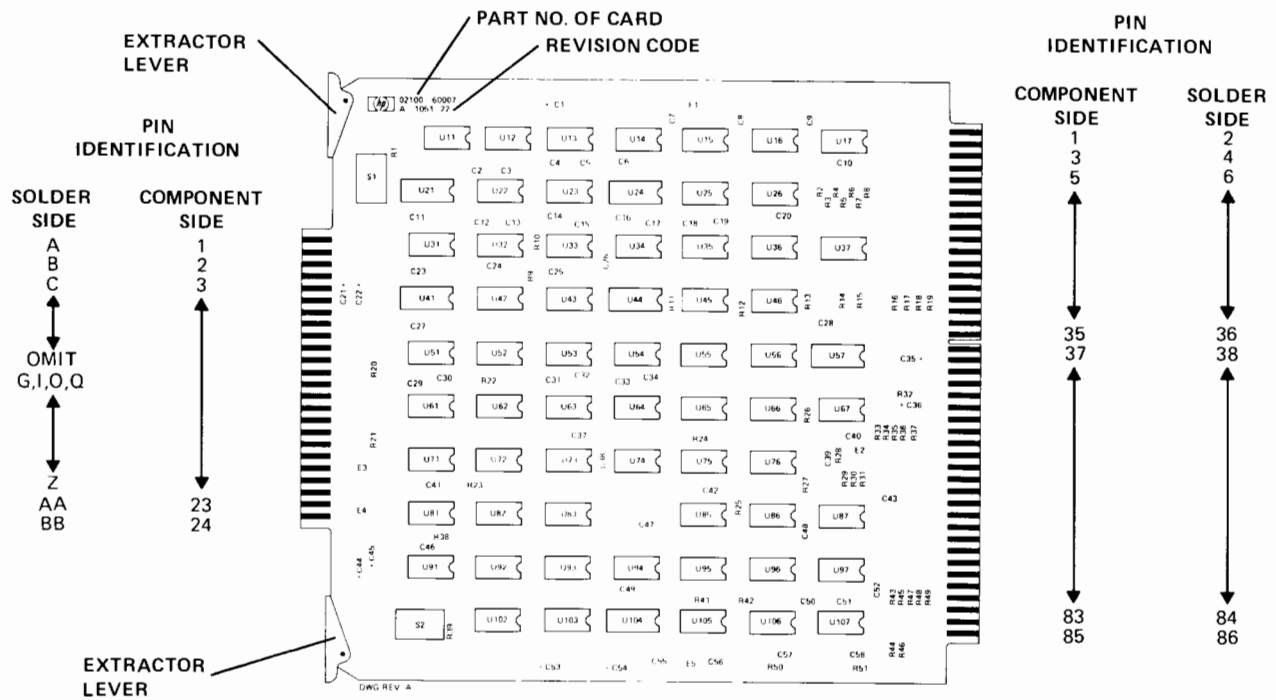

A. ONE 48-PIN EDGE-CONNECTOR

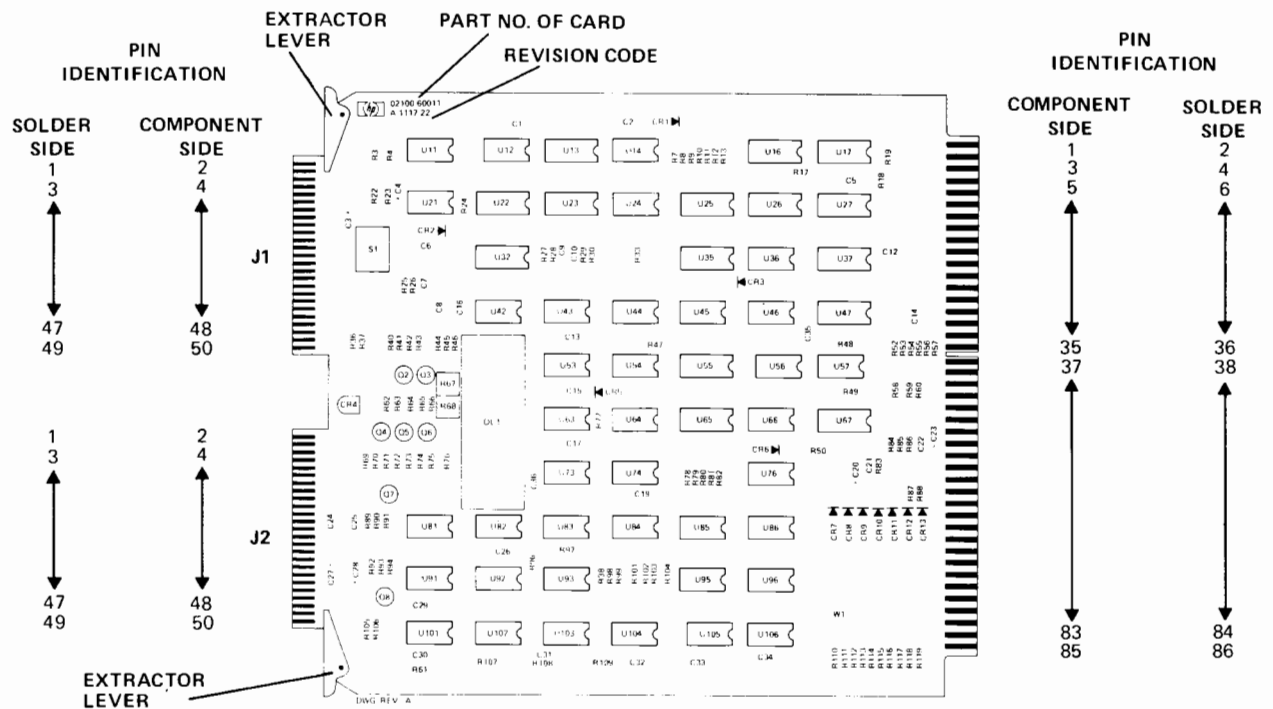

B. TWO 50-PIN EDGE CONNECTORS

NOTE: INTEGRATED CIRCUITS ARE NUMBERED
IN ROW AND COLUMN ORDER.

Figure 4-3. Particulars for Typical Printed Circuit Cards

Table 4-3. A1 Timing and Control Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	02100-60014	1	TIMING AND CONTROL CARD	284 80	02100-60014
A1C1	0180-0197	6	C:FxD ELECT 2.2 UF 10% 20VDCW	562 89	150D225X9020A2-DYS
A1C2	0180-0197		C:FxD ELECT 2.2 UF 10% 20VDCW	562 89	150D225X9020A2-DYS
A1C3	0160-2055	28	C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C4	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C5	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C6	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C7	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C8	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C9	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C10	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C11	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C12	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C13	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C14	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C15	0180-0197		C:FxD ELECT 2.2 UF 10% 20VDCW	562 89	150D225X9020A2-DYS
A1C16	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C17	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C18	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C19	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C20	0180-0197		C:FxD ELECT 2.2 UF 10% 20VDCW	562 89	150D225X9020A2-DYS
A1C21	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C22	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C23	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C24	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C25	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C26	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C27	0180-0197		C:FxD ELECT 2.2 UF 10% 20VDCW	562 89	150D225X9020A2-DYS
A1C28	0180-0197		C:FxD ELECT 2.2 UF 10% 20VDCW	562 89	150D225X9020A2-DYS
A1C29	0140-0198	1	C:FxD MICA 200 PF 5%	72136	RDM15F201J3C
A1C30	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C31	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C32	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C33	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C34	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1C35	0160-2055		C:FxD CER 0.01 UF +80-20% 100VDCW	562 89	C023F101F103ZS22-CDH
A1E1	0360-0294	5	TERMINAL:SOLDER POINT	284 80	0360-0294
A1E2	0360-0294		TERMINAL:SOLDER POINT	284 80	0360-0294
A1E3	0360-0294		TERMINAL:SOLDER POINT	284 80	0360-0294
A1E4	0360-0294		TERMINAL:SOLDER POINT	284 80	0360-0294
A1E5	0360-0294		TERMINAL:SOLDER POINT	284 80	0360-0294
A1R1	0757-0280	15	R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R2	0757-1094	3	R:FxD MET FLM 1.47K OHM 1% 1/8W	284 80	0757-1094
A1R3	0698-3446	3	R:FxD MET FLM 383 OHM 1% 1/8W	284 80	0698-3446
A1R4	0698-3446		R:FxD MET FLM 383 OHM 1% 1/8W	284 80	0698-3446
A1R5	0757-0284	1	R:FxD MET FLM 150 OHM 1% 1/8W	284 80	0757-0284
A1R6	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R7	0757-0416	13	R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R8	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R9	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R10	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R11	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R12	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R13	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R14	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R15	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R16	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R17	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R18	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R19	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R20	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R21	0698-3440	1	R:FxD MET FLM 196 OHM 1% 1/8W	284 80	0698-3440
A1R22	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R23	0757-1094		R:FxD MET FLM 1.47K OHM 1% 1/8W	284 80	0757-1094
A1R24	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R25	0757-1094		R:FxD MET FLM 1.47K OHM 1% 1/8W	284 80	0757-1094
A1R26	0698-3446		R:FxD MET FLM 383 OHM 1% 1/8W	284 80	0698-3446
A1R27	0757-0416		R:FxD MET FLM 511 OHM 1% 1/8W	284 80	0757-0416
A1R28	0683-1825	2	R:FxD COMP 1800 OHM 5% 1/4W	01121	C8 1825
A1R29	0683-1025	2	R:FxD COMP 1000 OHM 5% 1/4W	01121	C8 1025
A1R30	0683-1825		R:FxD COMP 1800 OHM 5% 1/4W	01121	C8 1825
A1R31	0683-1025		R:FxD COMP 1000 OHM 5% 1/4W	01121	C8 1025
A1R32	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R33	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280
A1R34	0757-0280		R:FxD MET FLM 1K OHM 1% 1/8W	284 80	0757-0280

Table 4-3. A1 Timing and Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R35	0757-0280	1	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A1R36	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A1R37	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A1R38	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A1R39	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A1R40	0757-0416	2	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A1R41	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A1S1	3101-1213		SWITCH:TOGGLE DPST-D8 SUB-MINIATURE	81640	T8001
A1S2	3101-1213		SWITCH:TOGGLE DPST-D8 SUB-MINIATURE	81640	T8001
A1U13	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A1U14	1820-0370	6	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A1U15	1820-0485	4	IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A1U16	1820-0424	5	IC:TTL HS HEX INVERTER	04713	SN74H04N
A1U17	1820-0954	2	IC:CTL DUAL 4-INPT AND GATE	07263	U6A995479X
A1U23	1820-0186	5	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A1U24	1820-0966	4	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A1U25	1820-0187	1	IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X
A1U26	1820-0424	3	IC:TTL HS HEX INVERTER	04713	SN74H04N
A1U27	1820-0954		IC:CTL DUAL 4-INPT AND GATE	07263	U6A995479X
A1U33	1820-0965		IC:CTL QUAD 1-INPT AND GATE	07263	U6A996579X
A1U34	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A1U35	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A1U36	1820-0964	3	IC:CTL TRIPLE 3-3-1 INPT AND GATE	14433	MIC 964
A1U37	1820-0964		IC:CTL TRIPLE 3-3-1 INPT AND GATE	14433	MIC 964
A1U43	1820-0965		IC:CTL QUAD 1-INPT AND GATE	07263	U6A996579X
A1U44	1820-0965		IC:CTL QUAD 1-INPT AND GATE	07263	U6A996579X
A1U45	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A1U46	1820-0966	1	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A1U47	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A1U53	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
A1U54	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A1U55	1820-0609		IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A1U56	1820-0609	5	IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A1U57	1820-0964		IC:CTL TRIPLE 3-3-1 INPT AND GATE	14433	MIC 964
A1U63	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A1U64	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A1U65	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A1U66	1820-0141	3	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A1U67	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A1U71	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A1U72	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A1U73	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A1U74	1820-0609	2	IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A1U75	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A1U76(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A1U77	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A1U81(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A1U82	1820-0141	3	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A1U83	1820-0609		IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A1U84	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A1U85	1820-0609		IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A1U86	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A1U87	1820-0374	1	IC:TTL HS DUAL 4-INPT AND GATE	01295	SN74H21N
A1U92	1820-0681	1	IC:TTL QUAD 2-INPT NAND GATE	01295	SN74S00N
A1U93	1820-0370	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A1U94	1820-0485	2	IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A1U95	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A1U96	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A1U97	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A1U102	1820-0140		IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A1U103	1820-0140	1	IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A1U104	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A1U105	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A1U106	1820-0373		IC:TTL HS DUAL 4-INPT NAND GATE	01295	SN74H20N
A1U107	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A1XV1	1200-0199	1	SOCKET:CRYSTAL	91506	8000-AG9
A1Y1	0410-0432	1	CRYSTAL:QUARTZ	28480	0410-0432

NOTES: 1. Part no. 1820-0695 used on some cards; the two parts are interchangeable.

REF. NO.	BACKPLANE LOCATION						* INDICATES SIGNAL SOURCE
A1							
15	A1-60	A4-62*					
19	A1-51*	A5-61					
20	A1-72*	A3-79					
21	A1-84*	A4-69	A6-31	A8-70			
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64	
	A107-69						
23	A1-70*	A6-55					
24	A1-77*	A7-25					
25	A1-76*	A4-61					
28	A1-52*	A4-19	A24-43				
31	A1-10	A8-64*					
33	A1-42	A24-60*	A107-6				
38	A1-50	A7-4	A8-57*	A9-29	A10-46 THRU	A23-46	
40	A1-58*	A2-63					
42	A1-46	A2-65*	A4-55				
47	A1-67	A4-64	A24-21*				
55	A1-80	A3-35*	A6-43				
56	A1-65	A7-65*	A8-50*	A24-74			
199	A1-24	A8-68*					
200	A1-37	A24-33*	A107-79				
201	A1-43*	A5-3					
203	A1-22	A7-45*					
223	A1-83	A6-21*	A7-38				
239	A1-9	A2-80	A3-71	A4-24	A6-58*	A8-63	
240	A1-3	A2-79	A6-44*				
241	A1-7	A2-78	A6-49*				
242	A1-5	A2-81	A6-46*				
243	A1-12	A2-82	A6-45*				
244	A1-56*	A2-52					
252	A1-73	A4-46*					
293	A1-81	A4-65*					
295	A1-63	A3-27	A8-58*				
296	A1-41*	A8-53	A24-49				
297	A1-30*	A7-12	A8-71	A24-50			
298	A1-28*	A24-28					
299	A1-26*	A24-30					
305	A1-6	A7-8*	A24-67	A104-42	A107-70		
	A10-66 THRU	A23-66					
325	A1-4	A24-13*					
334	A1-54*	A3-28*	A4-27	A9-31*	A24-77*	A107-72	
335	A1-8*	A2-70	A4-30	A6-9	A7-20	A8-75	
	A107-82						
348	A1-75*	A2-56					
369	A1-71	A2-41	A4-17*				
374	A1-69	A7-46*					
375	A1-49*	A10-50 THRU	A23-50				
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*	
	A9-84*	A107-52					
416	A1-66	A24-11*					
417	A1-68	A24-5*					
429	A1-79	A24-3*					
430	A1-44	A6-28*					
431	A1-53*	A3-22*	A8-60	A9-35*	A24-42*	A107-66	
440	A1-17	A4-16*	A7-21*	A10-12*	THRU A23-12*		
446	A1-31*	A2-74					
447	A1-34*	A2-73	A8-72				
448	A1-35*	A2-55					
452	A1-61*	A2-60					
453	A1-74	A24-62*					
454	A1-55	A2-62	A3-42	A4-52	A6-76*		
469	A1-62	A24-58*					
470	A1-64	A24-59*					
474	A1-36*	A2-59	A3-18				
482	A1-16	A8-44*	A9-80				
500	A1-59*	A4-31					
501	A1-57*	A4-53					
502	A1-13*	A6-29					




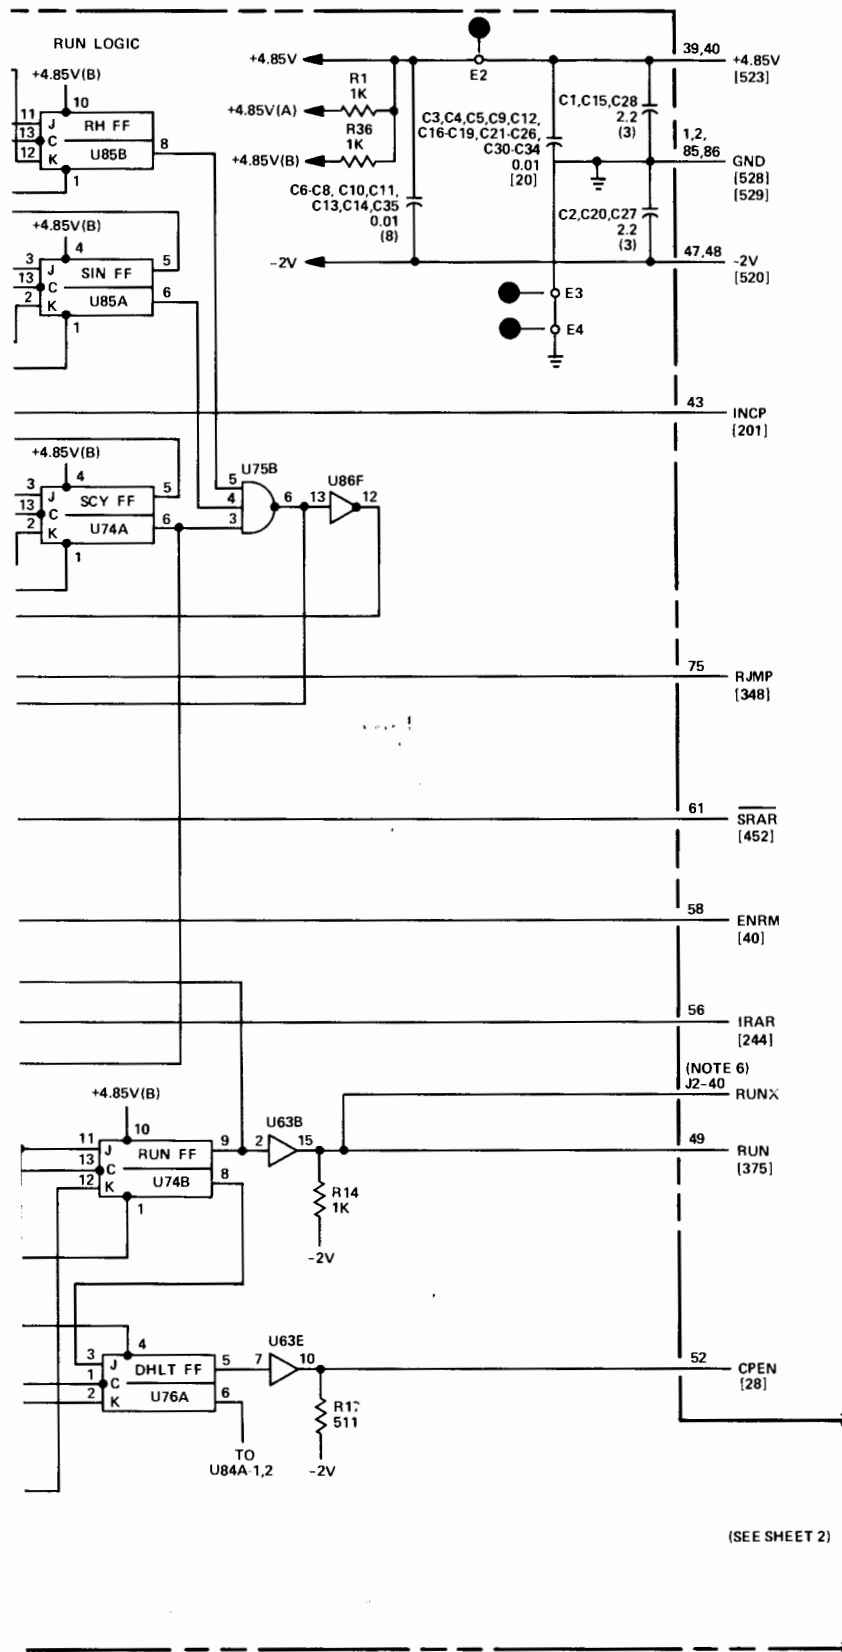



Figure 4-4. A1 Timing and Control Card, Parts Location and Schematic Diagrams (Sheet 1 of 2)

IENT P-REG LOGIC

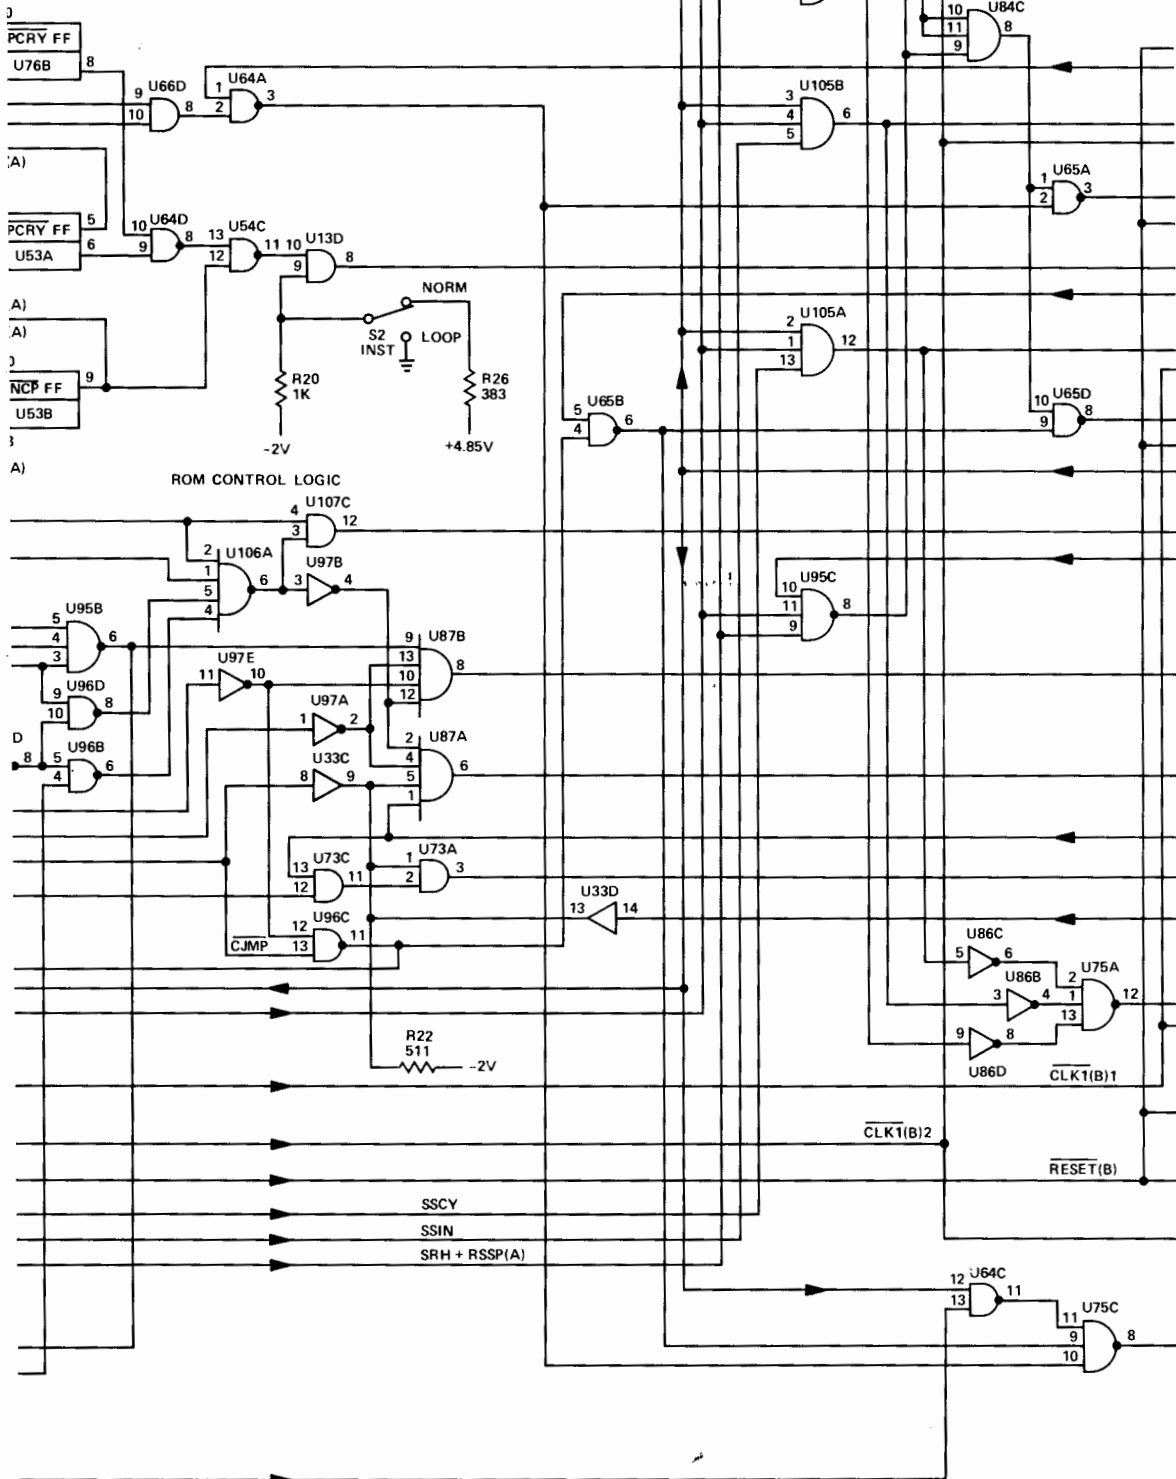

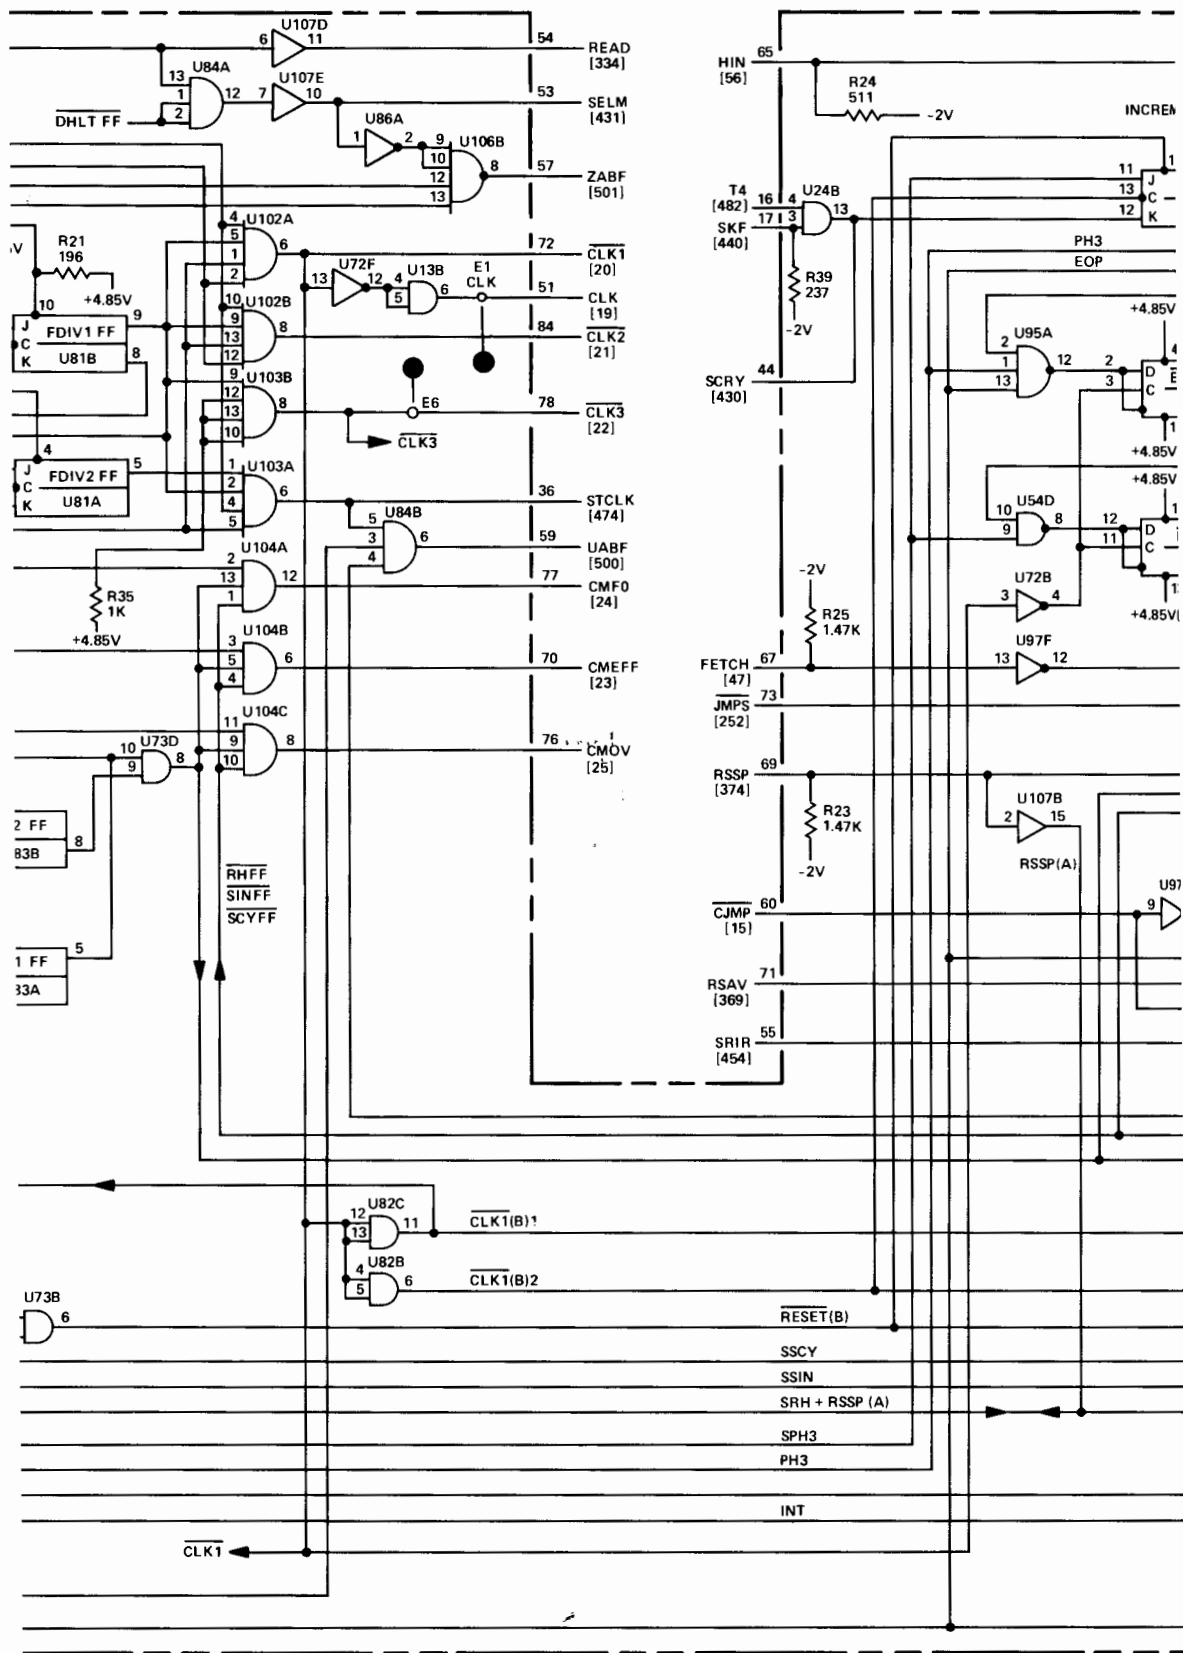

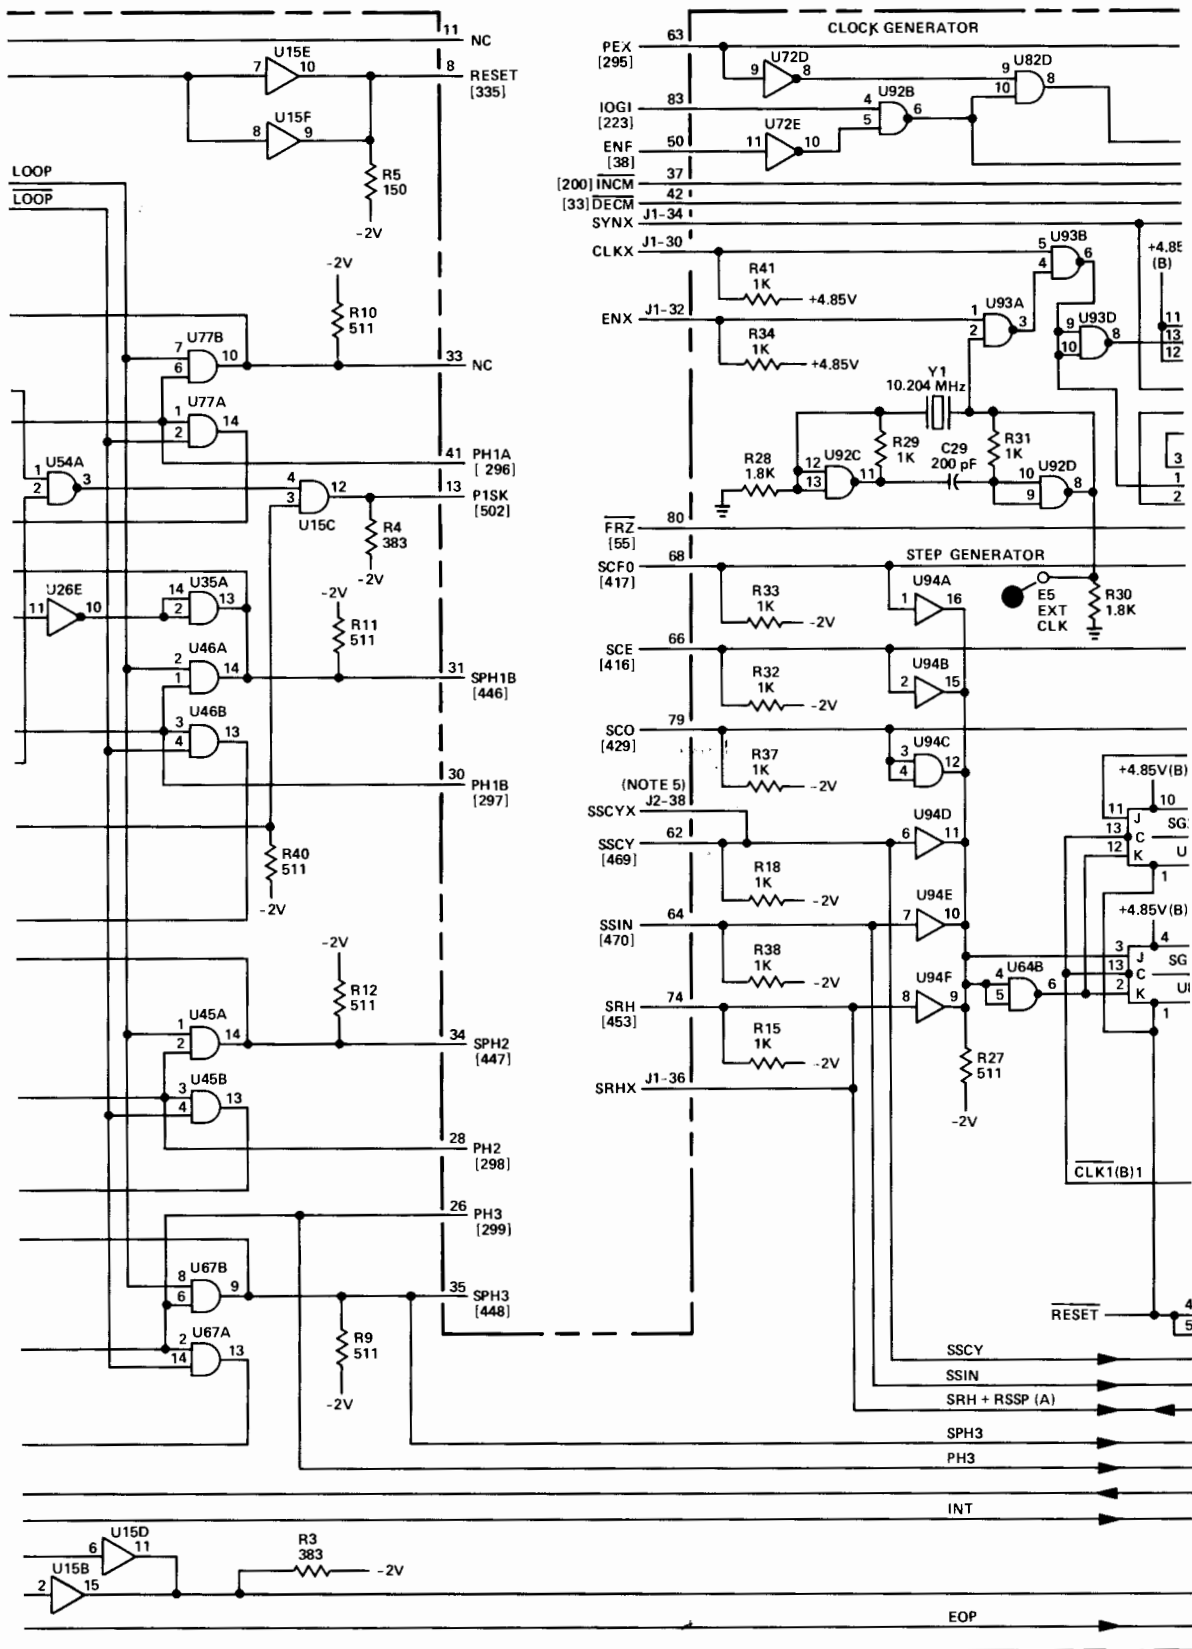

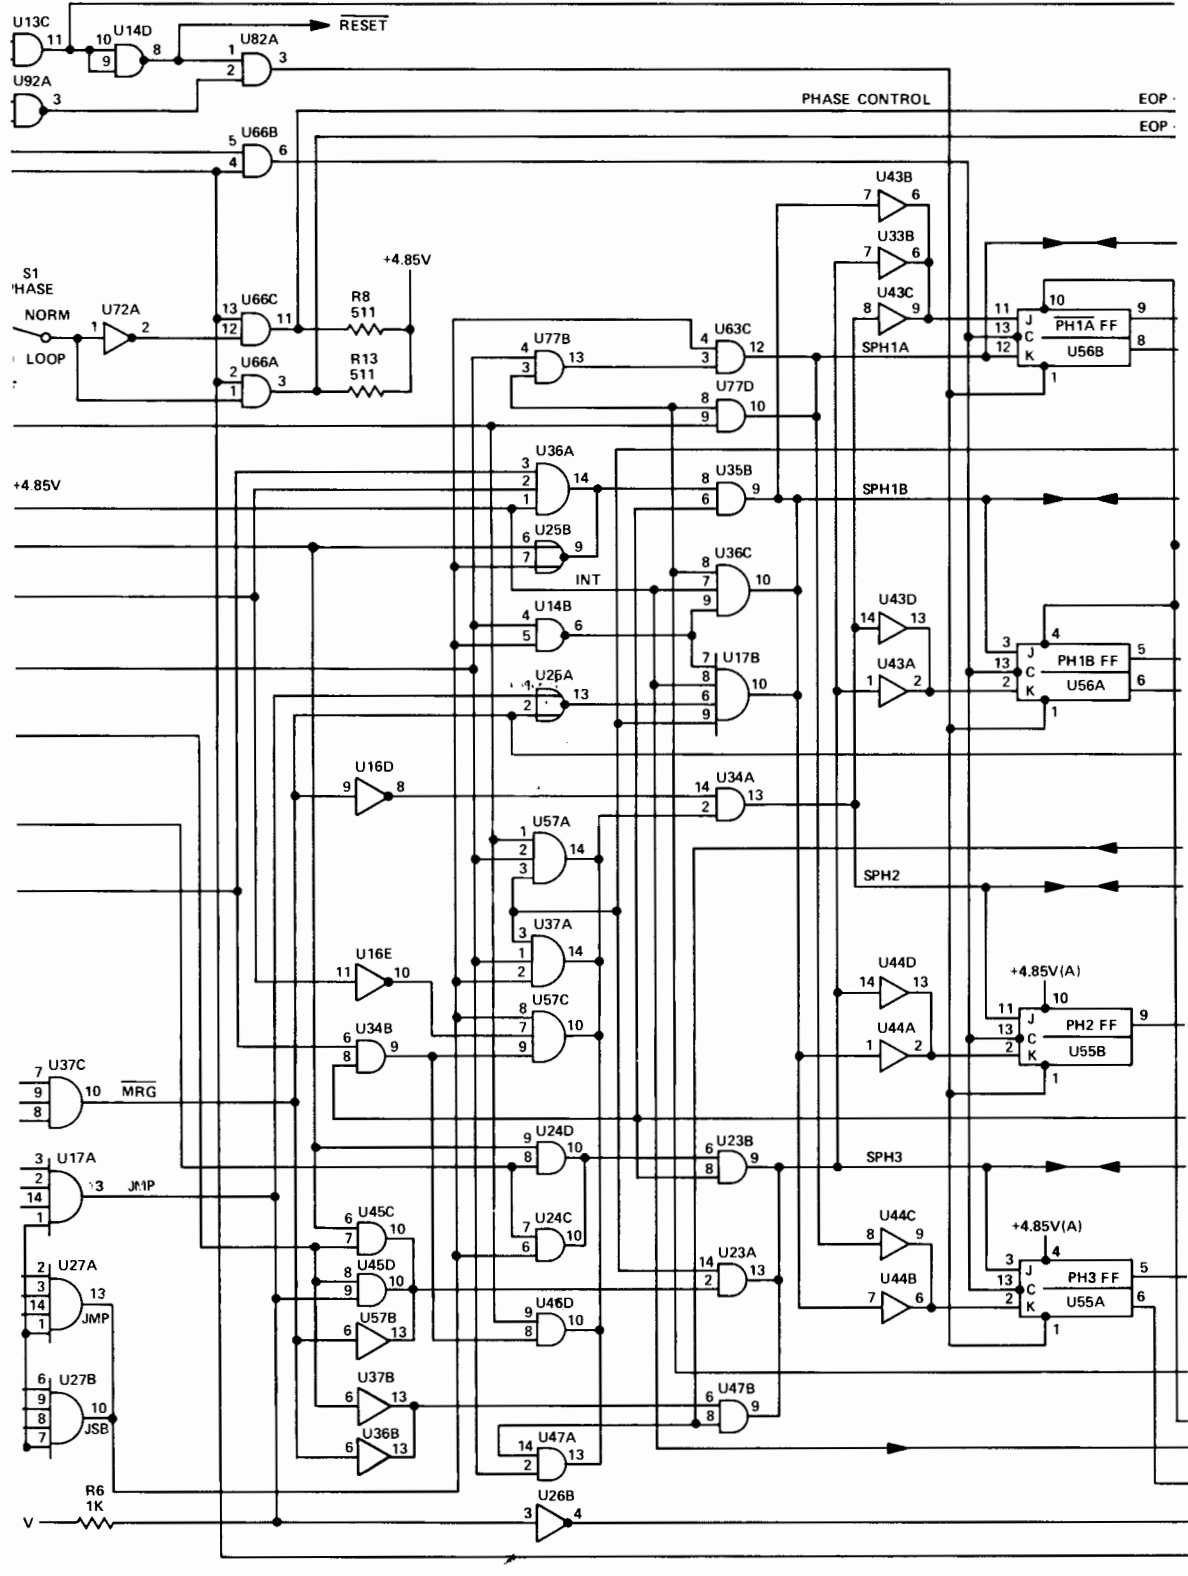


FF DEFINITIONS


DHLT	= DELAYED HALT
EPCRY	= "NOT" ENABLE P-REGISTER CARRY
FDIV1	= FREQUENCY DIVIDE 1
FDIV2	= FREQUENCY DIVIDE 2
INCP	= "NOT" INCREMENT P
PCRY	= "NOT" P-REGISTER CARRY
PH1A	= "NOT" PHASE 1A
PH1B	= PHASE 1B
PH2	= PHASE 2
PH3	= PHASE 3
RH	= RUN-HALT
SCY	= SINGLE CYCLE
SG1	= STEP GENERATOR 1
SG2	= STEP GENERATOR 2
SIN	= SINGLE INSTRUCTION

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. U11, U12, U21, U22, U31, U32, U41, U42, U51, U52, U61, AND U62 ARE NOT ON CARD REV. 1116. THESE AUXILIARY ROM CIRCUITS WILL BE AVAILABLE AS A FUTURE OPTION.
5. CONNECTION IS TO J1-38 ON CARD REV. 1116.
6. CONNECTION IS TO J1-40 ON CARD REV. 1116.

TIMING AND CONTROL CARD (02100-60014, REV. 1116, 1144)

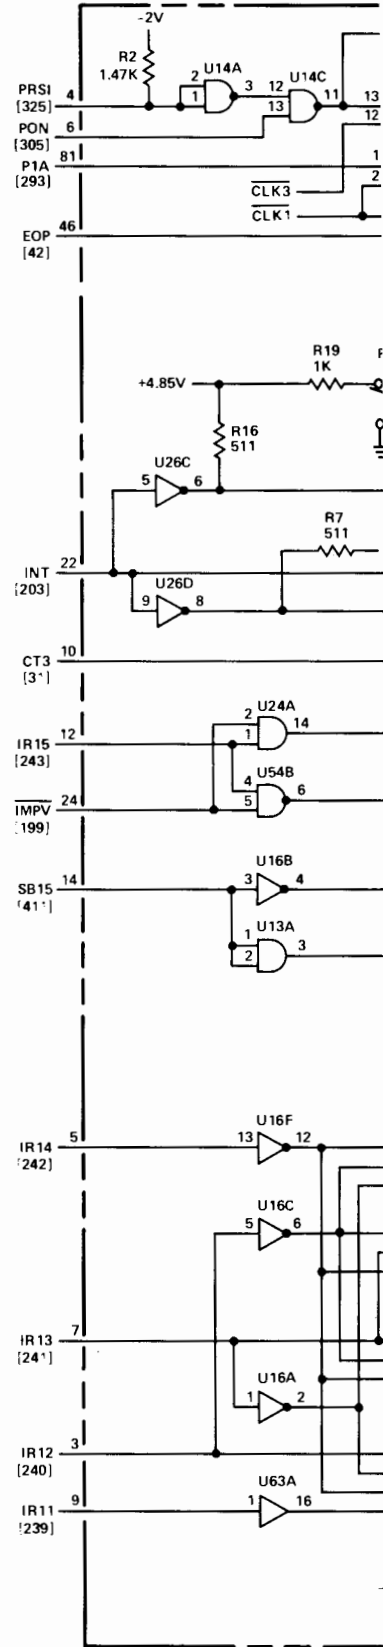

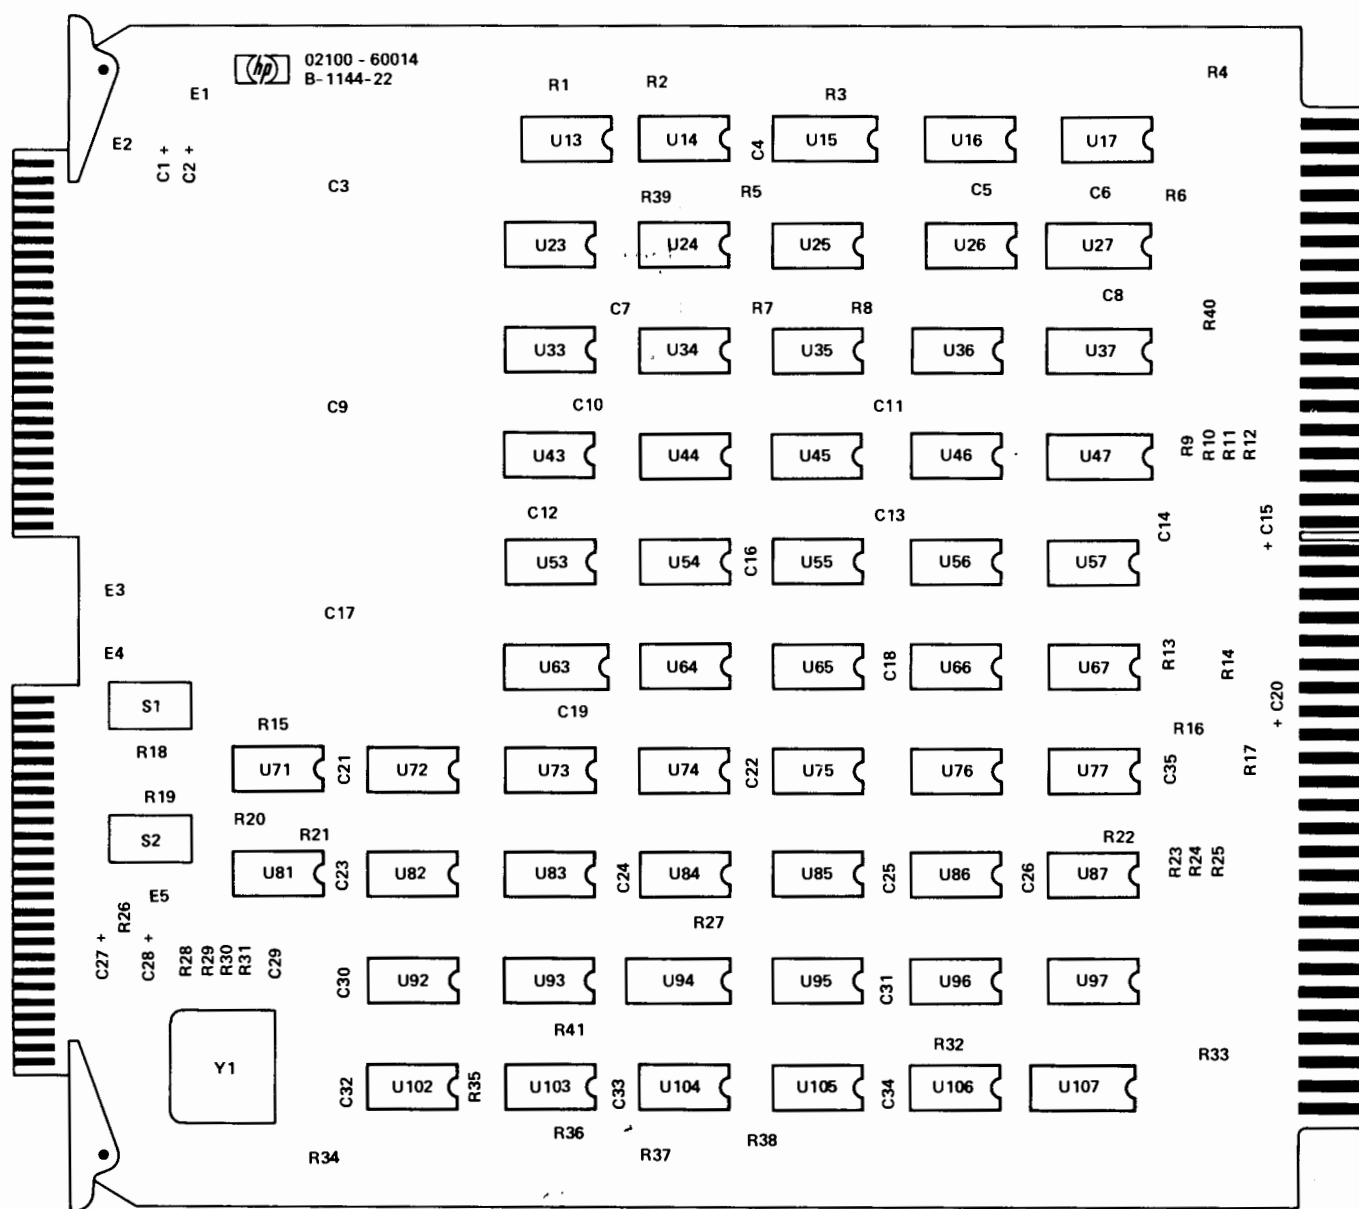

See table 4-3 for replaceable parts.


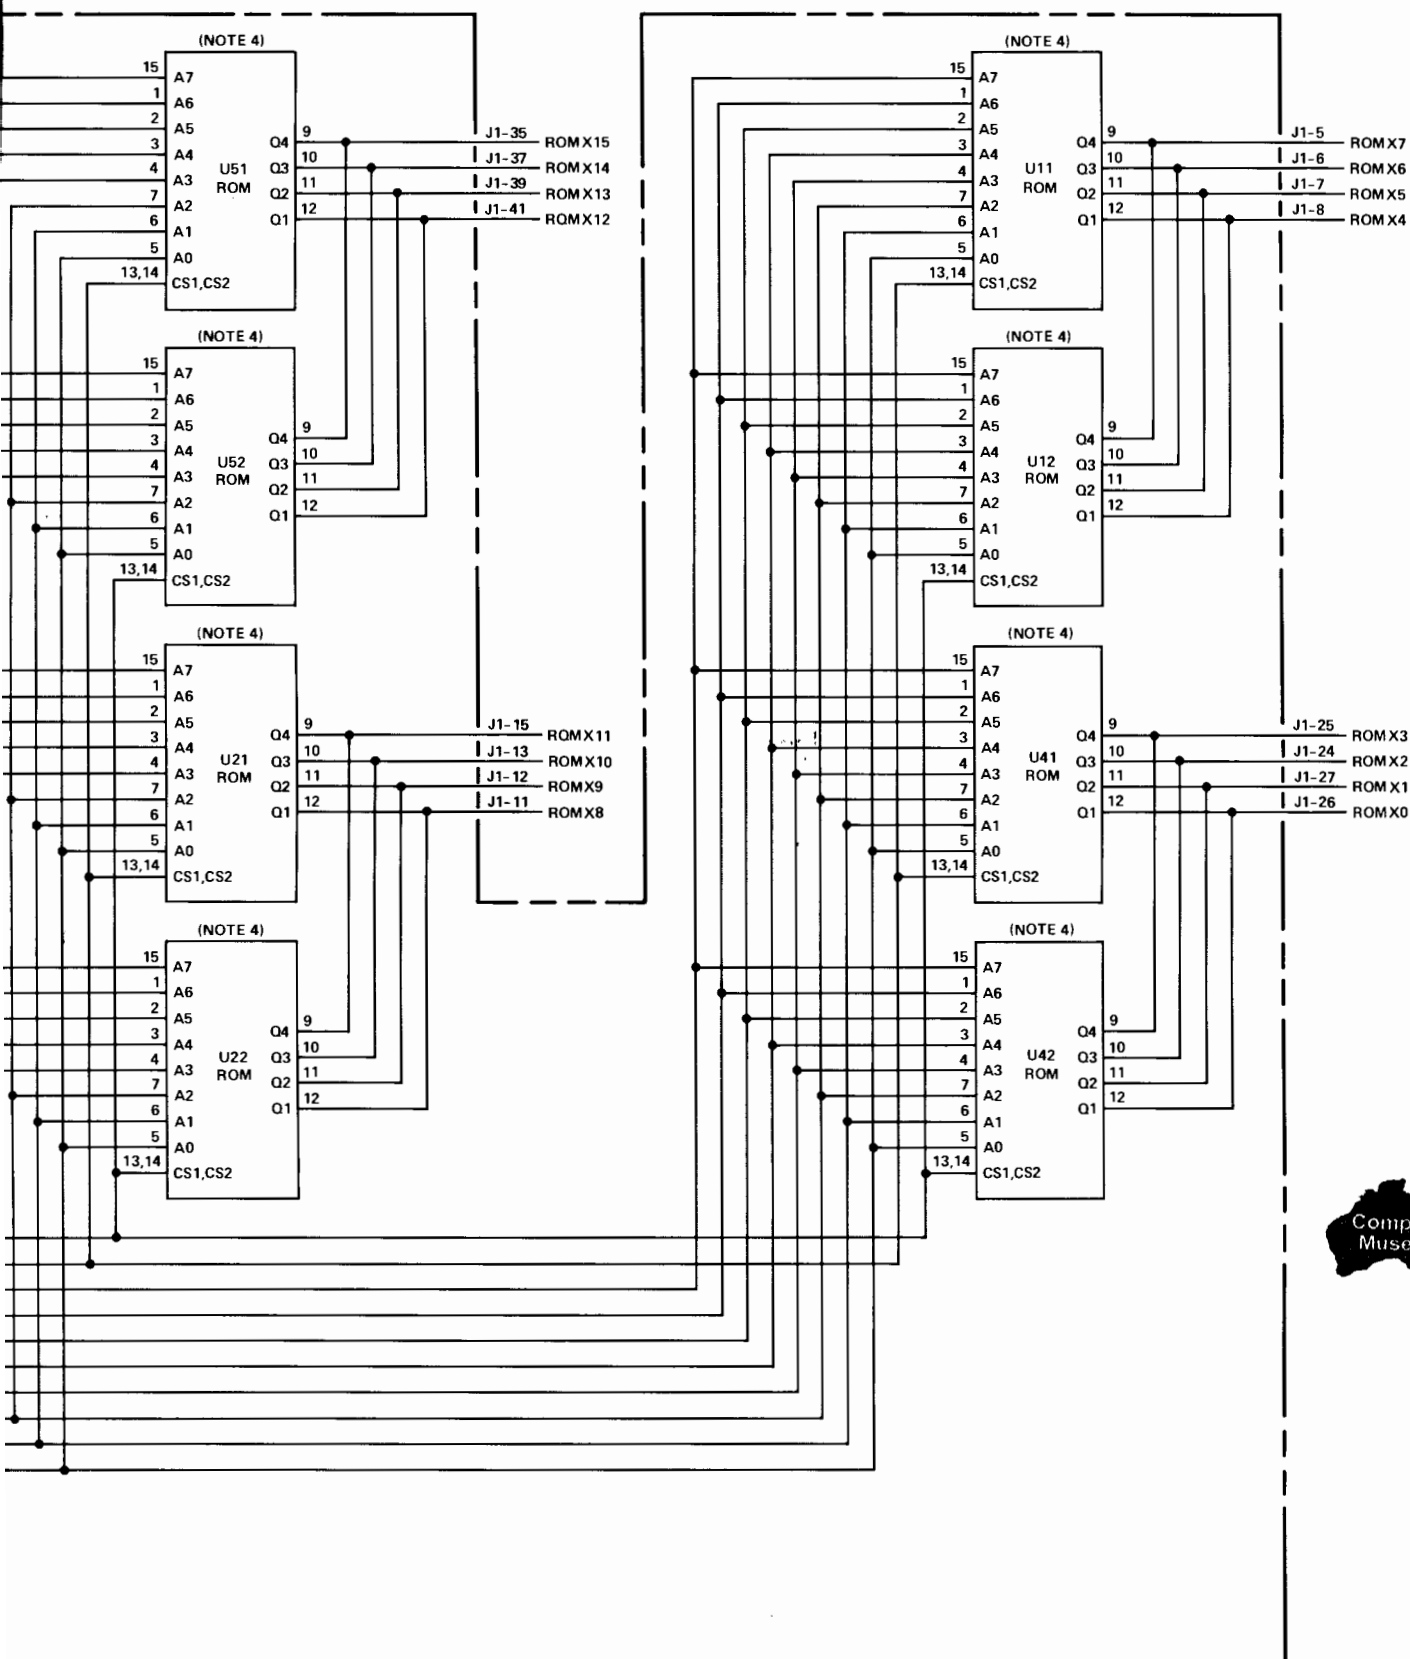


Figure 4-4. A1 Timing and Control Card, Parts Location and Schematic Diagrams (Sheet 2 of 2)

TIMING AND CONTROL CARD
(02100-60014, REV. 1116, 1144)

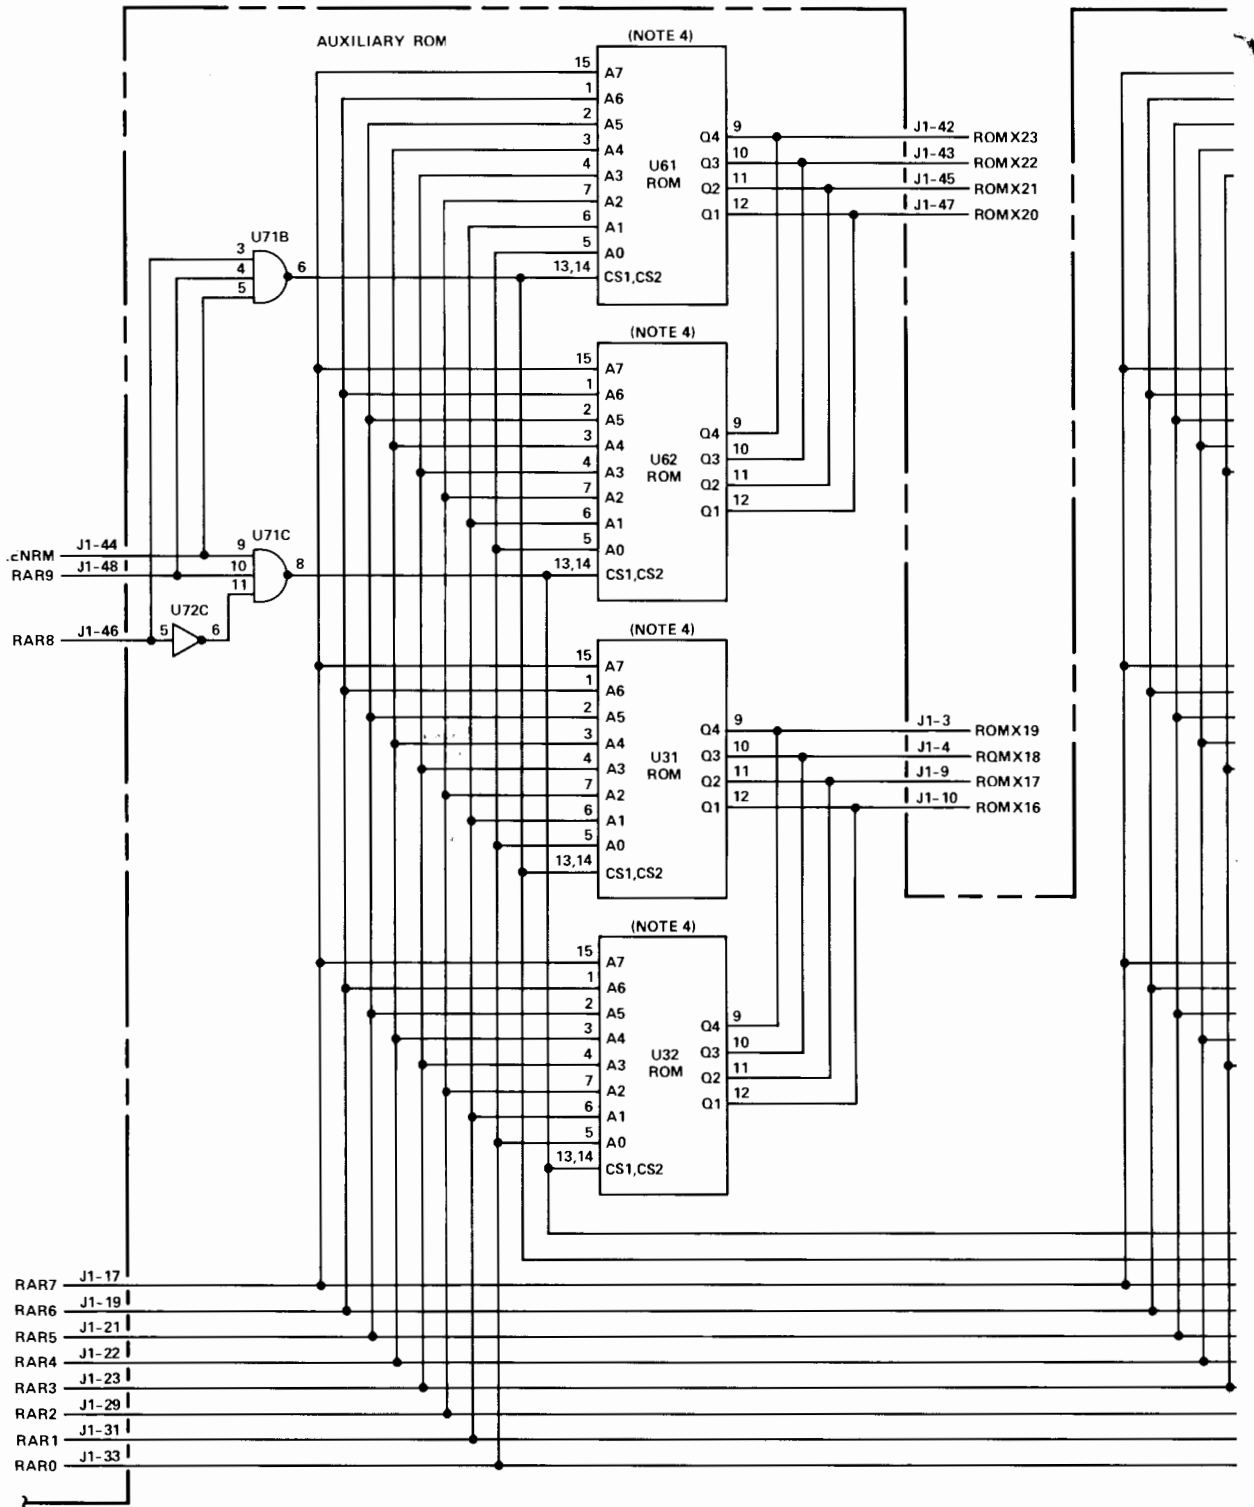

(SEE SHEET 1)

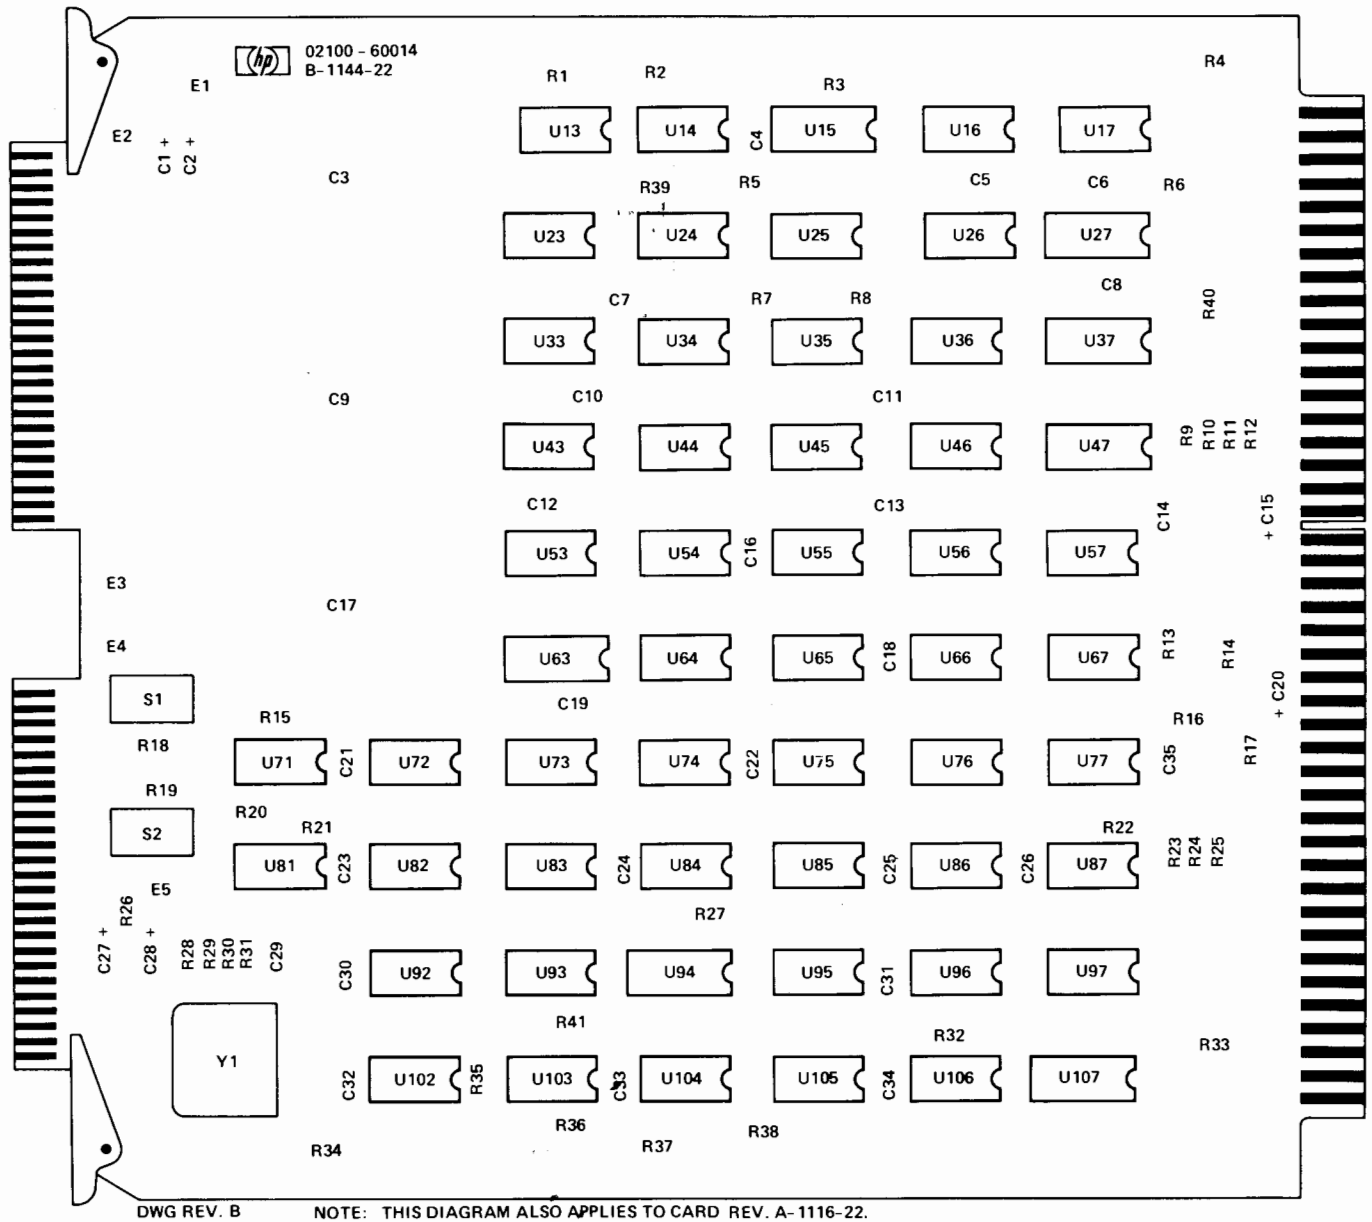


Table 4-4. A2 ROM Control Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2	02100-60002	1	ROM CONTROL CARD	28480	02100-60002
A2C1	0160-2055	26	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C2	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C3	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C4	0180-0197	6	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2C5	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C15	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2C16	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C19	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2C20	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C21	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C22	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C25	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2C26	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2C27	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C28	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C29	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C30	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C31	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2C32	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A2E1	0360-0294	3	TERMINAL: SOLDER POINT	28480	0360-0294
A2E2	0360-0294		TERMINAL: SOLDER POINT	28480	0360-0294
A2E3	0360-0294		TERMINAL: SOLDER POINT	28480	0360-0294
A2R1	0698-7229	42	R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R2	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R3	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R4	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R5	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R6	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R7	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R8	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R9	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R10	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R11	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R12	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R13	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R14	0698-7226	2	R:FXD FLM 393 OHM 2% 1/8W	28480	0698-7226
A2R15	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R16	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R17	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R18	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R19	0698-7236	6	R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A2R20	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A2R21	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R22	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R23	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R24	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R25	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R26	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A2R27	0698-7225	15	R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R28	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R29	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R30	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R31	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R32	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R33	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R34	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R35	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R36	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R37	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R38	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225

Table 4-4. A2 ROM Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2R39	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R40	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R41	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R42	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R43	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R44	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R45	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R46	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R47	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A2R48	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R49	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R50	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R51	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R52	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R53	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A2R54	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R55	0698-7220	1	R:FXD FLM 215 OHM 2% 1/8W	28480	0698-7220
A2R56	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R57	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R58	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R59	0698-7234	1	R:FXD FLM 825 OHM 2% 1/8W	28480	0698-7234
A2R60	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R61	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R62	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R63	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R64	0698-7221	2	R:FXD FLM 237 OHM 2% 1/8W	28480	0698-7221
A2R65	0698-7221		R:FXD FLM 237 OHM 2% 1/8W	28480	0698-7221
A2R66	0698-7216	1	R:FXD MET FLM 147 OHM 2% 1/8W	28480	0698-7216
A2R67	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
A2R68	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A2R69	0698-7222	3	R:FXD FLM 261 OHM 2% 1/8W	28480	0698-7222
A2R70	0698-7222		R:FXD FLM 261 OHM 2% 1/8W	28480	0698-7222
A2R71	0698-7222		R:FXD FLM 261 OHM 2% 1/8W	28480	0698-7222
A2R72	0698-7226		R:FXD FLM 383 OHM 2% 1/8W	28480	0698-7226
A2R73(NOTE 1)	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A2U13	1820-0971	4	IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A2U14	1820-0966	12	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U15	1816-2062	1	IC:ROM # 062	28480	1816-2062
A2U16	1816-2065	1	IC:ROM # 065	28480	1816-2065
A2U17	1816-2064	1	IC:ROM # 064	28480	1816-2064
A2U23	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A2U24	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U25(NOTE 2)	1816-0056	1	IC:ROM 4 X 256	28480	1816-0056
A2U26(NOTE 2)	1816-0059	1	IC:ROM 4 X 256	28480	1816-0059
A2U27(NOTE 2)	1816-0058	1	IC:ROM 4 X 256	28480	1816-0058
A2U31	1820-0953	4	IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A2U32	1820-0231	3	IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A2U34	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U35(NOTE 2)	1816-0055	1	IC:ROM 4 X 256	28480	1816-0055
A2U36	1820-0437	2	IC:TTL QUAD D F/F	04713	MC4015P
A2U37(NOTE 2)	1816-0054	1	IC:ROM 4 X 256	28480	1816-0054
A2U41	1820-0379	4	IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A2U42	1820-0301	3	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A2U44	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U45	1816-2061	1	IC:ROM # 061	28480	1816-2061
A2U46	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P
A2U47	1816-2060	1	IC:ROM # 060	28480	1816-2060
A2U51	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A2U52	1820-0231		IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A2U53	1820-0231		IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A2U54	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A2U55	1816-2063	1	IC:ROM # 063	28480	1816-2063
A2U56	1820-0376	1	IC:TTL DUAL 4-INPT NAND POWER GATE	01295	SN74H74N
A2U57	1820-0374	1	IC:TTL HS DUAL 4-INPT AND GATE	01295	SN74H21N
A2U61	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A2U62	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A2U63	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U64	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U65(NOTE 2)	1816-0057	1	IC:ROM 4 X 256	28480	1816-0057
A2U66	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U67	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A2U71	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A2U72	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U73	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U74	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X

NOTES: 1. First used on card rev. 1144.
2. Used only on cards having floating-point capability.

Table 4-4. A2 ROM Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2U75	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U76	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U77	1820-0186	4	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A2U81	1820-0141	2	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A2U82	1820-0370	2	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A2U83	1820-0965	2	IC:CTL QUAD 1-INPT AND GATE	07263	U6A996579X
A2U84	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A2U85	1820-0424	1	IC:TTL HS HEX INVERTER	04713	SN74H04N
A2U86	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A2U87	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A2U91	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A2U92	1820-0371	1	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A2U93	1820-0953		IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A2U94	1820-0965		IC:CTL QUAD 1-INPT AND GATE	07263	U6A996579X
A2U95	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A2U96	1820-0372	1	IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A2U97	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A2U101	1820-0953		IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A2U102	1820-0953		IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A2U103	1820-0954	1	IC:CTL DUAL 4-INPT AND GATE	07263	U6A995479X
A2U104	1820-0239	1	IC:TTL QUAD 2-INPT NOR GATE	28480	1820-0239
A2U105	1820-0485	1	IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A2U106(NOTE 3)	1820-0451	1	IC:TTL DUAL J-K F/F	04713	MC3062P
A2U107	1820-0187	1	IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X
A2W1	8159-0005	5	JUMPER WIRE	28480	8159-0005
A2W2	8159-0005		JUMPER WIRE	28480	8159-0005
A2W3	8159-0005		JUMPER WIRE	28480	8159-0005
A2W4	8159-0005		JUMPER WIRE	28480	8159-0005
A2W6	8159-0005		JUMPER WIRE	28480	8159-0005
A2XU25	1200-0767	6	SOCKET:IC 16 CONTACT DUAL LINE	91506	316AG5D-3R
A2XU26	1200-0767		SOCKET:IC 16 CONTACT DUAL LINE	91506	316AG5D-3R
A2XU27	1200-0767		SOCKET:IC 16 CONTACT DUAL LINE	91506	316AG5D-3R
A2XU35	1200-0767		SOCKET:IC 16 CONTACT DUAL LINE	91506	316AG5D-3R
A2XU37	1200-0767		SOCKET:IC 16 CONTACT DUAL LINE	91506	316AG5D-3R
A2XU65	1200-0767		SOCKET:IC 16 CONTACT DUAL LINE	91506	316AG5D-3R
(NOTE 4)	0340-0788	6	INSULATOR:IC SOCKET	91506	316-6P1

NOTES: 3. Part no. 1820-0695 used on some cards; the two parts are interchangeable.

4. One 0340-0788 insulator is used with each 1200-0767 socket.

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE		

A2						
37	A2-64	A3-68*				
40	A1-58*	A2-63				
42	A1-46	A2-65*	A4-55			
232	A2-72	A6-62*	A7-26			
233	A2-66	A6-70*	A7-29			
234	A2-84	A6-69*	A8-41			
235	A2-75	A6-75*	A8-38			
236	A2-76	A6-57*	A8-45			
237	A2-61	A4-54	A6-63*	A8-65		
238	A2-83	A3-17	A6-59*			
239	A1-9	A2-80	A3-71	A4-24	A6-58*	A8-63
240	A1-3	A2-79	A6-44*			
241	A1-7	A2-78	A6-49*			
242	A1-5	A2-81	A6-46*			
243	A1-12	A2-82	A6-45*			
244	A1-56*	A2-52				
254	A2-69	A4-18*				
335	A1-8*	A2-70	A4-30	A6-9	A7-20	A8-75
	A107-82					
346	A2-58	A4-82*				
347	A2-57	A3-12*				
348	A1-75*	A2-56				
369	A1-71	A2-41	A4-17*			
441	A2-77*	A3-84	A4-81	A6-6*		
446	A1-31*	A2-74				
447	A1-34*	A2-73	A8-72			
448	A1-35*	A2-55				
452	A1-61*	A2-60				
474	A1-36*	A2-59	A3-18			




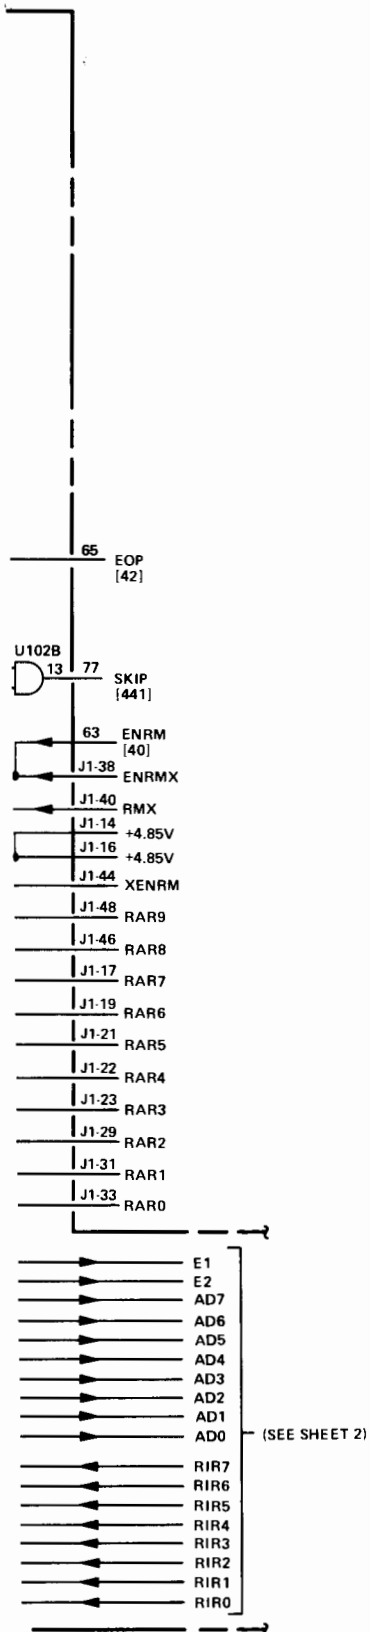



Figure 4-5. A2 ROM Control Card, Parts Location and Schematic Diagrams (Sheet 1 of 2)

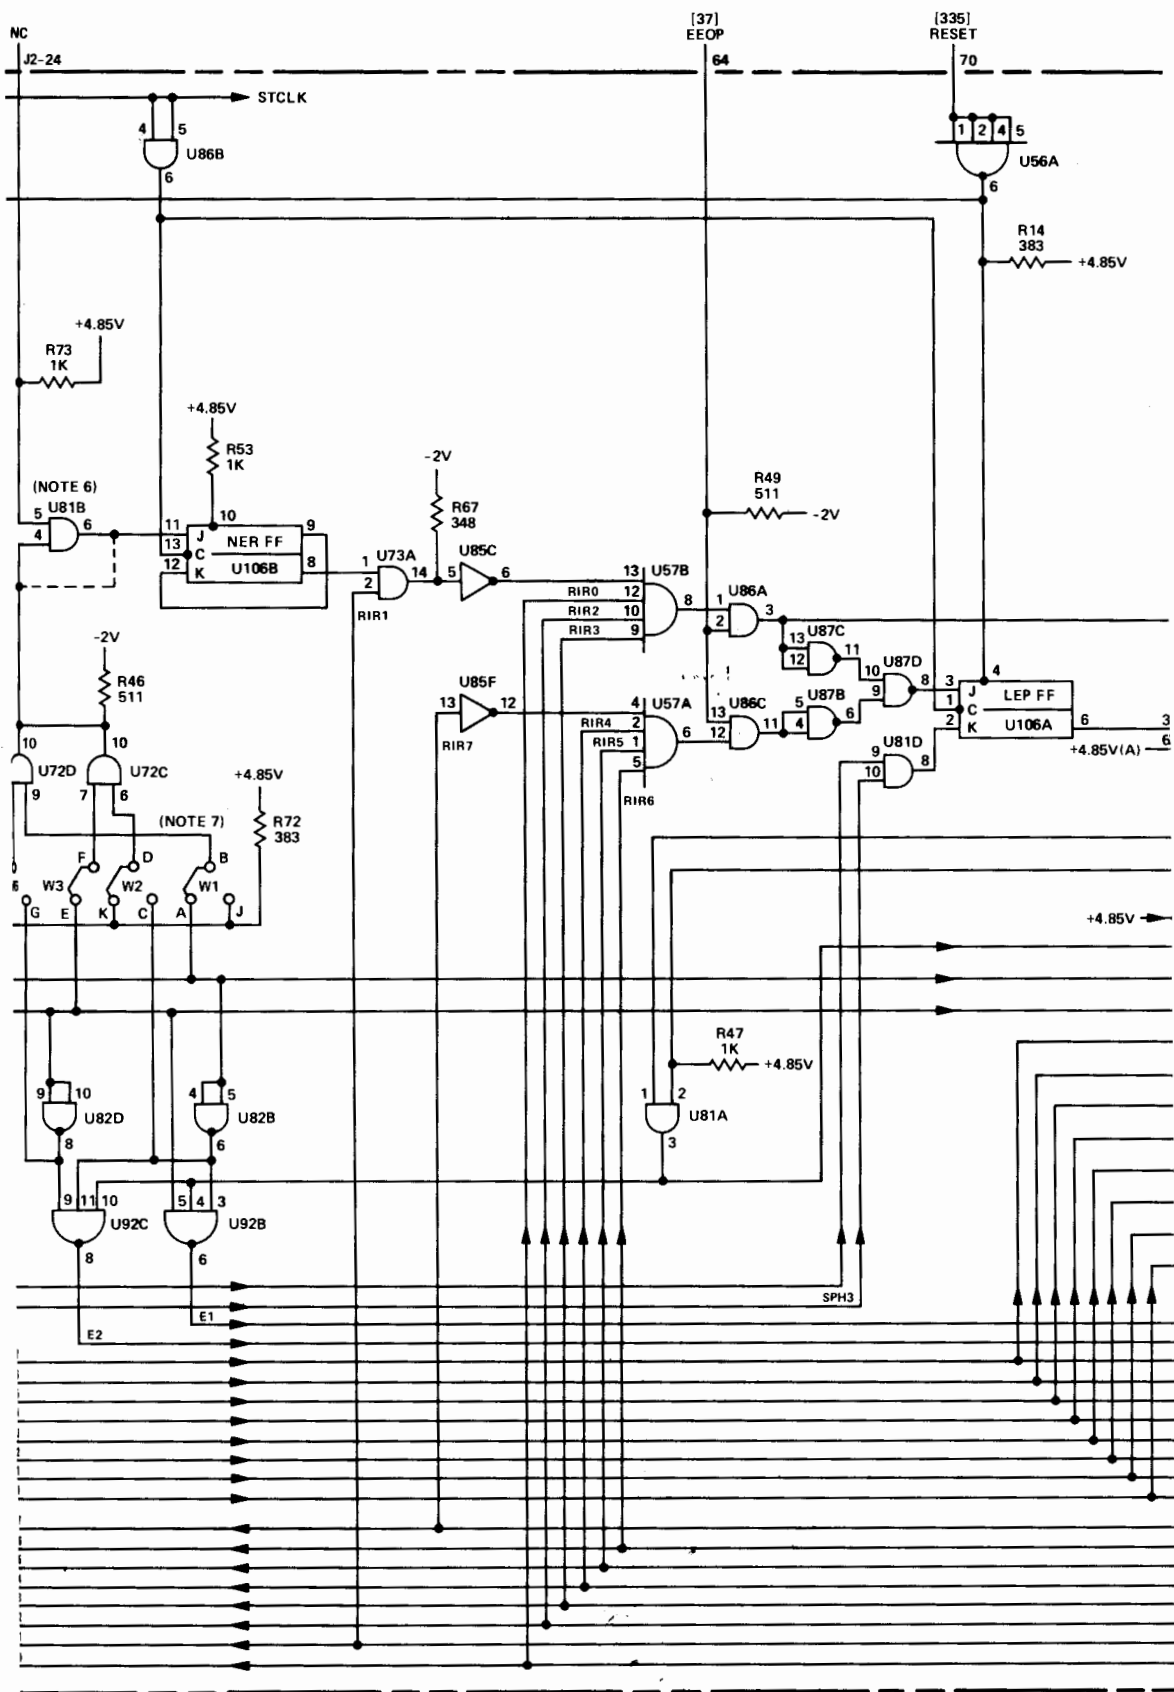

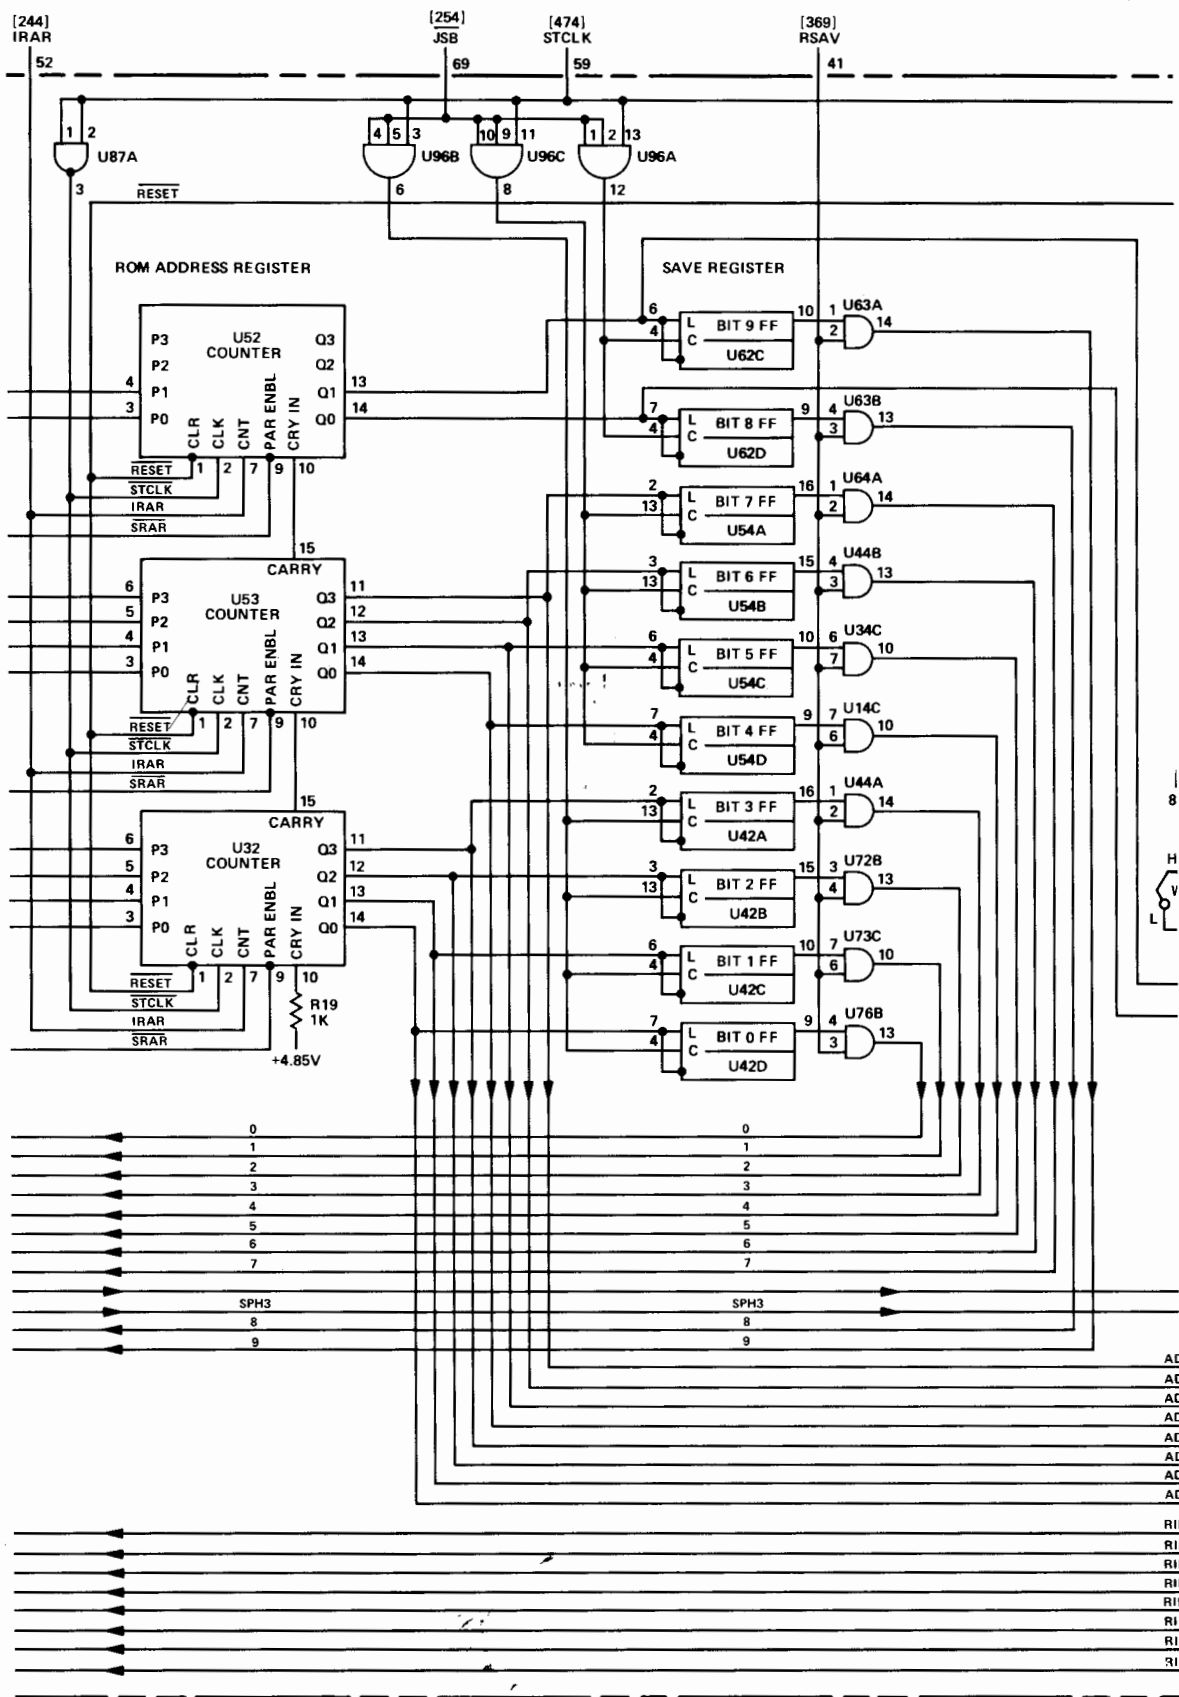

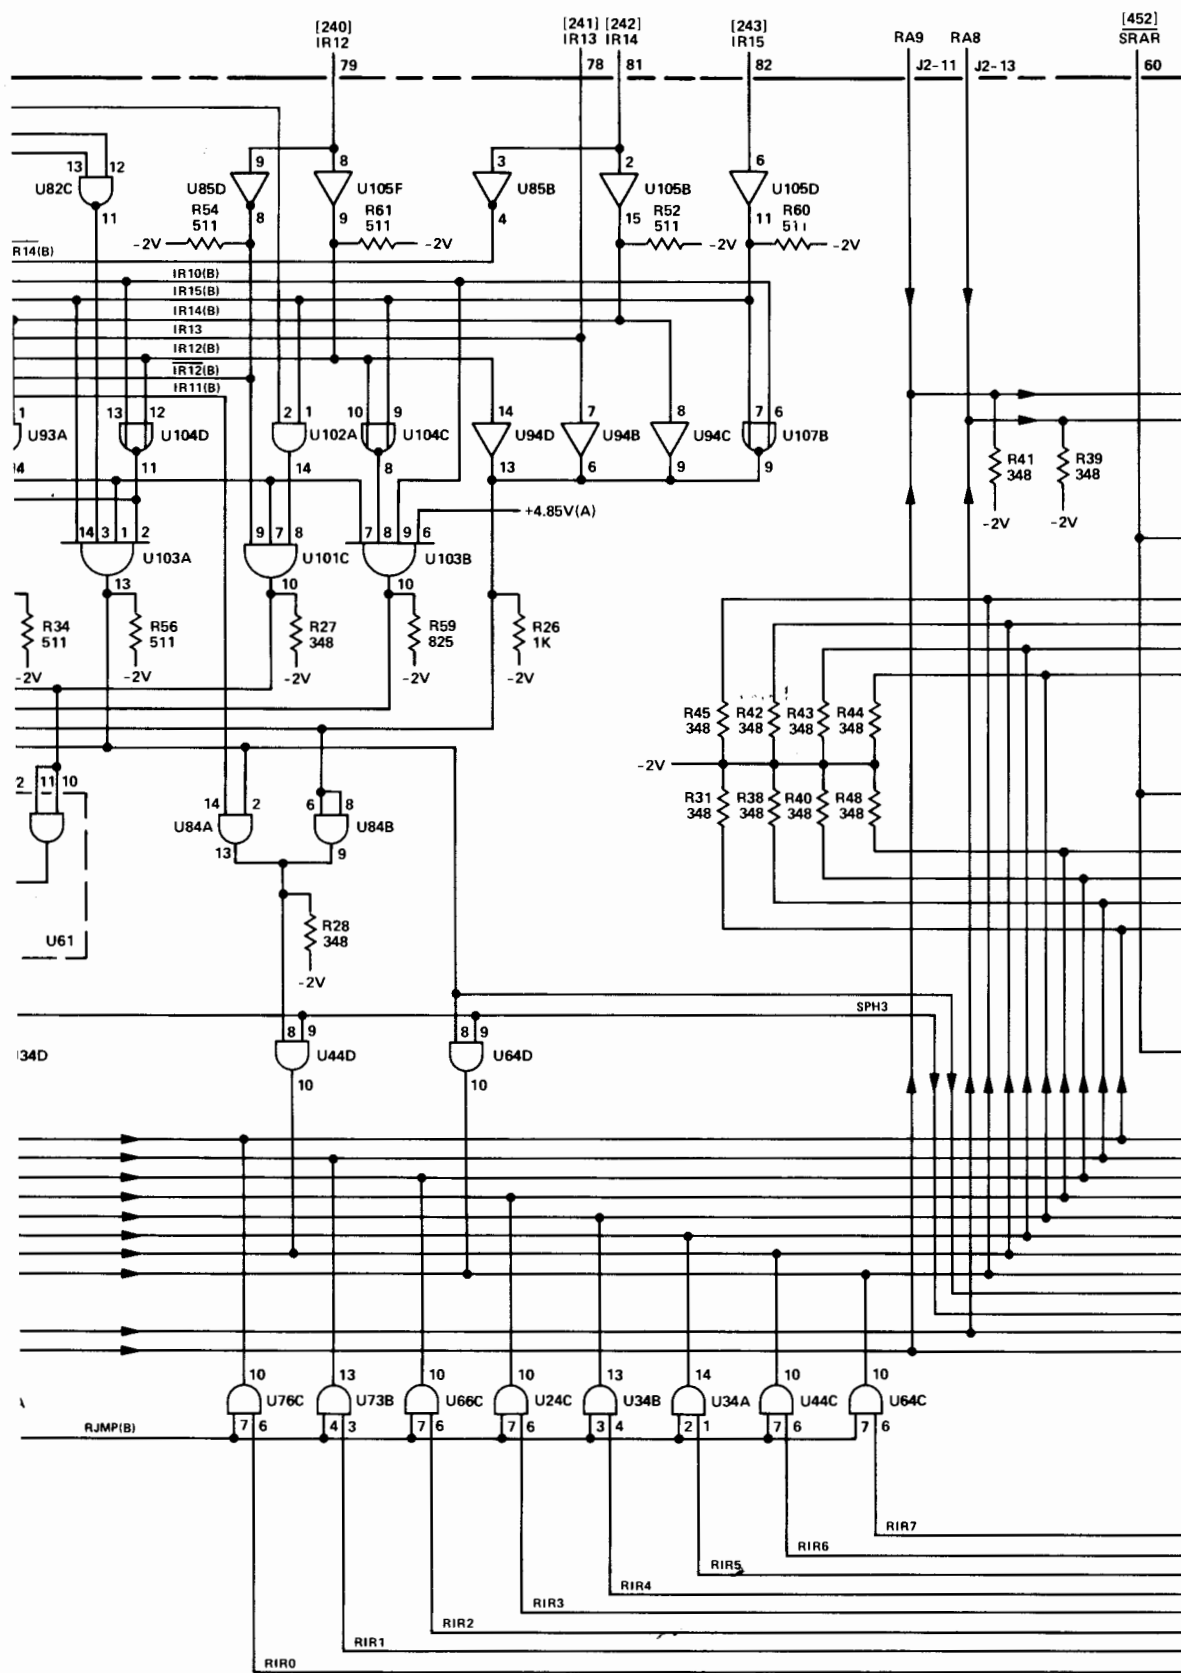

ROM ADDRESS MAP

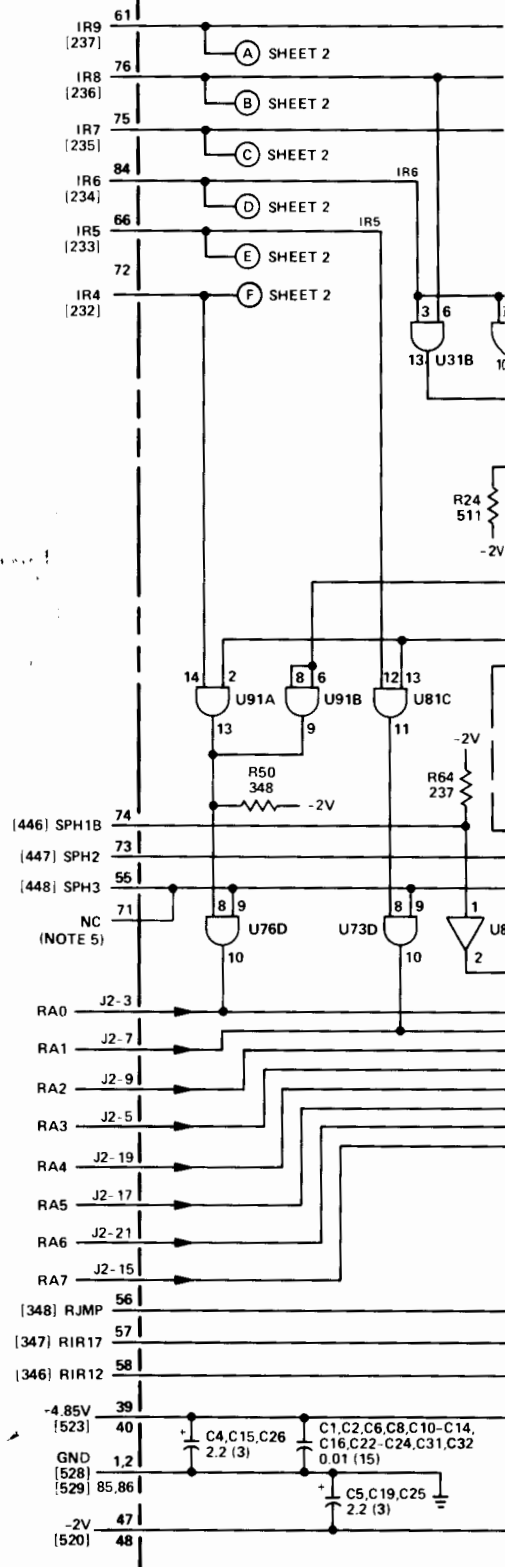


FF DEFINITIONS

LEP = LEGAL ENTRY POINT

NER = NON-EXTENT ROM

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. U25, U26, U27, U35, U37, AND U65 ARE NOT USED ON STANDARD ROM CONTROL CARD. THESE ICs ARE USED FOR FLOATING POINT CAPABILITY OR OTHER FUTURE OPTIONS.
5. PRINTED CIRCUIT TRACE TO PIN 71 NOT ON CARD REV. 1106.
6. R73 AND U81B NOT USED ON REVISIONS PRIOR TO 1144; EARLIER REVISIONS CONNECTED AS SHOWN BY DASHED LINE.
7. JUMPER CONNECTIONS FOR VARIOUS MODULE CONFIGURATIONS:

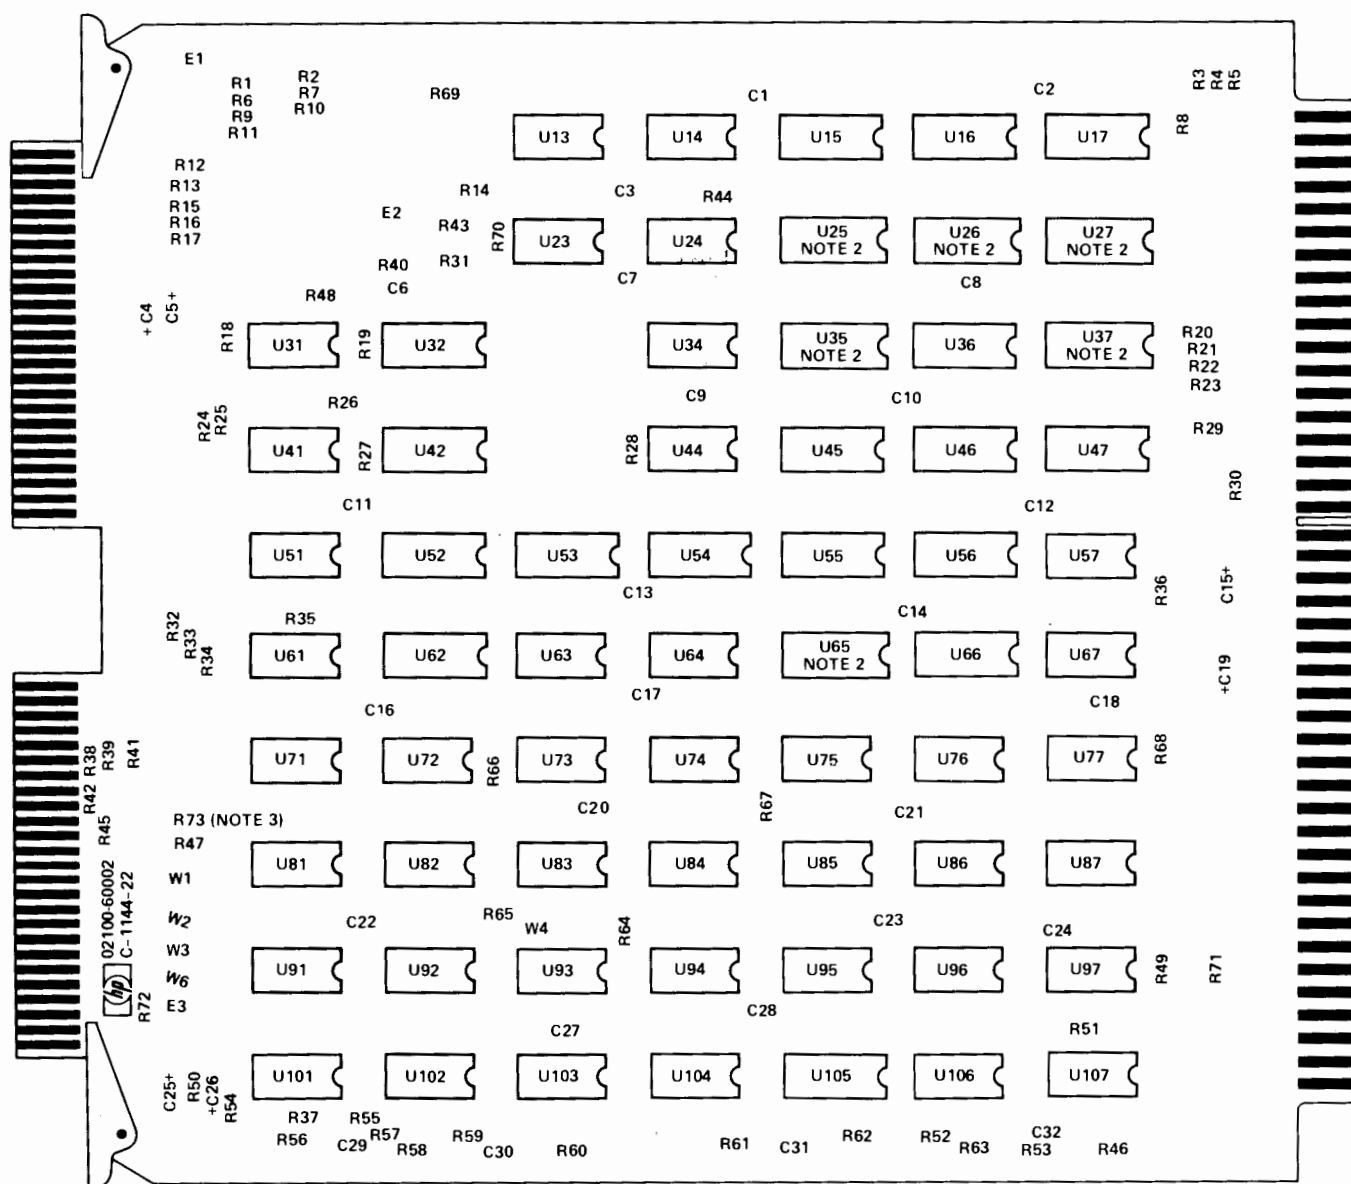

See table 4-4 for replaceable parts.

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE			
A2						
4	A2-68	A3-16*				
16	A2-51	A3-13*				
29	A2-38	A3-15*				
202	A2-67	A3-3	A4-7*			
228	A2-42	A6-35*	A7-68			
229	A2-45	A6-36*	A7-63			
230	A2-26	A6-56*	A7-67			
231	A2-50	A6-34*	A7-30			
338	A2-32*	A6-16				
339	A2-33*	A6-14				
340	A2-28*	A6-10				
341	A2-27*	A6-12				
342	A2-22*	A6-22				
343	A2-23*	A6-23				
344	A2-16*	A6-24				
345	A2-17*	A6-26				
349	A2-15*	A3-57				
350	A2-18*	A3-58				
351	A2-24*	A3-54				
352	A2-25*	A3-51				
353	A2-37*	A4-78				
354	A2-36*	A4-77				
355	A2-35*	A4-80				
356	A2-34*	A4-79				
357	A2-14*	A4-43				
358	A2-13*	A3-11				
359	A2-8*	A3-14				
360	A2-7*	A3-4				
361	A2-3*	A3-9				
362	A2-4*	A4-37				
363	A2-5*	A4-34				
364	A2-6*	A4-29				
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*
	A107-16					
397	A2-44*	A5-80*	A6-60	A7-61*	A8-4*	A9-14*
	A107-18					
398	A2-29*	A5-76*	A6-61	A7-60*	A8-5*	A9-18*
	A107-12					
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*
	A107-14					
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*
	A107-29					
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*
	A107-38					
402	A2-12*	A5-49*	A6-67	A8-9*	A9-20*	A107-20
403	A2-9*	A5-43*	A6-66	A8-24*	A9-11*	A107-22
404	A2-53*	A5-31*	A6-52	A8-14*	A9-5*	A107-44
405	A2-54*	A5-32*	A6-51	A8-18*	A9-3*	A107-46
406	A2-43*	A5-29*	A6-54	A8-19*	A9-9*	A107-34
407	A2-49*	A5-30*	A6-53	A8-20*	A9-7*	A107-36
408	A2-31*	A5-10*	A6-38	A8-21*	A9-8*	A107-51
409	A2-21*	A5-8*	A6-37	A8-22*	A9-4*	A107-42
410	A2-10*	A5-6*	A6-42	A8-23*	A9-6*	A107-50
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*
	A9-84*	A107-52				
454	A1-55	A2-62	A3-42	A4-52	A6-76*	




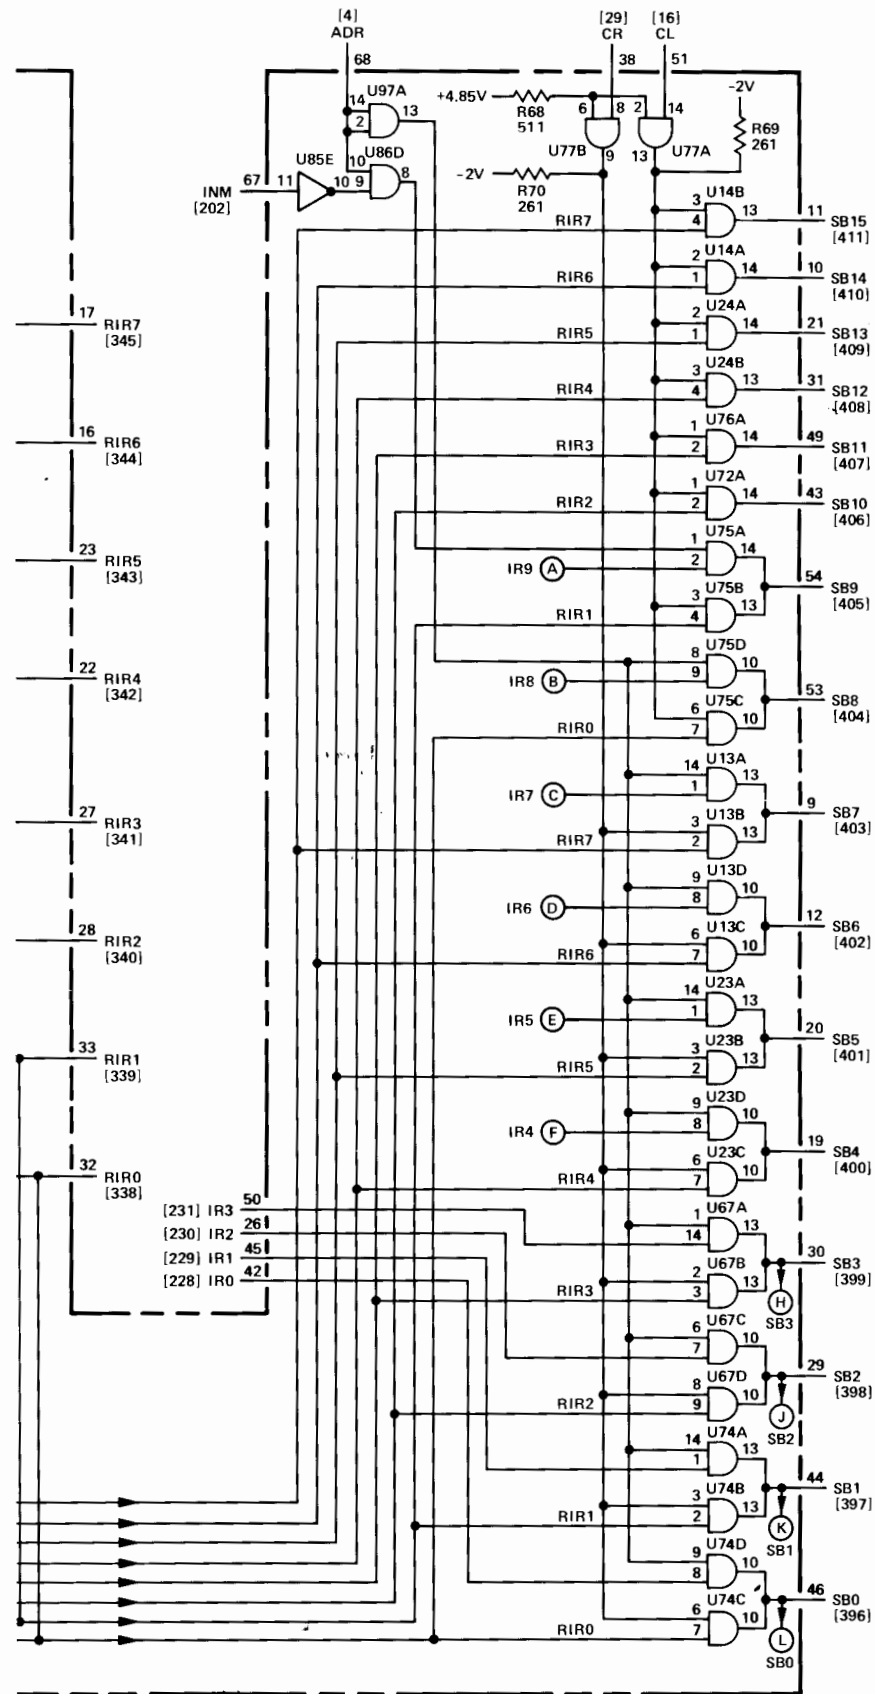



Figure 4-5. A2 ROM Control Card, Parts Location and Schematic Diagrams (Sheet 2 of 2)

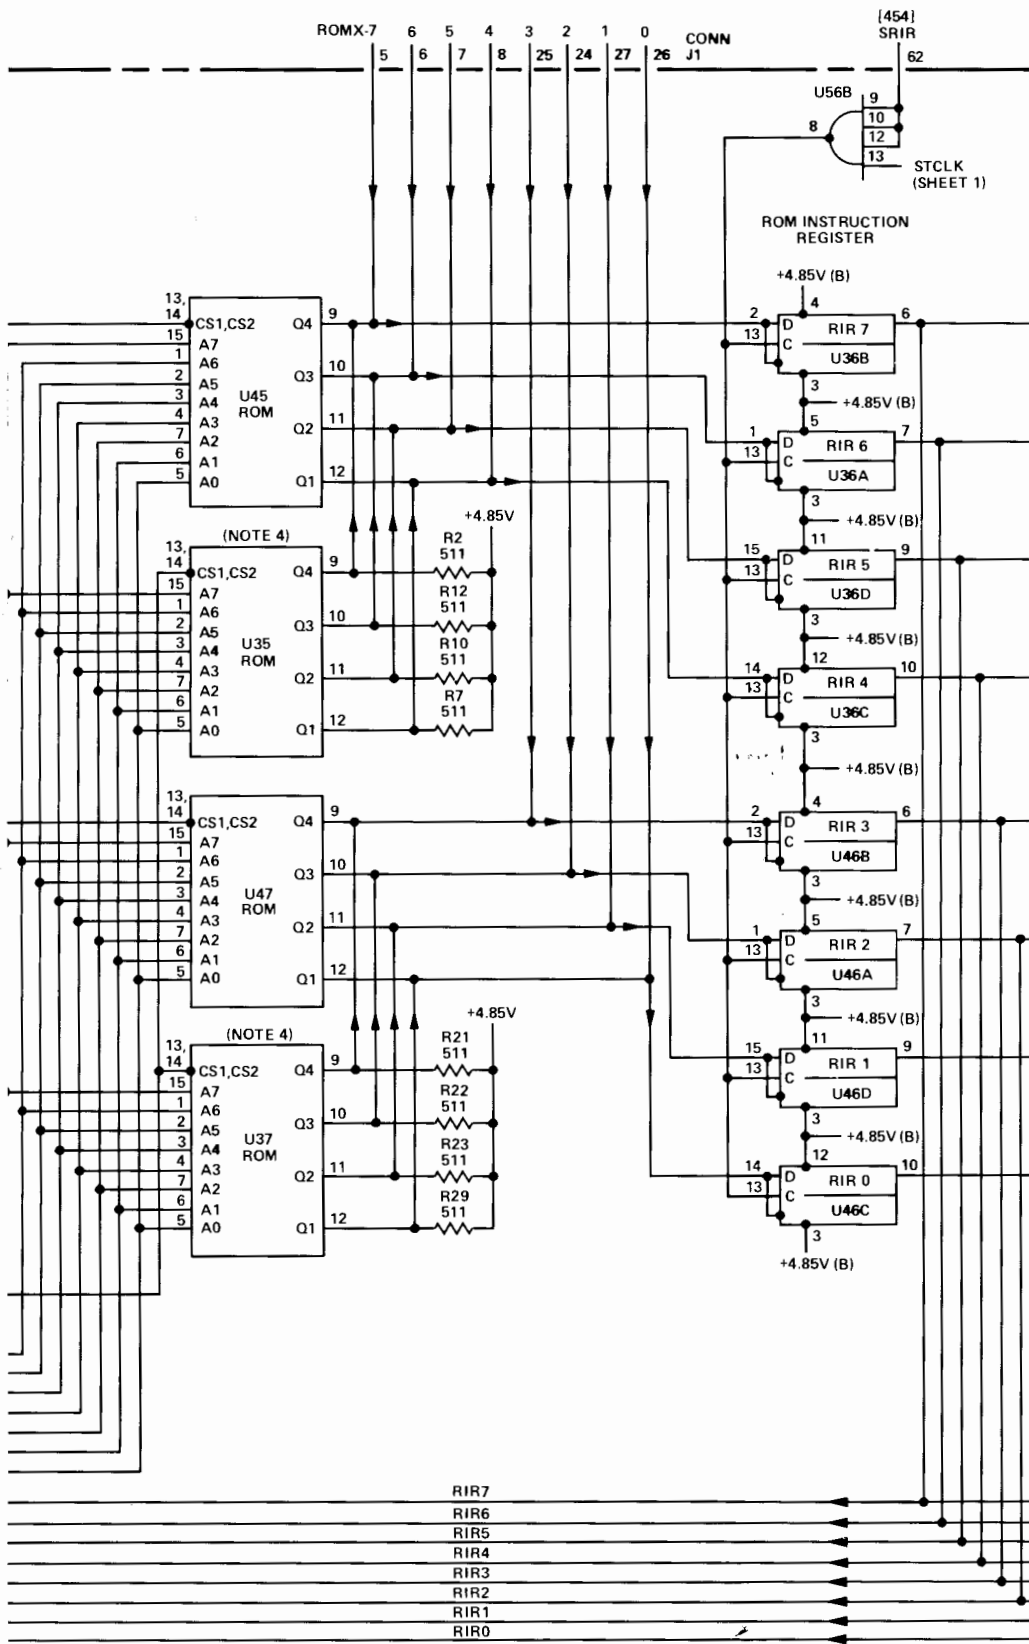

DNN

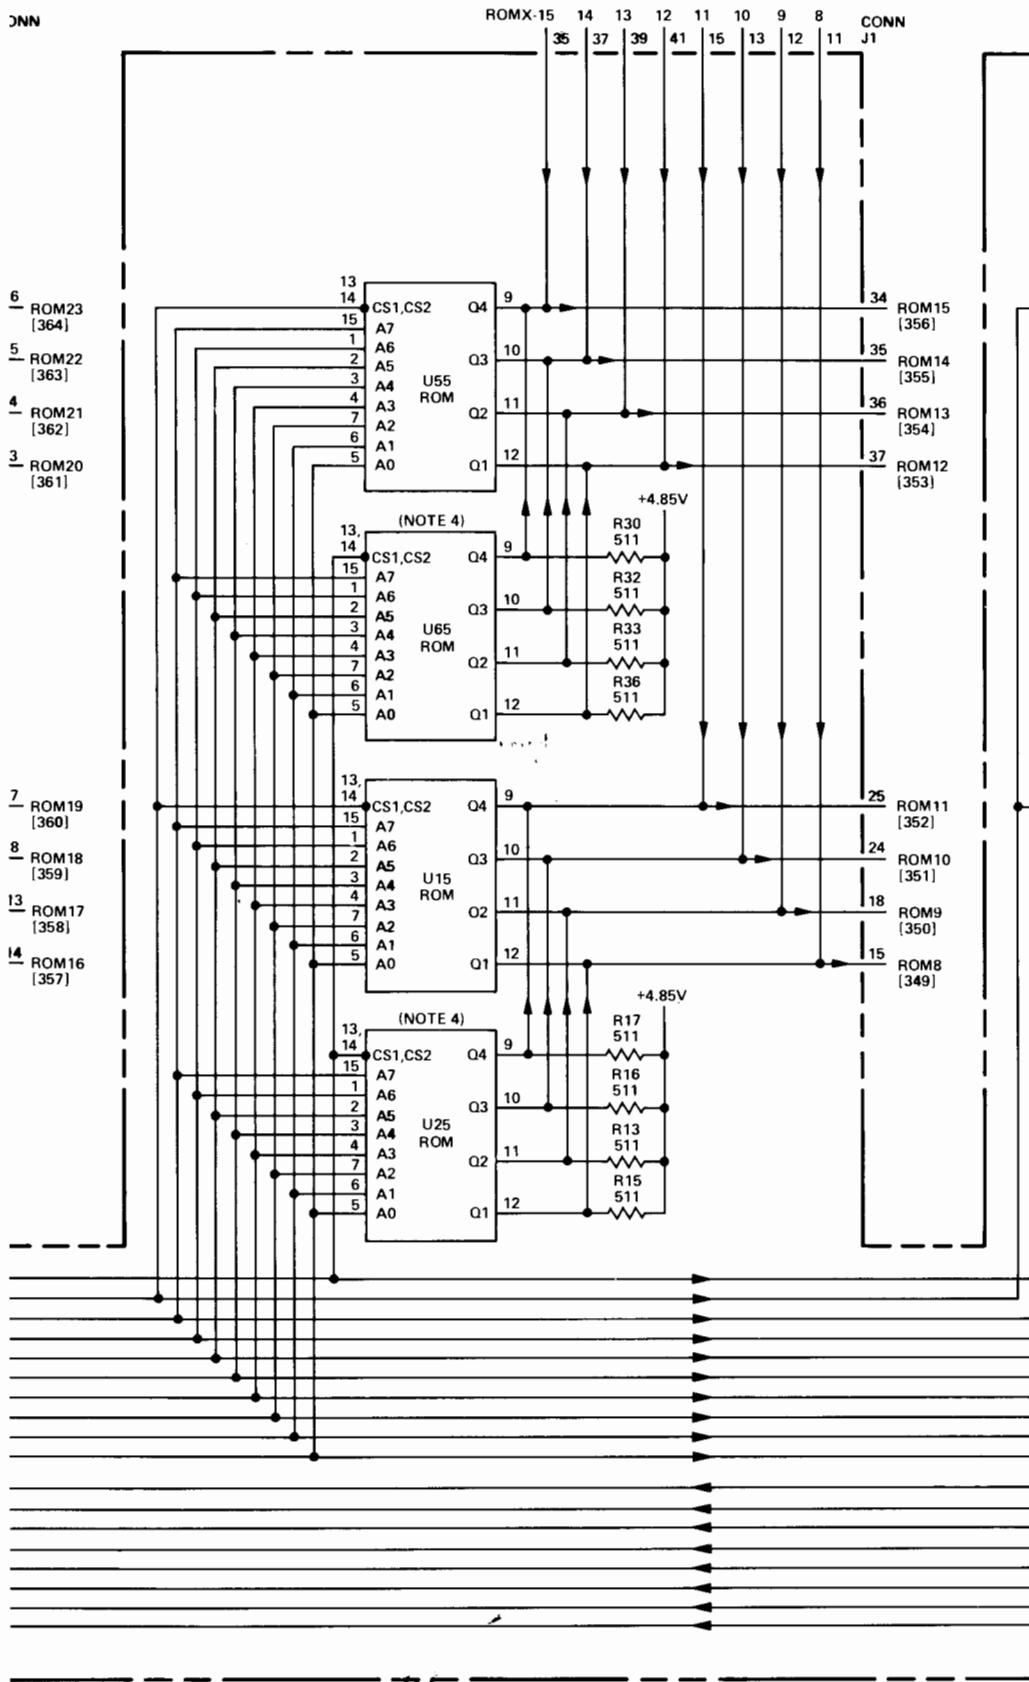

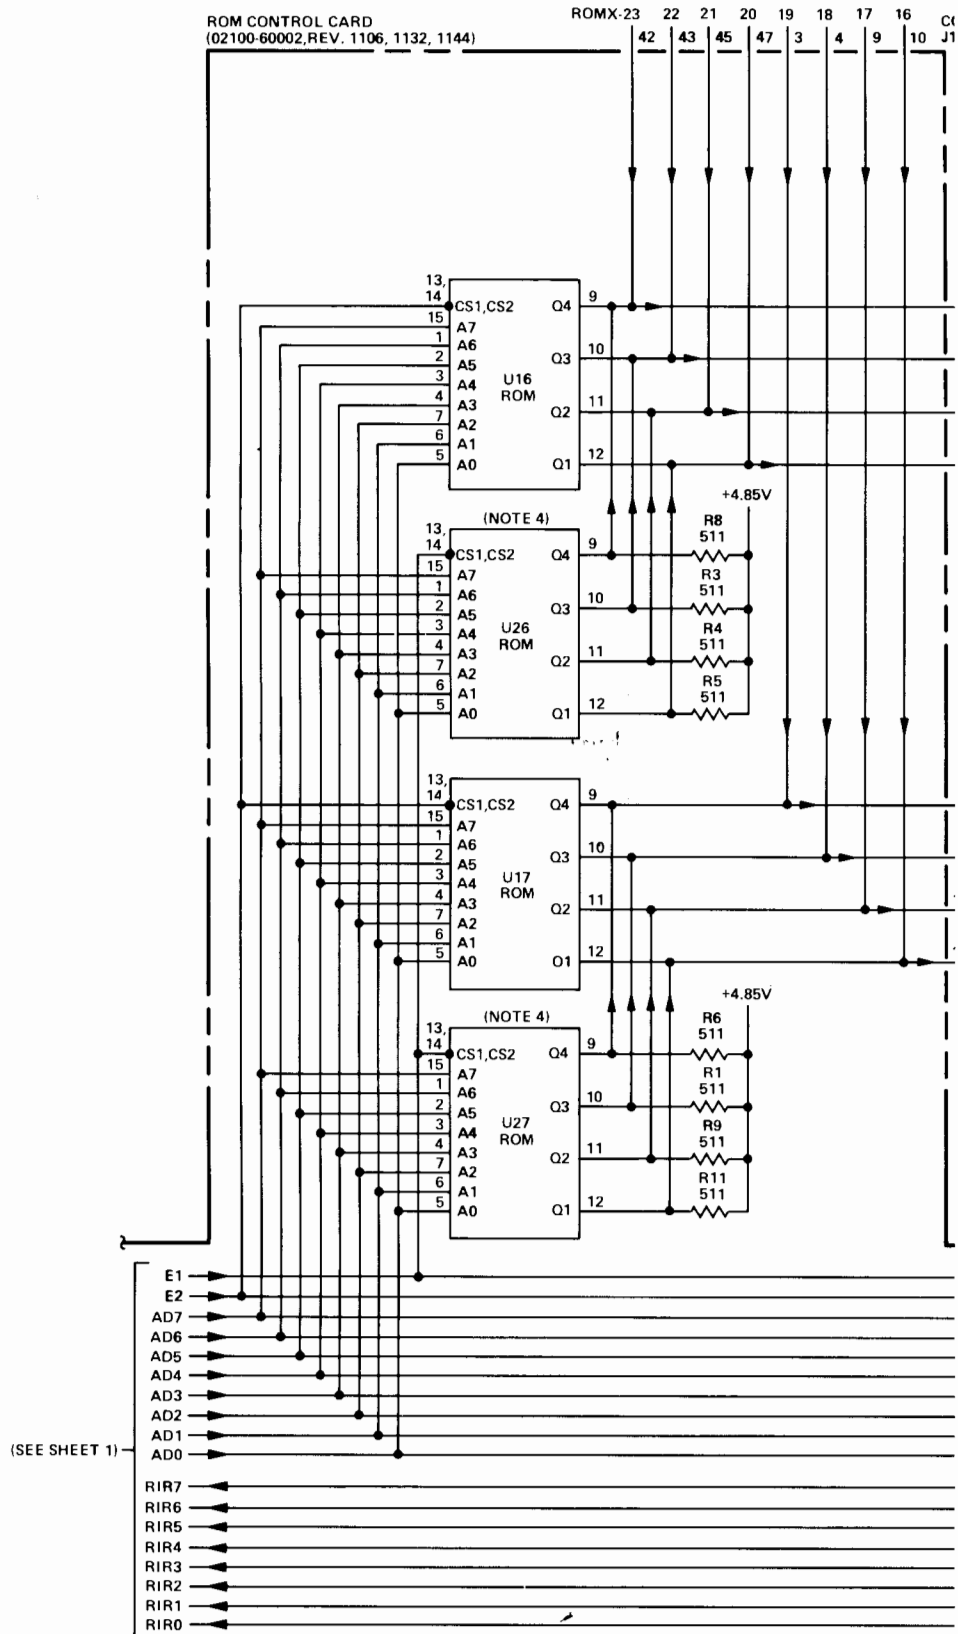

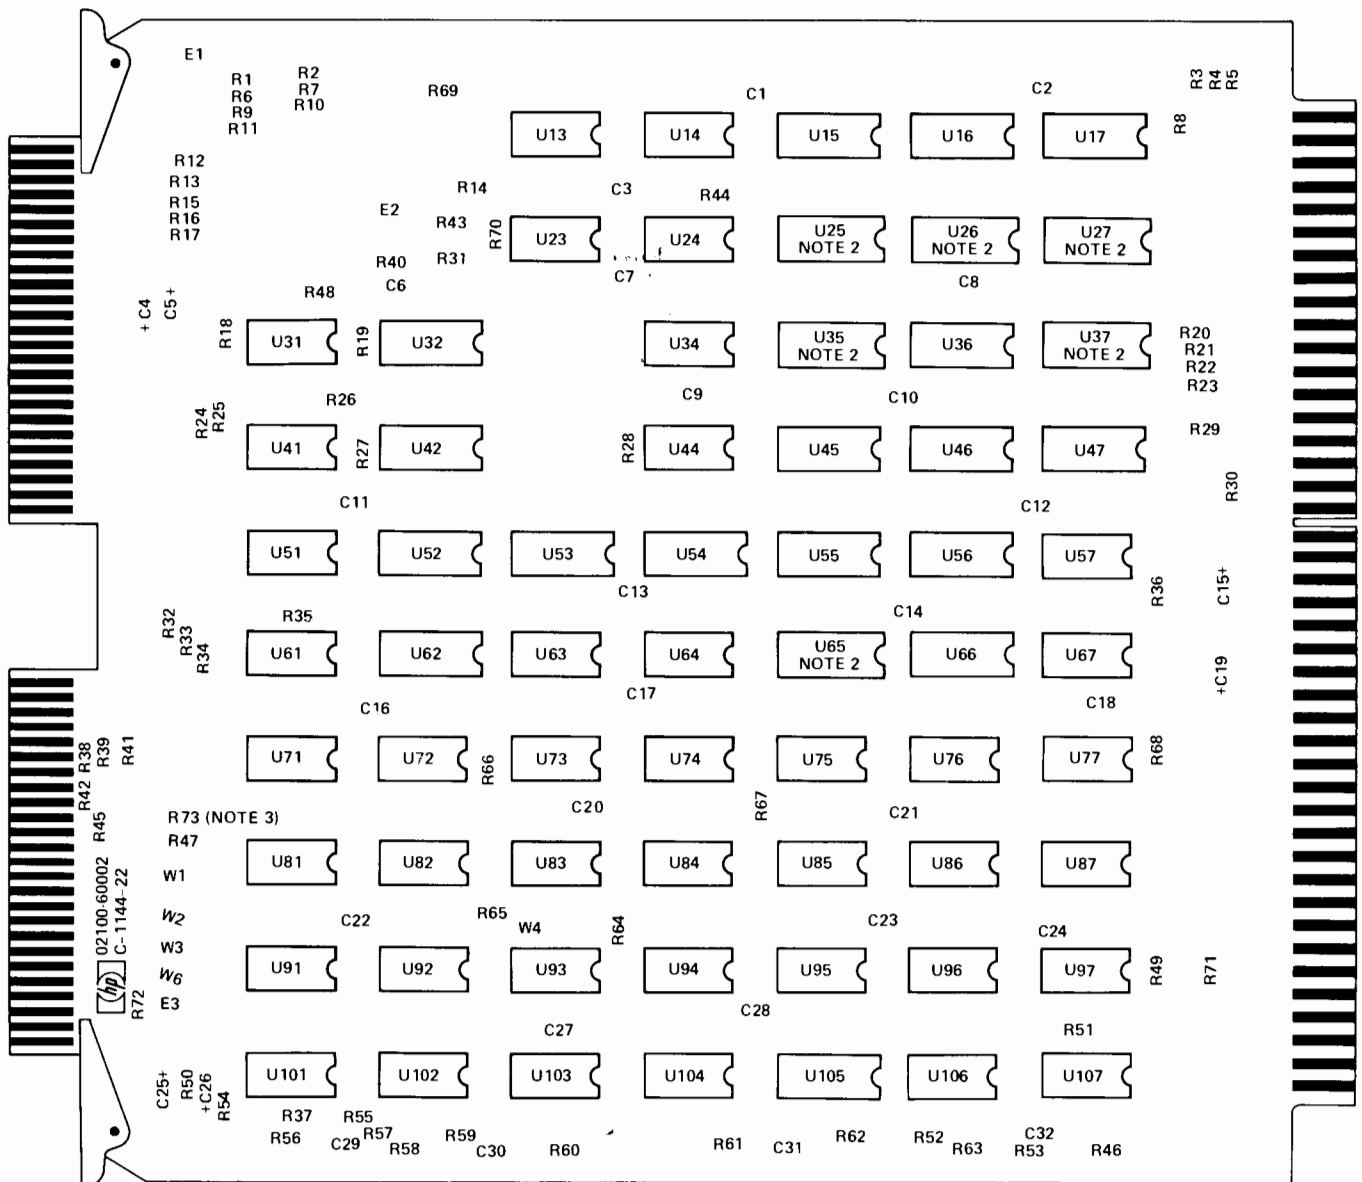

DWG REV. C

NOTES: 1. THIS DIAGRAM ALSO APPLIES TO CARD REV. A-1106-22 AND B-1132-22.

See table 4-4 for replaceable parts.

2. U25, U26, U27, U35, U37, AND U65 USED ONLY FOR OPTIONS SUCH AS FLOATING - POINT CAPABILITY.

3. R73 FIRST USED ON CARD REV. C-1144-22.

Table 4-5. A3 Microinstruction Decoder 1 Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3	02100-60004	1	MICRO INSTRUCTION DECODER 1 CARD	28480	02100-60004
A3C1	0180-0197	12	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C2	0160-2055	24	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C3	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C4	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C5	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C6	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C13	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C16	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C17	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C18	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C20	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C21	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C22	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C25	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C26	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C27	0160-2207		C:FXD MICA 300 PF 5%	28480	0160-2207
A3C28	0180-0197	1	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C29	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C30	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C31	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C32	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C33	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C34	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C35	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A3C36	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3C37	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A3E1 THRU A3E6	0360-0294	6	TERMINAL:SOLDER POINT	28480	0360-0294
A3R1	0757-0416	16	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R2	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R3	0698-0082	2	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A3R4	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R5	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R6	0757-0280	4	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R7	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R8	0698-3444	2	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A3R9	0757-0420	1	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A3R10	0698-3446	4	R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A3R11	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R12	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R13	0698-3445	4	R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A3R14	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R15	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R16	0698-3132	4	R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A3R17	0698-3132		R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A3R18	0698-3132		R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A3R19	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A3R20	0698-3132		R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A3R21	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R22	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A3R23	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A3R24	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R25	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R26	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R27	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R29	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A3R30	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R31	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R32	0757-0427	4	R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A3R33	0757-0403	4	R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A3R34	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A3R35	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446

Table 4-5. A3 Microinstruction Decoder 1 Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3R36	0698-3442	4	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A3R37	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A3R38	0757-0401	2	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R39	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R40	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A3R41	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A3R42	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A3R43	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A3R44	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A3R45	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A3R46	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A3R47	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A3R48	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A3R49	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A3R50	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A3R51	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A3R52	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A3U11(NOTE 1)	1820-0372	1	IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A3U11(NOTE 2)	1820-0686	1	IC:TTL SCHOTTKY TRIPLE 3-INPT AND GATE	01295	SN74S11N
A3U12	1820-0485	3	IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A3U14	1820-0512	3	IC:TTL DUAL D F/F	01295	SN74H74N
A3U21	1820-0966	1	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A3U23	1820-0953	1	IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A3U24	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
A3U25	1820-0482	2	IC:CTL 1 OF 8 DECODER	07263	U68983849X
A3U26	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A3U33	1820-0955	1	IC:CTL 8-INPT DUAL OUTPUT AND GATE	07263	U6A995579X
A3U34	1820-0965		IC:CTL QUAD 1-INPT AND GATE	07263	U6A996579X
A3U35	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A3U36	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A3U37	1820-0186	10	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U42	1820-0424	3	IC:TTL HS HEX INVERTER	04713	SN74H04N
A3U43	1820-0383	1	IC:TTL HS DUAL 4-INPT EXPANDER	01295	SN74H60N
A3U44	1820-0380	1	IC:TTL HS 4W 2-2-2-3 INPT AND/OR INV	01295	SN74H53N
A3U45	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U46	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U53	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
A3U54	1820-0370	4	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A3U55(NOTE 3)	1820-0451	1	IC:TTL DUAL J-K F/F	04713	MC3062P
A3U56	1820-0141	4	IC:CTL QUAD 2-INPT AND GATE	04713	MC3001P
A3U63	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A3U64	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U66	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U72	1820-0205	2	IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A3U73	1820-0437	1	IC:TTL QUAD D F/F	04713	MC4015P
A3U74	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A3U75	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U76	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U82	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A3U83	1820-0608	2	IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A3U84	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A3U85	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U86	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U87	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A3U92	1820-0376	2	IC:TTL DUAL 4-INPT NAND POWER GATE	01295	SN74H40N
A3U93	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A3U96	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A3U102(NOTE 1)	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A3U102(NOTE 2)	1820-0683	1	IC:TTL HS HEX INVERTER	04713	SN74504N
A3U103	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A3U104	1820-0376		IC:TTL DUAL 4-INPT NAND POWER GATE	01295	SN74H40N
A3U105	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A3U106	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A3U107	1820-0371	1	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N

NOTES: 1. Used on card rev. 1124 only.
2. First used on card rev. 1144.
3. Part no. 1820-0695 used on some cards; the two parts are interchangeable.

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE			
A3						
2	A3-52	A6-5*				
3	A3-66*	A4-21				
4	A2-68	A3-16*				
13	A3-43	A4-32	A6-7*			
16	A2-51	A3-13*				
20	A1-72*	A3-79				
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64
	A107-69					
26	A3-20*	A4-11				
27	A3-50	A4-56	A5-19*	A6-11		
29	A2-38	A3-15*				
34	A3-83	A4-58*				
35	A3-25	A24-76	A107-81*			
37	A2-64	A3-68*				
41	A3-61*	A6-15				
55	A1-80	A3-35*	A6-43			
57	A3-75	A7-9*				
202	A2-67	A3-3	A4-7*			
222	A3-76	A7-43	A8-46*	A9-45*	A10-15 THRU	A23-15
	A24-6					
226	A3-77	A8-78*	A9-32	A24-10	A10-20 THRU	A23-20
238	A2-83	A3-17	A6-59*			
239	A1-9	A2-80	A3-71	A4-24	A6-58*	A8-63
253	A3-36	A4-49*				
258	A3-29	A24-78	A107-77*			
276	A3-59	A4-60*				
295	A1-63	A3-27	A8-58*			
300	A3-41*	A7-13	A24-56			
302	A3-60	A4-28	A24-38*			
303	A3-72	A4-26	A24-41*			
304	A3-32	A24-36*				
332	A3-33*	A7-54				
333	A3-19*	A6-81				
334	A1-54*	A3-28*	A4-27	A9-31*	A24-77*	A107-72
337	A3-34*	A8-61	A9-42*			
347	A2-57	A3-12*				
349	A2-15*	A3-57				
350	A2-18*	A3-58				
351	A2-24*	A3-54				
352	A2-25*	A3-51				
358	A2-13*	A3-11				
359	A2-8*	A3-14				
360	A2-7*	A3-4				
361	A2-3*	A3-9				
365	A3-21*	A5-27				
366	A3-23*	A5-28				
367	A3-6*	A5-57				
368	A3-24*	A4-57*	A5-35,36	A24-23*		
370	A3-10*	A5-17				
371	A3-7*	A5-15				
372	A3-5*	A5-13				
373	A3-8*	A5-11				
377	A3-31	A6-27*				
395	A3-67*	A5-77				
413	A3-73	A7-44*	A8-35			
431	A1-53*	A3-22*	A8-60	A9-35*	A24-42*	A107-66
432	A3-30*	A4-59*	A9-41*	A107-74		
434	A3-74*	A5-82				
437	A3-78	A4-83*				
438	A3-46*	A8-62	A9-33*	A24-75*		
441	A2-77*	A3-84	A4-81	A6-6*		
442	A3-65	A4-6	A6-71*			
449	A3-38	A9-46*				
450	A3-70*	A5-75				
451	A3-62	A4-12	A6-72*			
454	A1-55	A2-62	A3-42	A4-52	A6-76*	
471	A3-69*	A5-81				
472	A3-63*	A5-79				
474	A1-36*	A2-59	A3-18			
476	A3-44*	A6-30				
477	A3-53*	A9-38*	A24-73	A107-73		





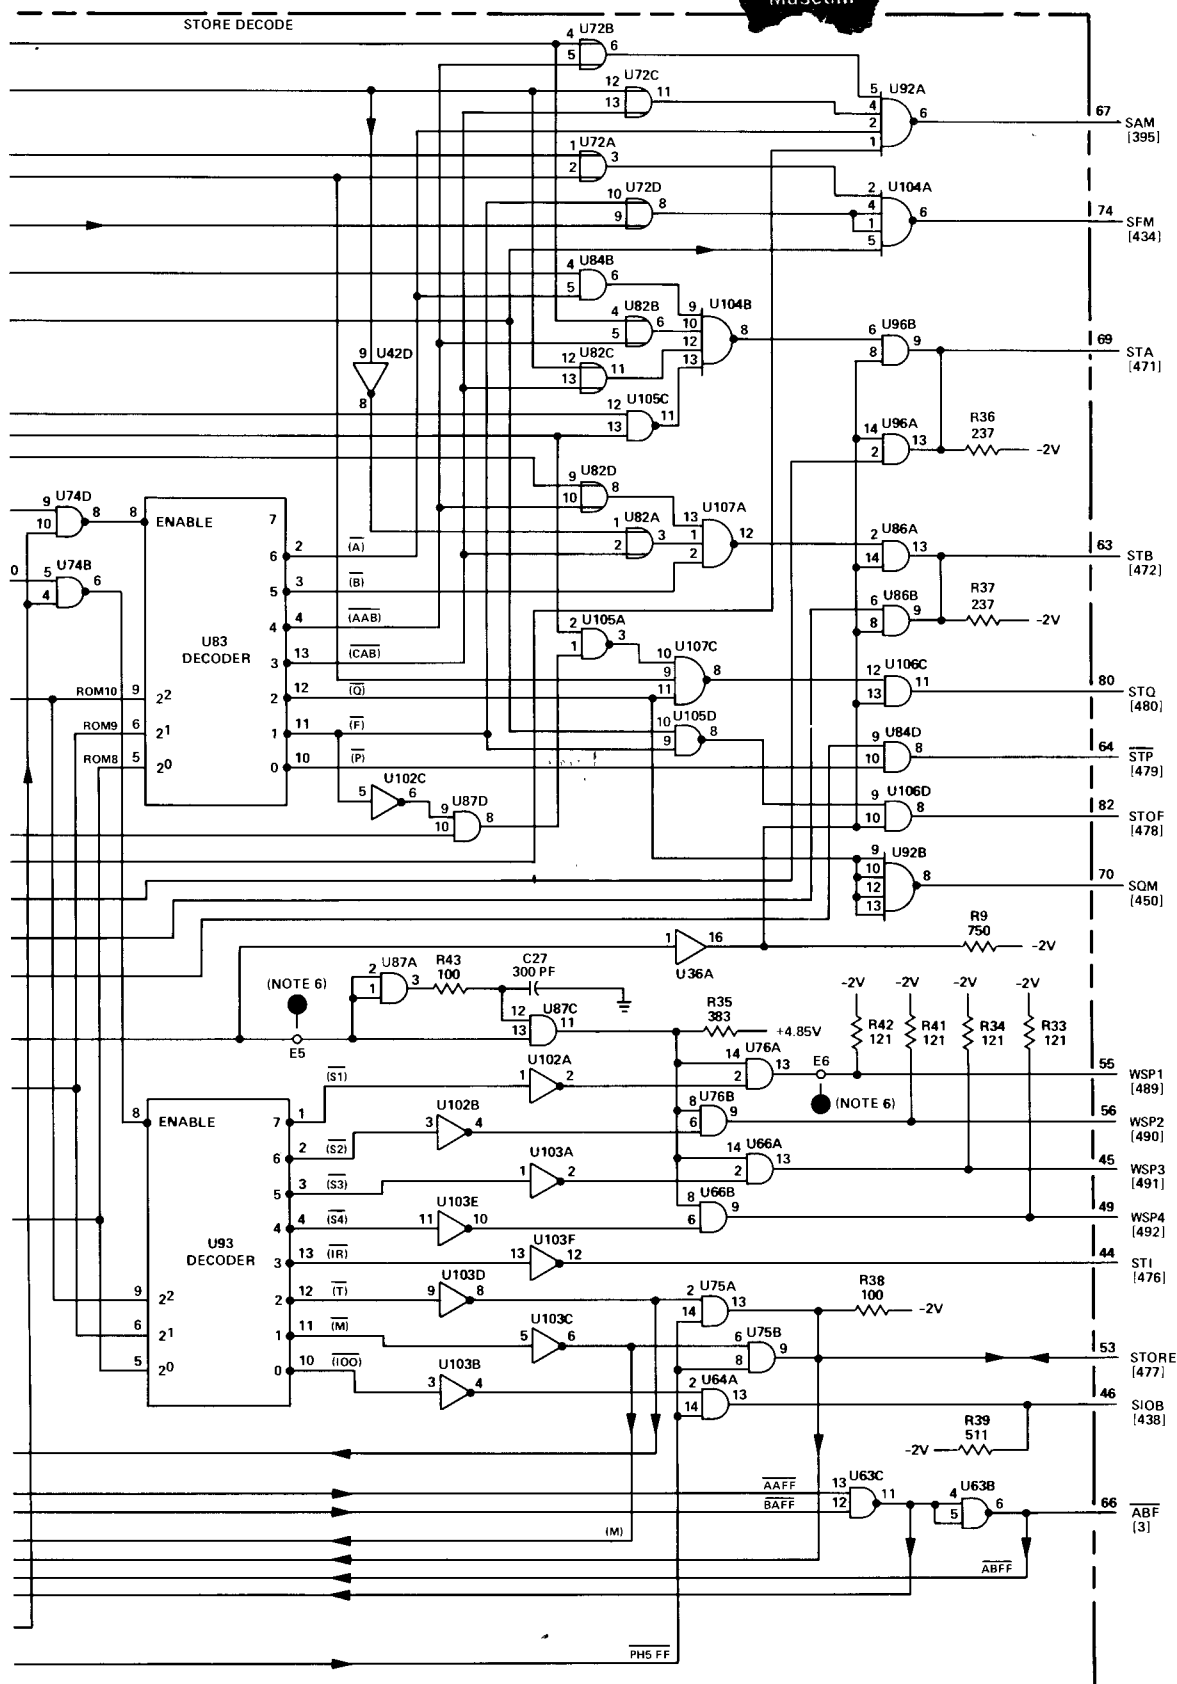


Figure 4-6. A3 Microinstruction Decoder 1 Card, Parts Location and Schematic Diagrams

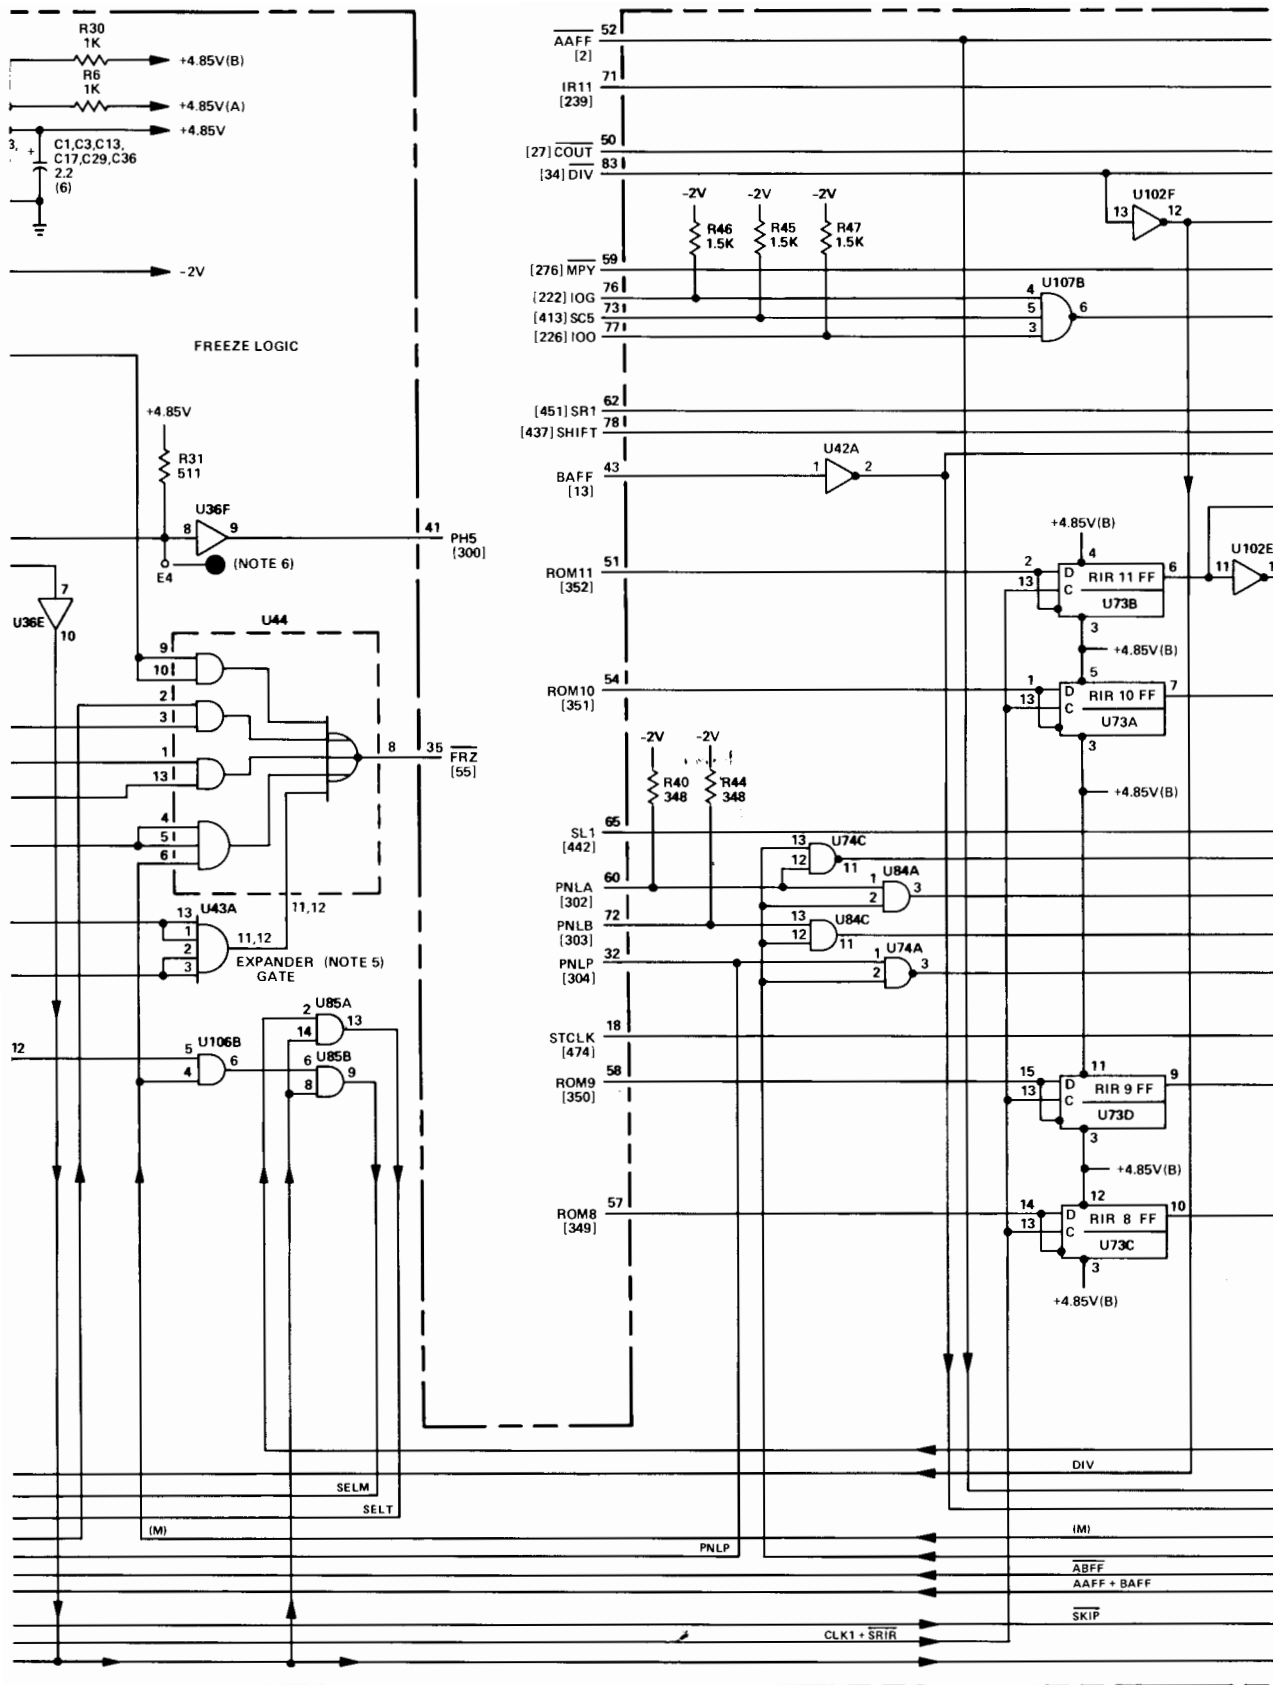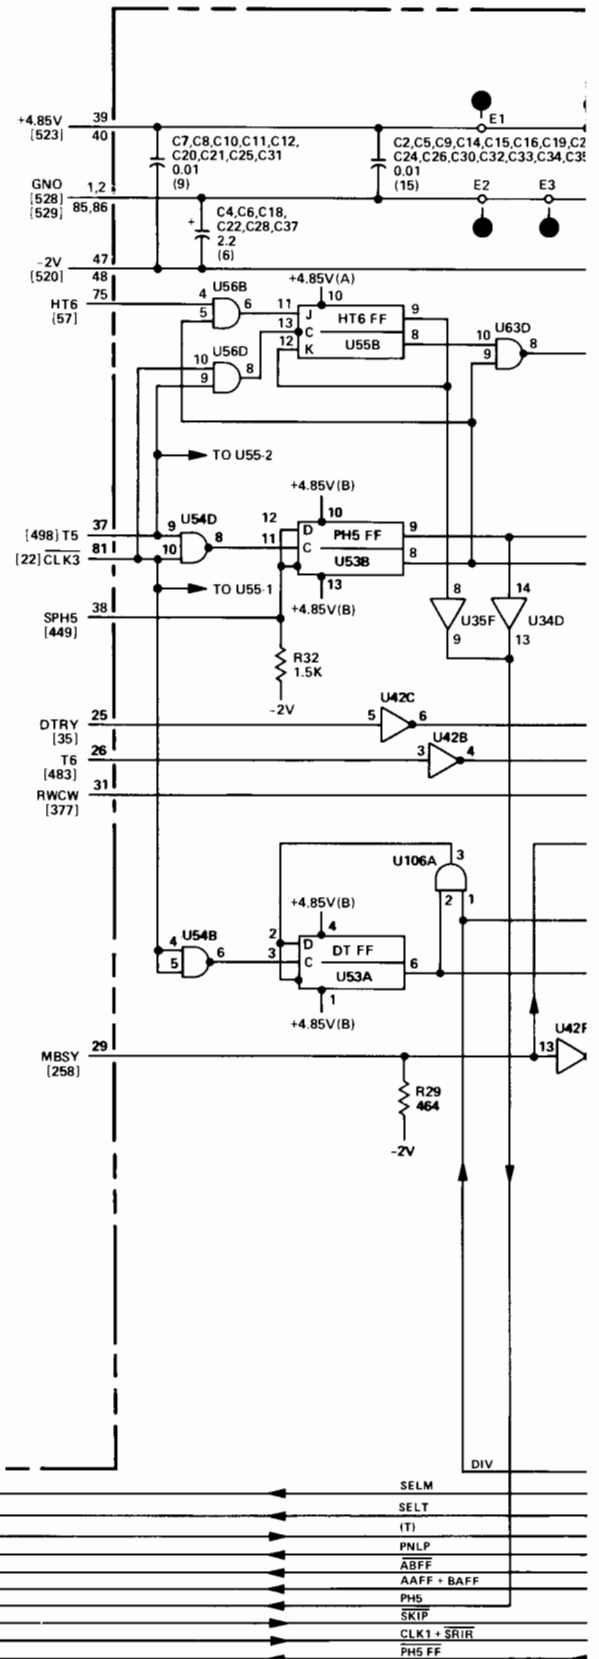

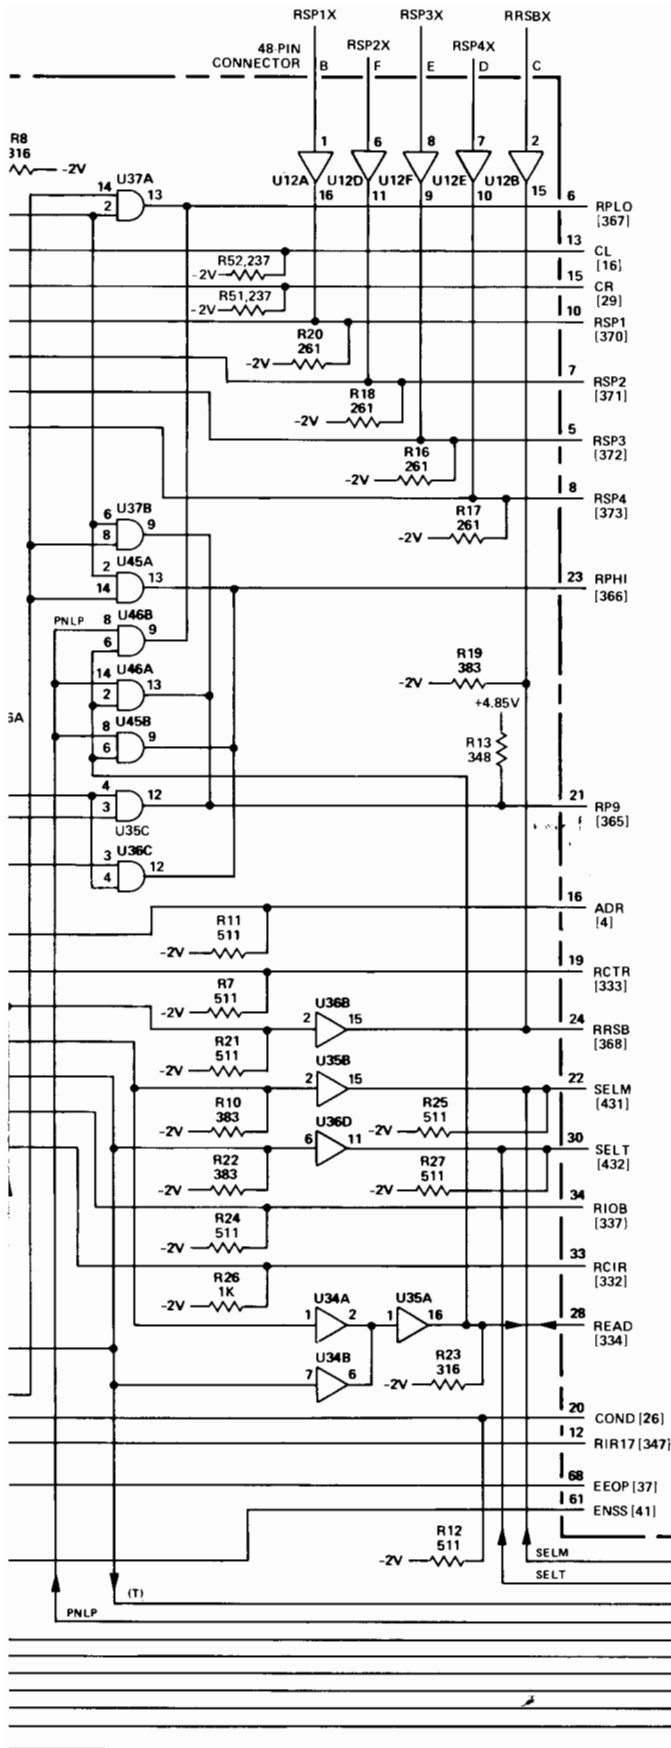

MICROINSTRUCTION DECODER 1 CARD
(02100-60004, REV. 1124, 1144)

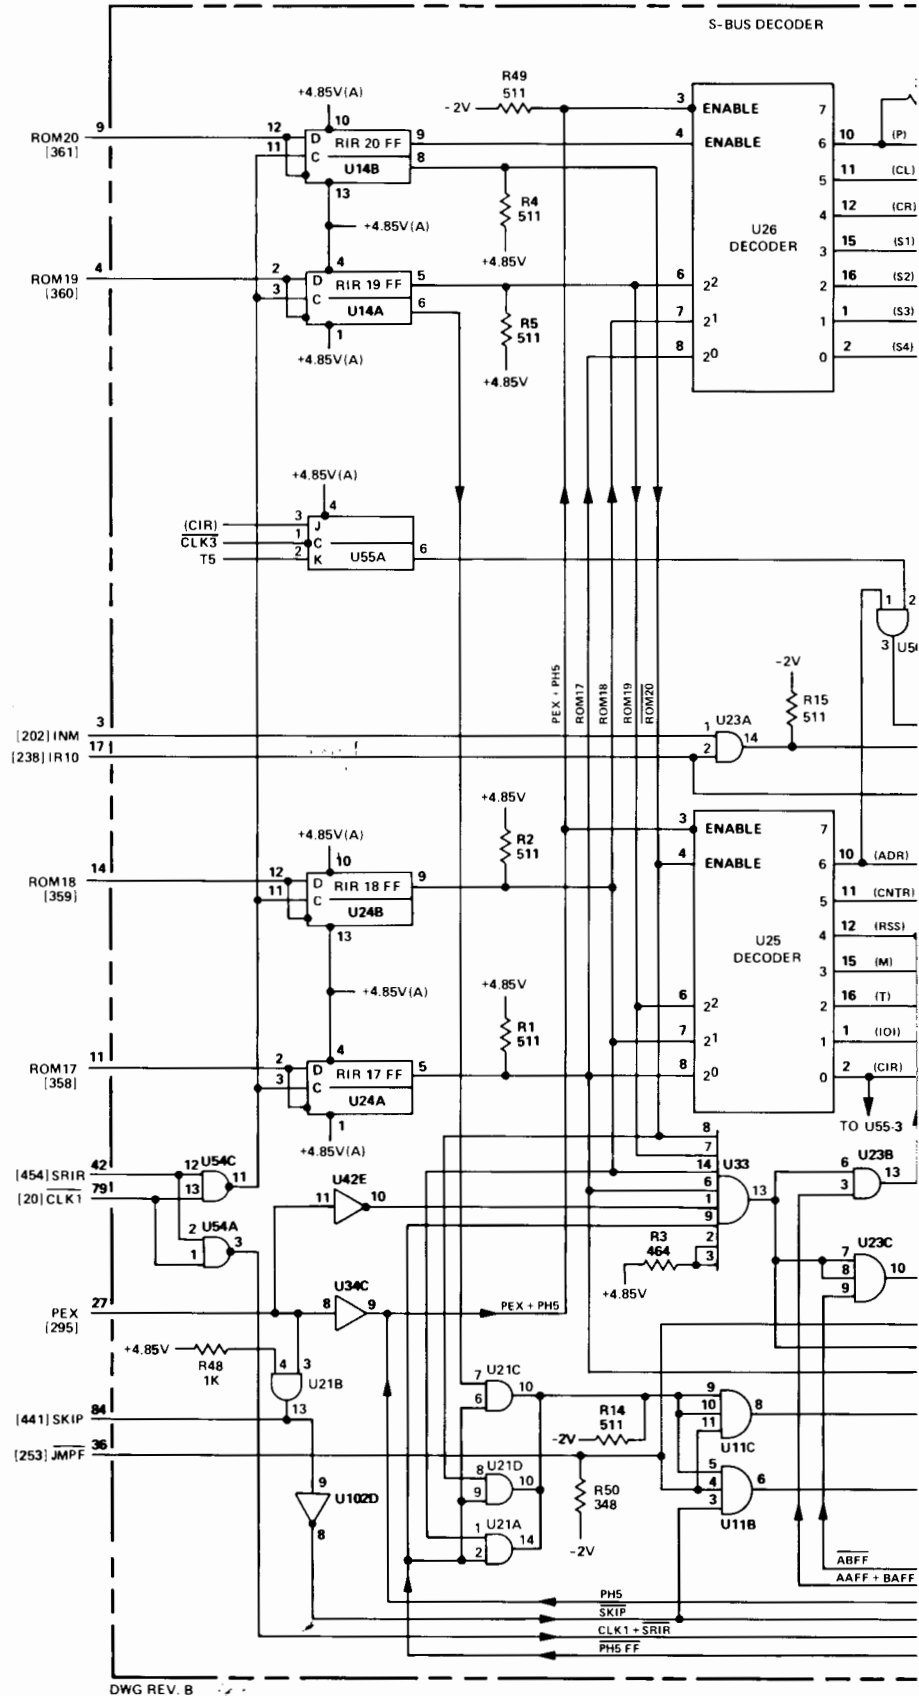

FF DEFINITIONS

- DIVIDE TIME
- HOLD I/O TIME 6
- PHASE 5
- ROM INSTRUCTION REGISTER BIT 8
- ROM INSTRUCTION REGISTER BIT 9
- ROM INSTRUCTION REGISTER BIT 10
- ROM INSTRUCTION REGISTER BIT 11
- ROM INSTRUCTION REGISTER BIT 17
- ROM INSTRUCTION REGISTER BIT 18
- ROM INSTRUCTION REGISTER BIT 19
- ROM INSTRUCTION REGISTER BIT 20

RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.

ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE INDICATED.

NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.

DECODED ROM MICROINSTRUCTION MNEMONICS APPEAR IN PARENTHESIS ().

IMPLICIT EXPANDER GATE CONNECTIONS SHOWN. SEE LOGIC SYMBOLS SECTION FOR DETAILED CONNECTIONS.

TEST POINT TERMINALS E4, E5, AND E6 NOT USED ON CARD REV. 1124.

DWG REV. 8

REF.
NO.

BACKPLANE LOCATION

* INDICATES SIGNAL SOURCE

A3 (CONT)

478	A3-82*	A5-84			
479	A3-64*	A5-63			
480	A3-80*	A5-73			
483	A3-26	A7-58	A8-43*	A9-81	A24-66
489	A3-55*	A5-65			
490	A3-56*	A5-67			
491	A3-45*	A5-69			
492	A3-49*	A5-71			
498	A3-37	A7-11	A8-81*	A9-26	

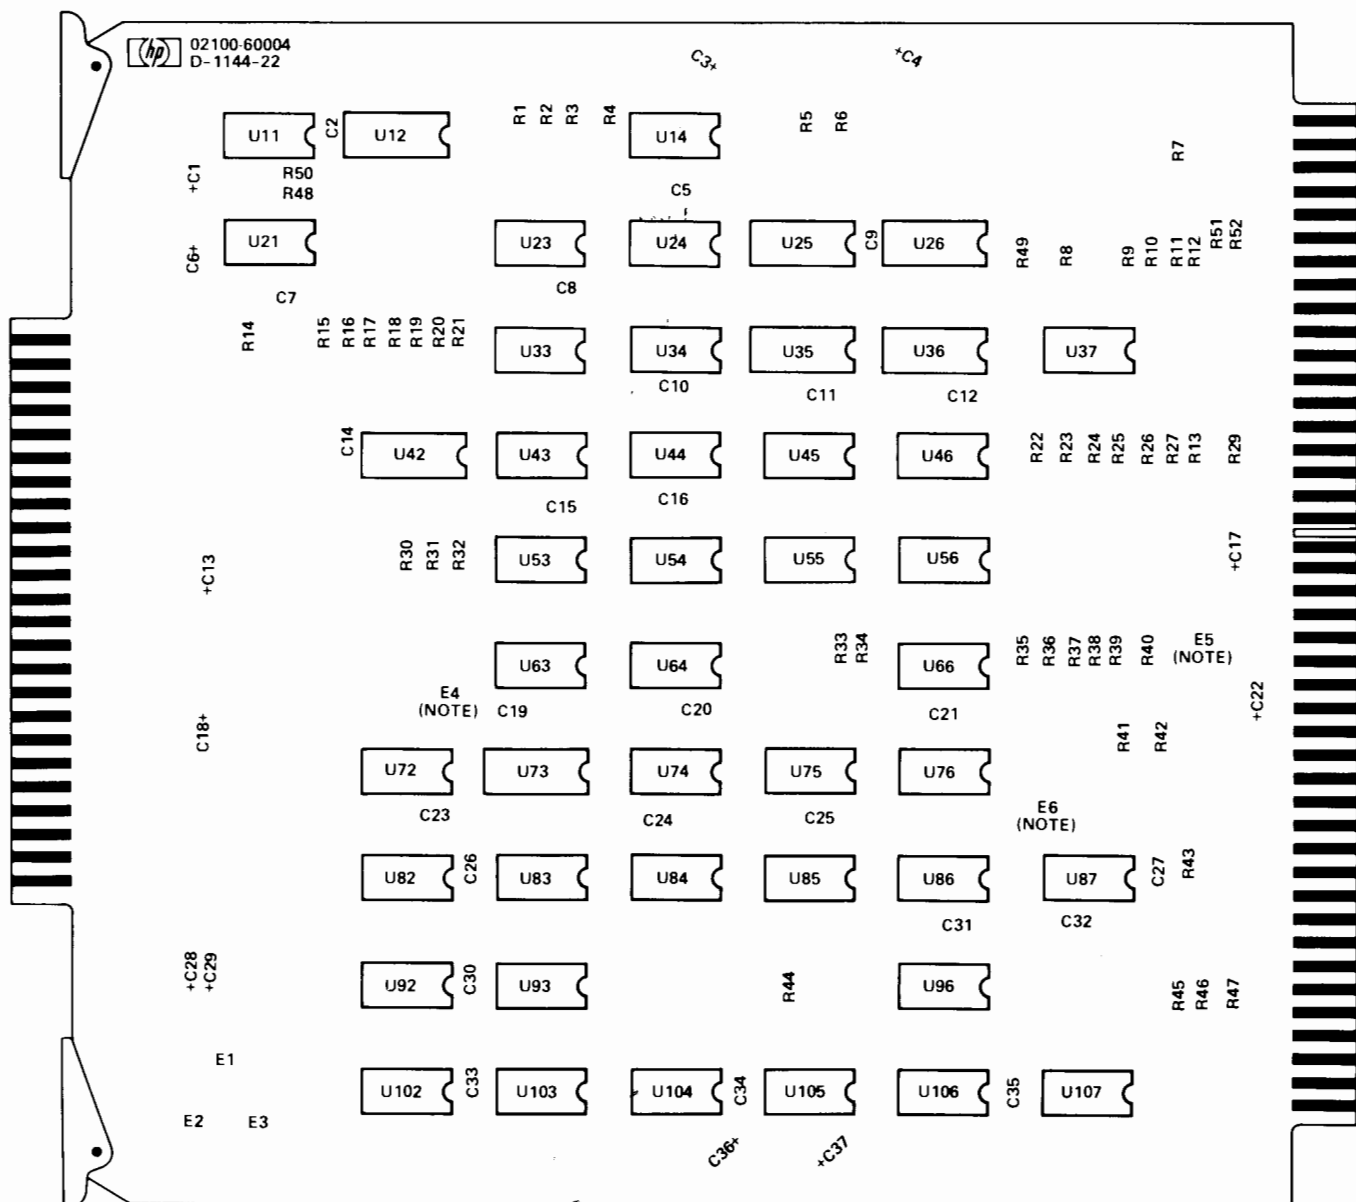


Table 4-6. A4 Microinstruction Decoder 2 Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4	02100-60022	1	MICRO INSTRUCTION DECODER 2 CARD	28480	02100-60022
A4C1	0180-0197	10	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C2	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C3	0160-2055	20	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C4	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C5	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C15	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C16	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C20	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C21	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C22	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C25	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C26	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C27	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C28	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A4C29	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4C30	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A4E1	0360-0294	3	TERMINAL:SOLDER POINT	28480	0360-0294
A4E2	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A4E3	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A4R1	0757-0427	9	R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R2	0757-0280	5	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4R3	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4R4	0757-0416	6	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A4R5	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A4R6(NOTE 1)	0698-3446	2	R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A4R6(NOTE 2)	0757-0274	1	R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A4R7	0698-3443	2	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A4R8	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A4R9	0757-0284	2	R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
A4R10	0757-0284		R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
A4R11	0757-0399	1	R:FXD MET FLM 82.5 OHM 1% 1/8W	28480	0757-0399
A4R12	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A4R13	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4R14	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R15	0757-0420	1	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A4R16	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A4R17	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4R19	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A4R21	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A4R22	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R23	0698-3445	1	R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A4R24	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R25	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R26	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R27	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R28	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4R29	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A4U11	1820-0379	7	IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U12	1820-0424	4	IC:TTL HS HEX INVERTER	04713	SN74H04N
A4U13	1820-0605	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H01N
A4U14	1820-0512	4	IC:TTL DUAL D F/F	01295	SN74H174N
A4U15	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U16	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A4U21	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A4U23	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A4U24	1820-0187		IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X

NOTES: 1. Used on card rev. 1110 only.
2. First used on card rev. 1140.


Table 4-6. A4 Microinstruction Decoder 2 Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4U25	1820-0370	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A4U26	1820-0953		IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A4U27	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A4U31	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U33	1820-0375	2	IC:TTL HS 8-INPT NAND GATE	01295	SN74H30N
A4U34(NOTE 4)	1820-0451	1	IC:TTL DUAL J-K F/F	04713	MC3062P
A4U34(NOTE 5)	1820-0695	1	IC:TTL SHS DUAL J-K F/F W/PRESET	01295	SN74S113N
A4U35	1820-0186	1	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A4U36	1820-0954		IC:CTL DUAL 4-INPT AND GATE	07263	U6A995479X
A4U37	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A4U41	1820-0379	1	IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U43	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A4U44	1820-0375		IC:TTL HS 8-INPT NAND GATE	01295	SN74H30N
A4U45	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
A4U46	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
A4U47	1820-0377	1	IC:TTL HS DUAL 2-WIDE 2-INPT	01295	SN74H50N
A4U54	1820-0141	4	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A4U55	1820-0971	2	IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A4U56	1820-0966		IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A4U57	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A4U61	1820-0379	2	IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U63	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A4U64	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A4U65	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A4U66	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A4U67	1820-0370	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A4U71	1820-0380		IC:TTL HS 4W 2-2-2-3 INPT AND/OR INV	01295	SN74H53N
A4U73	1820-0608	3	IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A4U74	1820-0424	1	IC:TTL HS HEX INVERTER	04713	SN74H04N
A4U76	1820-0384		IC:TTL HS TRIPLE 3-INPT EXPANDER	01295	SN74H61N
A4U77	1820-0512	1	IC:TTL DUAL D F/F	01295	SN74H74N
A4U81	1820-0964		IC:CTL TRIPLE 3-3-1 INPT AND GATE	14433	MIC 964
A4U83	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A4U85	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U86	1820-0370	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A4U87	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A4U91	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P
A4U92	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A4U93	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A4U94	1820-0371	1	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A4U95	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A4U96	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
A4U97	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A4U101	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N


NOTES: 4. First used on card rev. 1140.
5. Used on card rev. 1110 only.

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE		


A4						
3	A3-66*	A4-21				
5	A4-13	A5-58*	A6-79			
6	A4-38	A5-22*				
7	A4-35	A5-21*	A6-77			
8	A4-41*	A5-7	A6-3*			
9	A4-9*	A5-23	A6-17*			
10	A4-36	A5-45*				
11	A4-84*	A6-18				
12	A4-33	A6-25*				
13	A3-43	A4-32	A6-7*			
14	A4-14*	A5-41	A6-84*			
15	A1-60	A4-62*				
18	A4-76	A7-5	A8-51*	A9-24	A10-7 THRU A23-7	
21	A1-84*	A4-69	A6-31	A8-70		
25	A1-76*	A4-61				
26	A3-20*	A4-11				
27	A3-50	A4-56	A5-19*	A6-11		
28	A1-52*	A4-19	A24-43			
34	A3-83	A4-58*				
39	A4-51*	A6-83				
42	A1-46	A2-65*	A4-55			
44	A4-10	A6-82*	A24-22			
47	A1-67	A4-64	A24-21*			
48	A4-23*	A6-80				
51	A4-66*	A5-50				
52	A4-3*	A5-46				
53	A4-4*	A5-56				
54	A4-5*	A5-55				
202	A2-67	A3-3	A4-7*			
237	A2-61	A4-54	A6-63*	A8-65		
239	A1-9	A2-80	A3-71	A4-24	A6-58*	A8-63
252	A1-73	A4-46*				
253	A3-36	A4-49*				
254	A2-69	A4-18*				
257	A4-8*	A5-24	A6-20*			
259	A4-20*	A5-12				
276	A3-59	A4-60*				
292	A4-68*	A6-8	A24-51			
293	A1-81	A4-65*				
302	A3-60	A4-28	A24-38*			
303	A3-72	A4-26	A24-41*			
327	A4-42*	A5-83				
328	A4-74	A5-9*				
329	A4-22*	A5-5				
330	A4-15*	A5-64				
331	A4-25*	A5-62				
334	A1-54*	A3-28*	A4-27	A9-31*	A24-77*	A107-72
335	A1-8*	A2-70	A4-30	A6-9	A7-20	A8-75
	A107-82					
336	A4-67*	A6-68				
346	A2-58	A4-82*				
353	A2-37*	A4-78				
354	A2-36*	A4-77				
355	A2-35*	A4-80				
356	A2-34*	A4-79				
357	A2-14*	A4-43				
362	A2-4*	A4-37				
363	A2-5*	A4-34				
364	A2-6*	A4-29				
368	A3-24*	A4-57*	A5-35, 36	A24-23*		
369	A1-71	A2-41	A4-17*			
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*
	A9-84*	A107-52				
412	A4-71	A7-49*	A8-74	A24-8		
432	A3-30*	A4-59*	A9-41*	A107-74		
433	A4-70	A7-17	A8-52*	A10-5 THRU A23-5		
435	A4-72	A7-24	A8-59*	A10-25 THRU A23-25		
437	A3-78	A4-83*				
440	A1-17	A4-16*	A7-21*	A10-12* THRU A23-12*		
441	A2-77*	A3-84	A4-81	A6-6*		
442	A3-65	A4-6	A6-71*			




FUNCTION FIELD DECODE LOGIC (CONT)

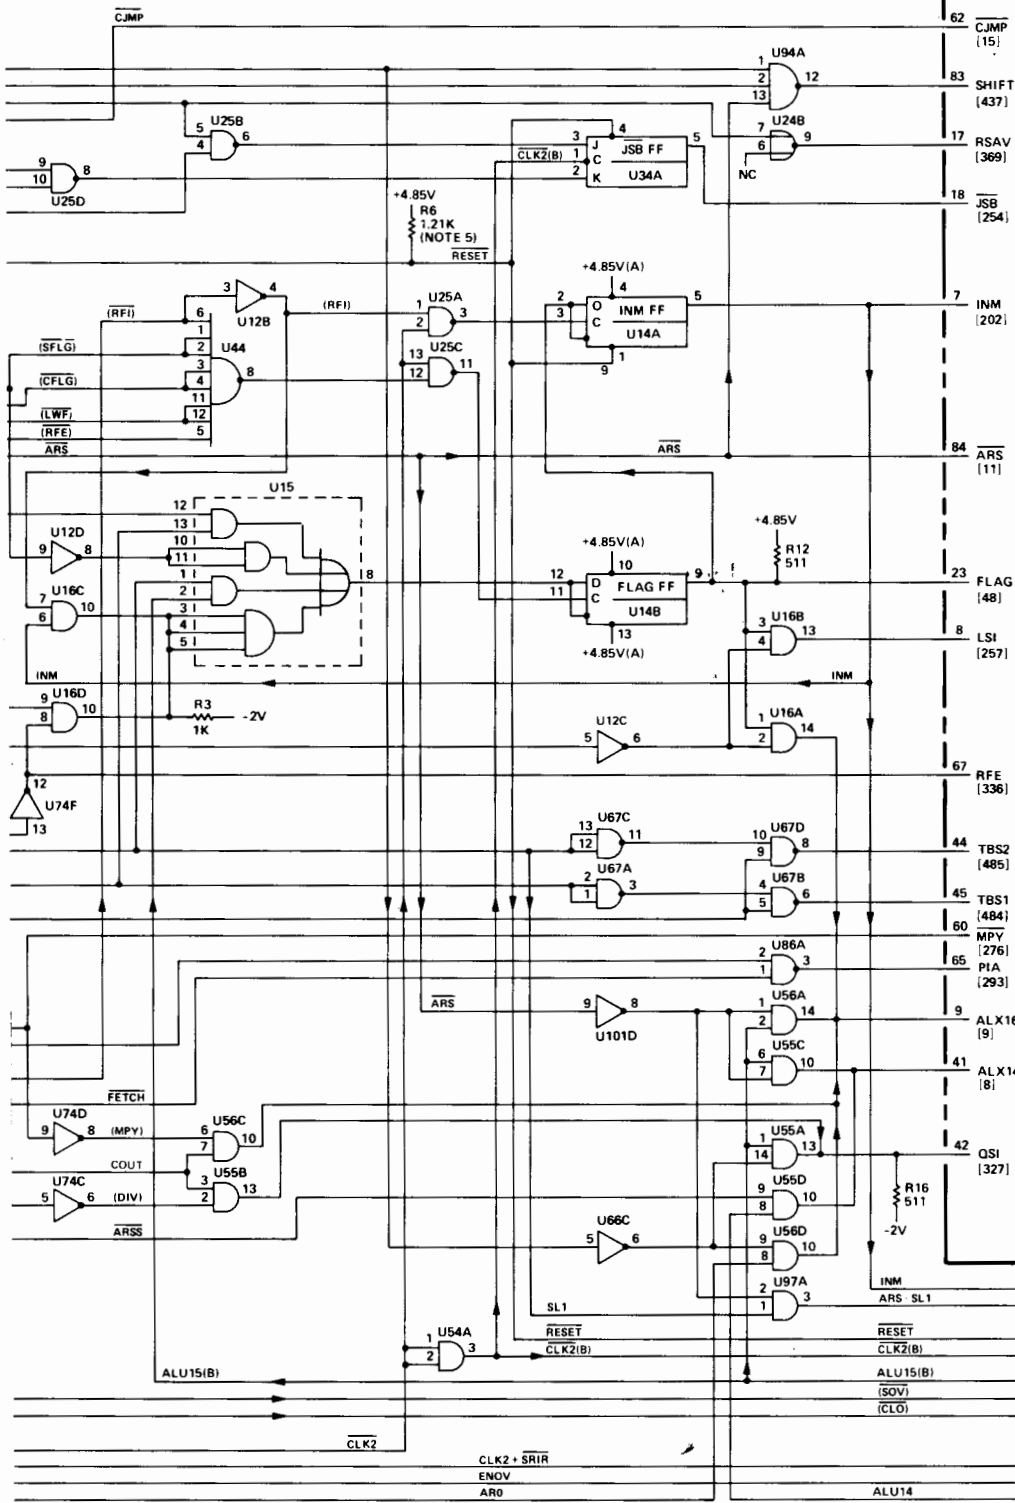


R - BUS DECC

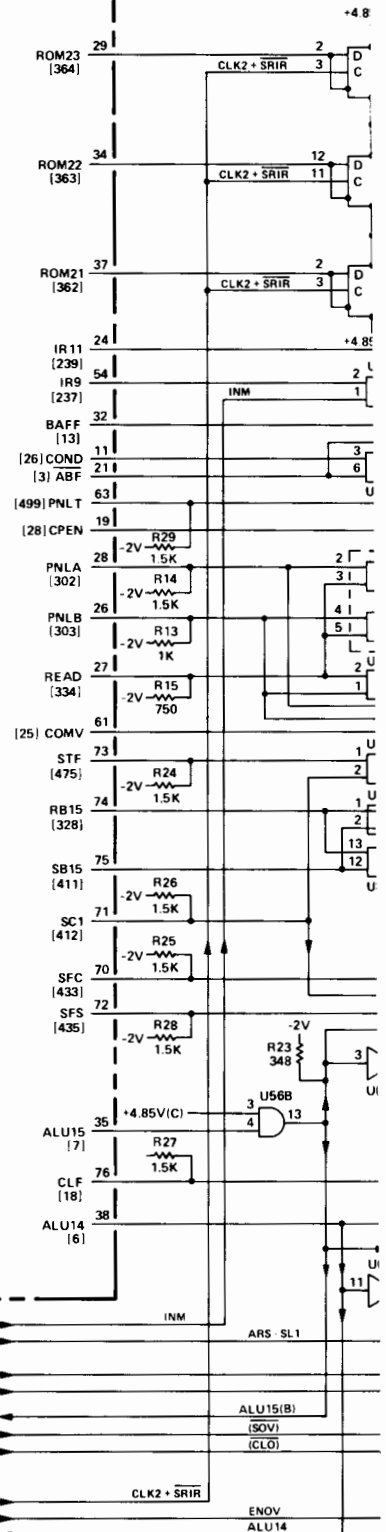

FUNCTION FIELD DECODE LOGIC

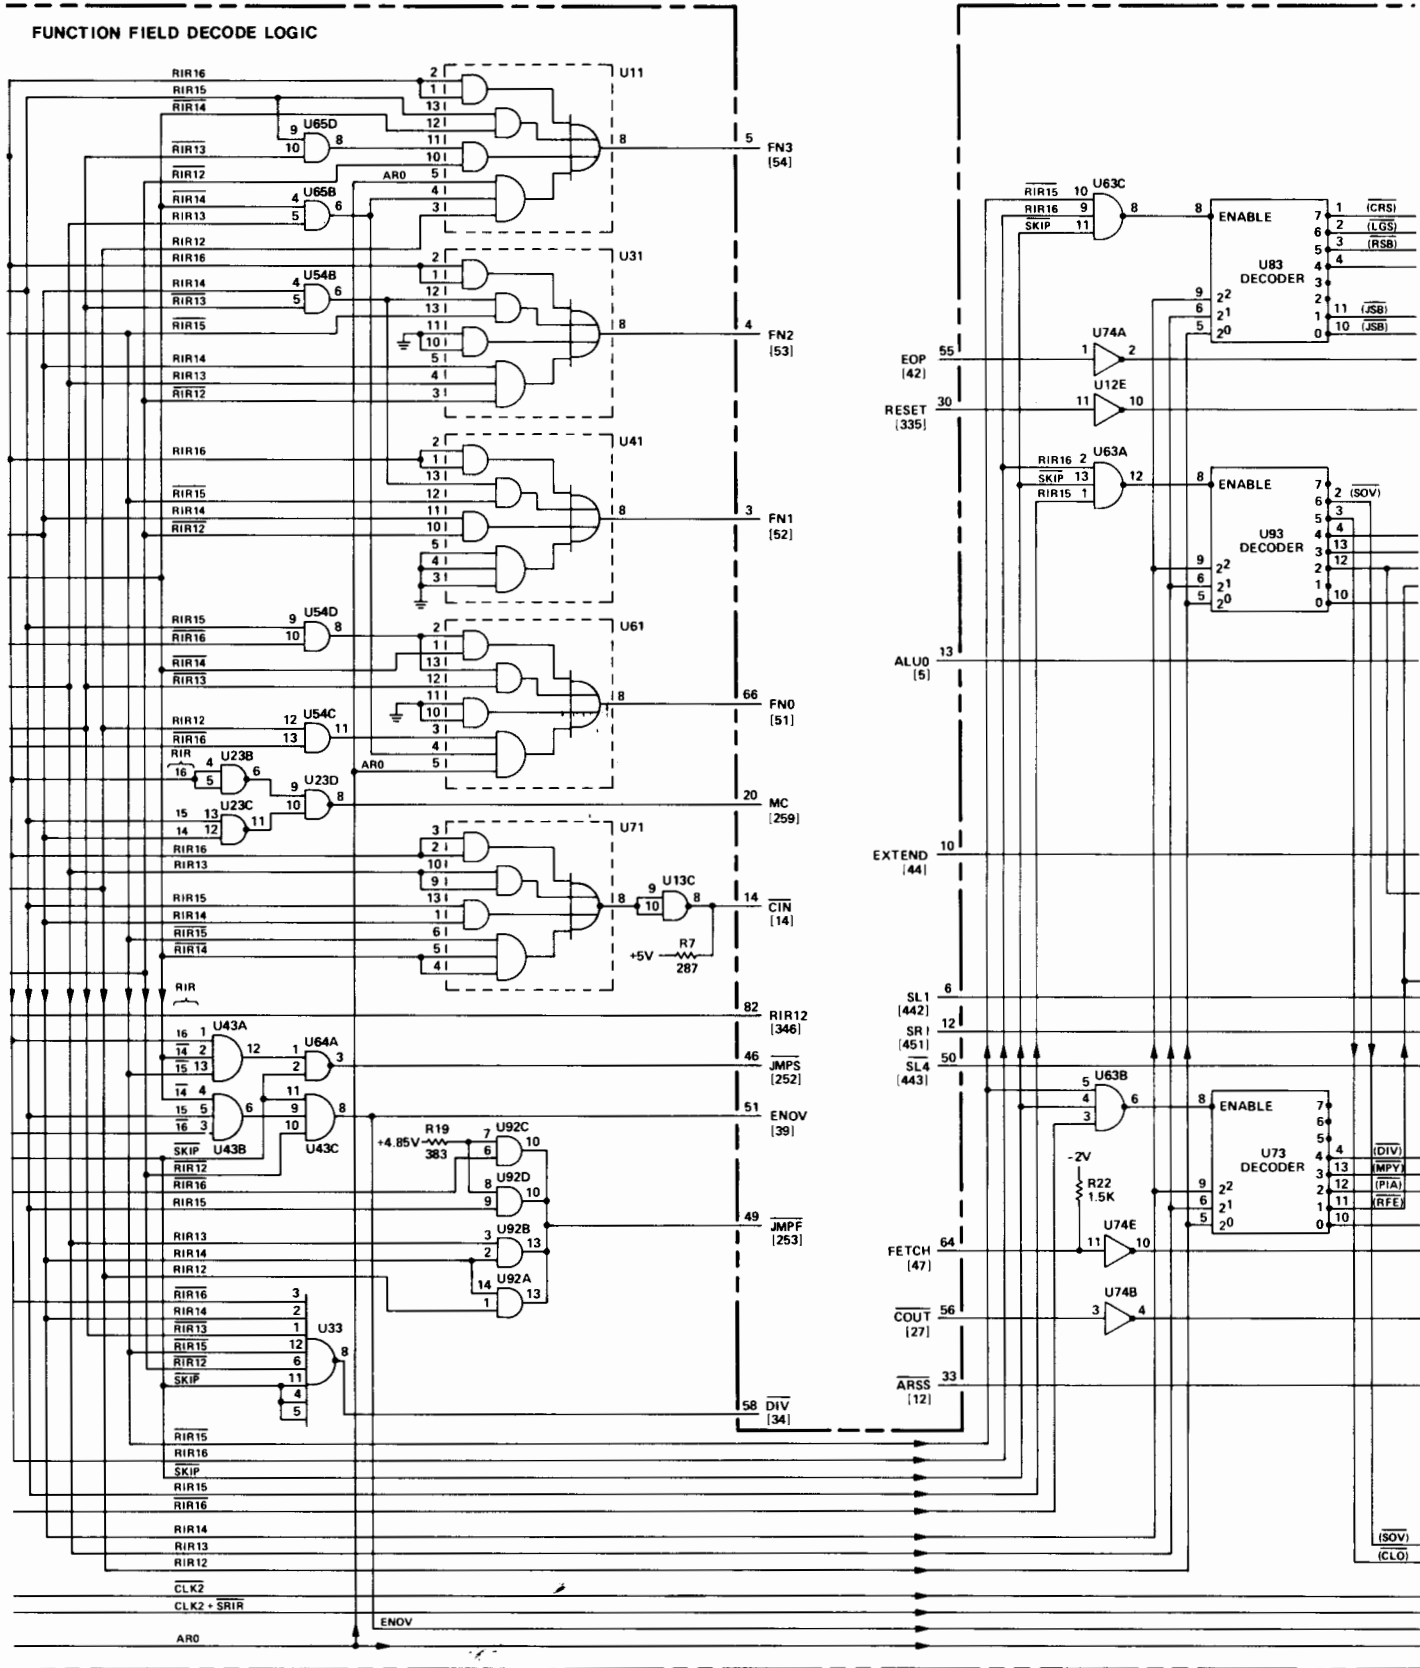

MICROINSTRUCTION DECODER 2 CAF

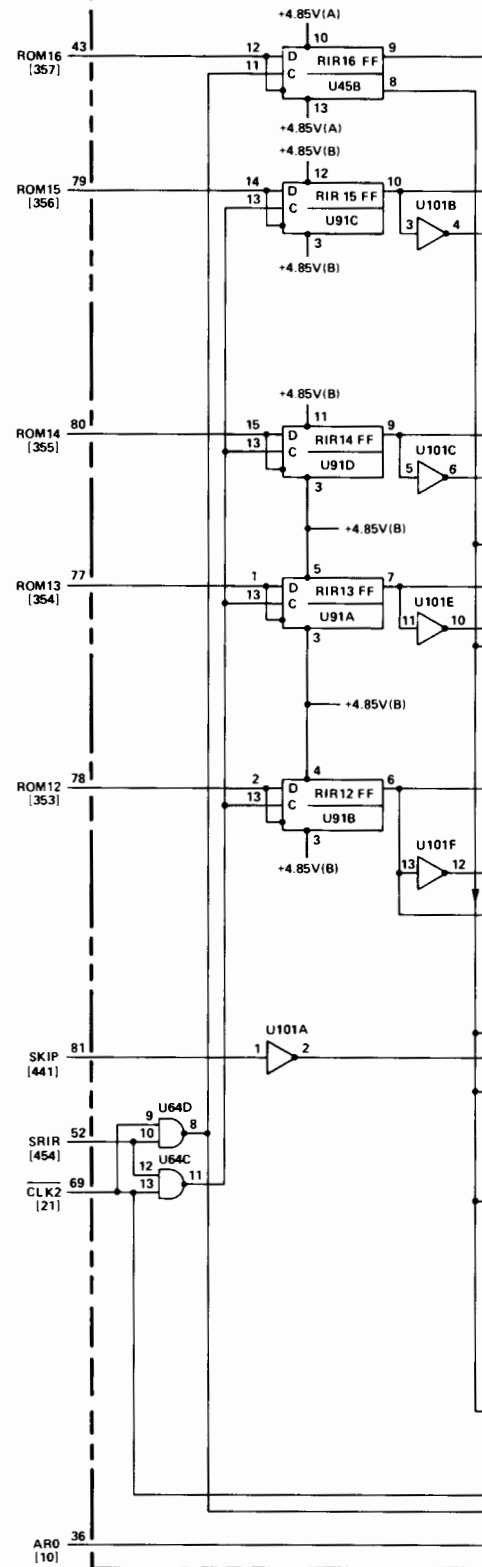

FF DEFINITIONS

A/B CLR = A AND B CLEAR
A/B SEL = A OR B SELECT
FLAG = FLAG
INM = INDEX MODE
JSB = JUMP TO SUBROUTINE
OVF = "NOT" OVERFLOW
RIR 12 = ROM INSTRUCTION REGISTER BIT 12
RIR 13 = ROM INSTRUCTION REGISTER BIT 13
RIR 14 = ROM INSTRUCTION REGISTER BIT 14
RIR 15 = ROM INSTRUCTION REGISTER BIT 15
RIR 16 = ROM INSTRUCTION REGISTER BIT 16
RIR 21 = ROM INSTRUCTION REGISTER BIT 21
RIR 22 = ROM INSTRUCTION REGISTER BIT 22
RIR 23 = ROM INSTRUCTION REGISTER BIT 23

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. DECODED ROM MICROINSTRUCTION MNEMONICS APPEAR IN PARENTHESIS ().
5. R6 IS 383 DHMS ON CARD REV 1110.


REF.
NO.

BACKPLANE LOCATION

* INDICATES SIGNAL SOURCE

A4 (CONT)

443	A4-50	A6-50*			
451	A3-62	A4-12	A6-72*		
454	A1-55	A2-62	A3-42	A4-52	A6-76*
475	A4-73	A7-6	A8-49*	A10-9 THRU	A23-9
484	A4-45*	A5-53			
485	A4-44*	A5-54			
499	A4-63	A24-35*			
500	A1-59*	A4-31			
501	A1-57*	A4-53			

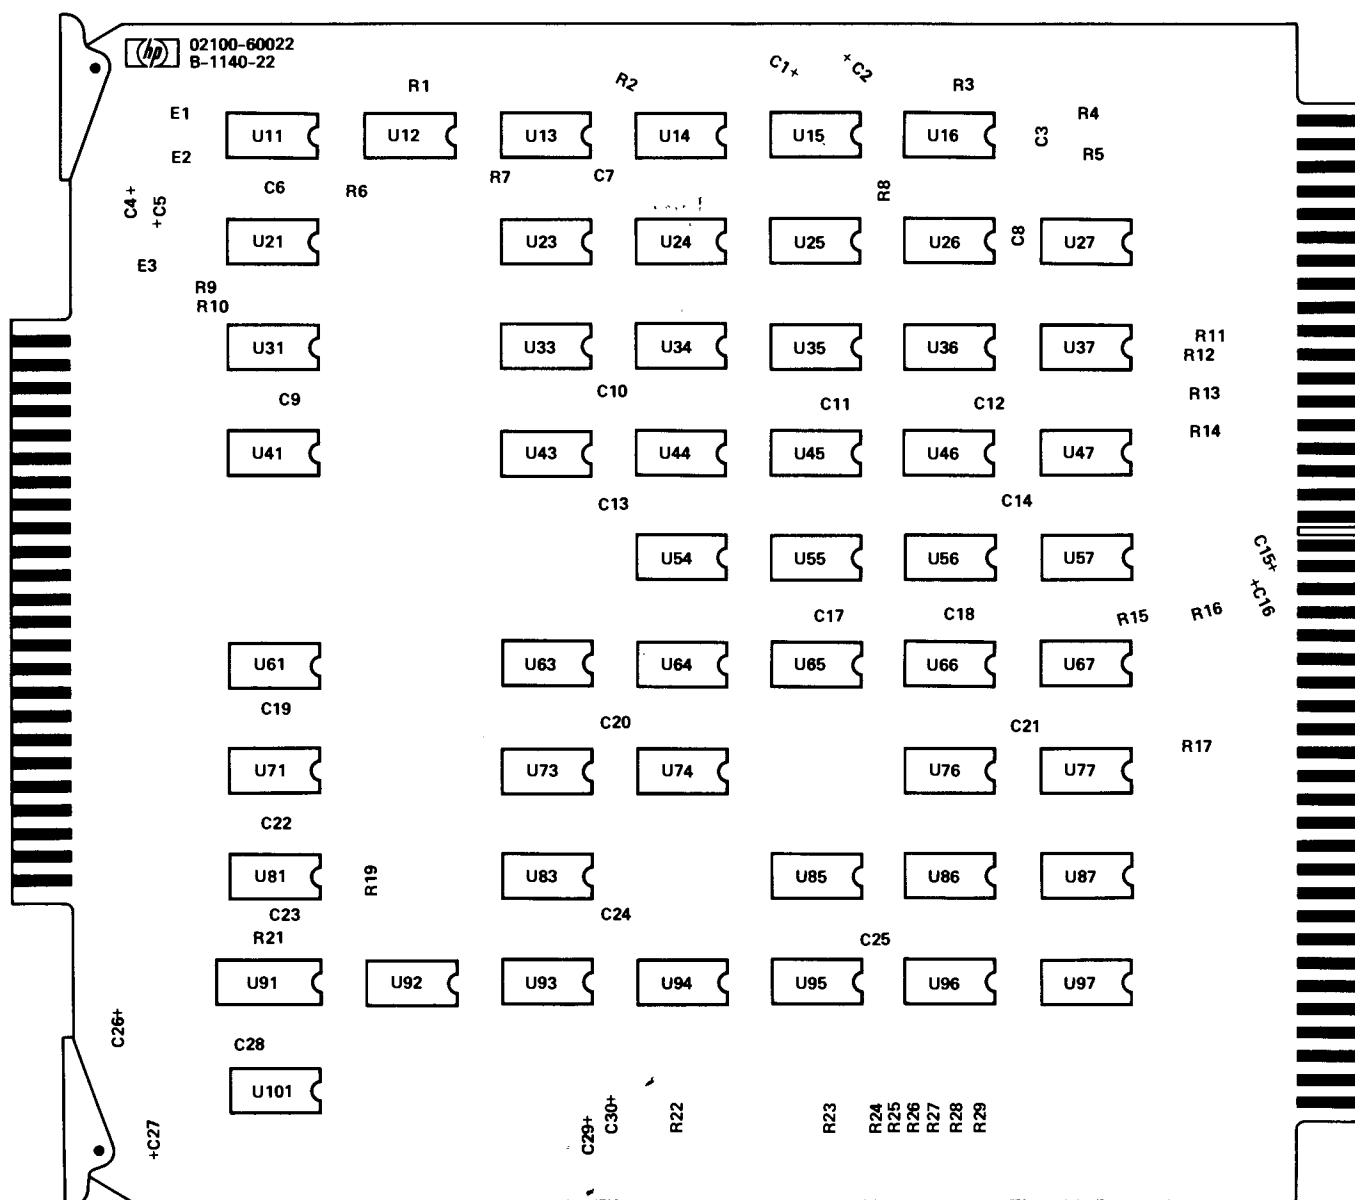

See table 4-6 for replaceable parts.

Table 4-7. A5 Arithmetic/Logic Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A5	02100-60001	1	ARITHMETIC LOGIC CARD	28480	02100-60001
A5C1	0180-0197	6	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A5C2	0160-2055	18	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C3	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C4	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C5	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A5C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C13	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A5C14	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A5C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C16	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C20	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A5C21	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A5C22	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A5E1	0360-0294	3	TERMINAL:SOLDER POINT	28480	0360-0294
A5E2	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A5E3	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A5R1	0698-7229	17	R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R2	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R3	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R4	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R5	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R6	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R7	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R8	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R9	0698-3443	1	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A5R10	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R11	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R12	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R13	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R14	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R15	0698-7236	2	R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A5R16	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A5R17	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R18	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R19	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R20	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A5R21	0698-7219	3	R:FXD FLM 196 OHM 2% 1/8W	28480	0698-7219
A5R22	0698-7219		R:FXD FLM 196 OHM 2% 1/8W	28480	0698-7219
A5R23	0698-7219		R:FXD FLM 196 OHM 2% 1/8W	28480	0698-7219
A5R24	0698-7214	2	R:FXD FLM 121 OHM 2% 1/8W	28480	0698-7214
A5R25	0698-7214		R:FXD FLM 121 OHM 2% 1/8W	28480	0698-7214
A5R26	0698-7221	2	R:FXD FLM 237 OHM 2% 1/8W	28480	0698-7221
A5R27	0698-7221		R:FXD FLM 237 OHM 2% 1/8W	28480	0698-7221
A5U11	1820-0620	8	IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U12	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U13	1820-0606	4	IC:TTL ARITH. LOGIC UNIT/FUNCTION GEN.	01295	SN74181N
A5U15	1820-0612	8	IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U16	1820-0971	8	IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U17	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U21	1820-0607	16	IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U22	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U23	1820-0610	8	IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U24	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U25	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U26	1820-0231	4	IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A5U27	1820-0186	10	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U31	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U32	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U35	1820-0955	2	IC:CTL 8-INPT DUAL OUTPUT AND GATE	07263	U6A995579X
A5U36	1820-0954	1	IC:CTL DUAL 4-INPT AND GATE	07263	U6A995479X
A5U37	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U41	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U42	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N

Table 4-7. A5 Arithmetic/Logic Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A5U43	1820-0606	1	IC:TTL ARITH. LOGIC UNIT/FUNCTION GEN.	01295	SN74181N
A5U45	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U46	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U47	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U51	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U52	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U53	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U54	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U55	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U56	1820-0231		IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A5U57	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U61	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U62	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U65	1820-0611		IC:TTL LOOK-AHEAD CARRY GENERATOR	01295	SN74182N
A5U66	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U67	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U71	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U72	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U73	1820-0606		IC:TTL ARITH. LOGIC UNIT/FUNCTION GEN.	01295	SN74181N
A5U75	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6B930959X
A5U76	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U77	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U81	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U82	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U83	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U84	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U85	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U86	1820-0231		IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A5U87	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U88	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U91	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U92	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U95	1820-0955		IC:CTL 8-INPT DUAL OUTPUT AND GATE	07263	U6A995579X
A5U96	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U97	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U101	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U102	1820-0620		IC:TTL DUAL 4-INPT MULTIPLEXER	01295	SN74153N
A5U103	1820-0606		IC:TTL ARITH. LOGIC UNIT/FUNCTION GEN.	01295	SN74181N
A5U105	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U106	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U107	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A5U111	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U112	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U113	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U114	1820-0610		IC:TTL DUAL 4-INPT MULTIPLEXER	07263	U6B930959X
A5U115	1820-0612		IC:CTL 8-BIT RAM (4 X 2)	07263	U6A903059X
A5U116	1820-0231		IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A5U117	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A5U121	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P
A5U122	1820-0607		IC:TTL 4-BIT RT/LT SHIFT REGISTER	04713	MC4012P

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE				

A5							
1	A5-26*	A6-78					
5	A4-13	A5-58*	A6-79				
6	A4-38	A5-22*					
7	A4-35	A5-21*	A6-77				
8	A4-41*	A5-7	A6-3*				
9	A4-9*	A5-23	A6-17*				
10	A4-36	A5-45*					
14	A4-14*	A5-41	A6-84*				
19	A1-51*	A5-61					
27	A3-50	A4-56	A5-19*	A6-11			
51	A4-66*	A5-50					
52	A4-3*	A5-46					
53	A4-4*	A5-56					
54	A4-5*	A5-55					
201	A1-43*	A5-3					
257	A4-8*	A5-24	A6-20*				
259	A4-20*	A5-12					
327	A4-42*	A5-83					
328	A4-74	A5-9*					
329	A4-22*	A5-5					
330	A4-15*	A5-64					
331	A4-25*	A5-62					
365	A3-21*	A5-27					
366	A3-23*	A5-28					
367	A3-6*	A5-57					
368	A3-24*	A4-57*	A5-35,36	A24-23*			
370	A3-10*	A5-17					
371	A3-7*	A5-15					
372	A3-5*	A5-13					
373	A3-8*	A5-11					
395	A3-67*	A5-77					
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*	
	A107-16						
397	A2-44 *	A5-80*	A6-60	A7-61*	A8-4*	A9-14*	
	A107-18						
398	A2-29 *	A5-76*	A6-61	A7-60*	A8-5*	A9-18*	
	A107-12						
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*	
	A107-14						
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*	
	A107-29						
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*	
	A107-38						
402	A2-12*	A5-49*	A6-67	A8-9*	A9-20*	A107-20	
403	A2-9 *	A5-43*	A6-66	A8-24*	A9-11*	A107-22	
404	A2-53*	A5-31*	A6-52	A8-14*	A9-5*	A107-44	
405	A2-54*	A5-32*	A6-51	A8-18*	A9-3*	A107-46	
406	A2-43*	A5-29*	A6-54	A8-19*	A9-9*	A107-34	
407	A2-49*	A5-30*	A6-53	A8-20*	A9-7*	A107-36	
408	A2-31*	A5-10*	A6-38	A8-21*	A9-8*	A107-51	
409	A2-21 *	A5-8*	A6-37	A8-22*	A9-4*	A107-42	
410	A2-10 *	A5-6*	A6-42	A8-23*	A9-6*	A107-50	
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*	
	A9-84*	A107-52					
434	A3-74*	A5-82					
450	A3-70*	A5-75					
471	A3-69*	A5-81					
472	A3-63*	A5-79					
478	A3-82*	A5-84					
479	A3-64*	A5-63					
480	A3-80*	A5-73					
484	A4-45*	A5-53					
485	A4-44*	A5-54					
486	A5-25*	A6-19					
489	A3-55*	A5-65					
490	A3-56*	A5-67					
491	A3-45*	A5-69					
492	A3-49*	A5-71					





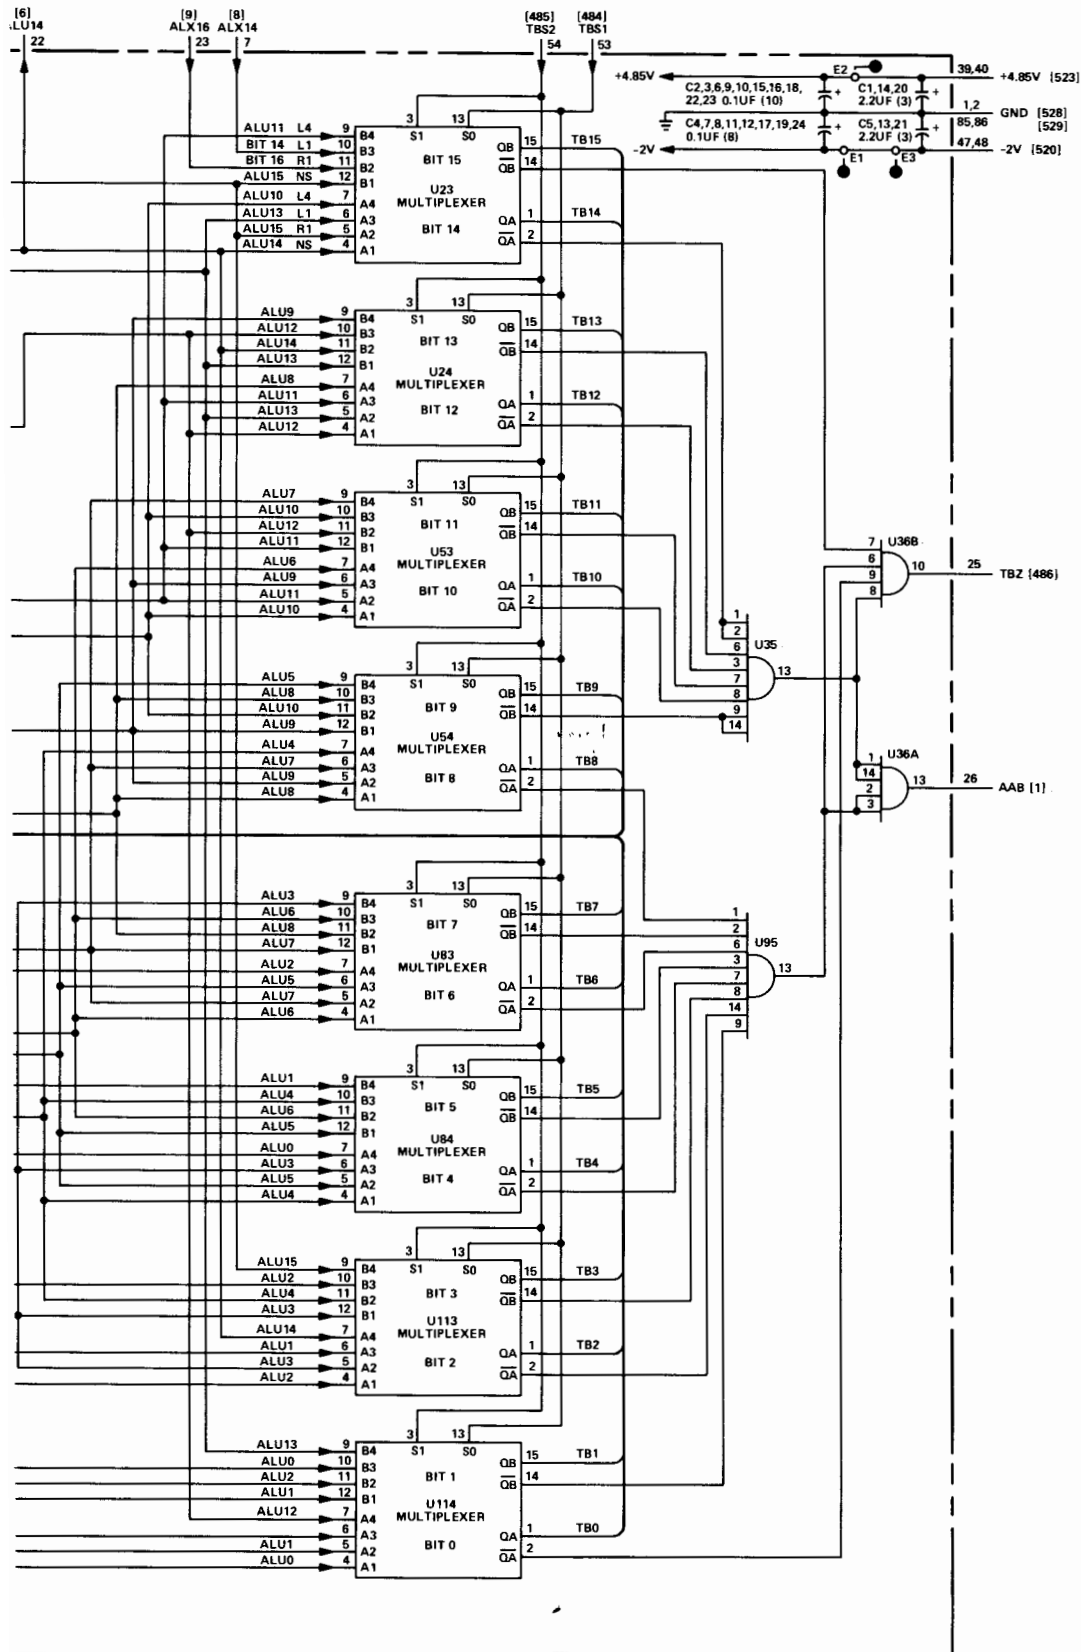


Figure 4-8. A5 Arithmetic/Logic Card, Parts Location and Schematic Diagrams

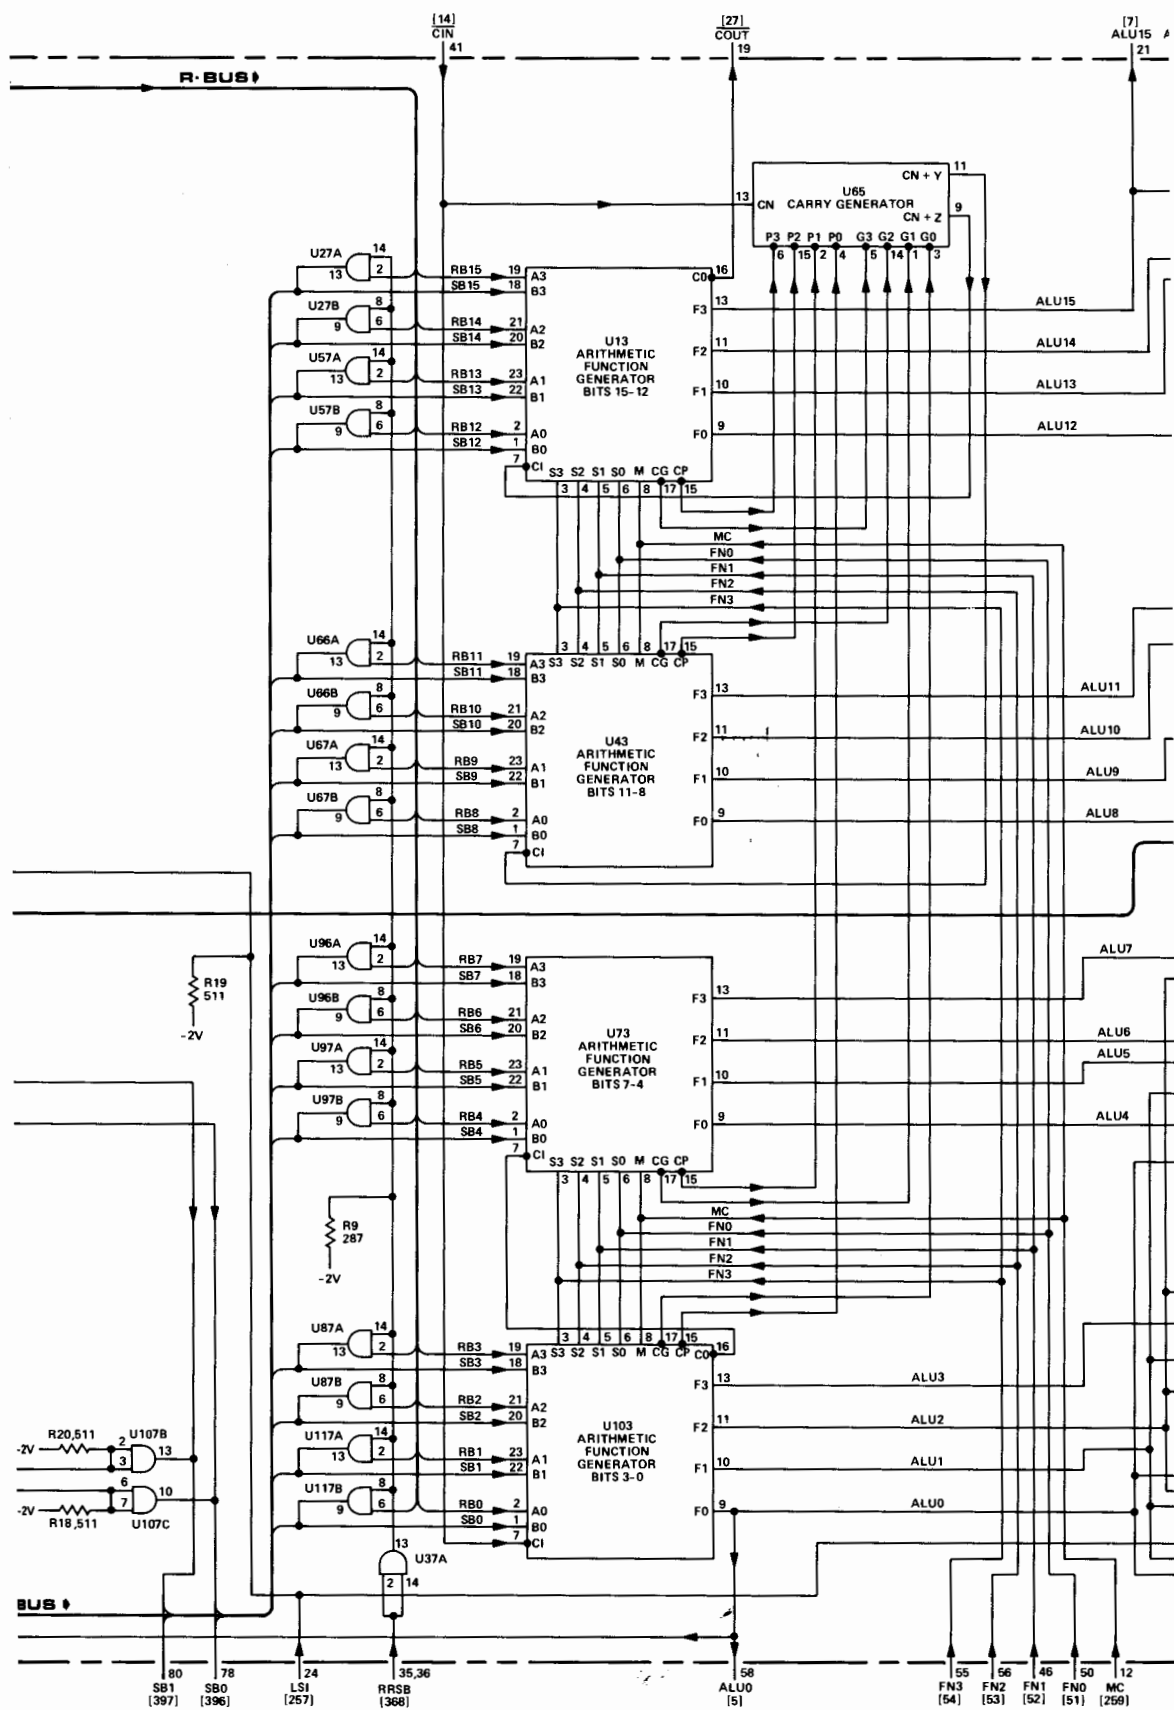

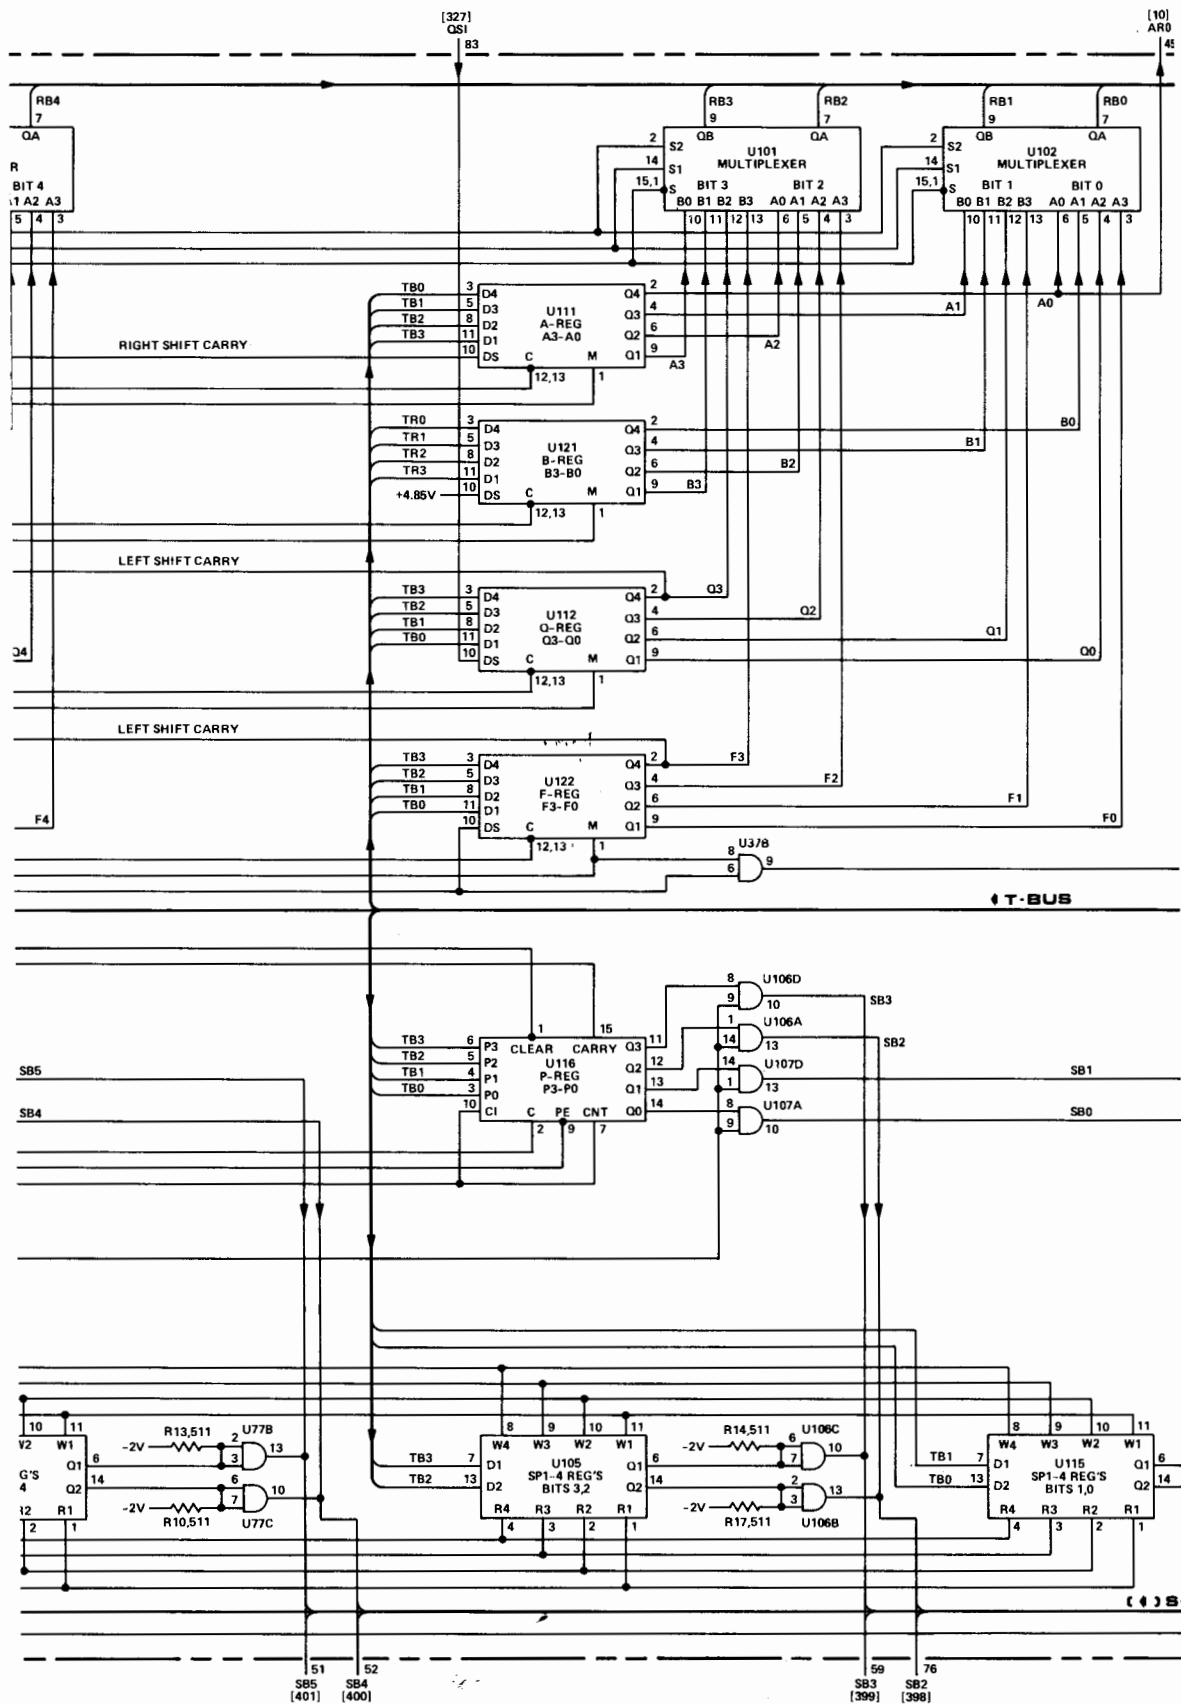

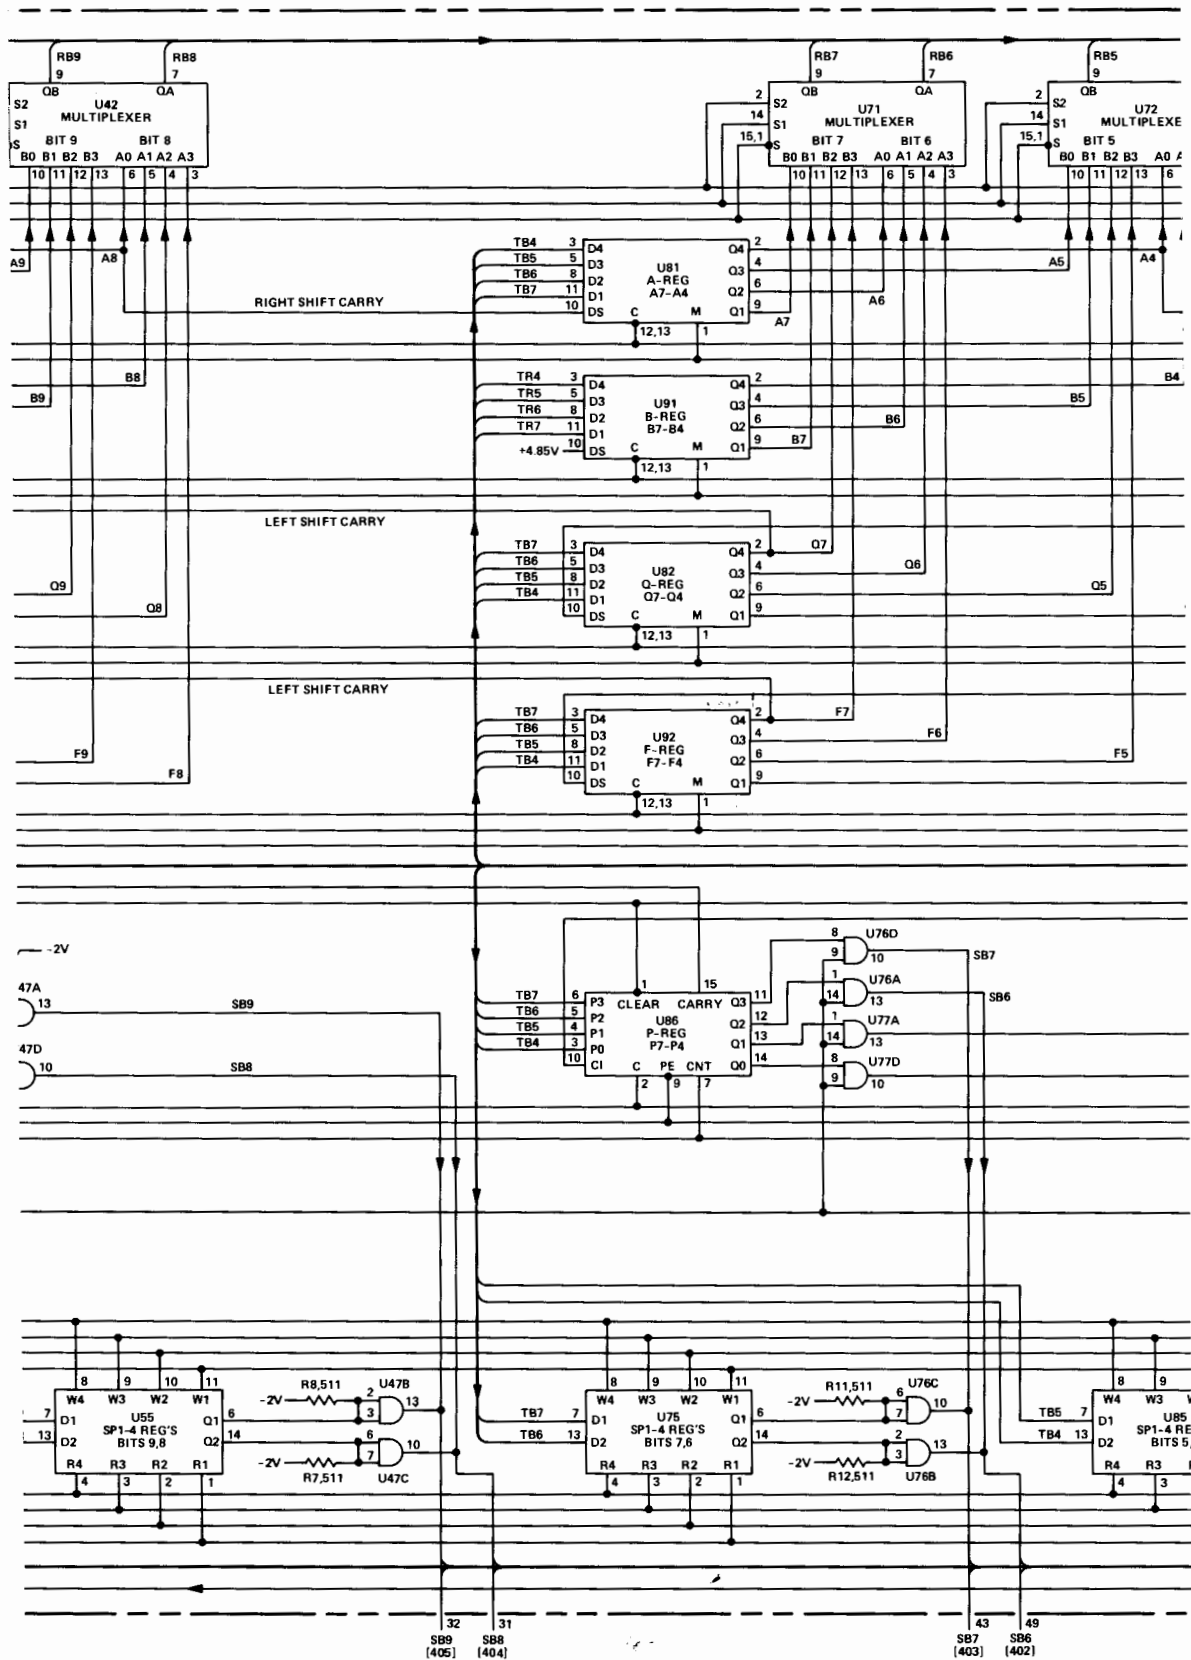


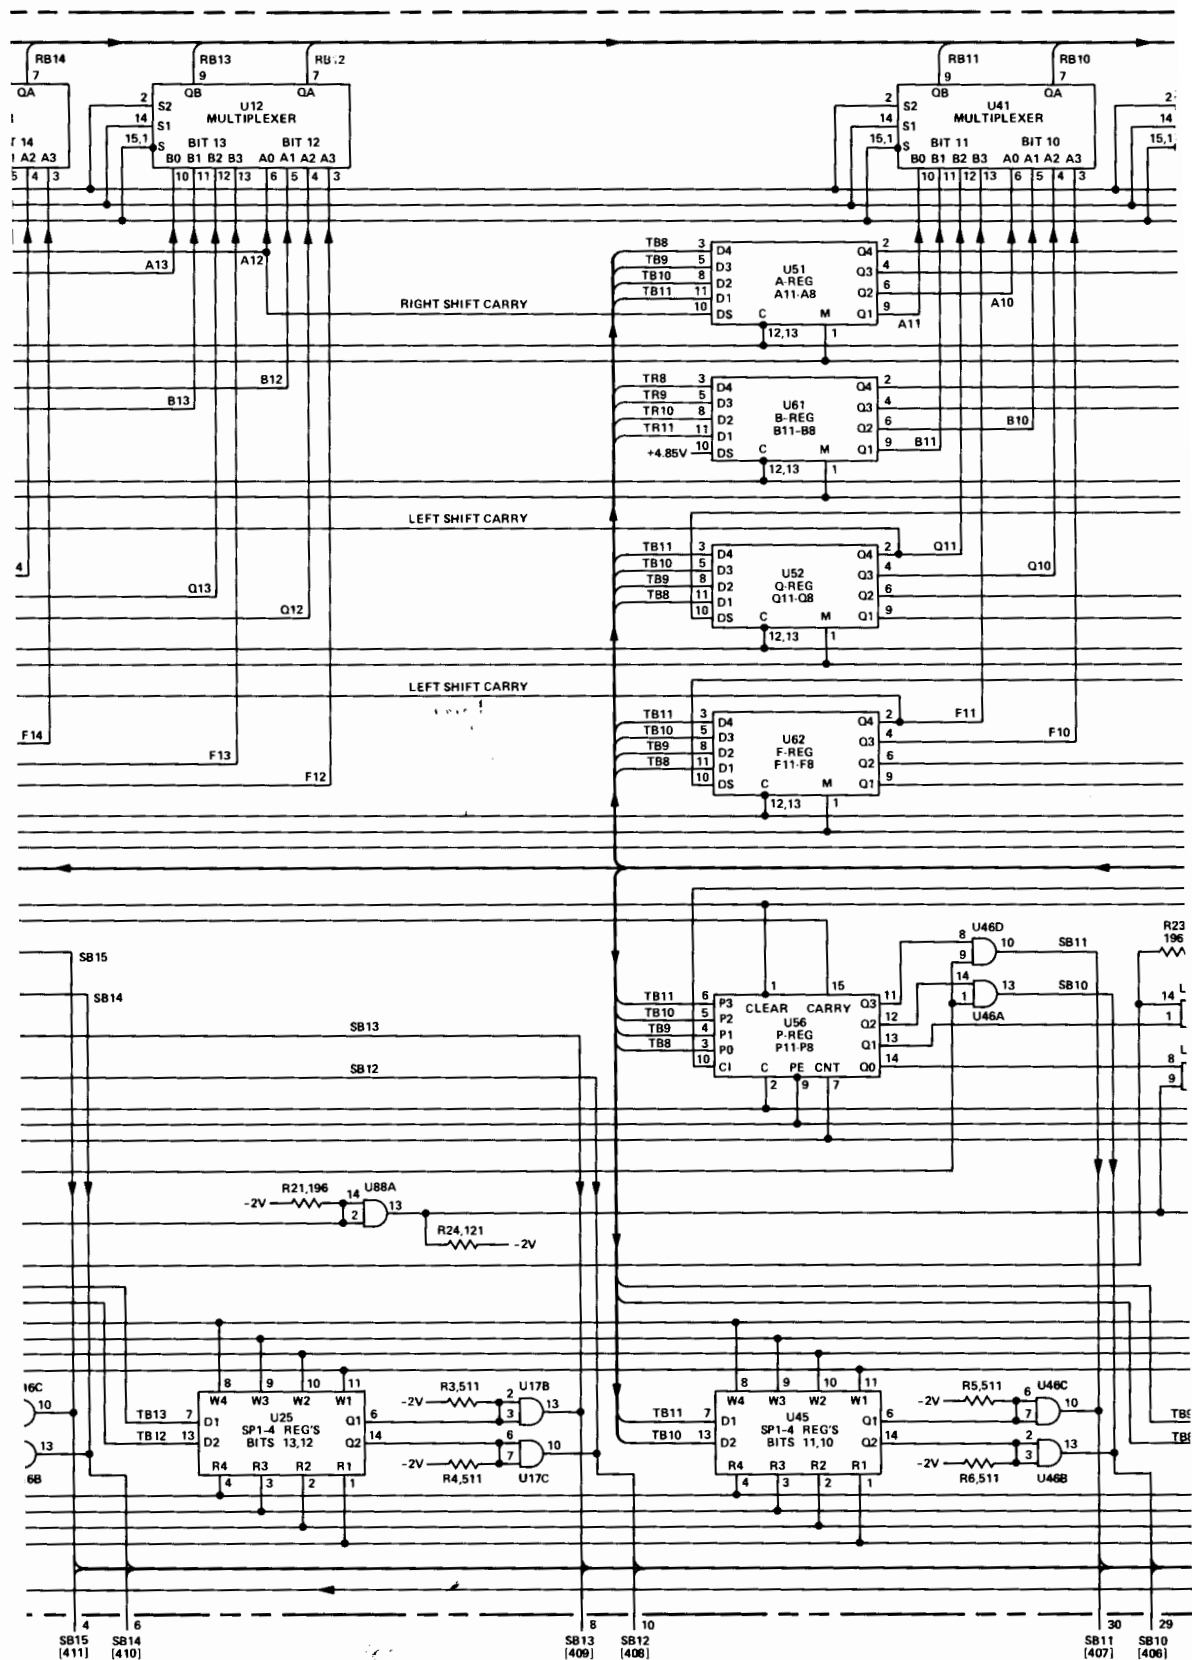

[illegible]

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 88-PIN CONNECTOR UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.

DWG. REV. C

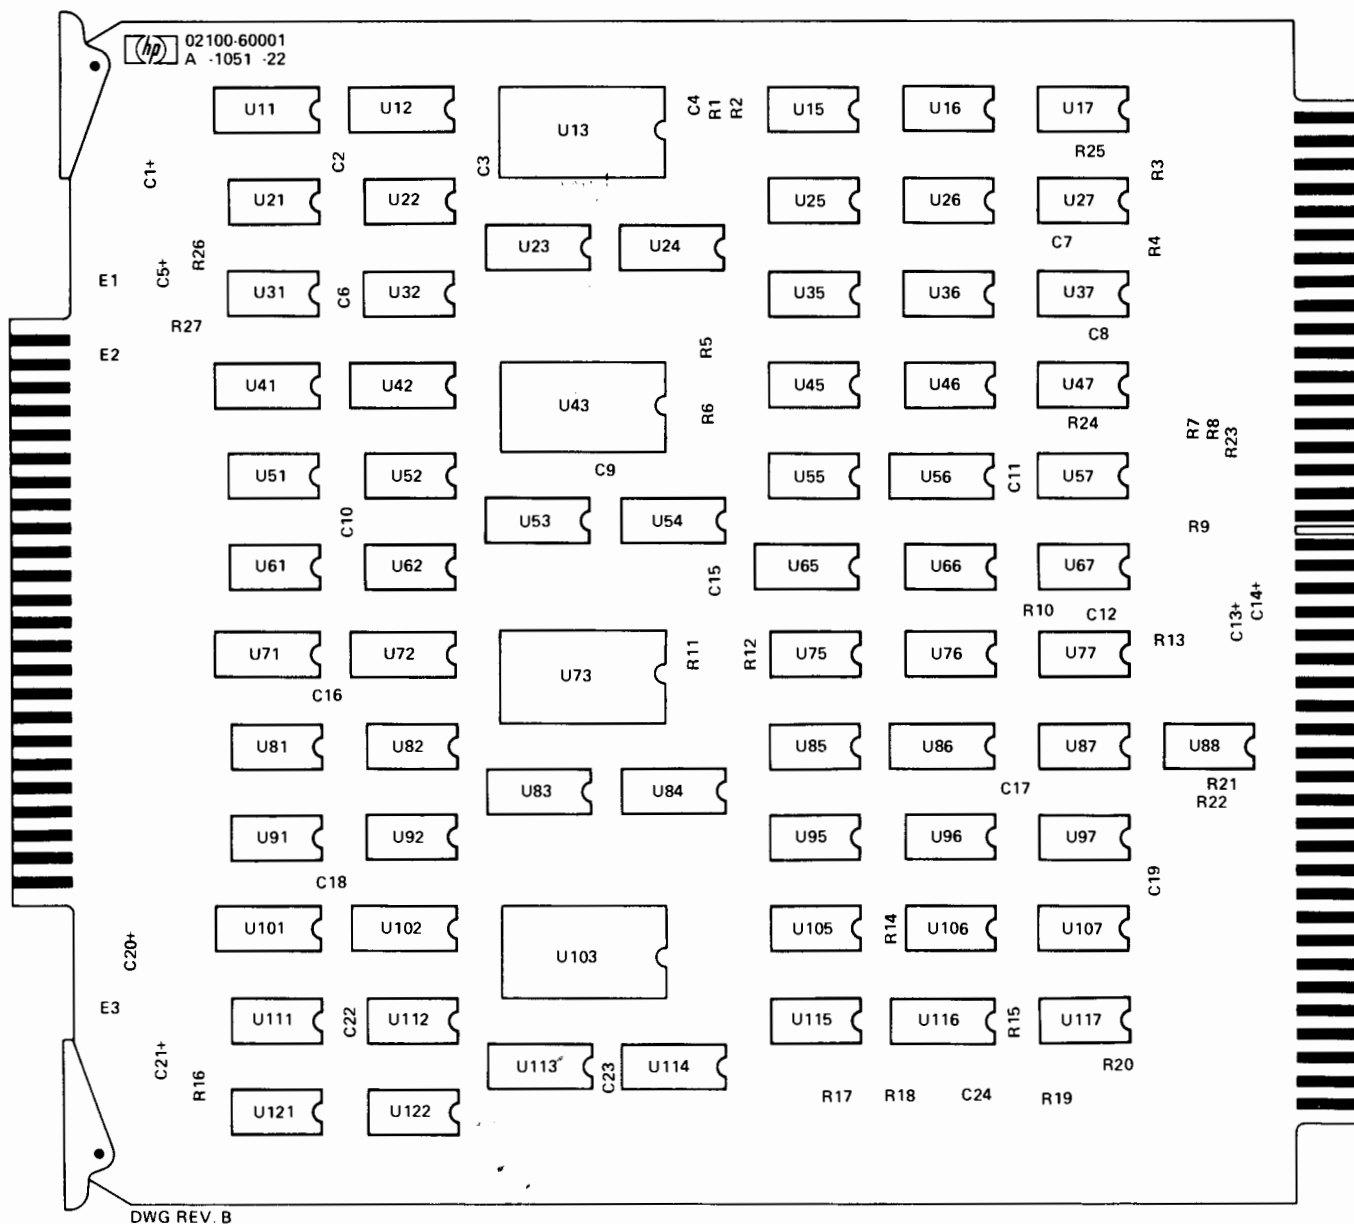

See table 4-7 for replaceable parts.



Table 4-8. A6 Instruction Register Decoder Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6	C2100-60003	1	INSTRUCTION REGISTER DECODER CARD	28480	02100-60003
A6C1	0160-2055	22	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C2	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C3	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C4	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C5	0180-0197	6	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C6	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C12	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C16	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C20	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C21	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C22	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A6C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C25	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C26	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C27	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C28	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A6C29(NOTE 4)	0140-0194	1	C: FXD MICA 110 PF 5%	72136	RD15F111J3C
A6R1(NOTE 1)	0757-0280	8	R: FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R2	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R3	0698-3443	1	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A6R4	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R5	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R6	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R7	0757-0416	2	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A6R8	0698-3442	2	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A6R9	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A6R10	0698-3446	1	R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A6R11	0698-3445	2	R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A6R12	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A6R13	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R14	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A6R15	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R16	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A6R17(NOTE 2)	0698-0082	1	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A6U11	1820-0512	1	IC:TTL DUAL D F/F	01295	SN74H74N
A6U12	1820-0141	7	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U13(NOTE 1)	1820-0451	1	IC:TTL DUAL J-K F/F	04713	MC3062P
A6U13(NOTE 3)	1820-0695	1	IC:TTL SHS DUAL J-K F/F W/PRESET	01295	SN74S113N
A6U14	1820-0971	10	IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U15	1820-0370	6	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A6U16	1820-0424	7	IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U17	1820-0608	6	IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A6U21	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A6U22	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U23	1820-0373	1	IC:TTL HS DUAL 4-INPT NAND GATE	01295	SN74H20N
A6U24	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U25	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U26	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U27	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A6U31	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U32	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U33	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U34	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A6U35	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A6U36	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A6U37	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U41	1820-0966	2	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A6U42	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U43	1820-0609	2	IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A6U44	1820-0239	2	IC:TTL QUAD 2-INPT NOR GATE	28480	1820-0239
A6U45	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U46	1820-0374	2	IC:TTL HS DUAL 4-INPT AND GATE	01295	SN74H21N
A6U47	1820-0205	1	IC:TTL HS QUAD 2-INPT OR GATE	28480	1820-0205

NOTES: 1. Used on card rev. 1109 only.
2. First used on card rev. 1202.


3. First used on card rev. 1140.
4. First used on card rev. 1238.

Table 4-8. A6 Instruction Register Decoder Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6U51	1820-0966	1	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A6U52	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U53	1820-0239		IC:TTL QUAD 2-INPT NOR GATE	28480	1820-0239
A6U54	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A6U55	1820-0231		IC:TTL 4-BIT SYNC BINARY COUNTER	07263	U6B931659X
A6U56	1820-0301	4	IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A6U57	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U61	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U62	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U63	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U64	1820-0374	5	IC:TTL HS DUAL 4-INPT AND GATE	01295	SN74H21N
A6U65	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A6U66	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A6U67	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A6U71	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A6U72	1820-0609	2	IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A6U73	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A6U74	1820-0608		IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A6U75	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A6U76	1820-0378		IC:TTL HS 2-WIDE 2-INPT	01295	SN74H51N
A6U77	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A6U82	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A6U83	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A6U84	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A6U85	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U86	1820-0378	1	IC:TTL HS 2-WIDE 2-INPT	01295	SN74H51N
A6U87	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A6U91	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U92	1820-0187		IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X
A6U93	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A6U94	1820-0953	1	IC:CTL TRIPLE 2-2-3 INPT AND GATE	14433	MIC 953
A6U95	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U96	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A6U97	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A6U104	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A6U105	1820-0605	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H01N
A6U107	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X

REF. NO.	BACKPLANE LOCATION				* INDICATES SIGNAL SOURCE		
A6							
21	A1-84*	A4-69	A6-31	A8-70			
228	A2-42	A6-35*	A7-68				
229	A2-45	A6-36*	A7-63				
230	A2-26	A6-56*	A7-67				
231	A2-50	A6-34*	A7-30				
232	A2-72	A6-62*	A7-26				
233	A2-66	A6-70*	A7-29				
234	A2-84	A6-69*	A8-41				
235	A2-75	A6-75*	A8-38				
236	A2-76	A6-57*	A8-45				
237	A2-61	A4-54	A6-63*	A8-65			
238	A2-83	A3-17	A6-59*				
239	A1-9	A2-80	A3-71	A4-24	A6-58*	A8-63	
240	A1-3	A2-79	A6-44*				
241	A1-7	A2-78	A6-49*				
242	A1-5	A2-81	A6-46*				
243	A1-12	A2-82	A6-45*				
333	A3-19*	A6-81					
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*	
	A107-16						
397	A2-44*	A5-80*	A6-60	A7-61*	A8-4*	A9-14*	
	A107-18						
398	A2-29*	A5-76*	A6-61	A7-60*	A8-5*	A9-18*	
	A107-12						
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*	
	A107-14						
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*	
	A107-29						
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*	
	A107-38						
402	A2-12*	A5-49*	A6-67	A8-9*	A9-20*	A107-20	
403	A2-9*	A5-43*	A6-66	A8-24*	A9-11*	A107-22	
404	A2-53*	A5-31*	A6-52	A8-14*	A9-5*	A107-44	
405	A2-54*	A5-32*	A6-51	A8-18*	A9-3*	A107-46	
406	A2-43*	A5-29*	A6-54	A8-19*	A9-9*	A107-34	
407	A2-49*	A5-30*	A6-53	A8-20*	A9-7*	A107-36	
408	A2-31*	A5-10*	A6-38	A8-21*	A9-8*	A107-51	
409	A2-21*	A5-8*	A6-37	A8-22*	A9-4*	A107-42	
410	A2-10*	A5-6*	A6-42	A8-23*	A9-6*	A107-50	
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*	
	A9-84*	A107-52					
476	A3-44*	A6-30					

INSTRUCTION REGISTER DECODER CARD (82100-00003, REV. 1100, 1140, 1202, 1238)

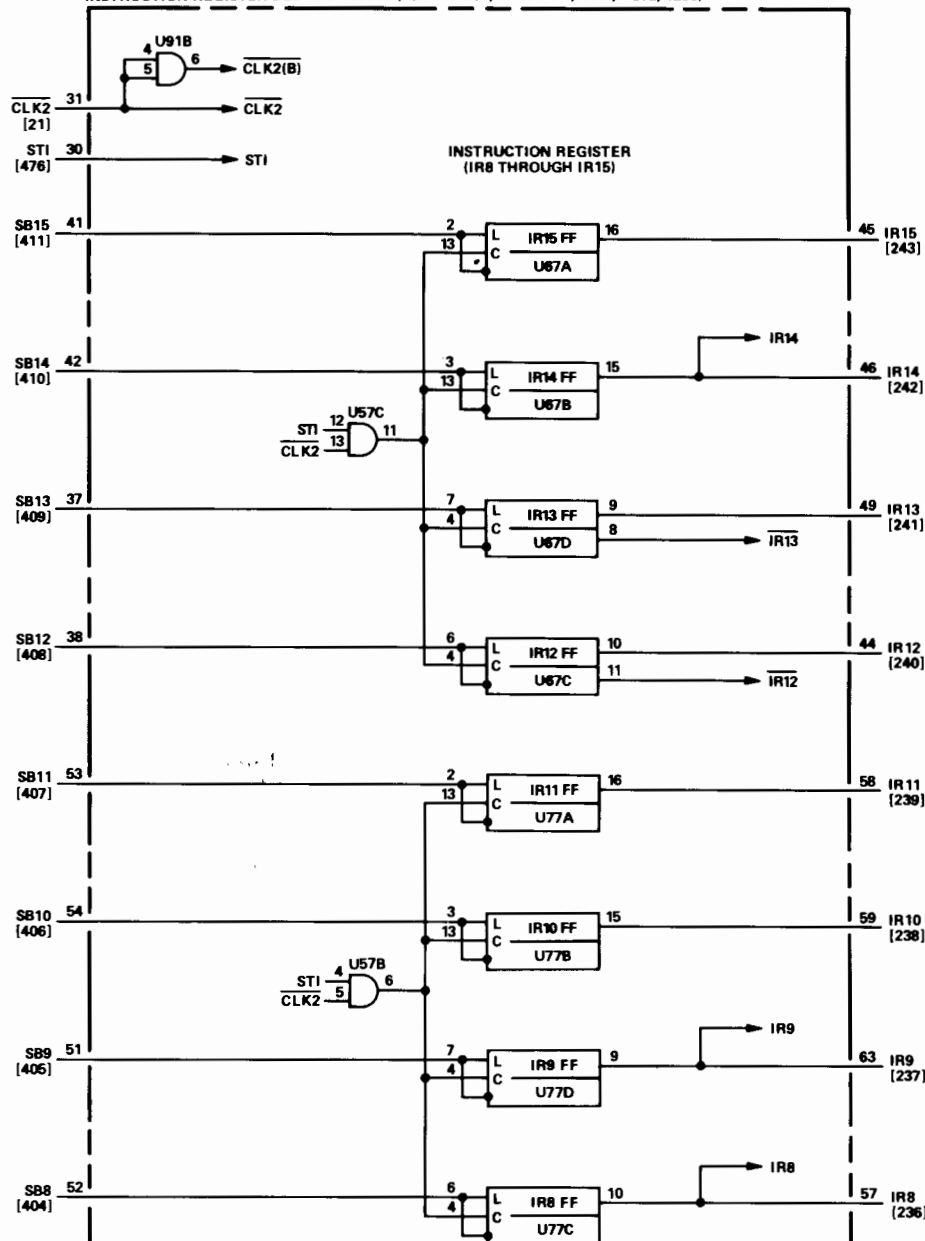


FF DEFINITIONS

RCR = REPEAT COUNT ROLLOVER

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. DECODED ROM MICROINSTRUCTIONS MNEMONICS AND DECODED BASIC INSTRUCTION MNEMONICS APPEAR IN PARENTHESIS (). *INDICATES A OR B.
5. R1 USED ON CARD REV. 1100 ONLY.
6. R17 NOT USED ON CARD REV. 1140 AND 1100.
7. C29 FIRST USED ON CARD REV. 1238.

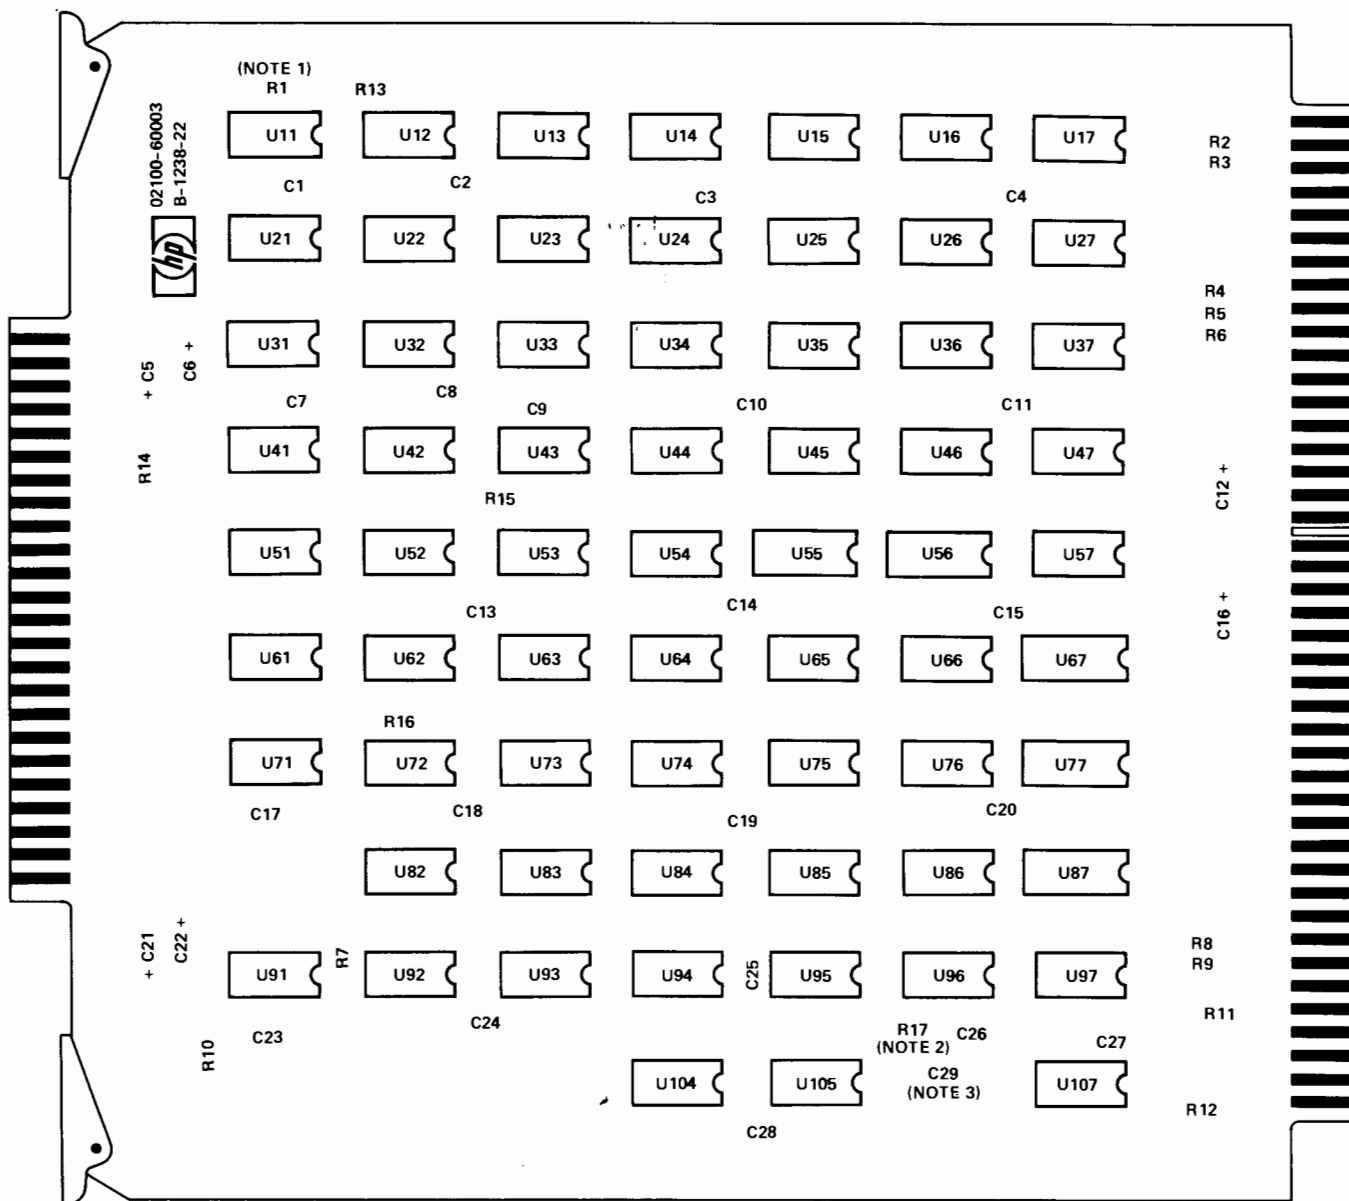

DWG. REV. F

- NOTES: 1. R1 USED ON CARD REV. A-1109-22.
2. R17 NOT USED ON CARD REV. A-1109-22 AND B-1140-22.
3. C29 NOT USED ON CARD REV. A-1109-22, B-1140-22, AND B-1202-22.

See table 4-8 for replaceable parts.

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE			

A6						
1	A5-26*	A6-78				
2	A3-52	A6-5*				
5	A4-13	A5-58*	A6-79			
7	A4-35	A5-21*	A6-77			
8	A4-41*	A5-7	A6-3*			
9	A4-9*	A5-23	A6-17*			
11	A4-84*	A6-18				
12	A4-33	A6-25*				
13	A3-43	A4-32	A6-7*			
14	A4-14*	A5-41	A6-84*			
23	A1-70*	A6-55				
27	A3-50	A4-56	A5-19*	A6-11		
32	A6-73*	A9-36*	A24-55*	A107-76		
39	A4-51*	A6-83				
41	A3-61*	A6-15				
44	A4-10	A6-82*	A24-22			
48	A4-23*	A6-80				
55	A1-80	A3-35*	A6-43			
223	A1-83	A6-21*	A7-38			
257	A4-8*	A5-24	A6-20*			
274	A6-13	A8-80*				
275	A6-4*	A8-36				
292	A4-68*	A6-8	A24-51			
335	A1-8*	A2-70	A4-30	A6-9	A7-20	A8-75
	A107-82					
336	A4-67*	A6-68				
338	A2-32*	A6-16				
339	A2-33*	A6-14				
340	A2-28*	A6-10				
341	A2-27*	A6-12				
342	A2-22*	A6-22				
343	A2-23*	A6-23				
344	A2-16*	A6-24				
345	A2-17*	A6-26				
376	A6-74*	A9-34*	A24-57*	A107-75		
377	A3-31	A6-27*				
430	A1-44	A6-28*				
441	A2-77*	A3-84	A4-81	A6-6*		
442	A3-65	A4-6	A6-71*			
443	A4-50	A6-50*				
451	A3-62	A4-12	A6-72*			
454	A1-55	A2-62	A3-42	A4-52	A6-76*	
486	A5-25*	A6-19				
502	A1-13*	A6-29				



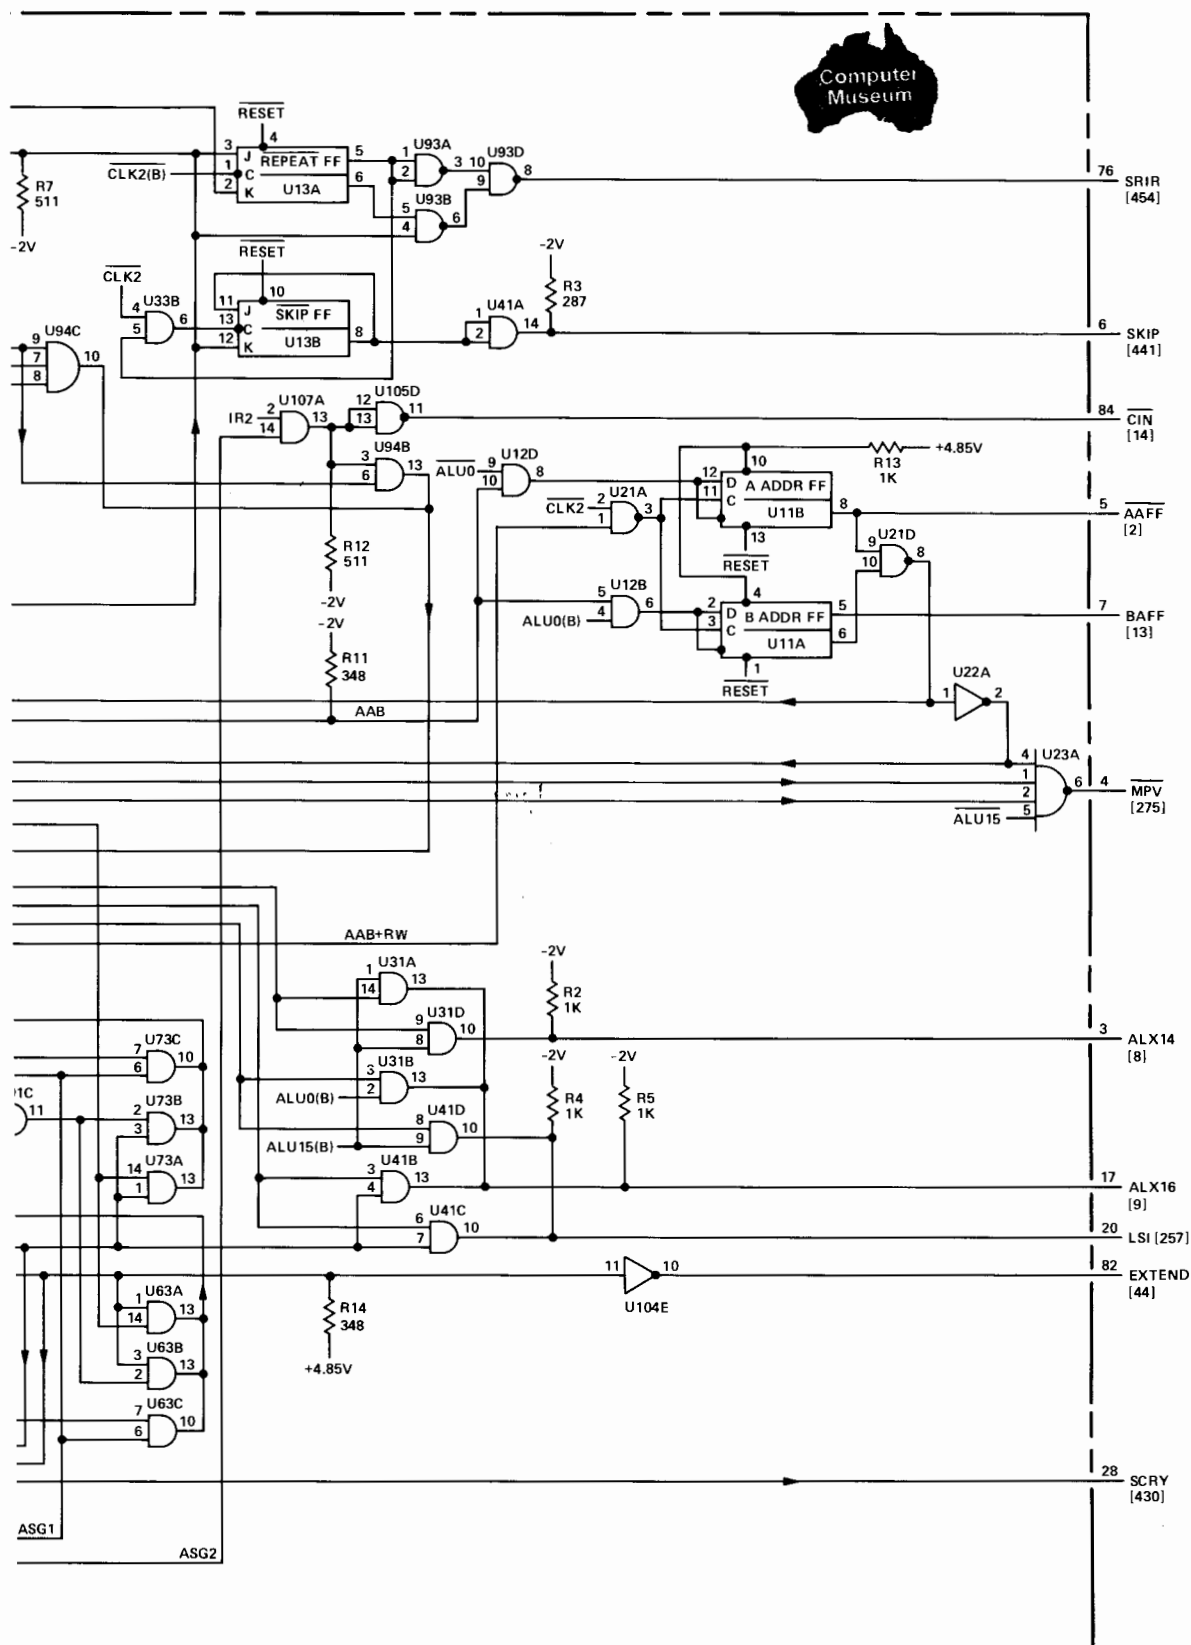


Figure 4-9. A6 Instruction Register Decoder Card, Parts Location and Schematic Diagrams (Sheet 2 of 2)

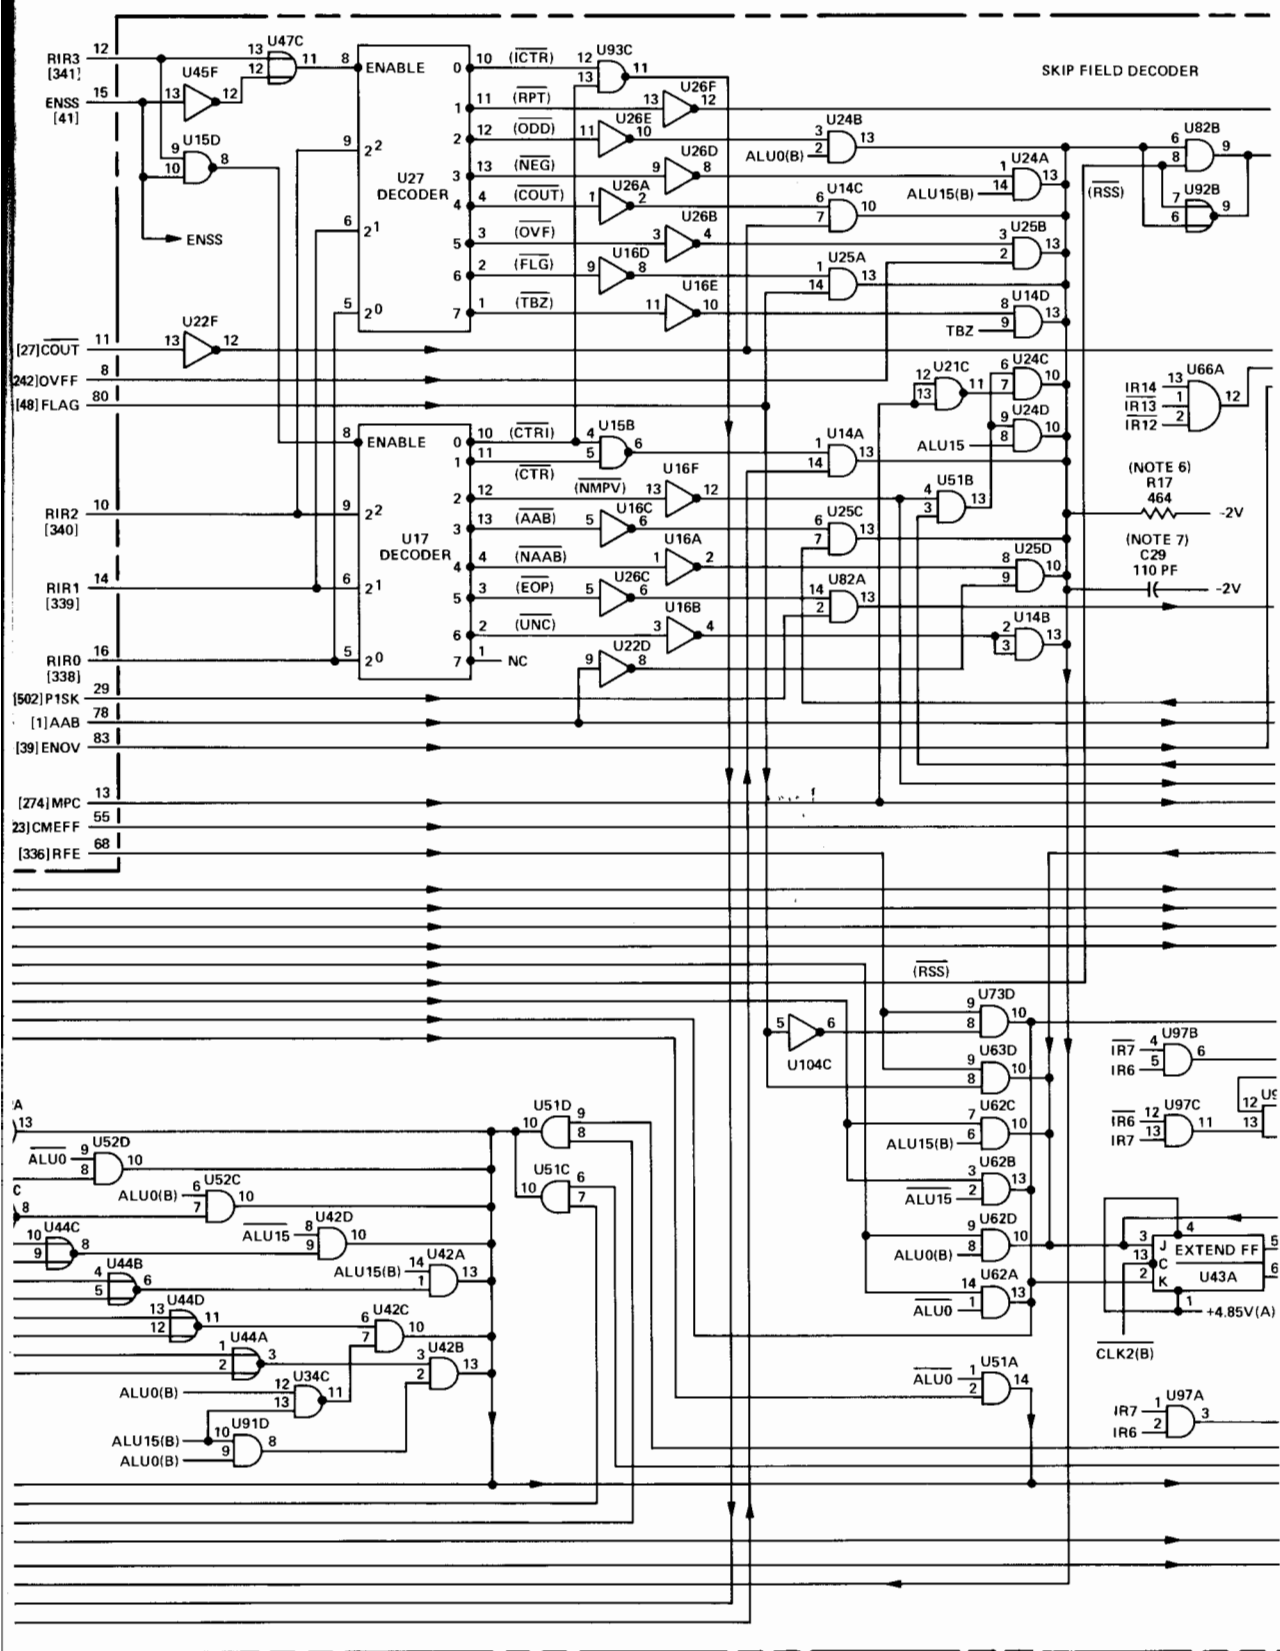

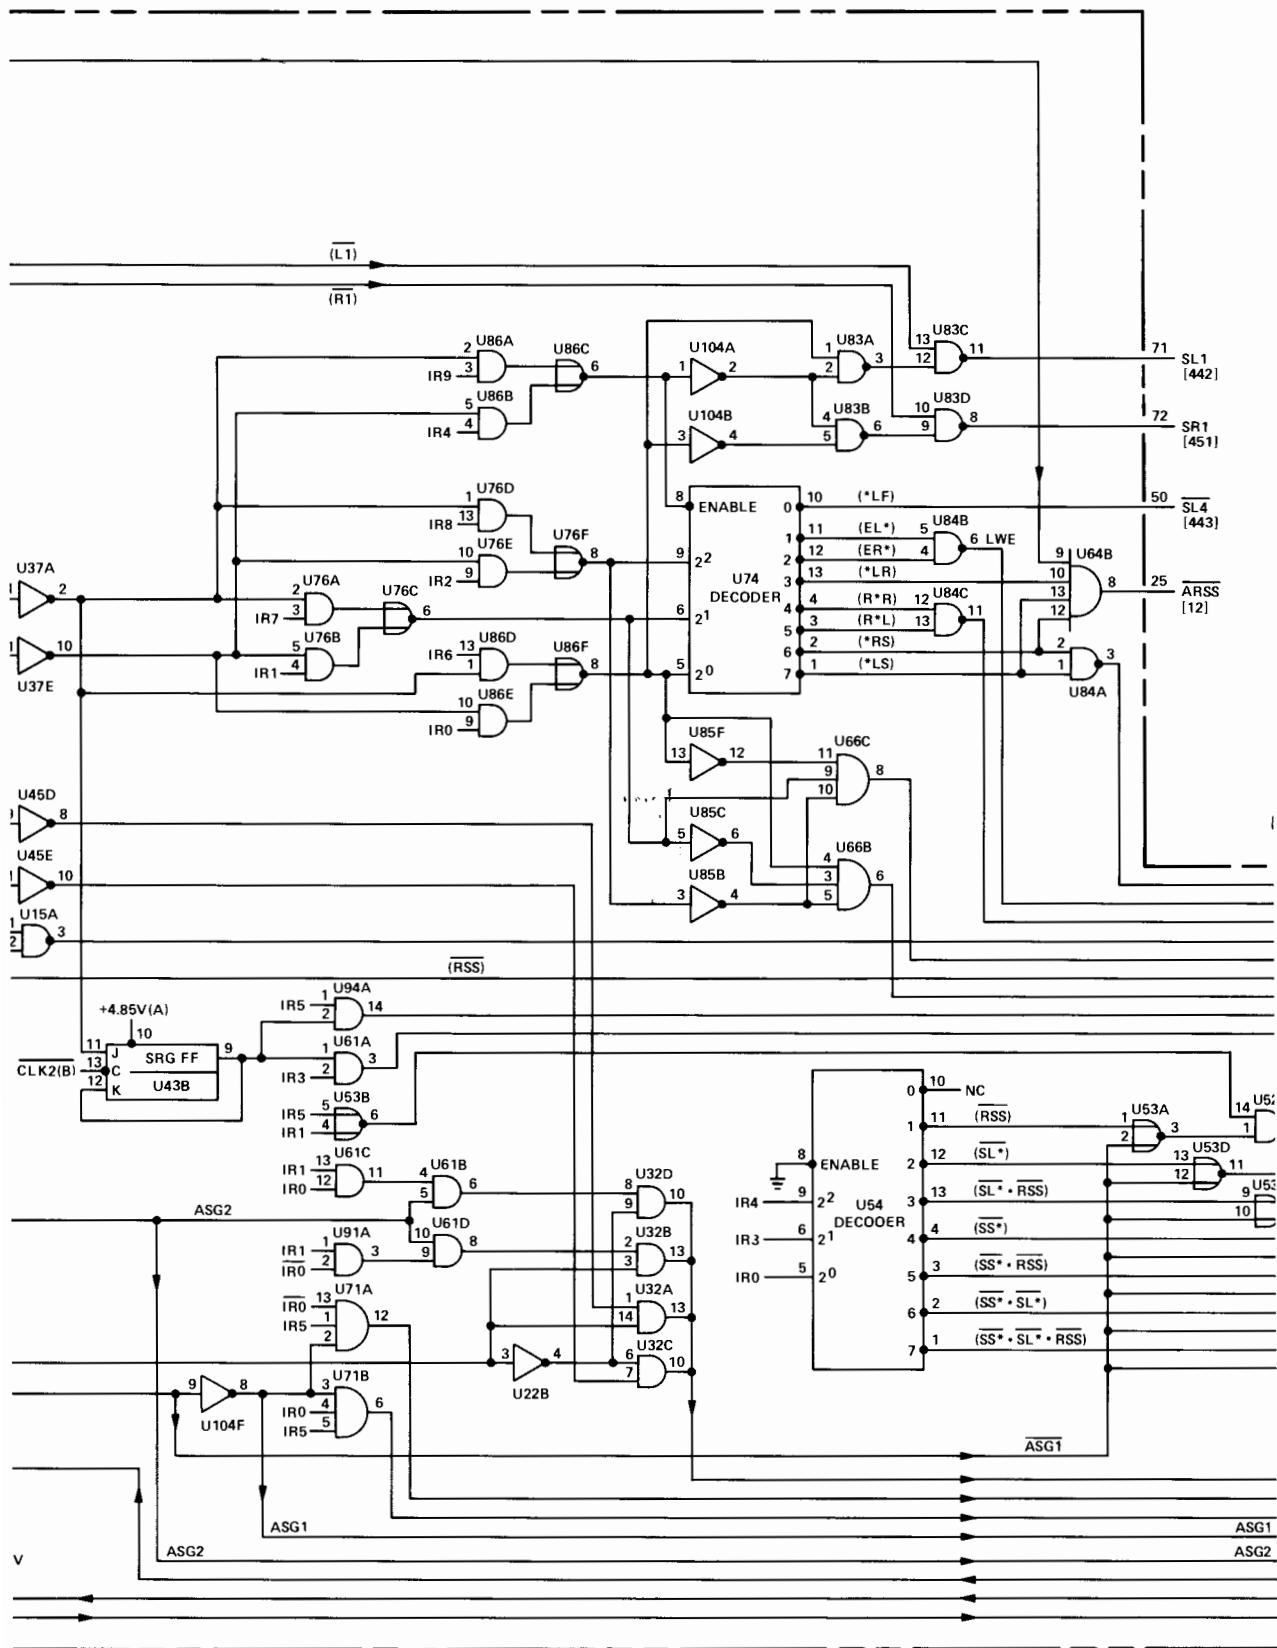


DWG REV. D (SHEET 2 OF 2)
SEE SHEET 1 FOR NOTES

IOGI
[223]

RWCW
[377]

RW
1376CW
[32]

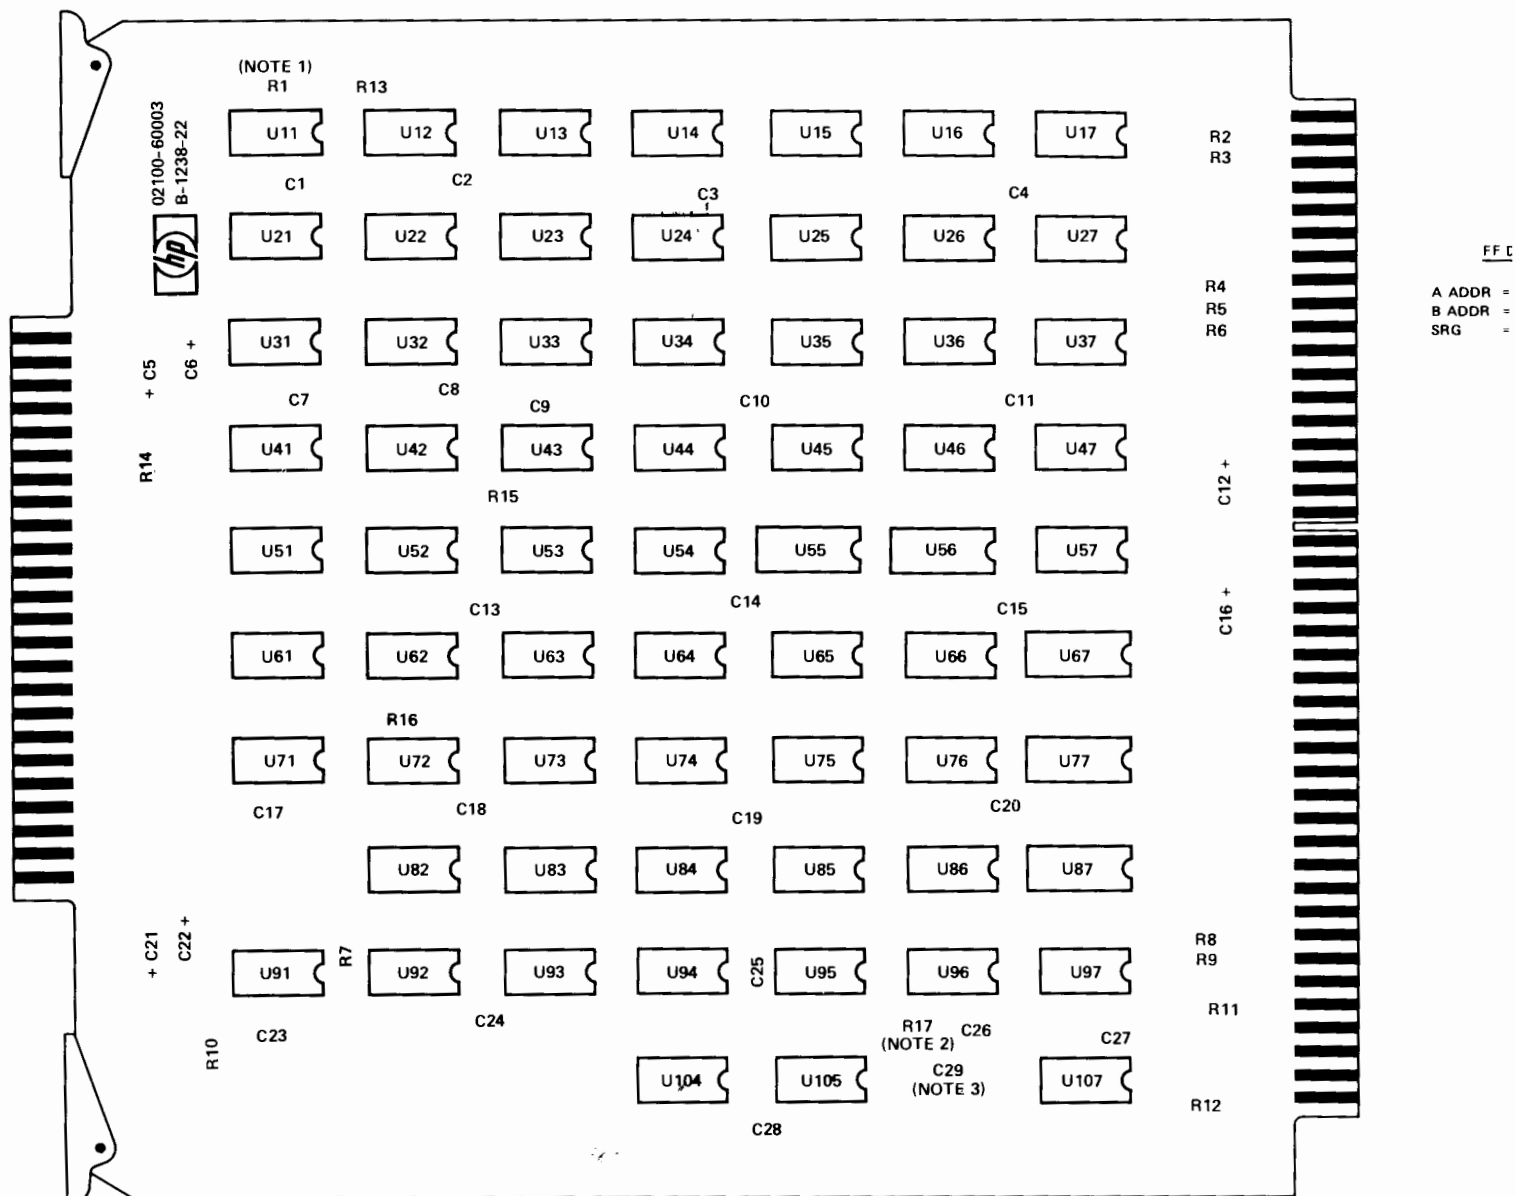

DWG REV. F

- NOTES: 1. R1 USED ON CARD REV. A-1109-22.
2. R17 NOT USED ON CARD REV. A-1109-22 AND B-1140-22.
3. C29 NOT USED ON CARD REV. A-1109-22, B-1140-22, AND B-1202-22.

See table 4-8 for replaceable parts.

Table 4-9. A7 I/O Control Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7	C2100-60024	1	I/O CONTROL CARD	28480	02100-60024
A7C1	0180-0197	10	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C2	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C3	0160-2055	23	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C4	0180-2126	1	C:FXD ELECT 1.5 UF 5% 35VDCW	28480	0180-2126
A7C5	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C9	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C10	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C16	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C20	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C21	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C22	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C25	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C26	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C27	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C28	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C29	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C30	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C31	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C32	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A7C33	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7C34 (NOTE 1)	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7CR1	1902-3043	1	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A7Q1	1854-0215	5	DIODE: BREAKDOWN 3.32V 2%	04713	SZ10939-45
A7Q2	1854-0215		TSTR:SI NPN	80131	2N3904
A7Q3	1854-0215		TSTR:SI NPN	80131	2N3904
A7Q4	1854-0215		TSTR:SI NPN	80131	2N3904
A7Q5	1854-0215		TSTR:SI NPN	80131	2N3904
A7R1	0683-3915	1	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915
A7R2	0683-1825	1	R:FXD COMP 1800 OHM 5% 1/4W	01121	CB 1825
A7R3	0698-7253	1	R:FXD MET FLM 5.11K OHM 2% 1/8W	28480	0698-7253
A7R5	0683-1025	2	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025
A7R6	0698-7229	18	R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A7R7	0683-1525	1	R:FXD COMP 1500 OHM 5% 1/4W	01121	CB 1525
A7R8	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025
A7R9	0683-4715	5	R:FXD COMP 470 OHM 5% 1/4W	01121	CB 4715
A7R10	0698-7236	23	R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A7R11	0698-7228	18	R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
A7R12	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
A7R13	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A7R14	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
A7R15	0698-7240	8	R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
A7R16	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
A7R17	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
A7R18	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A7R19	0698-3394	1	R:FXD MET FLM 31.6 OHM 1% 1/2W	28480	0698-3394
A7R20	0683-4715		R:FXD COMP 470 OHM 5% 1/4W	01121	CB 4715
A7R21	0683-1005	1	R:FXD COMP 10 OHM 5% 1/4W	01121	CB 1005
A7R22	0683-4715		R:FXD COMP 470 OHM 5% 1/4W	01121	CB 4715
A7R23	0683-1015	4	R:FXD COMP 100 OHM 5% 1/4W	01121	CB 1015
A7R24	0683-1015		R:FXD COMP 100 OHM 5% 1/4W	01121	CB 1015
A7R25	0683-4715		R:FXD COMP 470 OHM 5% 1/4W	01121	CB 4715
A7R26	0683-1015		R:FXD COMP 100 OHM 5% 1/4W	01121	CB 1015
A7R27	0683-4715		R:FXD COMP 470 OHM 5% 1/4W	01121	CB 4715
A7R28	0683-1015		R:FXD COMP 100 OHM 5% 1/4W	01121	CB 1015
A7R30	0698-7231	1	R:FXD FLM 619 OHM 2% 1/8W	28480	0698-7231
A7R31	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
A7R32	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
A7R34	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
A7R35	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A7R36	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A7R37	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
A7R38	0698-7217	1	R:FXD FLM 162 OHM 2% 1/8W	28480	0698-7217

NOTE: 1. C34 first used on card ref. 1215.

Table 4-9. A7 I/O Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ATR39	0698-7236	2	R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR40	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR41	0698-7223		R:FXD FLM 287 OHM 2% 1/8W	28480	0698-7223
ATR42	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR43	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR44	0698-7223		R:FXD FLM 287 OHM 2% 1/8W	28480	0698-7223
ATR45	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR46	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR47	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR48	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR49	0698-7224	3	R:FXD FLM 316 OHM 2% 1/8W	28480	0698-7224
ATR50	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR51	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR52	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR53	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR54	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR55	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR56	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR57	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR58	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR59	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR60	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR61	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR62	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR63	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR64	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR65	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR66	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR67	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR68	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR69	0698-7236	1	R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR70	0698-7233		R:FXD FLM 750 OHM 2% 1/8W	28480	0698-7233
ATR71	0698-7225		R:FXD FLM 348 OHM 2% 1/8W	28480	0698-7225
ATR72	0698-7224		R:FXD FLM 316 OHM 2% 1/8W	28480	0698-7224
ATR73	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR74	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR75	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR76	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR77	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR78	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR79	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR80	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR81	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR82	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR83	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR84	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR85	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR86	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR87	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR88	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR89	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR90	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATR91	0698-7224		R:FXD FLM 316 OHM 2% 1/8W	28480	0698-7224
ATR92	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
ATR93	0698-7230		R:FXD FLM 562 OHM 2% 1/8W	28480	0698-7230
ATR94	0698-7226	1	R:FXD FLM 383 OHM 2% 1/8W	28480	0698-7226
ATR95	0698-7228		R:FXD FLM 464 OHM 2% 1/8W	28480	0698-7228
ATR96	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
ATR97	0698-7240		R:FXD MET FLM 1.47K OHM 2% 1/8W	28480	0698-7240
ATR98	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
ATS1	3101-1213	1	SWITCH:TOGGLE DPST-DB SUB-MINIATURE	81640	T8001
ATU12	1820-0141	8	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU13	1820-0186	7	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU14	1820-0605	2	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H01N
ATU15	1820-0370	9	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU16	1820-0613	7	IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU17	1820-0141	3	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU22	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
ATU23	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
ATU24	1820-0371	3	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
ATU25	1820-0370	5	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU26	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
ATU27	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
ATU31	1820-0187		IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X
ATU32	1820-0605		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H01N

Table 4-9. A7 I/O Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ATU33	1820-0512	2	IC:TTL DUAL D F/F	01295	SN74H74N
ATU34	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU35	1820-0373	2	IC:TTL HS DUAL 4-INPT NAND GATE	01295	SN74H20N
ATU36	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
ATU37	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU42	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU43	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
ATU44	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU45	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU46	1820-0379		IC:TTL HS 4W 2-2-2-3 INPT AND/OR GATE	01295	SN74H52N
ATU47	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU51	1820-0613		IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU52	1820-0613		IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU53	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU54	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
ATU55	1820-0373		IC:TTL HS DUAL 4-INPT NAND GATE	01295	SN74H20N
ATU56	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
ATU57(NOTE 1)	1820-0451	1	IC:TTL DUAL J-K F/F	04713	MC3062P
ATU62	1820-0613		IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU63	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
ATU64	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU65	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU66	1820-0485	1	IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
ATU67	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
ATU71	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
ATU72	1820-0613		IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU73	1820-0613		IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU74	1820-0301	2	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
ATU75	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU76	1820-0609	1	IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
ATU77	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU81	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
ATU82	1820-0613		IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
ATU83	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
ATU84	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU85	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU86	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
ATU87	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU92	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU93	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
ATU97	1820-0482	2	IC:CTL 1 OF 8 DECODER	07263	U6B983849X
ATU105	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
ATU106	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U6B983849X
ATU107	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P

NOTES: 1. Part no. 1820-0695 used on some cards; the two parts are interchangeable.

REF. NO.	BACKPLANE LOCATION				* INDICATES SIGNAL SOURCE
A7					
17	A7-10	A8-66*	A9-44	A10-21 THRU A23-21	
18	A4-76	A7-5	A8-51*	A9-24	A10-7 THRU A23-7
22	A1-78*	A3-81	A7-56	A8-42	A9-76 A24-64
	A107-69				
24	A1-77*	A7-25			
30	A7-19*	A9-82	A10-13 THRU A23-13		
38	A1-50	A7-4	A8-57*	A9-29	A10-46 THRU A23-46
43	A7-42*	A24-12			
45	A7-31*	A9-28			
46	A7-28*	A9-30			
56	A1-65	A7-65*	A8-50*	A24-74	
57	A3-75	A7-9*			
198	A7-35*	A8-79	A24-24		
203	A1-22	A7-45*			
204	A7-66	A8-77*			
223	A1-83	A6-21*	A7-38		
224	A7-37*	A8-83			
305	A1-6	A7-8*	A24-67	A104-42	A107-70
	A10-66 THRU A23-66				
306	A7-23*	A24-65	A10-17 THRU A23-17		
309	A7-41*	A8-37	A9-62		
310	A7-51	A8-73*			
323	A7-52	A16-3*			
324	A7-22	A24-7*			
326	A7-7	A25TB2-5*			
335	A1-8*	A2-70	A4-30	A6-9	A7-20 A8-75
	A107-82				
374	A1-69	A7-46*			
433	A4-70	A7-17	A8-52*	A10-5 THRU A23-5	
435	A4-72	A7-24	A8-59*	A10-25 THRU A23-25	
440	A1-17	A4-16*	A7-21*	A10-12* THRU A23-12*	
473	A7-3	A8-55*	A9-43	A10-22 THRU A23-22	
475	A4-73	A7-6	A8-49*	A10-9 THRU A23-9	
487	A7-32	A9-83*			
488	A7-27	A9-79*			
496	A7-50*	A23-8,23	A16-8 THRU A22-8		
497	A7-55*	A15-8,23	A10-8 THRU A14-8		
498	A3-37	A7-11	A8-81*	A9-26	



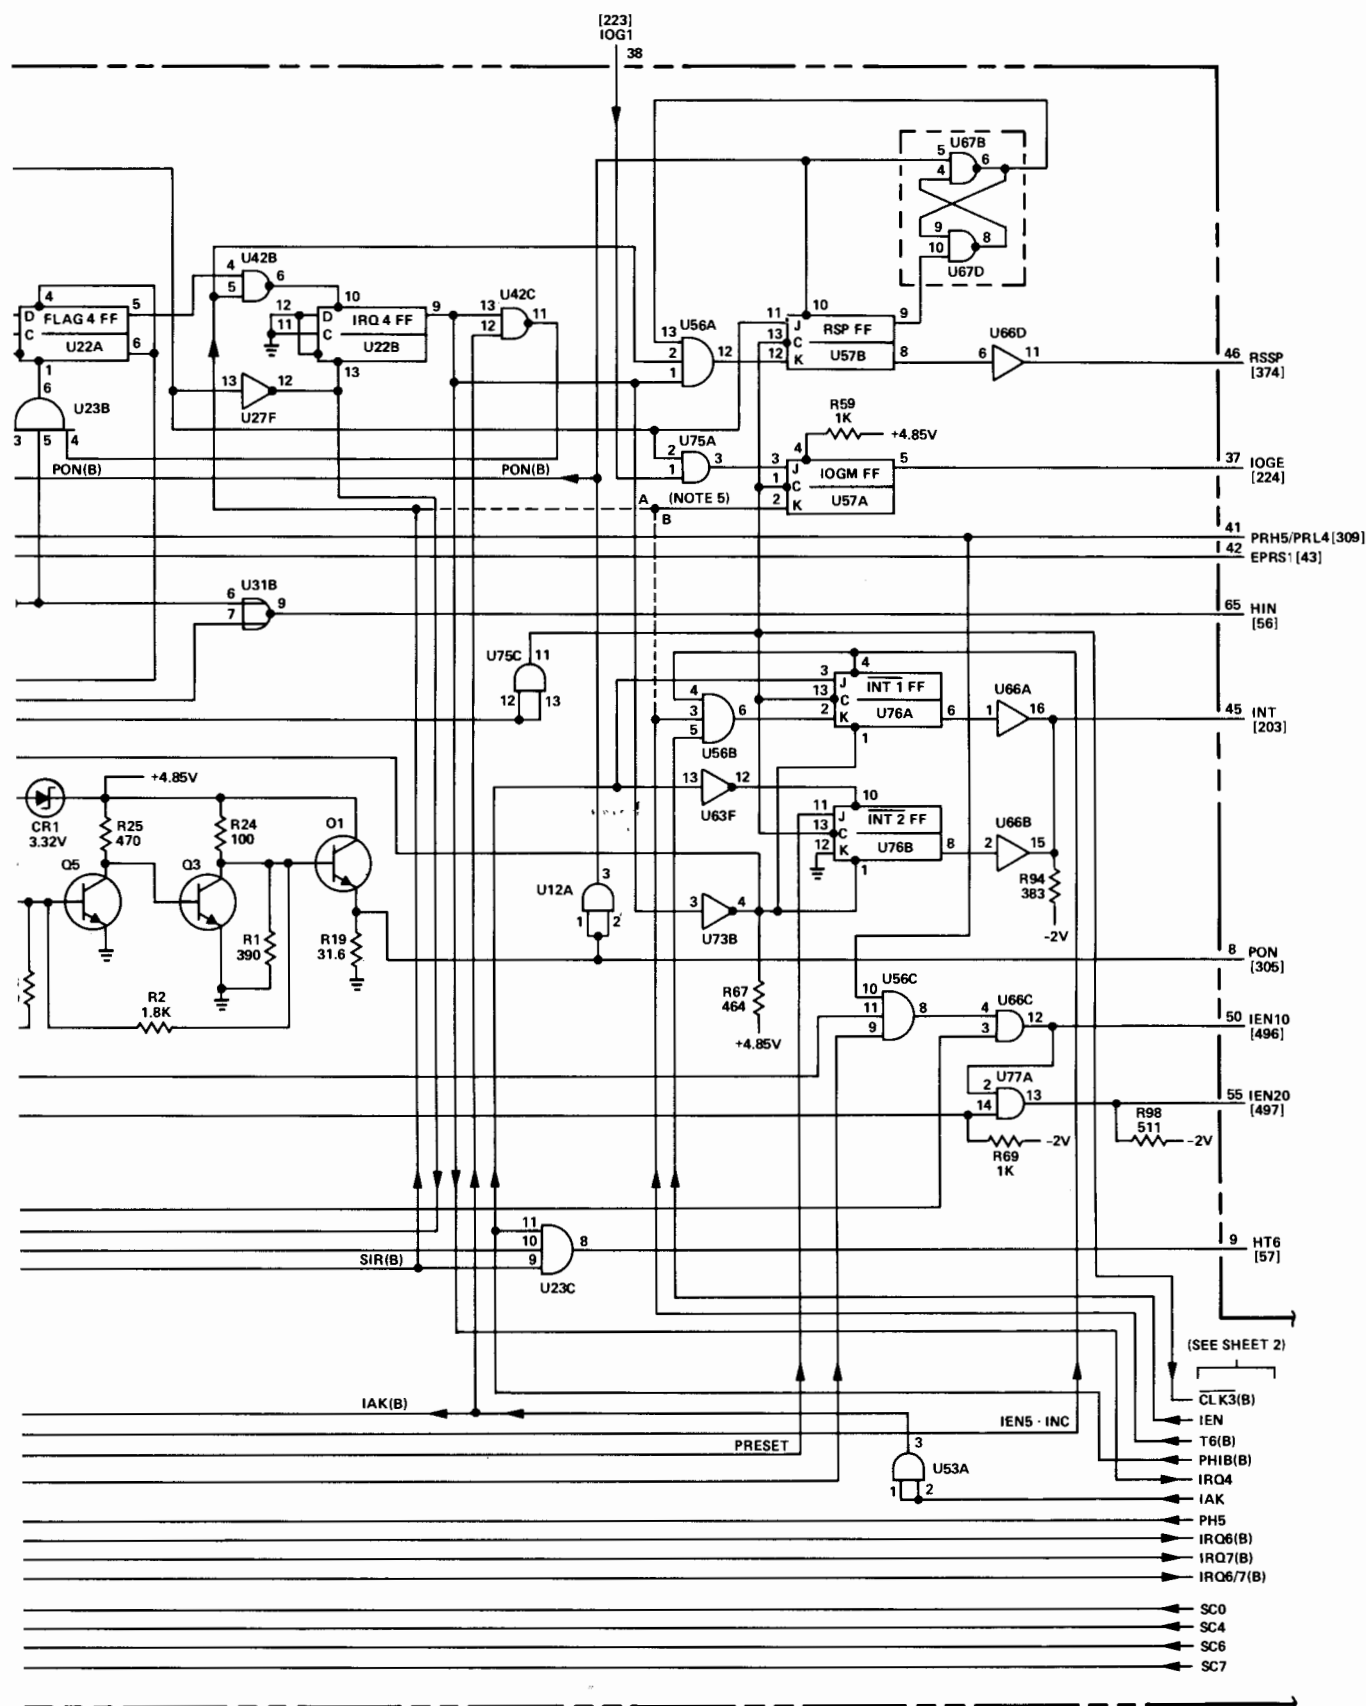



Figure 4-10. A7 I/O Control Card, Parts Location and Schematic Diagrams (Sheet 1 of 2)

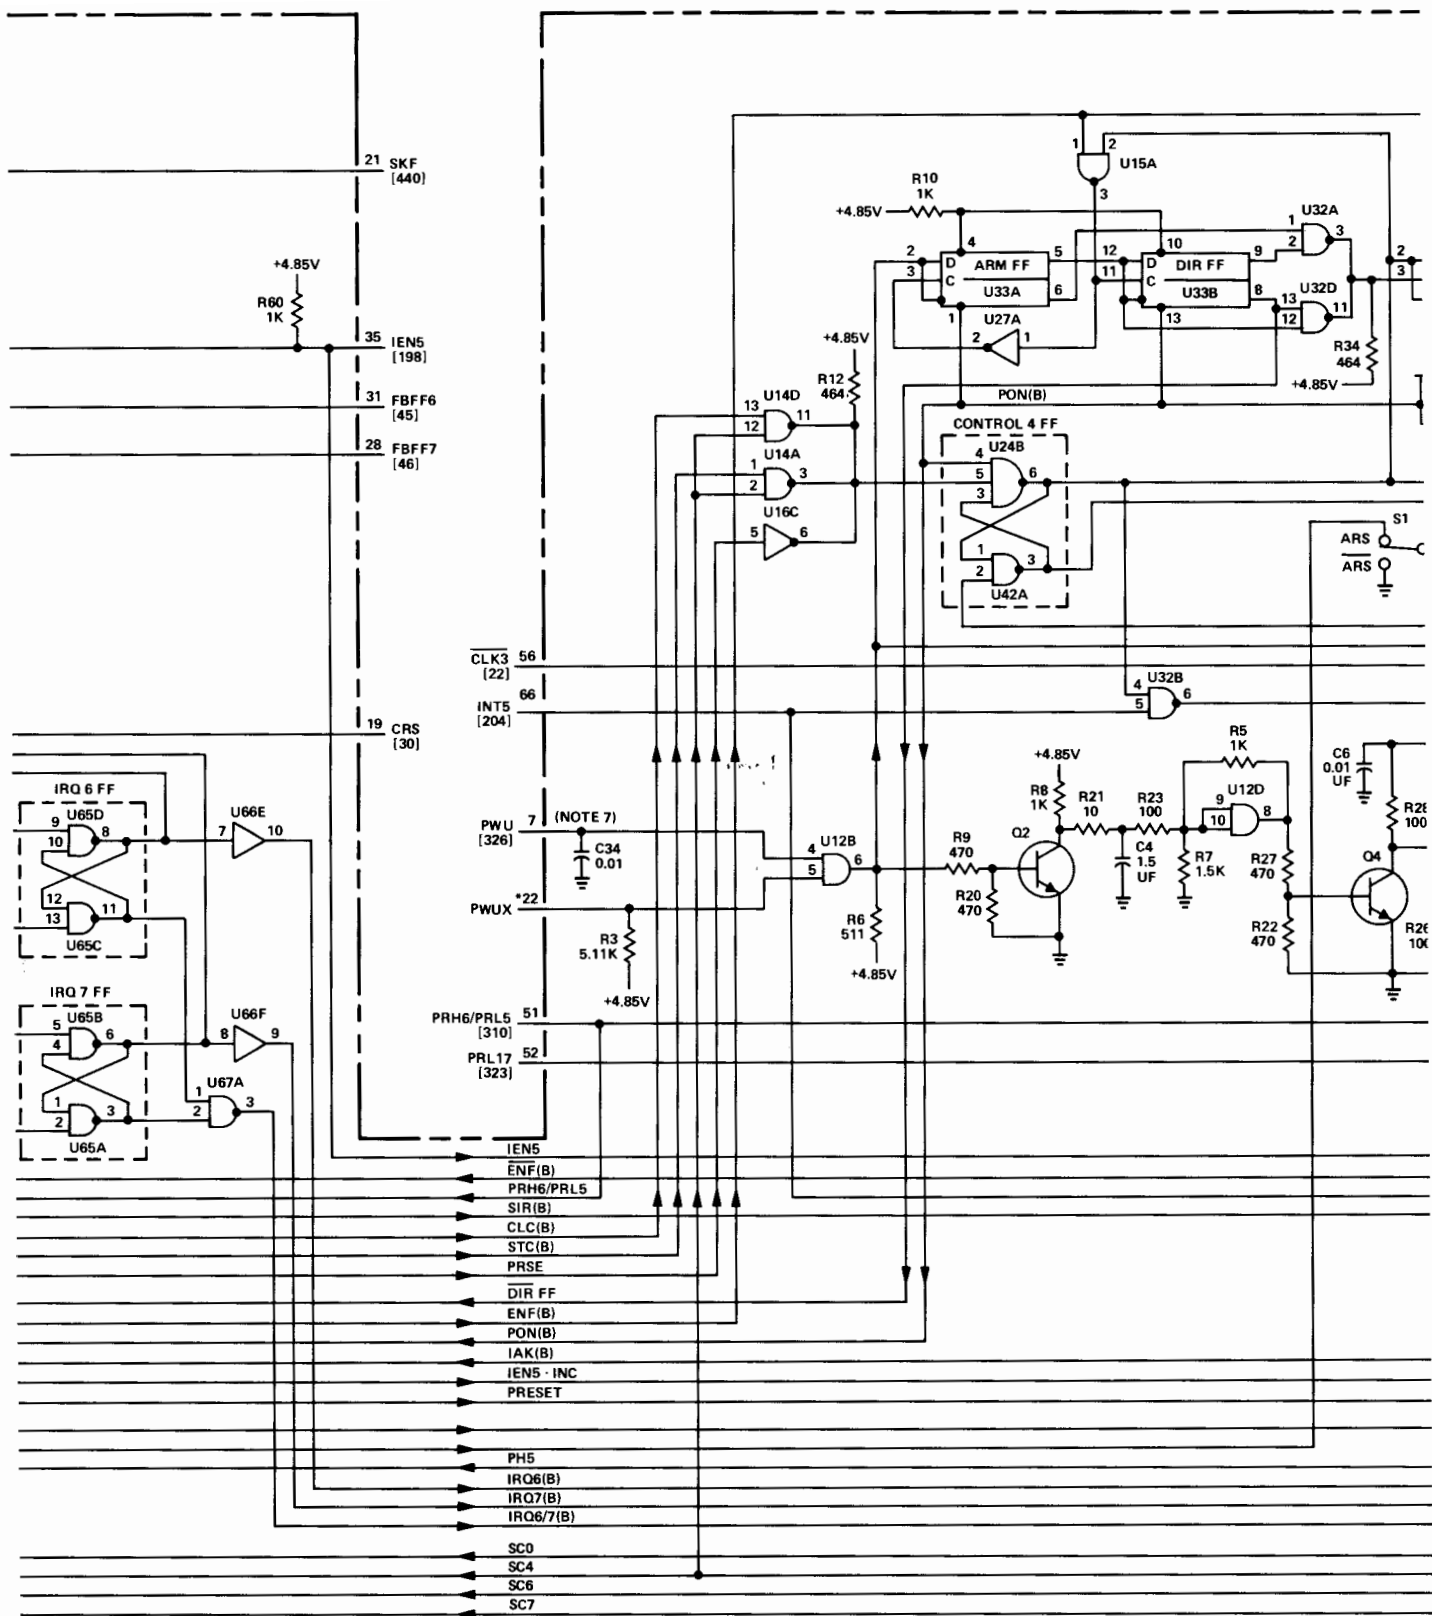

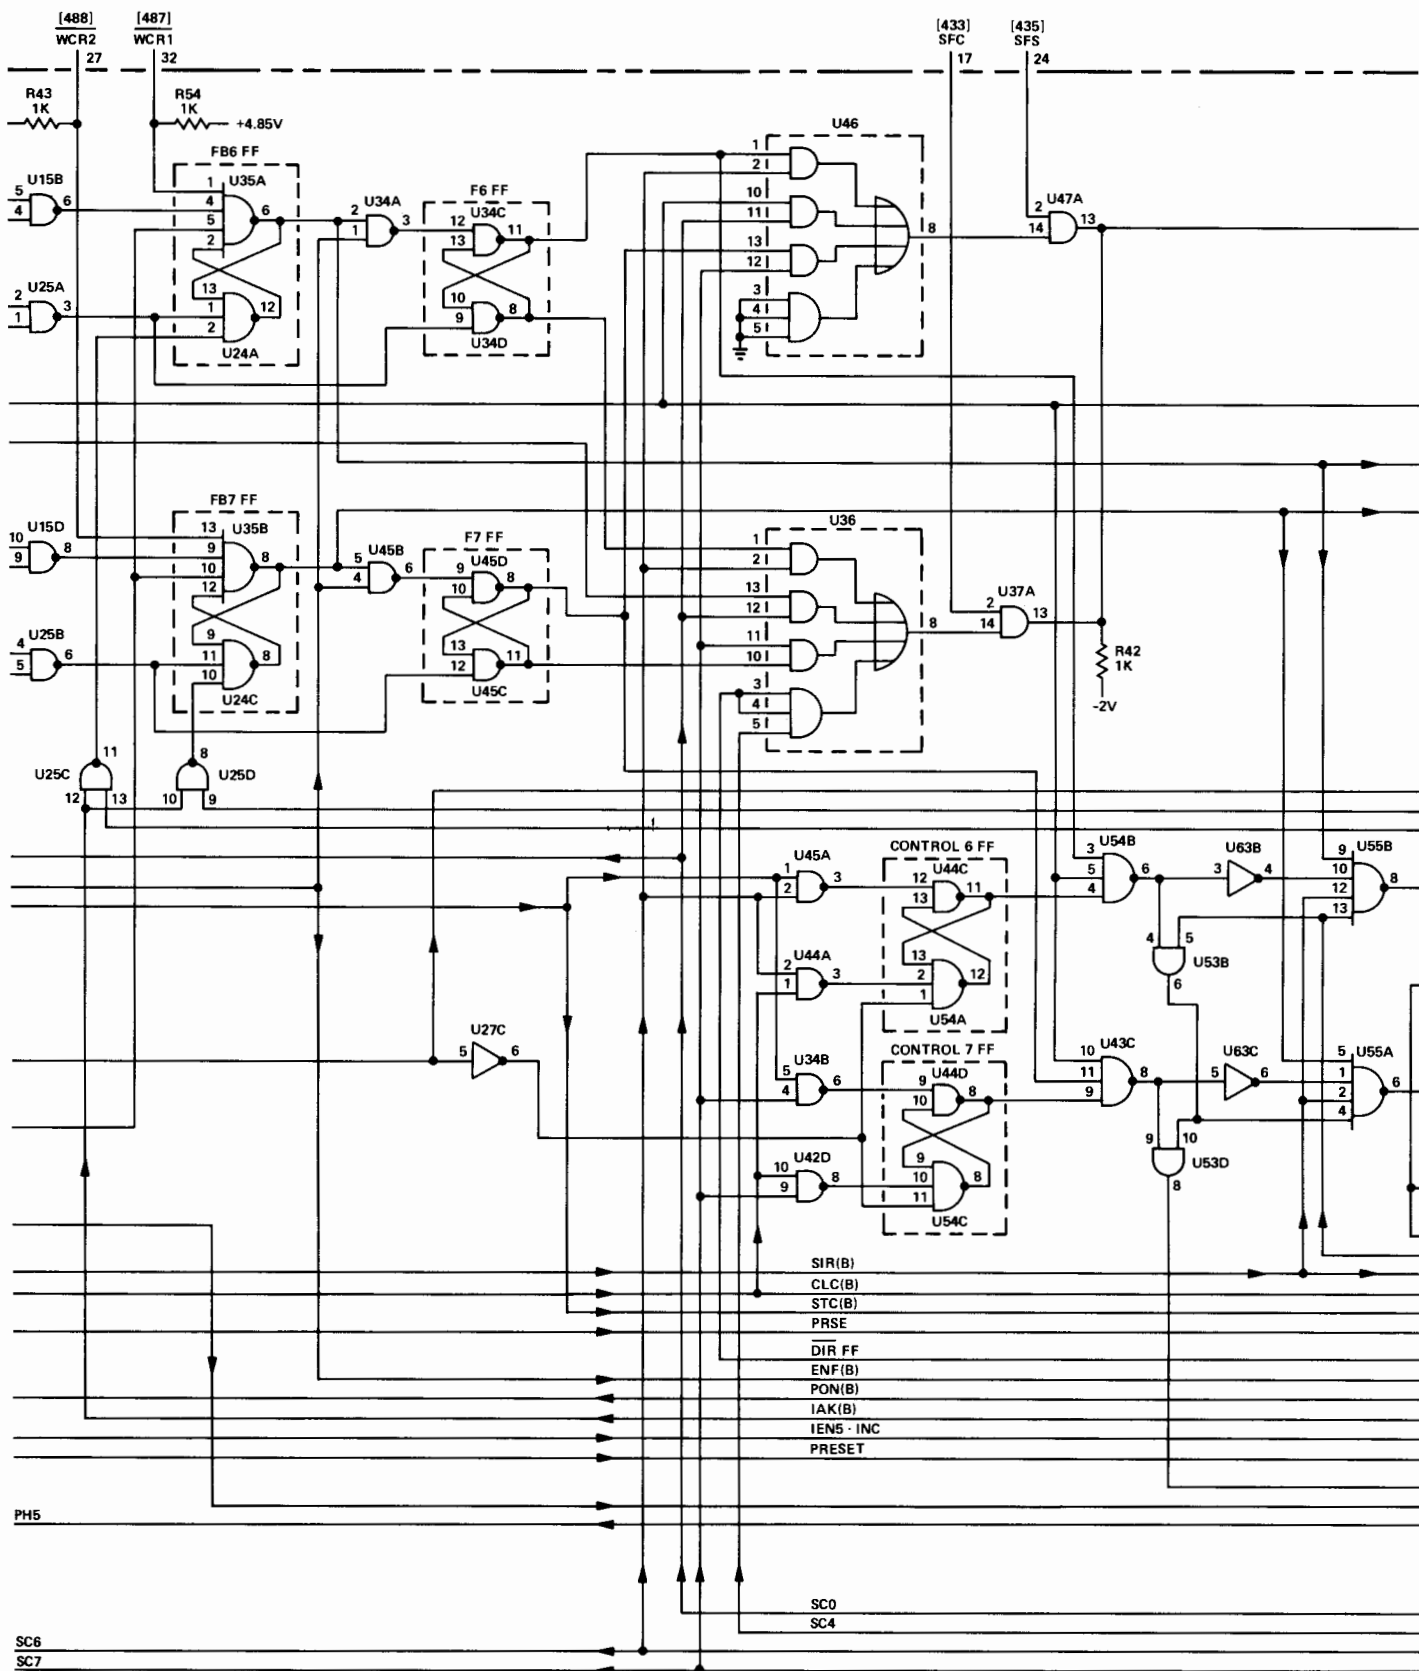


FF DEFINITIONS

DIR = DIRECTION
 F6 = FLAG 6
 F7 = FLAG 7
 FB6 = FLAG BUFFER 6
 FB7 = FLAG BUFFER 7
 IEN5 = INTERRUPT ENABLE 5
 INC = INTERRUPT SYSTEM CONTROL
 INT1 = INTERRUPT 1
 INT2 = INTERRUPT 2
 IOGM = INPUT/OUTPUT GROUP MODE
 IRQ4 = INTERRUPT REQUEST 4
 IRQ6 = INTERRUPT REQUEST 6
 IRQ7 = INTERRUPT REQUEST 7
 RSP = RESTART PULSE

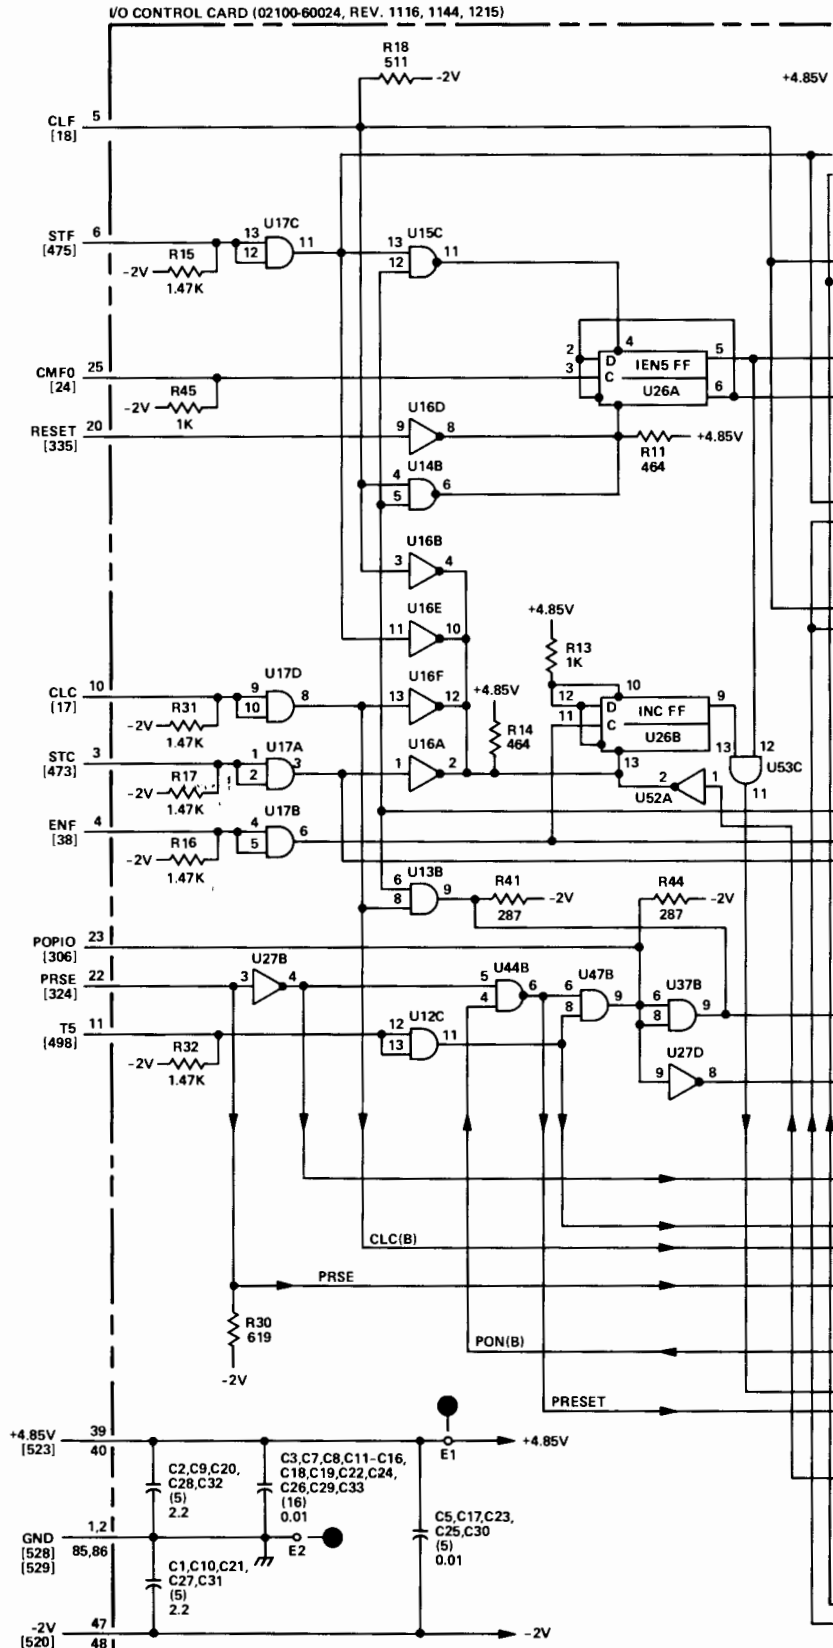**NOTES:**

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. * INDICATES PIN NUMBERS OF 48-PIN CONNECTOR. ALL OTHER PIN NUMBERS ARE FOR 86-PIN CONNECTOR.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. JUMPERS W1 THRU W16 ARE INSTALLED FOR OPTIONAL I/O EXTENSION OR MULTIPLEXED I/O CAPABILITY ONLY.
5. CARD REV. 1144 CONNECTED AS SHOWN BY DASHED LINE A; CARD REV. 1116 CONNECTED AS SHOWN BY DASHED LINE B.
6. E4 NOT USED ON CARD REV. 1116.
7. C34 FIRST USED ON CARD REV. 1215.

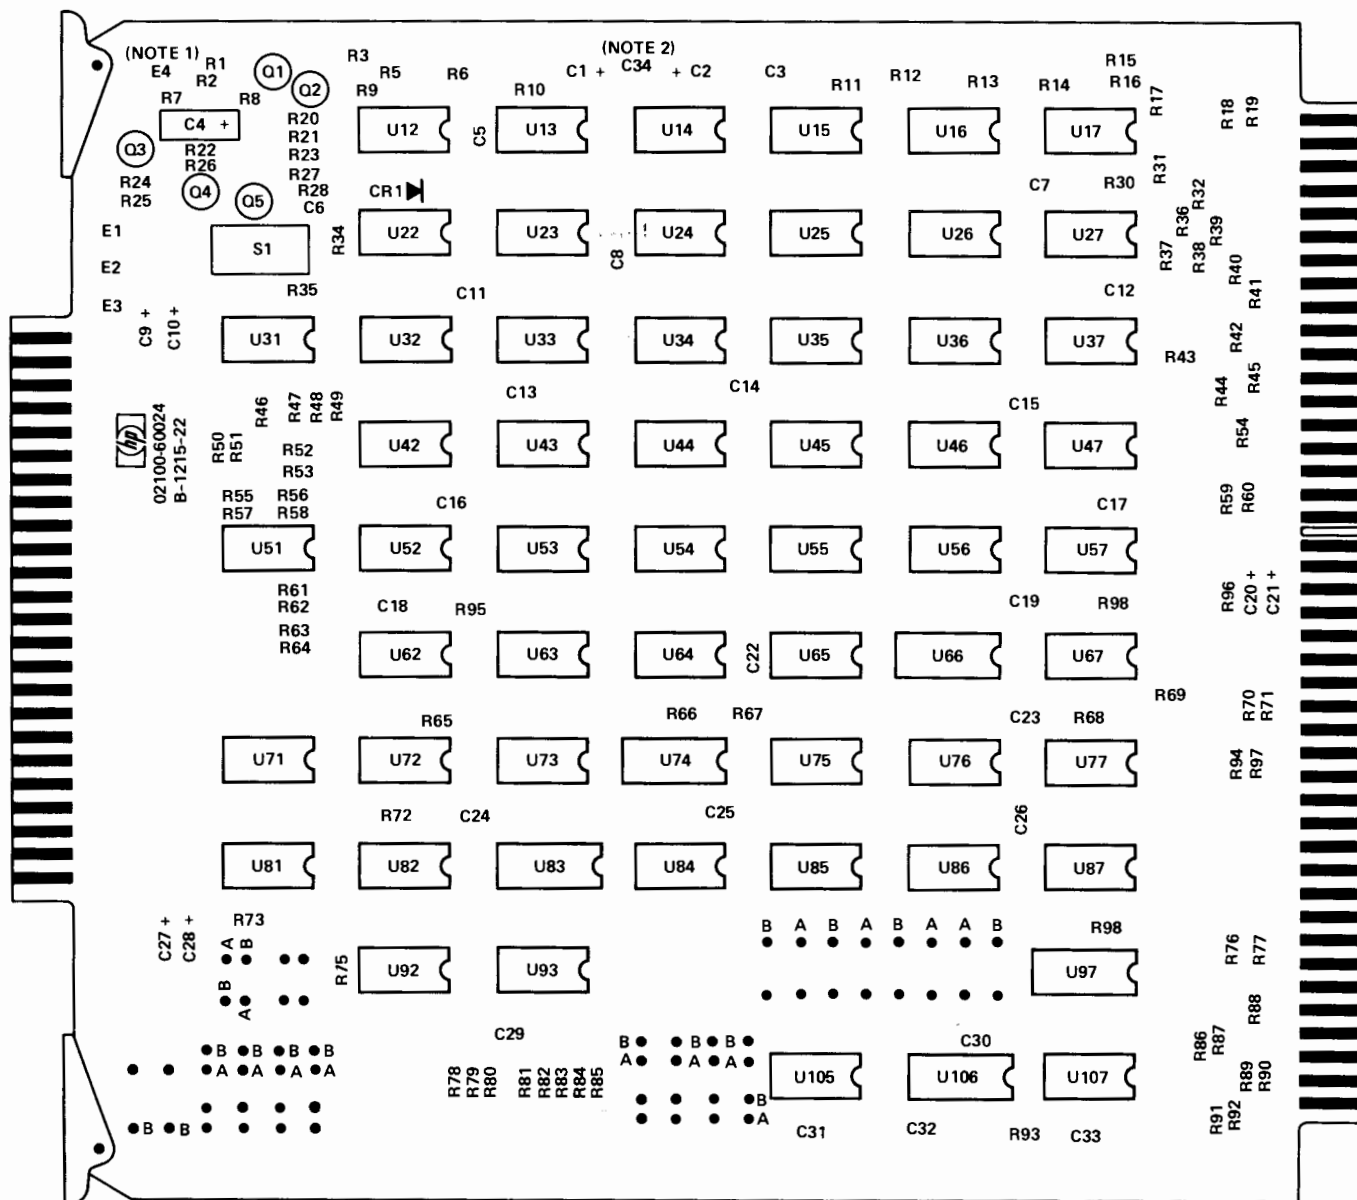

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE		
A7						
49	A7-71	A16-4*	A17-4*	49* THRU	A23-4*	49*
50	A7-34	A16-49*	A10-4*,49*	THRU	A15-4*,49*	
58	A7-14*	A8-84	A10-10	THRU	A23-10	
222	A3-76	A7-43	A8-46*	A9-45*	A10-15 THRU	A23-15
	A24-6					
225	A7-53	A8-82*	A24-4	A24-80*	A10-24 THRU	A23-24
228	A2-42	A6-35*	A7-68			
229	A2-45	A6-36*	A7-63			
230	A2-26	A6-56*	A7-67			
231	A2-50	A6-34*	A7-30			
232	A2-72	A6-62*	A7-26			
233	A2-66	A6-70*	A7-29			
245	A7-79	A14-6*	A15-33*	A22-6*	A23-33*	
246	A7-82	A13-6*	A14-33*	A21-6*	A22-33*	
247	A7-78	A12-6*	A13-33*	A20-6*	A21-33*	
248	A7-80	A11-6*	A12-33*	A19-6*	A20-33*	
249	A7-83	A8-67*	A10-6*	A11-33*	A18-6*	A19-33*
250	A7-81	A10-33*	A17-6*	A18-33*		
251	A7-84	A16-6*	A17-33*			
297	A1-30*	A7-12	A8-71	A24-50		
300	A3-41*	A7-13	A24-56			
332	A3-33*	A7-54				
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*
	A107-16					
397	A2-44*	A5-80*	A6-60	A7-61*	A8-4*	A9-14*
	A107-18					
398	A2-29*	A5-76*	A6-61	A7-60*	A8-5*	A9-18*
	A107-12					
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*
	A107-14					
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*
	A107-29					
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*
	A107-38					
412	A4-71	A7-49*	A8-74	A24-8		
413	A3-73	A7-44*	A8-35			
414	A7-33*	A9-50				
415	A7-36*	A9-49				
418	A7-69*	A9-51*	A15-16	A16-34	A23-16	
419	A7-70*	A9-52*	A14-16	A15-34	A22-16	A23-34
420	A7-72*	A9-59*	A13-16	A14-34	A21-16	A22-34
421	A7-73*	A9-58*	A12-16	A13-34	A20-16	A21-34
422	A7-74*	A9-60*	A11-16	A12-34	A19-16	A20-34
423	A7-75*	A9-56*	A10-16	A11-34	A18-16	A19-34
424	A7-76*	A9-54*	A10-34	A17-16	A18-34	
425	A7-77*	A9-57*	A16-16	A17-34		
426	A7-16*	A9-55*				
427	A7-15*	A9-53*	A16-14	A17-14,37 THRU	A23-14,37	
428	A7-18*	A9-61*	A16-37	A10-14,37 THRU	A15-14,37	
483	A3-26	A7-58	A8-43*	A9-81	A24-66	





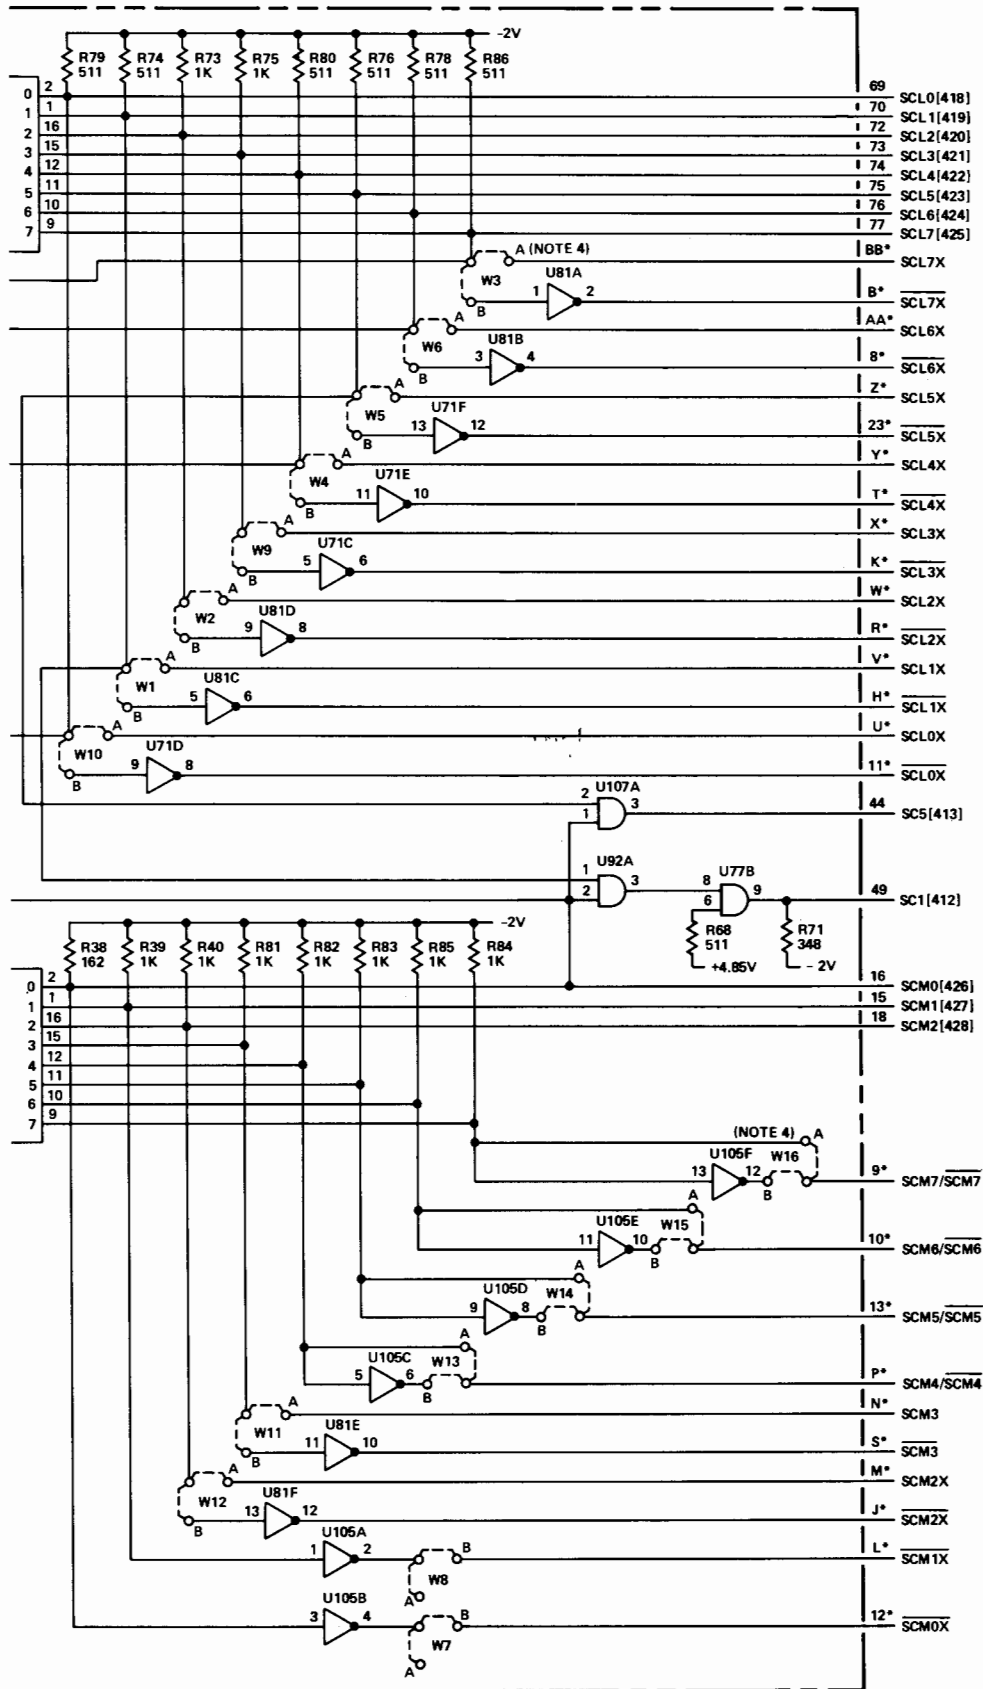


Figure 4-10. A7 I/O Control Card, Parts Location and Schematic Diagrams (Sheet 2 of 2)

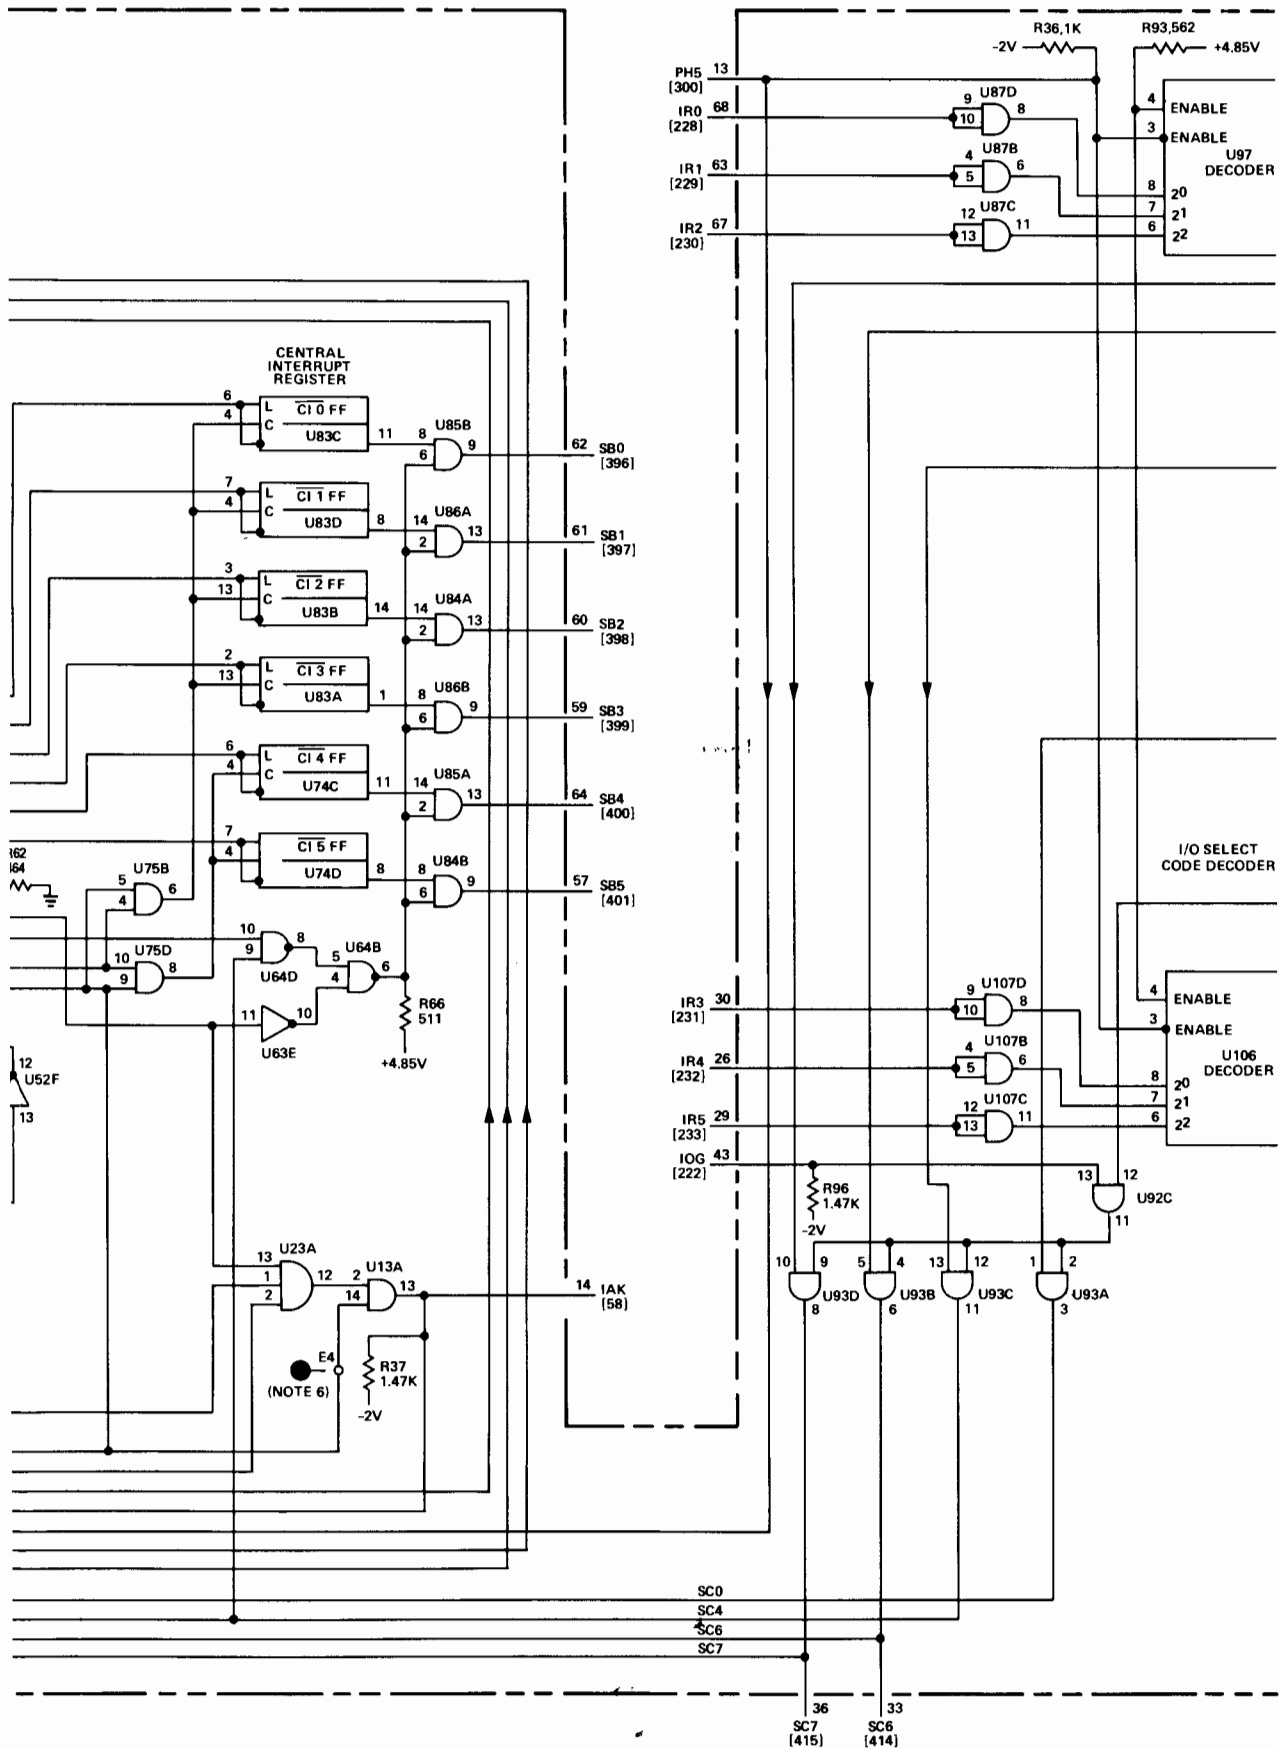

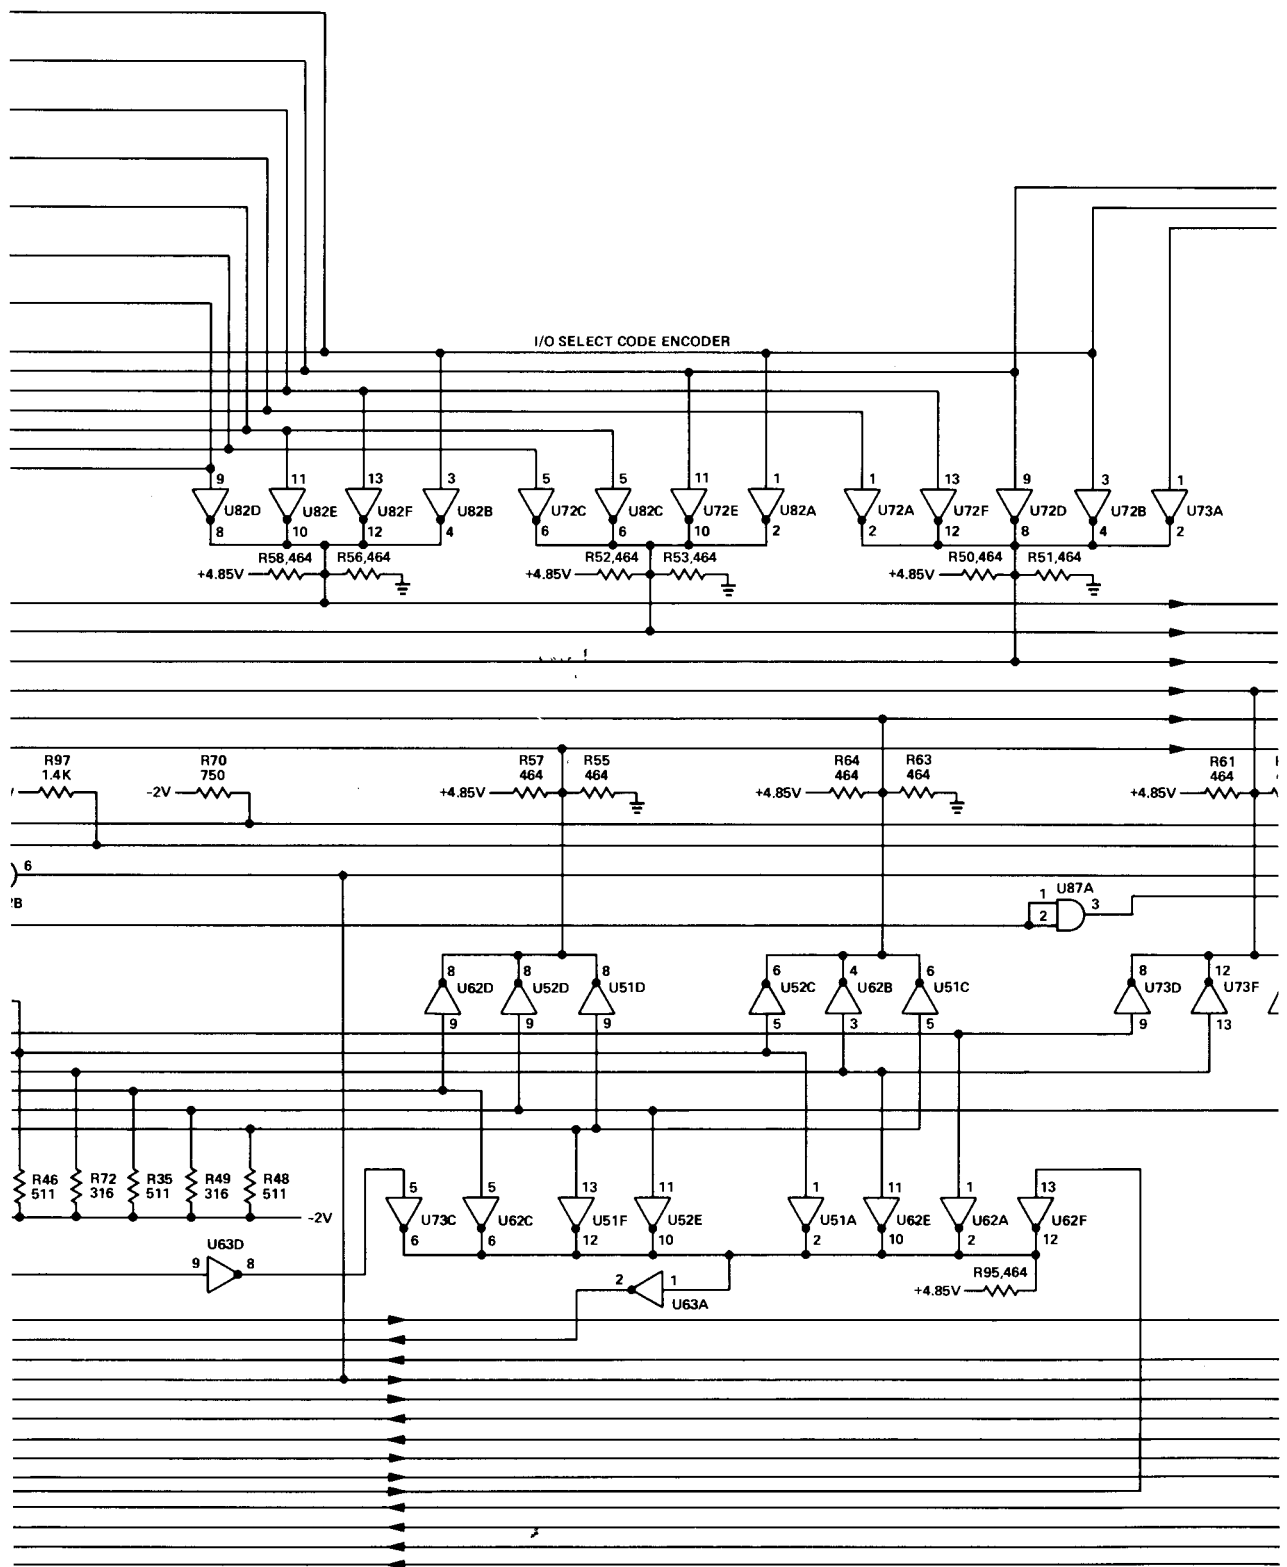

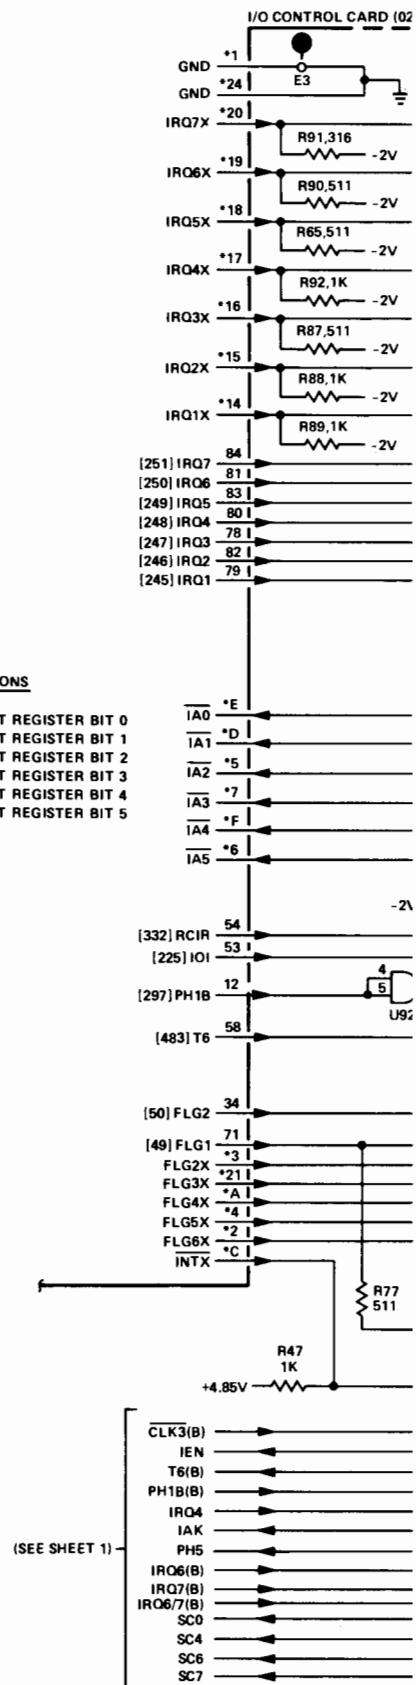

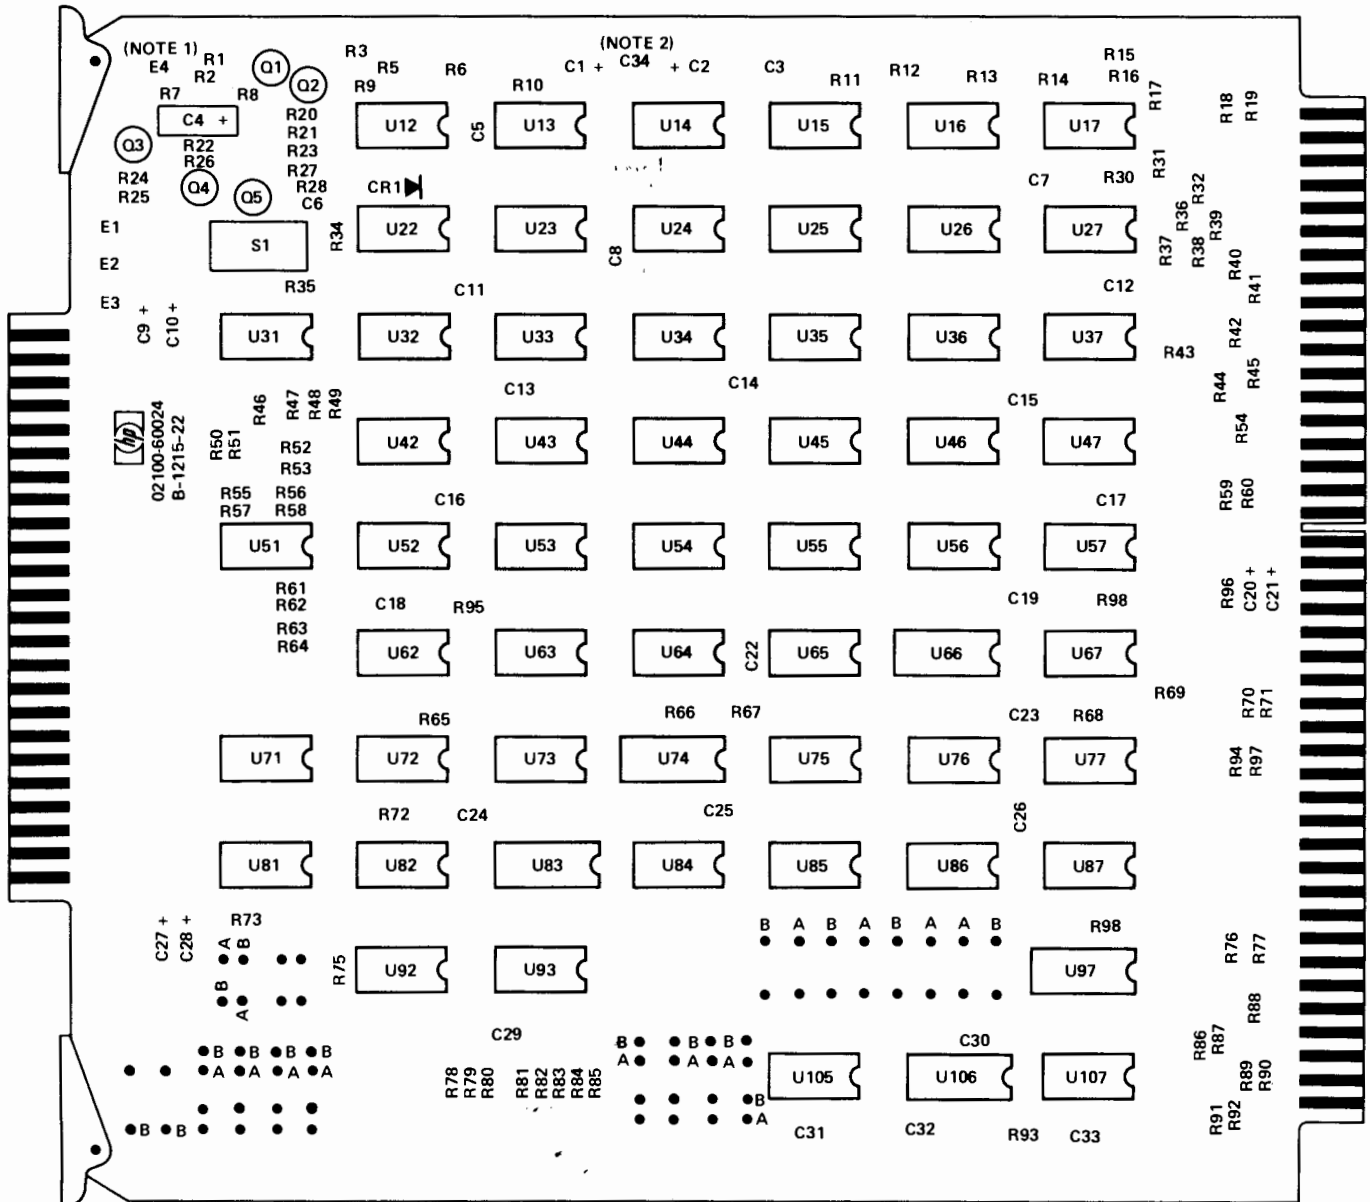

See table 4-9 for replaceable parts.

Table 4-10. A8 I/O Buffer Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A8	C2100-60007	1	I/O BUFFER CARD	28480	32100-60007
A8C1	0180-0197	9	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C2	0160-2055	49	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C3	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C4	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C5	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C16	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C20	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C21	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C22	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C23	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C25	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C26	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C27	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C28	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C29	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C30	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C31	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C32	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C33	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C34	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C35	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C36	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C37	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C38	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C39	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C40	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C41	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C42	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C43	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C44	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C45	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C46	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C47	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C48	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C49	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C50	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C51	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C52	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C53	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C54	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A8C55	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C56	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C57	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8C58	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A8E1	0360-0294	5	TERMINAL:SOLDER POINT	28480	0360-0294
A8E2	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A8E3	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A8E4	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A8E5	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A8R1	0698-3443	1	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A8R2	0698-3442	23	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R3	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R4	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R5	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R6	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R7	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R8	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R9	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R10	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R11	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442

Table 4-10. A8 I/O Buffer Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A8R12	0698-3442	9 10	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R13	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R14	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R15	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R16	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R17	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R18	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R19	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R20	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R21	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R22	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R23	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R24	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R25	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R26	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R27	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R28	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R29	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R30	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R31	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R32	0698-3444	4	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A8R33	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R34	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R35	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R36	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A8R37	0698-3442	1	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R38	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R39	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R40	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A8R41	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R42	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R43	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A8R44	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A8R45	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A8R46	0698-3441		R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A8R47	0757-0418	1	R:FXD MET FLM 619 OHM 1% 1/8W	28480	0757-0418
A8R48	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8R49	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R50	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A8R51	0698-3441		R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A8R52(NOTE 2)	0757-0280	1 2	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A8S1	3101-1213		SWITCH:TOGGLE DPST-DB SUB-MINIATURE	81640	T8001
A8S2	3101-1213		SWITCH:TOGGLE DPST-DB SUB-MINIATURE	81640	T8001
A8U11	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U12	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U13	1820-0186	34	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U14	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U15	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U16	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U17	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U21	1820-0301	4	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A8U22	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U23	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U24	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A8U25	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U26	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U31	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U32	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U33	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U34	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U35	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U36	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U37	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U41	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A8U42	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U43	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U44	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A8U45	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U46	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U51	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U52	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U53	1820-0186	4	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U54	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U55	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A8U56	1820-0239		IC:TTL QUAD 2-INPT NOR GATE	28480	1820-0239
A8U57	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P

Table 4-10. A8 I/O Buffer Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A8U61	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A8U62	1820-0609	3	IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A8U63	1820-0140	2	IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A8U64	1820-0424	2	IC:TTL HS HEX INVERTER	04713	SN74H04N
A8U65	1820-0608	1	IC:TTL 1 OF DECODER W/ENABLE	04713	MC4006P
A8U66	1820-0376	1	IC:TTL HS DUAL 4-INPT NAND BUFFER	01295	SN74H40N
A8U67	1820-0512	1	IC:TTL DUAL D F/F	01295	SN74H74N
A8U71	1820-0609		IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A8U72	1820-0371	1	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A8U73	1820-0370	3	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A8U74	1820-0372	2	IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A8U75(NOTE 1)	1820-0451	4	IC:TTL DUAL J-K F/F	04713	MC3062P
A8U76(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A8U81	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A8U82(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A8U83	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A8U85	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U86	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U87	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U91	1820-0140		IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A8U92	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A8U93(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A8U94	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A8U95	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U96	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U97	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U102	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A8U103	1820-0609		IC:TTL DUAL J-K F/F W/COM. CLK & RESET	04713	MC3061P
A8U104	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A8U105	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8U106	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A8U107	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A8W1	8159-0005		JUMPER WIRE	28480	8159-0005
A8W2	8159-0005		JUMPER WIRE	28480	8159-0005

NOTES: 1. Part no. 1820-0695 used on some cards; the two parts are interchangeable.
2. A8R52, A8W1, and A8W2 first used on card rev. 1216.

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE			

A8							
17	A7-10	A8-66*	A9-44	A10-21	THRU A23-21		
18	A4-76	A7-5	A8-51*	A9-24	A10-7	THRU A23-7	
21	A1-84*	A4-69	A6-31	A8-70			
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64	
	A107-69						
31	A1-10	A8-64*					
38	A1-50	A7-4	A8-57*	A9-29	A10-46	THRU A23-46	
56	A1-65	A7-65*	A8-50*	A24-74			
58	A7-14*	A8-84	A10-10	THRU A23-10			
198	A7-35*	A8-79	A24-24				
199	A1-24	A8-68*					
204	A7-66	A8-77*					
205	A8-13*	A24-71	A10-26,35	THRU A23-26,35			
206	A8-12*	A24-70	A10-29,38	THRU A23-29,38			
207	A8-11*	A24-68	A10-30,41	THRU A23-30,41			
208	A8-17*	A24-72	A10-45,64	THRU A23-45,64			
209	A8-16*	A24-54	A10-42,77	THRU A23-42,77			
210	A8-15*	A24-53	A10-51,80	THRU A23-51,80			
211	A8-10*	A24-63	A10-53,81	THRU A23-53,81			
212	A8-32*	A24-61	A10-52,84	THRU A23-52,84			
213	A8-31*	A24-32	A10-27,54	THRU A23-27,54			
214	A8-29*	A24-34	A10-28,56	THRU A23-28,56			
215	A8-28*	A24-46	A10-31,58	THRU A23-31,58			
216	A8-27*	A24-44	A10-55,60	THRU A23-55,60			
217	A8-26*	A24-14	A10-57,78	THRU A23-57,78			
218	A8-25*	A24-16	A10-61,79	THRU A23-61,79			
219	A8-30*	A24-20	A10-65,82	THRU A23-65,82			
220	A8-34*	A24-18	A10-74,83	THRU A23-74,83			
222	A3-76	A7-43	A8-46*	A9-45*	A10-15	THRU A23-15	
	A24-6						
224	A7-37*	A8-83					
225	A7-53	A8-82*	A24-4	A24-80*	A10-24	THRU A23-24	
226	A3-77	A8-78*	A9-32	A24-10	A10-20	THRU A23-20	
234	A2-84	A6-69*	A8-41				
235	A2-75	A6-75*	A8-38				
236	A2-76	A6-57*	A8-45				
237	A2-61	A4-54	A6-63*	A8-65			
239	A1-9	A2-80	A3-71	A4-24	A6-58*	A8-63	
249	A7-83	A8-67*	A10-6*	A11-33*	A18-6*	A19-33*	
256	A8-76	A107-78*					
274	A6-13	A8-80*					
275	A6-4*	A8-36					
294	A8-69*	A24-52					
295	A1-63	A3-27	A8-58*				
296	A1-41*	A8-53	A24-49				
297	A1-30*	A7-12	A8-71	A24-50			
309	A7-41*	A8-37	A9-62				
310	A7-51	A8-73*					
335	A1-8*	A2-70	A4-30	A6-9	A7-20	A8-75	
	A107-82						
337	A3-34*	A8-61	A9-42*				
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*	
	A107-16						
397	A2-44*	A5-80*	A6-60	A7-61*	A8-4*	A9-14*	
	A107-18						
398	A2-29*	A5-76*	A6-61	A7-60*	A8-5*	A9-18*	
	A107-12						
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*	
	A107-14						
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*	
	A107-29						
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*	
	A107-38						
402	A2-12*	A5-49*	A6-67	A8-9*	A9-20*	A107-20	
403	A2-9*	A5-43*	A6-66	A8-24*	A9-11*	A107-22	
404	A2-53*	A5-31*	A6-52	A8-14*	A9-5*	A107-44	
405	A2-54*	A5-32*	A6-51	A8-18*	A9-3*	A107-46	
406	A2-43*	A5-29*	A6-54	A8-19*	A9-9*	A107-34	
407	A2-49*	A5-30*	A6-53	A8-20*	A9-7*	A107-36	
408	A2-31*	A5-10*	A6-38	A8-21*	A9-8*	A107-51	
409	A2-21*	A5-8*	A6-37	A8-22*	A9-4*	A107-42	






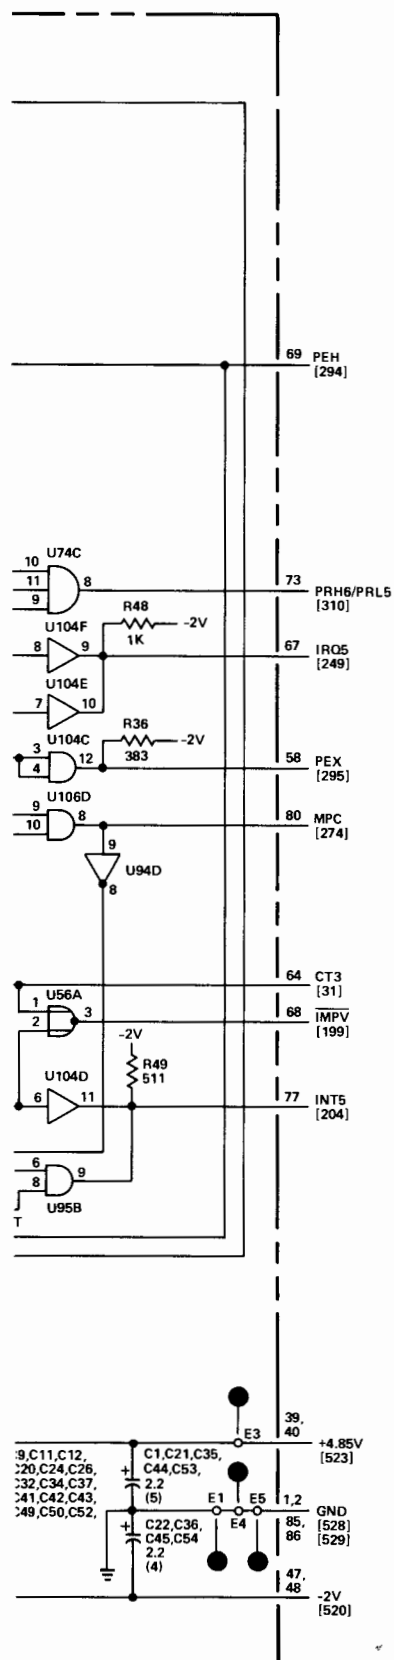



Figure 4-11. A8 I/O Buffer Card, Parts Location and Schematic Diagrams

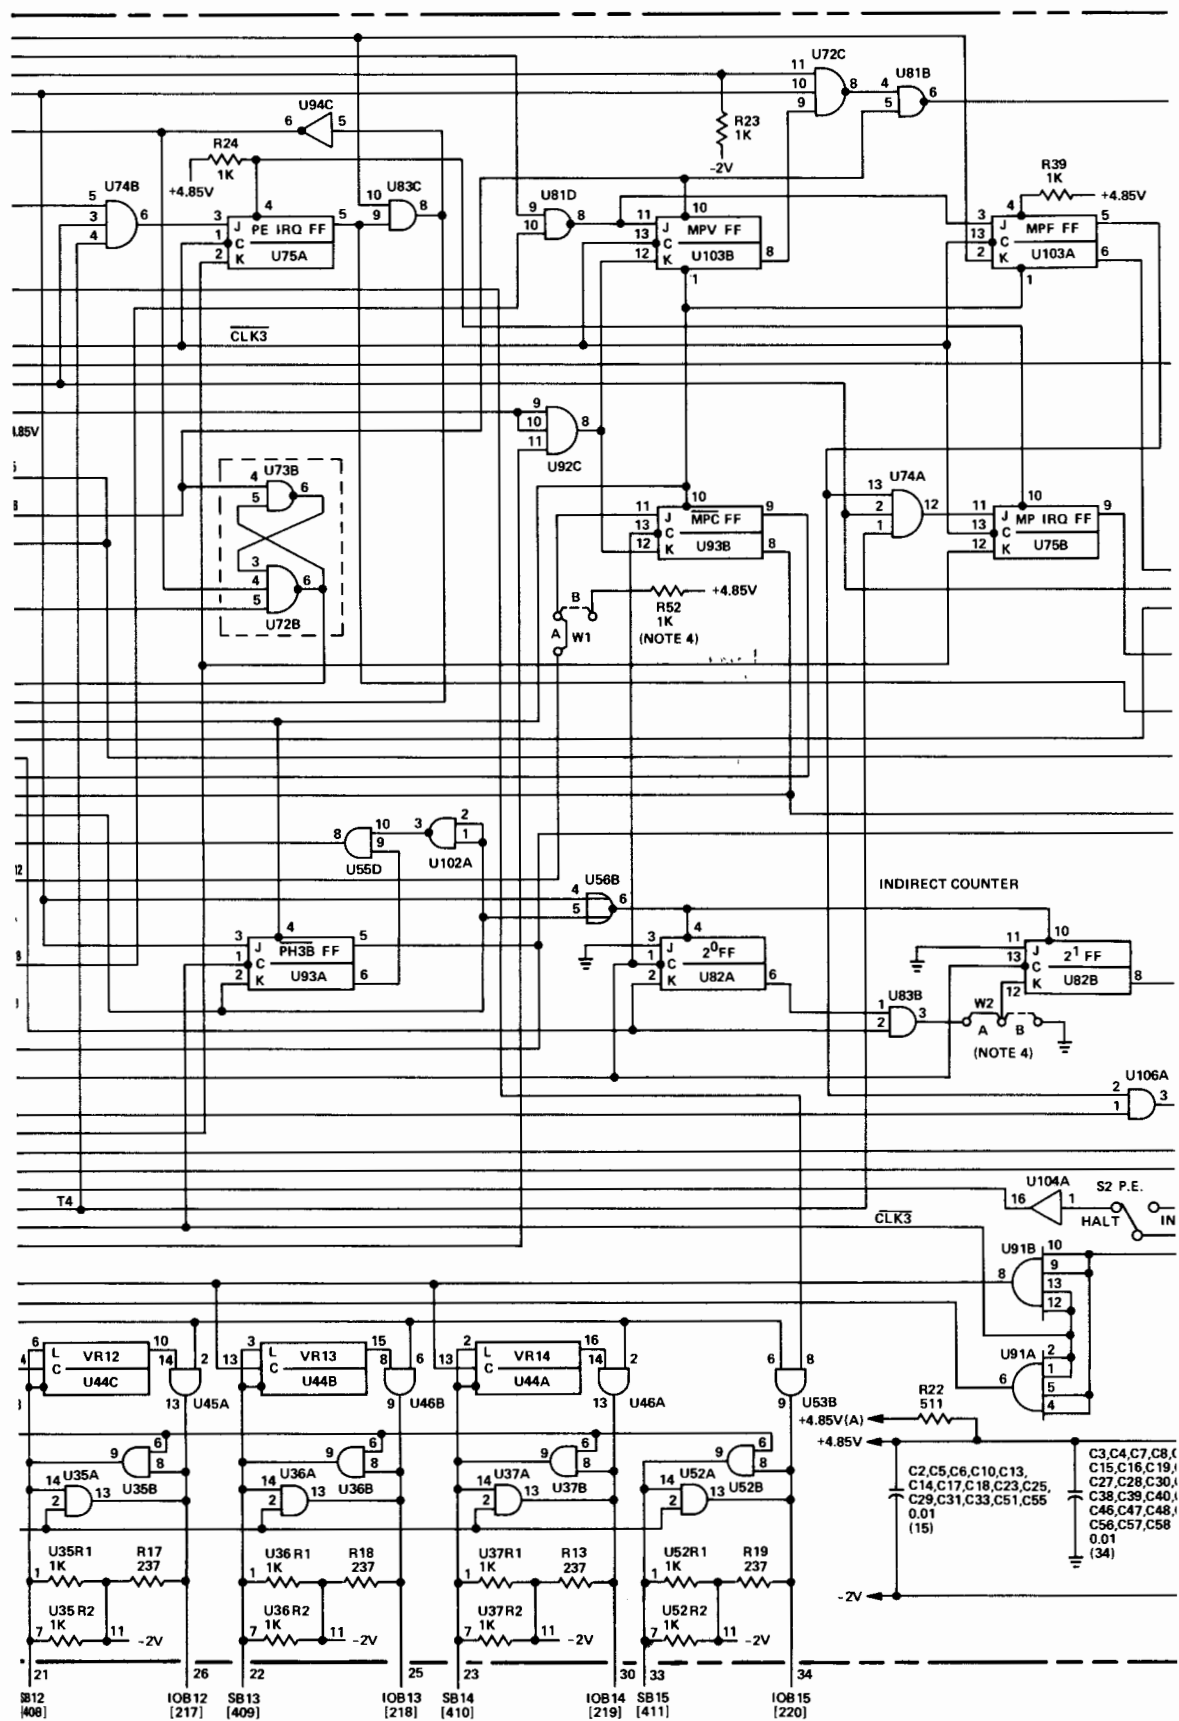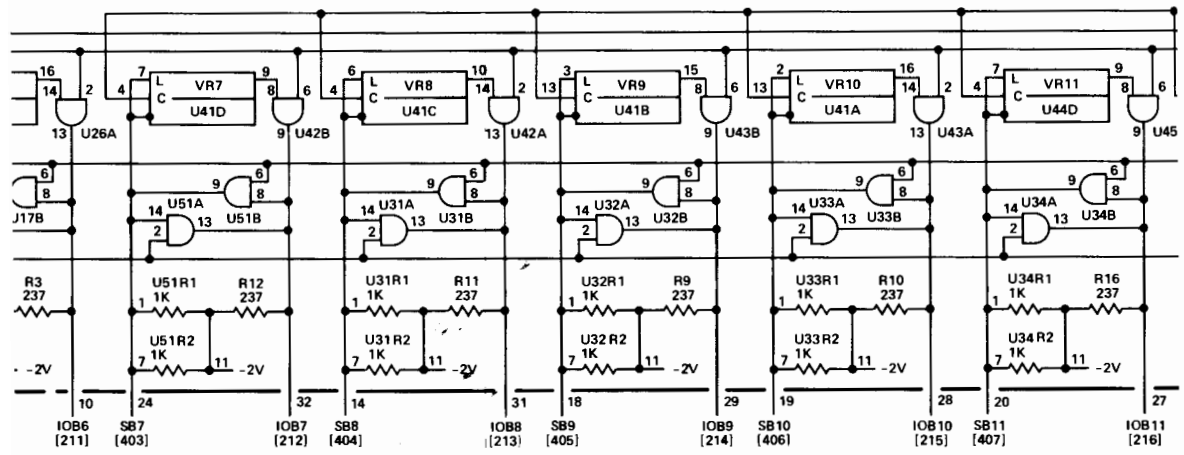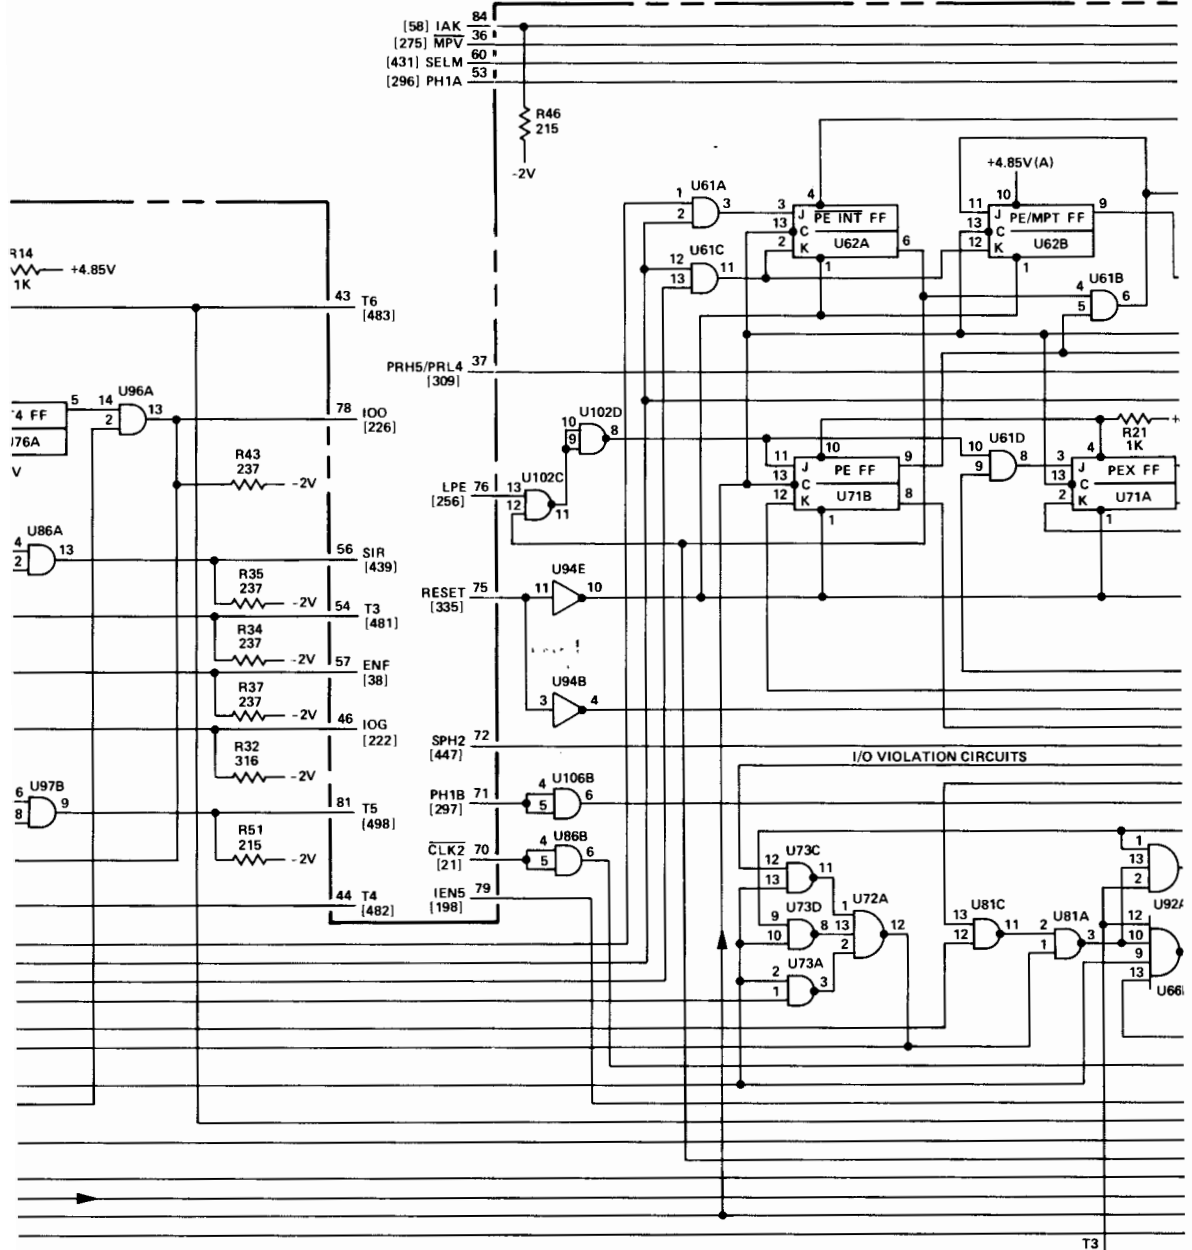

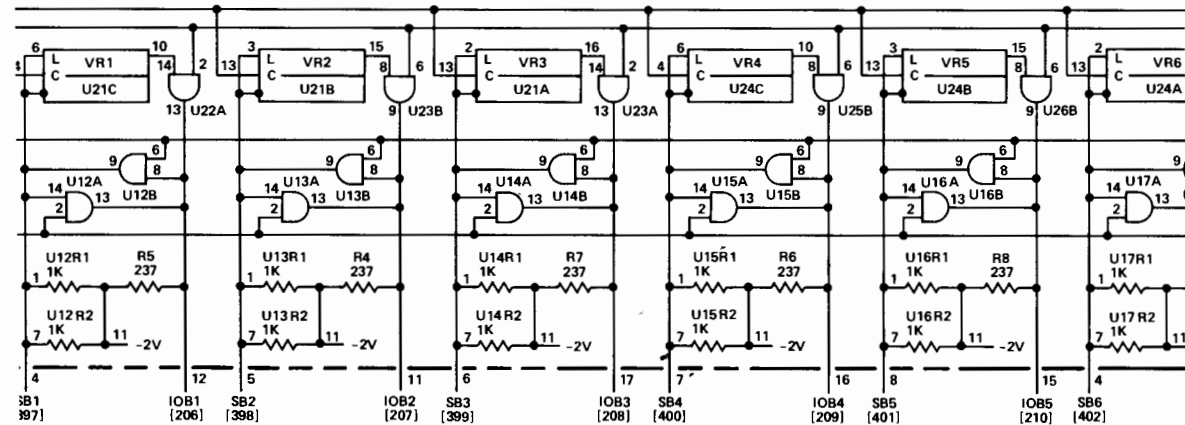

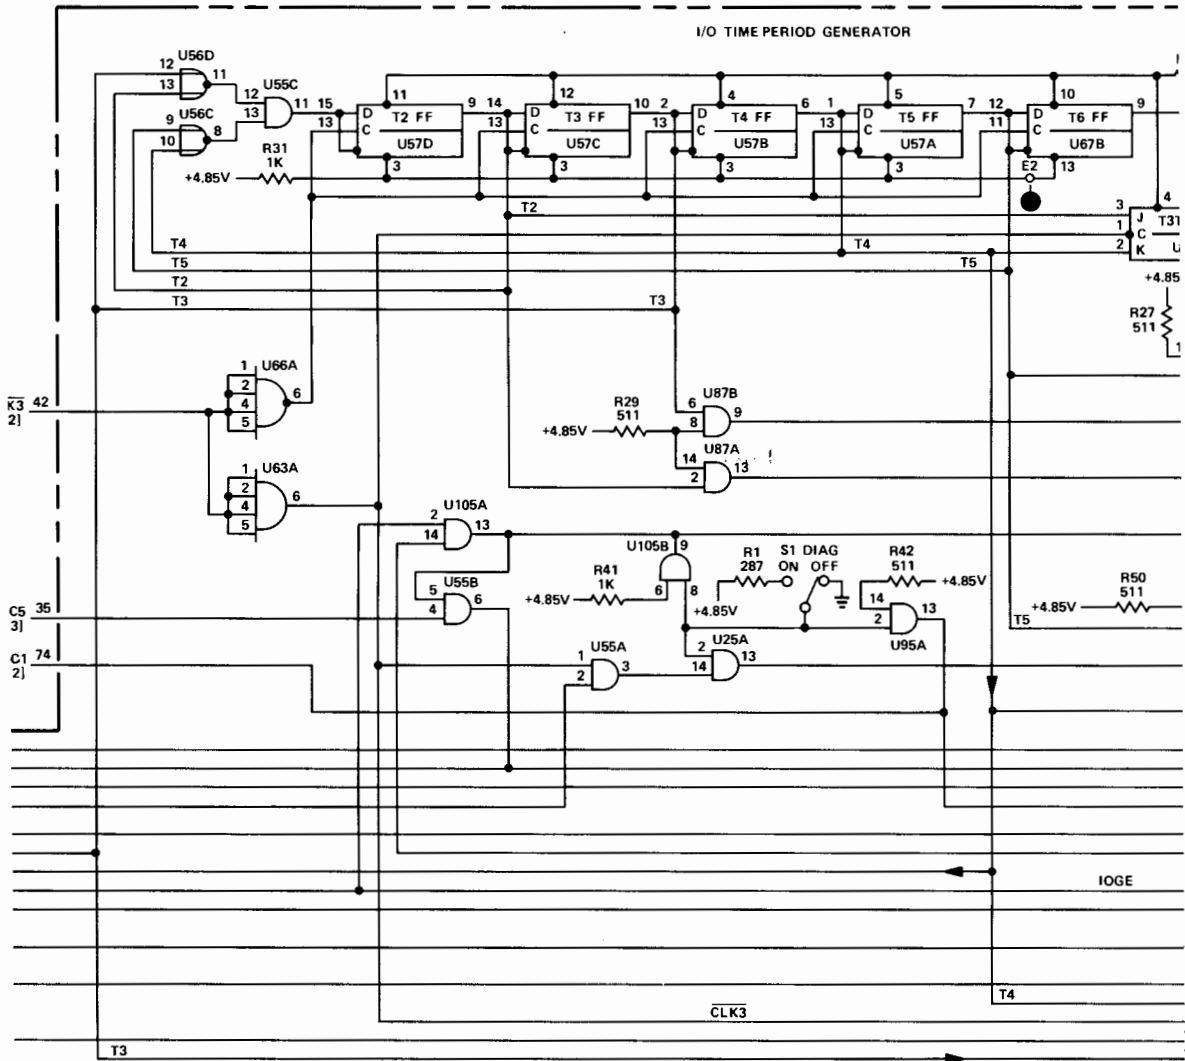

I/O BUFFER CARD (02100-60007, REV. 1051, 1216)

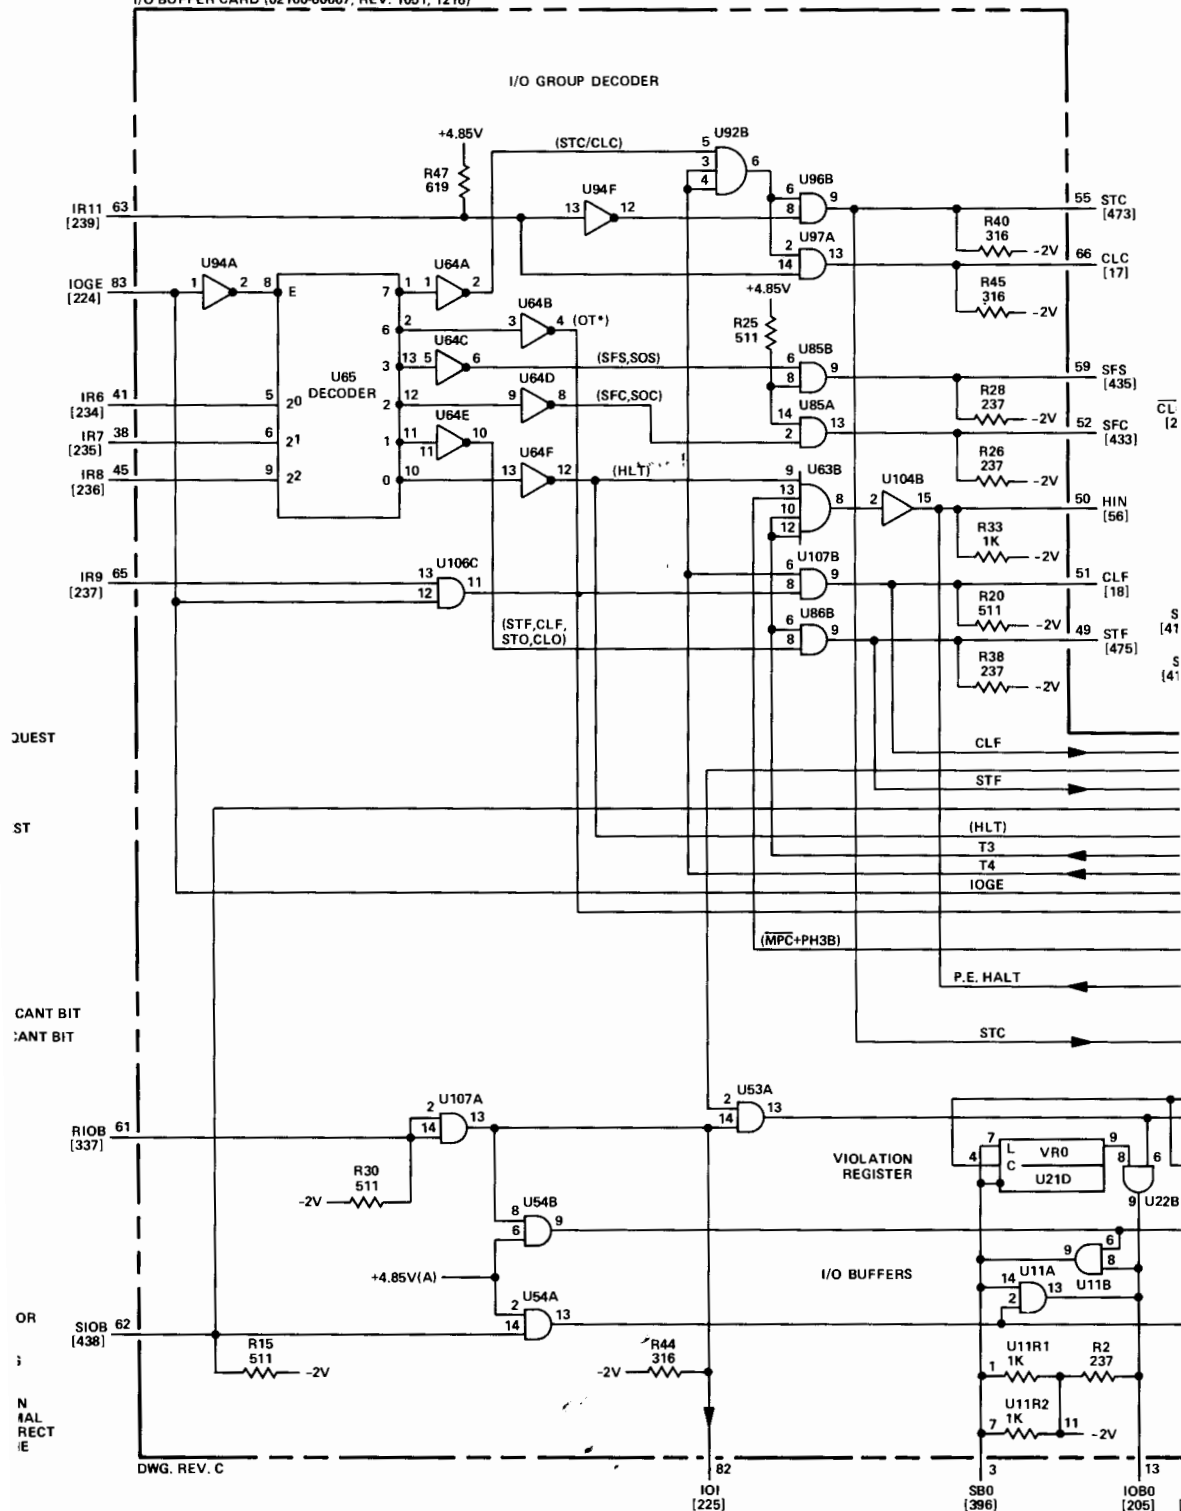

FF DEFINITIONS

MPC = MEMORY PROTECT CONTROL
MP IRQ = MEMORY PROTECT INTERRUPT REQUEST
MPF = MEMORY PROTECT FLAG
MPV = MEMORY PROTECT VIOLATION
PE = PARITY ERROR
PE INT = PARITY ERROR INTERRUPT
PE IRQ = PARITY ERROR INTERRUPT REQUEST
PE/MPT = PARITY ERROR/MEMORY PROTECT
PEX = PARITY ERROR X
PH3B = PHASE 3 BUFFERED
T2 = I/O TIME PERIOD 2
T3 = I/O TIME PERIOD 3
T3 T4 = I/O TIME PERIOD 3 AND 4
T4 = I/O TIME PERIOD 4
T5 = I/O TIME PERIOD 5
T6 = I/O TIME PERIOD 6
2⁰ = INDIRECT COUNTER LEAST SIGNIFICANT
2¹ = INDIRECT COUNTER MOST SIGNIFICANT


NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PINS NUMBERS REFER TO 86-PIN CONNECT UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. R52, W1 AND W2 FIRST USED ON CARD REVISION 1216. POSITION A FOR W1 AND W2 IS FOR NORMAL OPERATION WITH MEMORY PROTECT AND INDIRECT COUNTER. POSITION B FOR EACH DISABLES THE APPROPRIATE FUNCTION.

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A8 (CONT)

410	A2-10*	A5-6*	A6-42	A8-23*	A9-6*	A107-50
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*
	A9-84*	A107-52				
412	A4-71	A7-49*	A8-74	A24-8		
413	A3-73	A7-44*	A8-35			
431	A1-53*	A3-22*	A8-60	A9-35*	A24-42*	A107-66
433	A4-70	A7-17	A8-52*	A10-5 THRU A23-5		
435	A4-72	A7-24	A8-59*	A10-25 THRU A23-25		
438	A3-46*	A8-62	A9-33*	A24-75*		
439	A8-56*	A10-32 THRU A23-32				
447	A1-34*	A2-73	A8-72			
473	A7-3	A8-55*	A9-43	A10-22 THRU A23-22		
475	A4-73	A7-6	A8-49*	A10-9 THRU A23-9		
481	A8-54*	A9-37	A10-11 THRU A23-11			
482	A1-16	A8-44*	A9-80			
483	A3-26	A7-58	A8-43*	A9-81	A24-66	
498	A3-37	A7-11	A8-81*	A9-26		

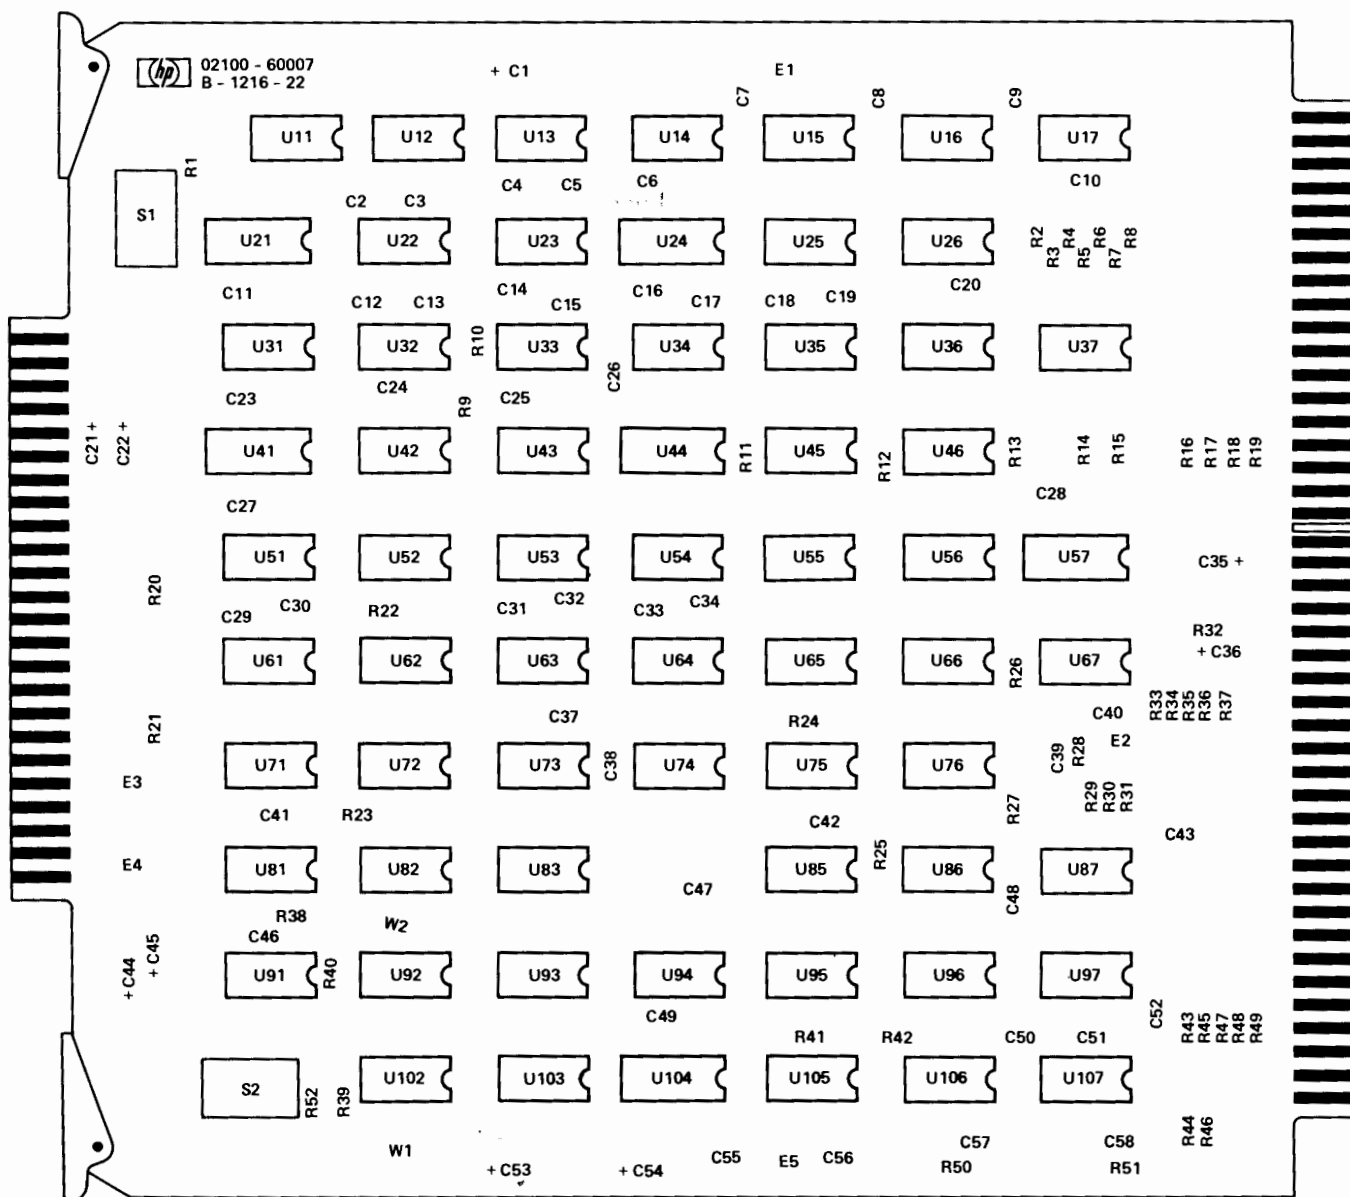

SEE TABLE 4-10 FOR REPLACABLE PARTS.

NOTE: R52, W1, AND W2 NOT USED AND R39 IS LOCATED NEXT TO S2 ON CARD REV. A - 1051 - 22.

Table 4-11. A9 Direct Memory Access Card (Accessory), Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A9	12895-60001	1	DIRECT MEMORY ACCESS CARD	28480	12895-60001
A9C1	0160-2055	21	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C2	0180-0197	10	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C3	0180-0197		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	150D225X9020A2-DYS
A9C4	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C5	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C8	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C16	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C17	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C19	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C20	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C21	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C22	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C23	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C24	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C25	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C26	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C27	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C28	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C29	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A9C30	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9C31	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A9R1	0757-0407	17	R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R2	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R3	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R4	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R5	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R6	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R7	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R8	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R9	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R10	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R11	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R12	0698-3439	1	R:FXD MET FLM 178 OHM 1% 1/8W	28480	0698-3439
A9R13	0757-0280	7	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R14	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R15	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R16	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R17	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R18	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R19	0757-1094	2	R:FXD MET FLM 1.47K OHM 1% 1/8W	28480	0757-1094
A9R20	0757-0416	9	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R21	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R22	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R23	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R24	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R25	0757-0418	1	R:FXD MET FLM 619 OHM 1% 1/8W	28480	0757-0418
A9R26	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R27	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R28	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R29	0698-3446	1	R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A9R30	0757-1094		R:FXD MET FLM 1.47K OHM 1% 1/8W	28480	0757-1094
A9R31	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R32	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R33	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R34	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R35	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R36	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A9R37	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
A9R38	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A9R39	1810-0080	2	R:NETWORK 7 X 500 OHM 5% 0.15W EACH	28480	1810-0080
A9R40	1810-0080		R:NETWORK 7 X 500 OHM 5% 0.15W EACH	28480	1810-0080
A9R41	0698-3443	2	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A9R42	0698-3443		R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A9U11	182D-0233	16	IC:TTTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N

Table 4-11. A9 Direct Memory Access Card (Accessory), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A9U12	1820-0485	10	IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U13	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U14	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U15	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U16	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U17	1820-0233	8	IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U21	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U22	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U23	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U24	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U25	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U26	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U27	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U31	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U32	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U33	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U34	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U35	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U36	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U37	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U41	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U42	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U43	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U44	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U45	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U46	1820-0616	6	IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U47	1820-0233		IC:TTL SYNUP-ON 4-BIT BINARY COUNTER	01295	SN74193N
A9U51	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U52	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A9U53	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A9U54	1820-0186	3	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A9U56	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A9U57	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U61	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U62	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U63	1820-0451	2	IC:TTL DUAL J-K F/F	04713	MC3062P
A9U65	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A9U66	1820-0141	2	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A9U67	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U71	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A9U72	1820-0605	2	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H01N
A9U73	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U75	1820-0205	1	IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A9U76	1820-0372	3	IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A9U77	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A9U81	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A9U82	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A9U83	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A9U84	1820-0140		IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A9U85	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A9U86	1820-0482	4	IC:CTL 1 OF 8 DECODER	07263	U68983849X
A9U87	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A9U92	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U93	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U94	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U95	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A9U96	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A9U97	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A9U102	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A9U103	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U104	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A9U105	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A9U106	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A9U107	1820-0301		IC:TTL QUAD 8I-STABLE D-LATCH	01295	SN7475N
A9U112	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A9U113	1820-0512	2	IC:TTL DUAL D F/F	01295	SN74H74N
A9U114	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A9U115	1820-0371	4	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A9U116	1820-0615		IC:TTL 8-INPT MULTIPLEXER W/COM.ENABLE	04713	FAIR 9312
A9U117	1820-0615		IC:TTL 8-INPT MULTIPLEXER W/COM.ENABLE	04713	FAIR 9312
A9U121	1820-0613	1	IC:HS HEX INVERTER W/OPEN COLL.	01295	SN74H05N
A9U122	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A9U123	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A9U124	1820-0512		IC:TTL DUAL D F/F	01295	SN74H74N
A9U125	1820-0605		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H01N

Table 4-11. A9 Direct Memory Access Card (Accessory), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A9U126 A9U127	1820-0615 1820-0615		IC:TTL 8-INPT MULTIPLEXER W/COM.ENABLE IC:TTL 8-INPT MULTIPLEXER W/COM.ENABLE	04713 04713	FAIR 9312 FAIR 9312

REF. NO.	BACKPLANE LOCATION						* INDICATES SIGNAL SOURCE
A9							
17	A7-10	A8-66*	A9-44	A10-21	THRU A23-21		
18	A4-76	A7-5	A8-51*	A9-24	A10-7	THRU A23-7	
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64	
	A107-69						
30	A7-19*	A9-82	A10-13	THRU A23-13			
32	A6-73*	A9-36*	A24-55*	A107-76			
36	A9-15*	A10-62	THRU A23-62				
38	A1-50	A7-4	A8-57*	A9-29	A10-46	THRU A23-46	
45	A7-31*	A9-28					
46	A7-28*	A9-30					
222	A3-76	A7-43	A8-46*	A9-45*	A10-15	THRU A23-15	
	A24-6						
226	A3-77	A8-78*	A9-32	A24-10	A10-20	THRU A23-20	
309	A7-41*	A8-37	A9-62				
334	A1-54*	A3-28*	A4-27	A9-31*	A24-77*	A107-72	
337	A3-34*	A8-61	A9-42*				
376	A6-74*	A9-34*	A24-57*	A107-75			
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*	
	A107-16						
397	A2-44*	A5-80*	A6-60	A7-61*	A8-4*	A9-14*	
	A107-18						
398	A2-29*	A5-76*	A6-61	A7-60*	A8-5*	A9-18*	
	A107-12						
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*	
	A107-14						
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*	
	A107-29						
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*	
	A107-38						
402	A2-12*	A5-49*	A6-67	A8-9*	A9-20*	A107-20	
403	A2-9*	A5-43*	A6-66	A8-24*	A9-11*	A107-22	
404	A2-53*	A5-31*	A6-52	A8-14*	A9-5*	A107-44	
405	A2-54*	A5-32*	A6-51	A8-18*	A9-3*	A107-46	
406	A2-43*	A5-29*	A6-54	A8-19*	A9-9*	A107-34	
407	A2-49*	A5-30*	A6-53	A8-20*	A9-7*	A107-36	
408	A2-31*	A5-10*	A6-38	A8-21*	A9-8*	A107-51	
409	A2-21*	A5-8*	A6-37	A8-22*	A9-4*	A107-42	
410	A2-10*	A5-6*	A6-42	A8-23*	A9-6*	A107-50	
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*	
	A9-84*	A107-52					
414	A7-33*	A9-50					
415	A7-36*	A9-49					
418	A7-69*	A9-51*	A15-16	A16-34	A23-16		
419	A7-70*	A9-52*	A14-16	A15-34	A22-16	A23-34	
420	A7-72*	A9-59*	A13-16	A14-34	A21-16	A22-34	
421	A7-73*	A9-58*	A12-16	A13-34	A20-16	A21-34	
422	A7-74*	A9-60*	A11-16	A12-34	A19-16	A20-34	
423	A7-75*	A9-56*	A10-16	A11-34	A18-16	A19-34	
424	A7-76*	A9-54*	A10-34	A17-16	A18-34		
425	A7-77*	A9-57*	A16-16	A17-34			
426	A7-16*	A9-55*					
427	A7-15*	A9-53*	A16-14	A17-14,37	THRU A23-14,37		
428	A7-18*	A9-61*	A16-37	A10-14,37	THRU A15-14,37		
431	A1-53*	A3-22*	A8-60	A9-35*	A24-42*	A107-66	
432	A3-30*	A4-59*	A9-41*	A107-74			
438	A3-46*	A8-62	A9-33*	A24-75*			
449	A3-38	A9-46*					
455	A9-72	A23-19*					
456	A9-73	A22-19*					
457	A9-70	A21-19*					
458	A9-71	A20-19*					
459	A9-63	A19-19*					
460	A9-65	A18-19*					
461	A9-75	A17-19*					
462	A9-77	A16-19*					
463	A9-64	A15-19*					
464	A9-68	A14-19*					
465	A9-67	A13-19*					
466	A9-66	A12-19*					
467	A9-69	A11-19*					
468	A9-74	A10-19*					




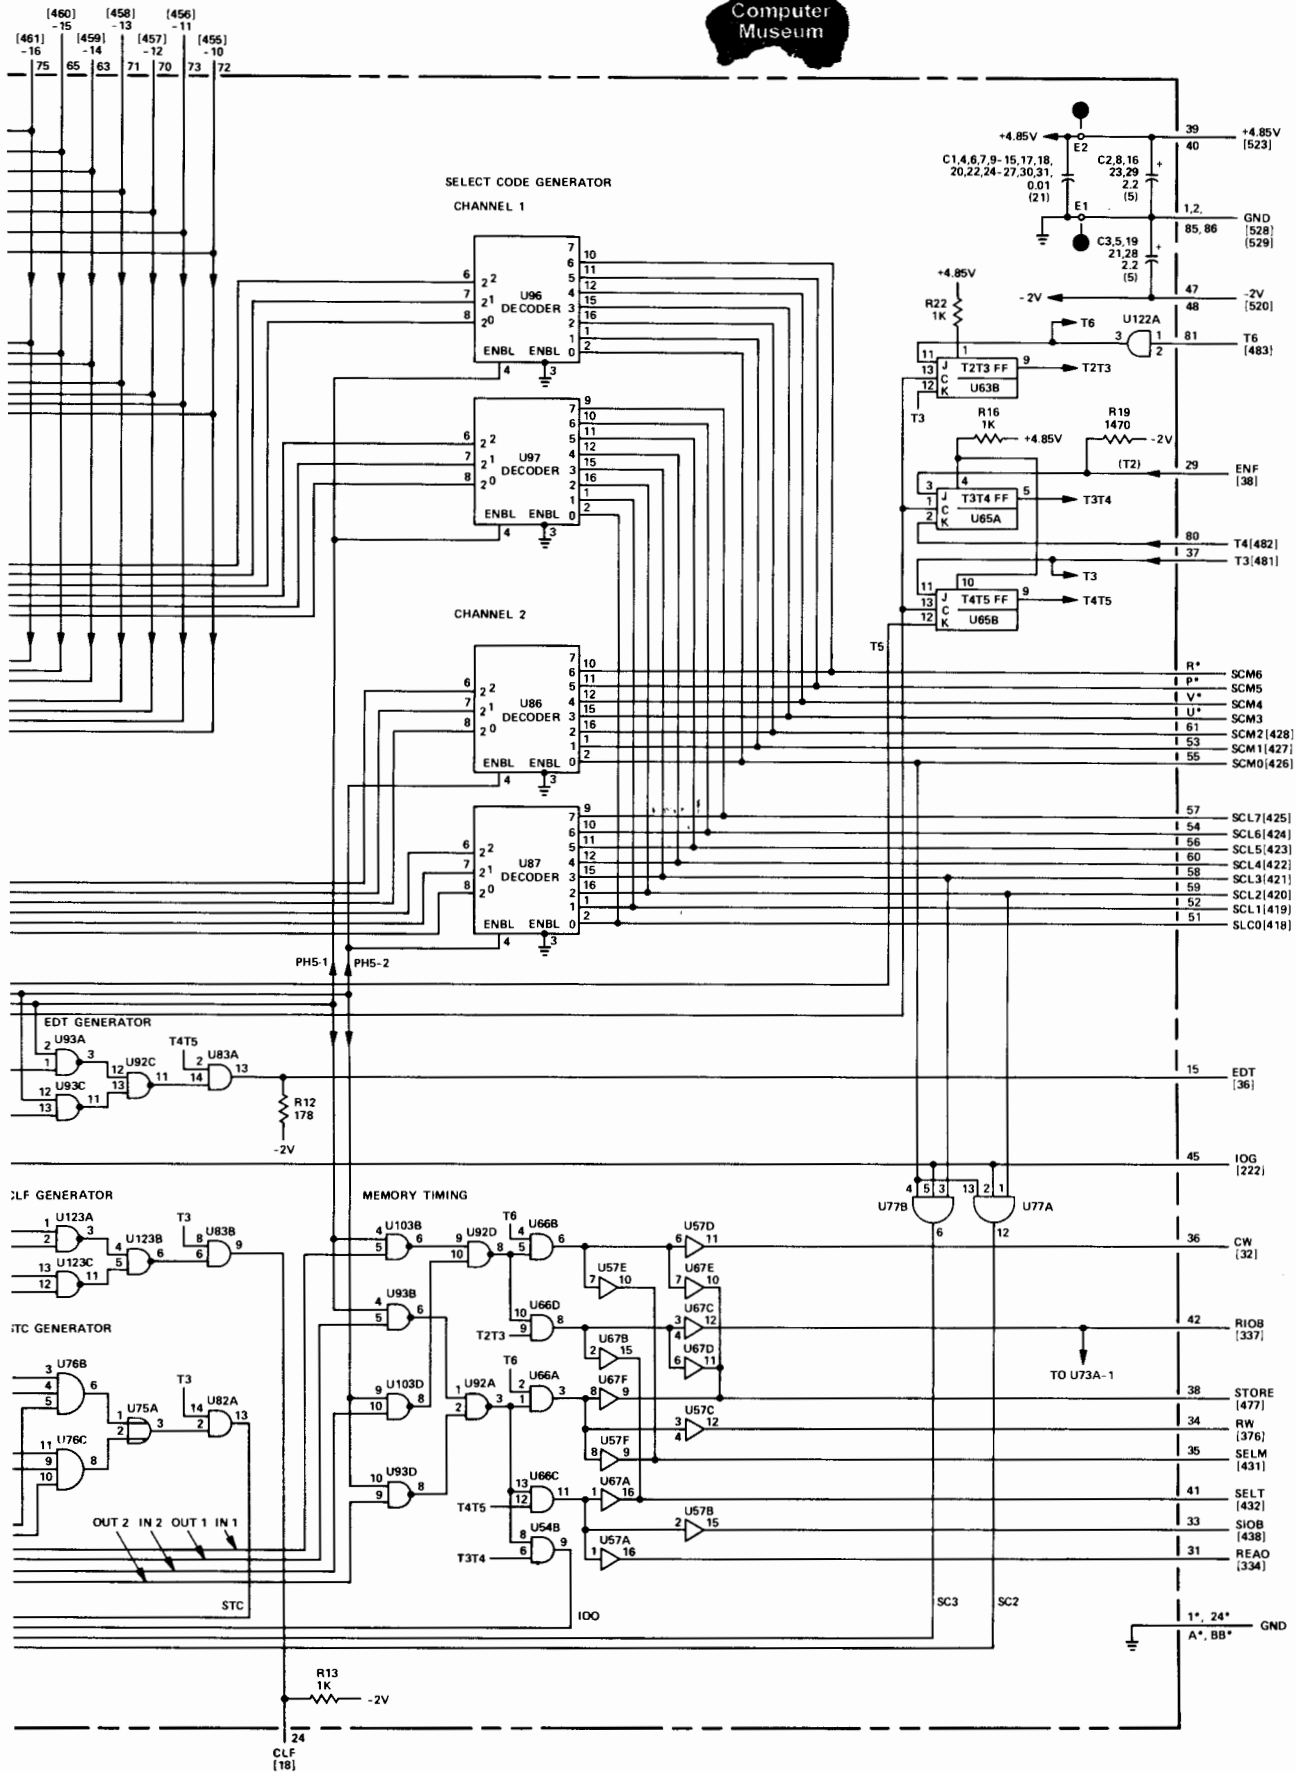


Figure 4-12. A9 Direct Memory Access Card (Accessory)
Parts Location and Schematic Diagrams

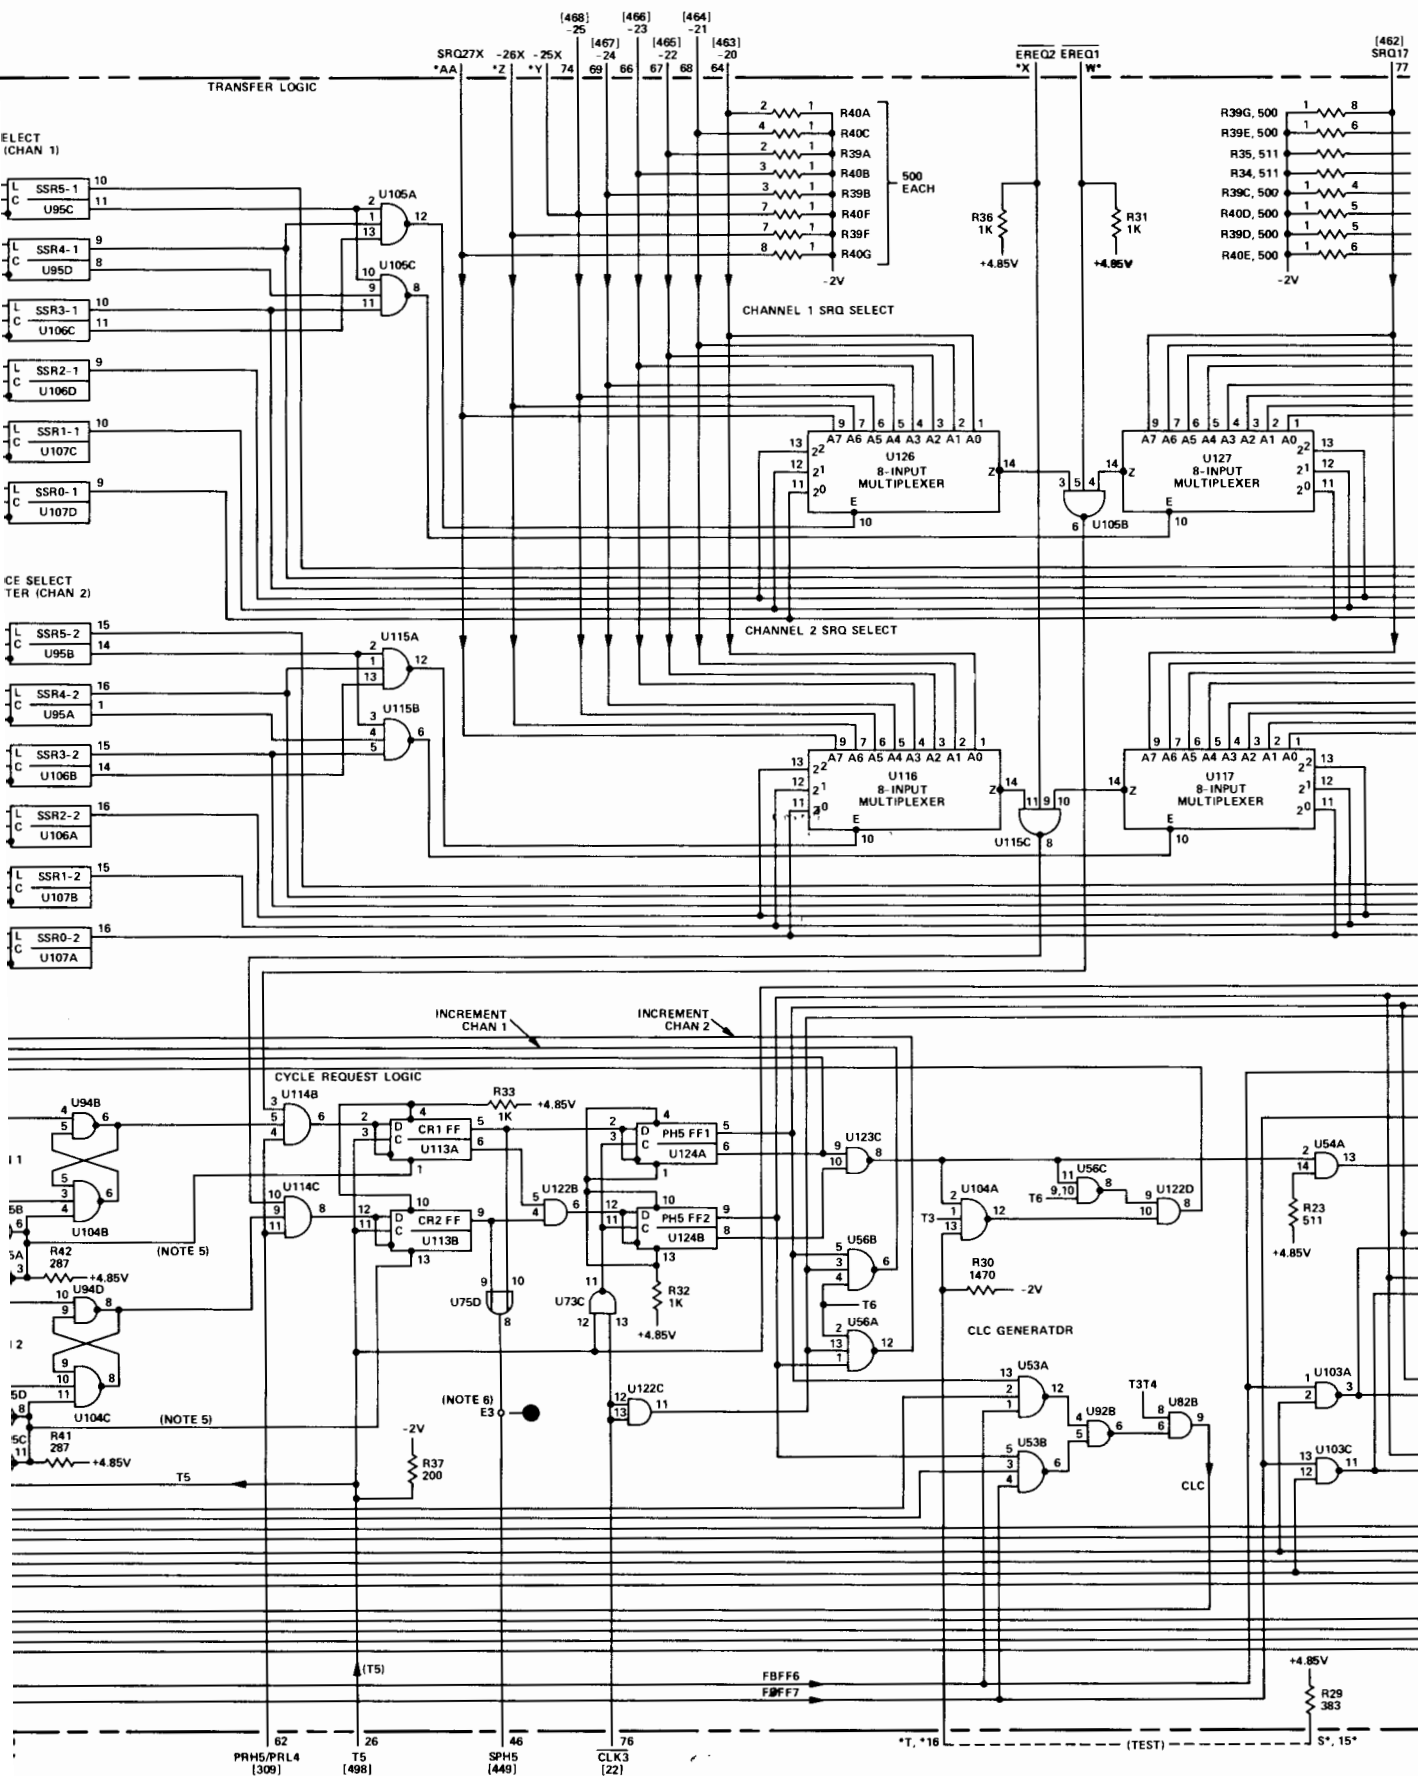

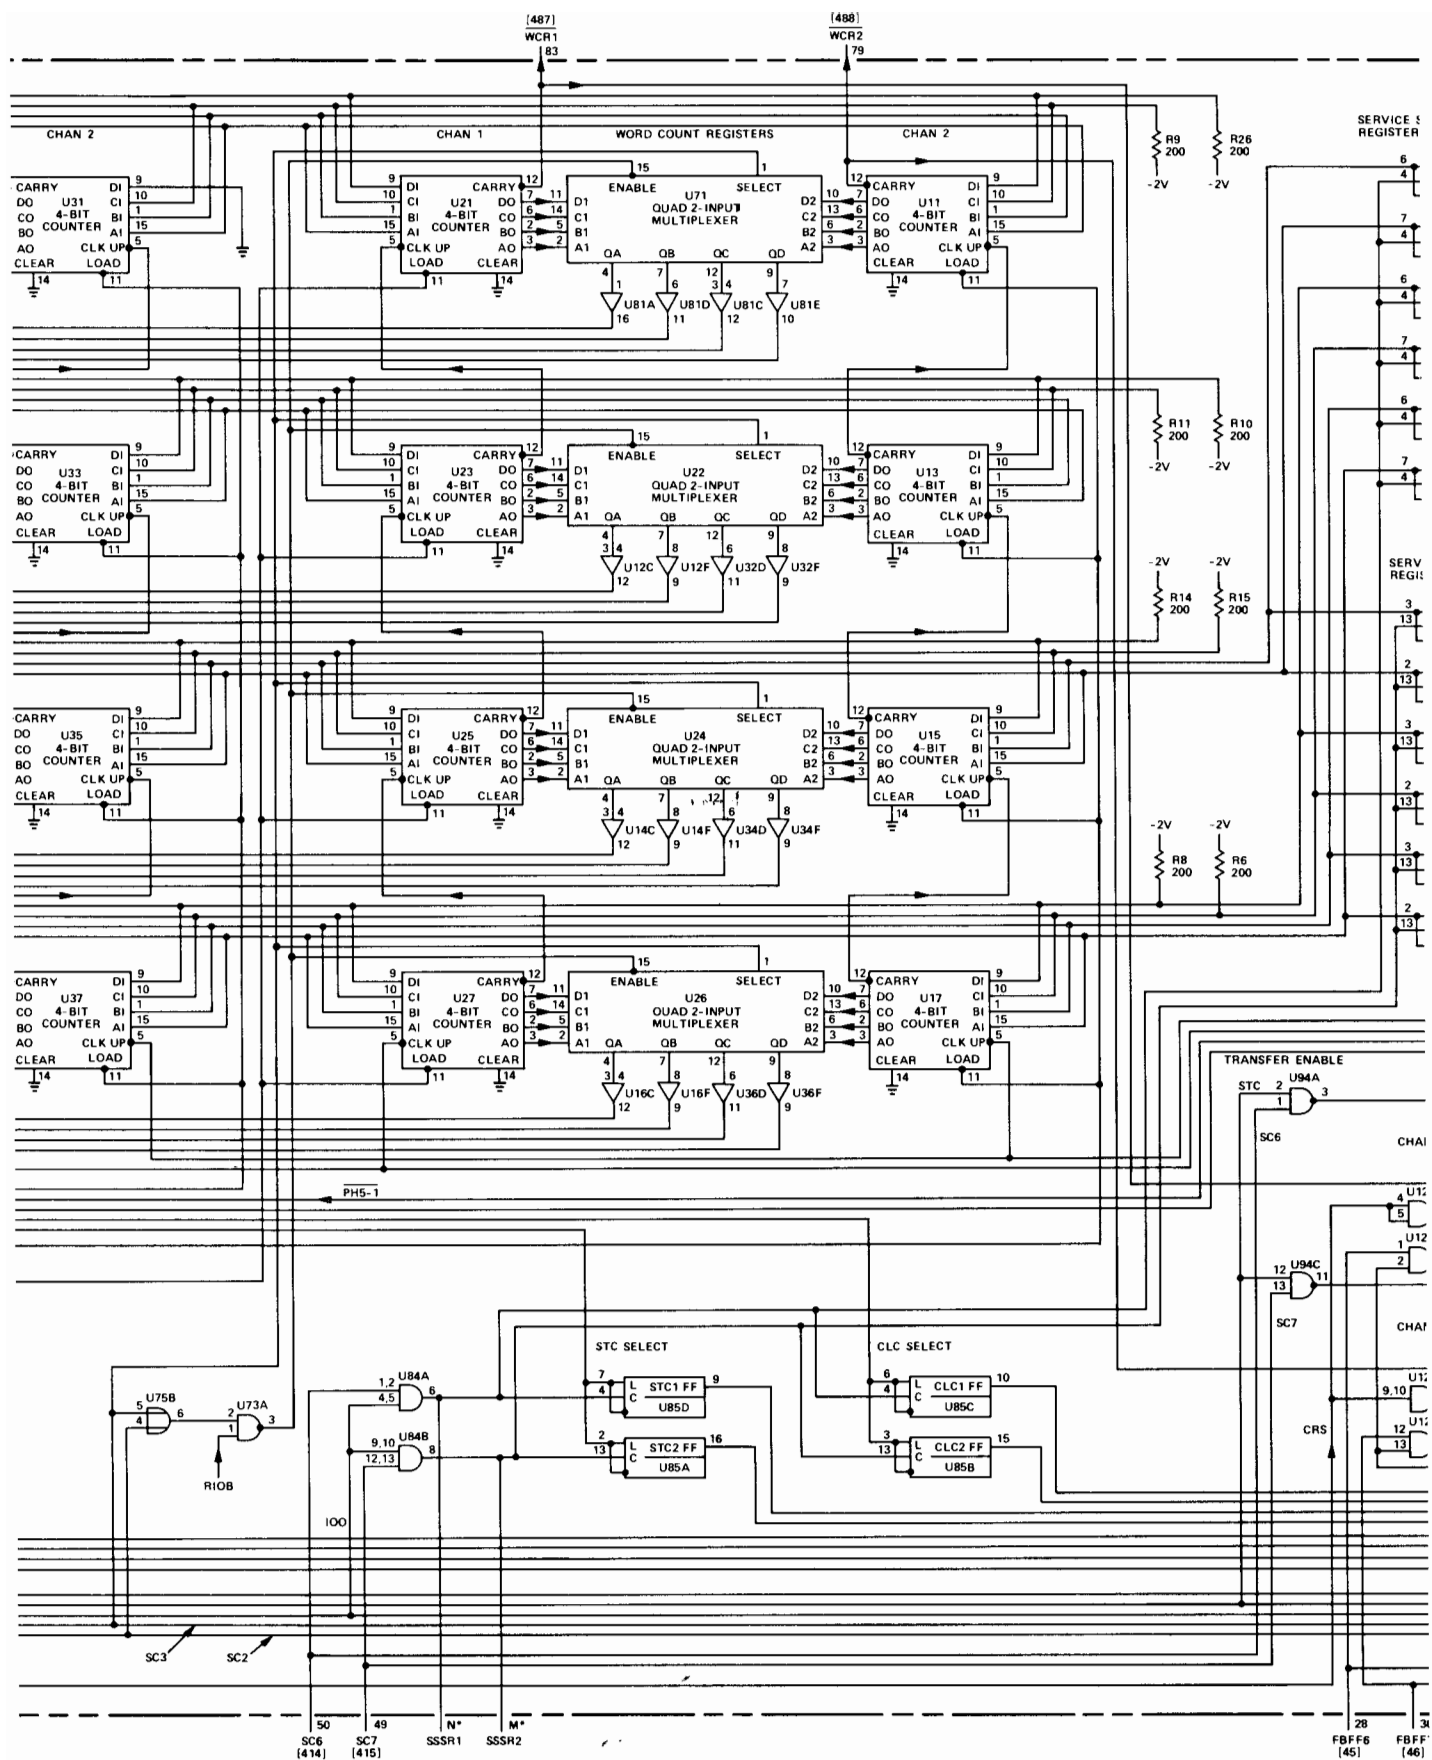

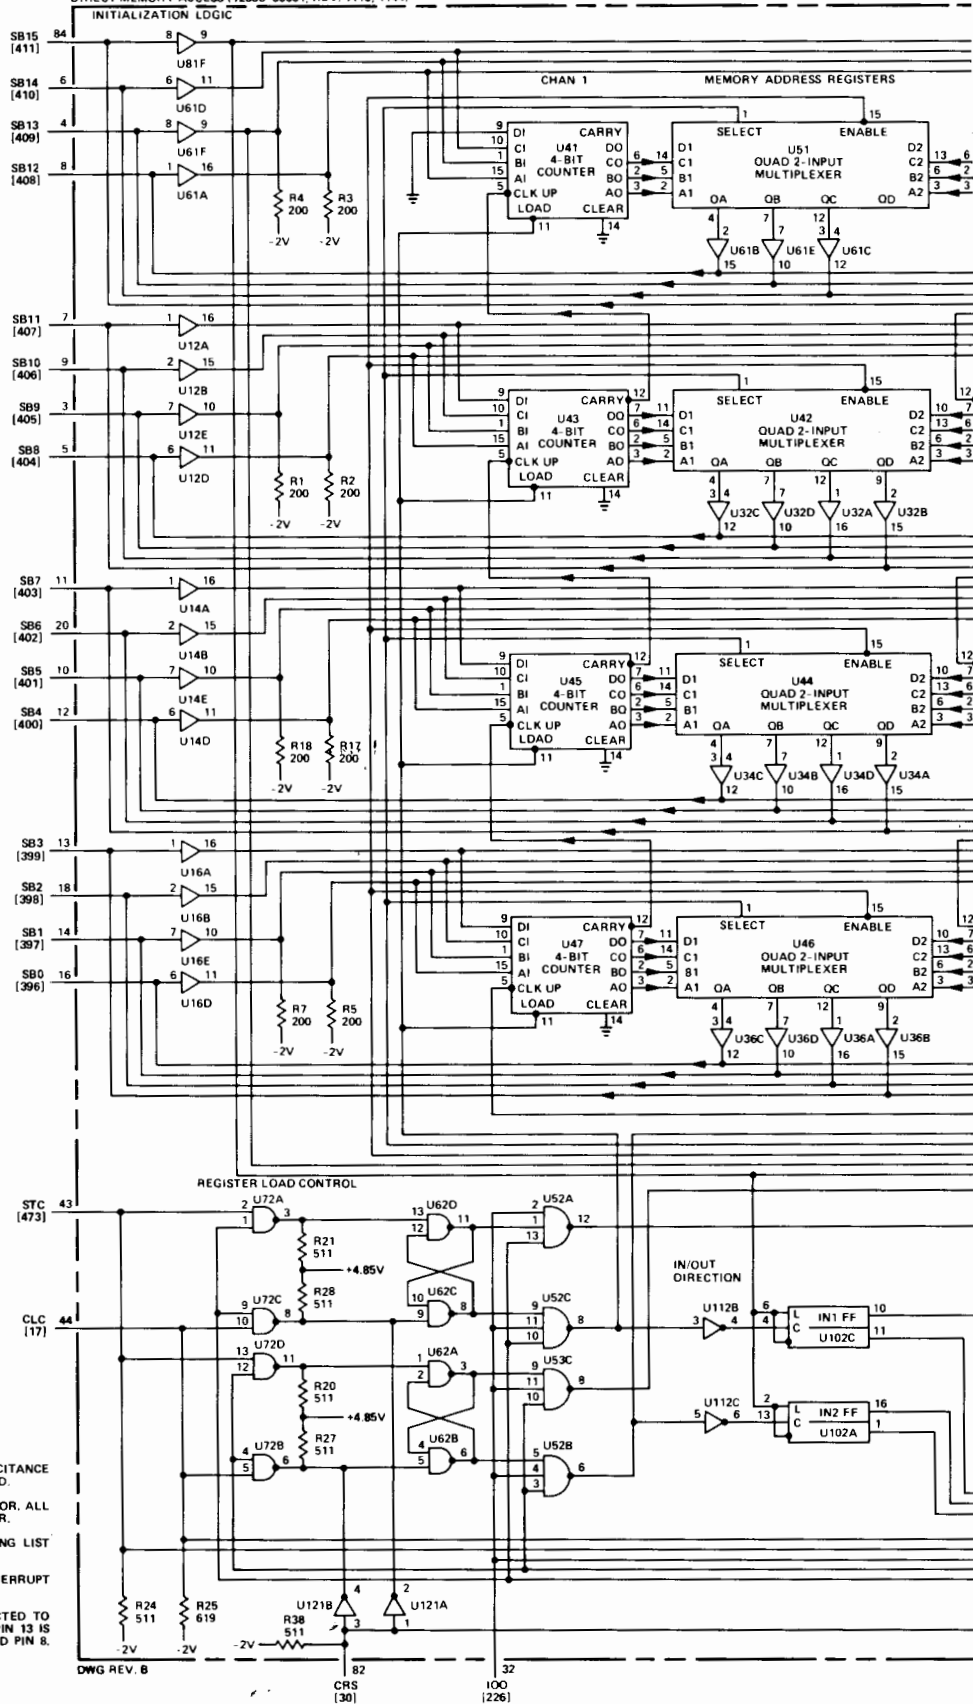


REF.
NO.

BACKPLANE LOCATION

* INDICATES SIGNAL SOURCE

A9 (CONT)

473	A7-3	A8-55*	A9-43	A10-22 THRU A23-22
477	A3-53*	A9-38*	A24-73	A107-73
481	A8-54*	A9-37	A10-11 THRU A23-11	
482	A1-16	A8-44*	A9-80	
483	A3-26	A7-58	A8-43*	A9-81 A24-66
487	A7-32	A9-83*		
488	A7-27	A9-79*		
498	A3-37	A7-11	A8-81*	A9-26

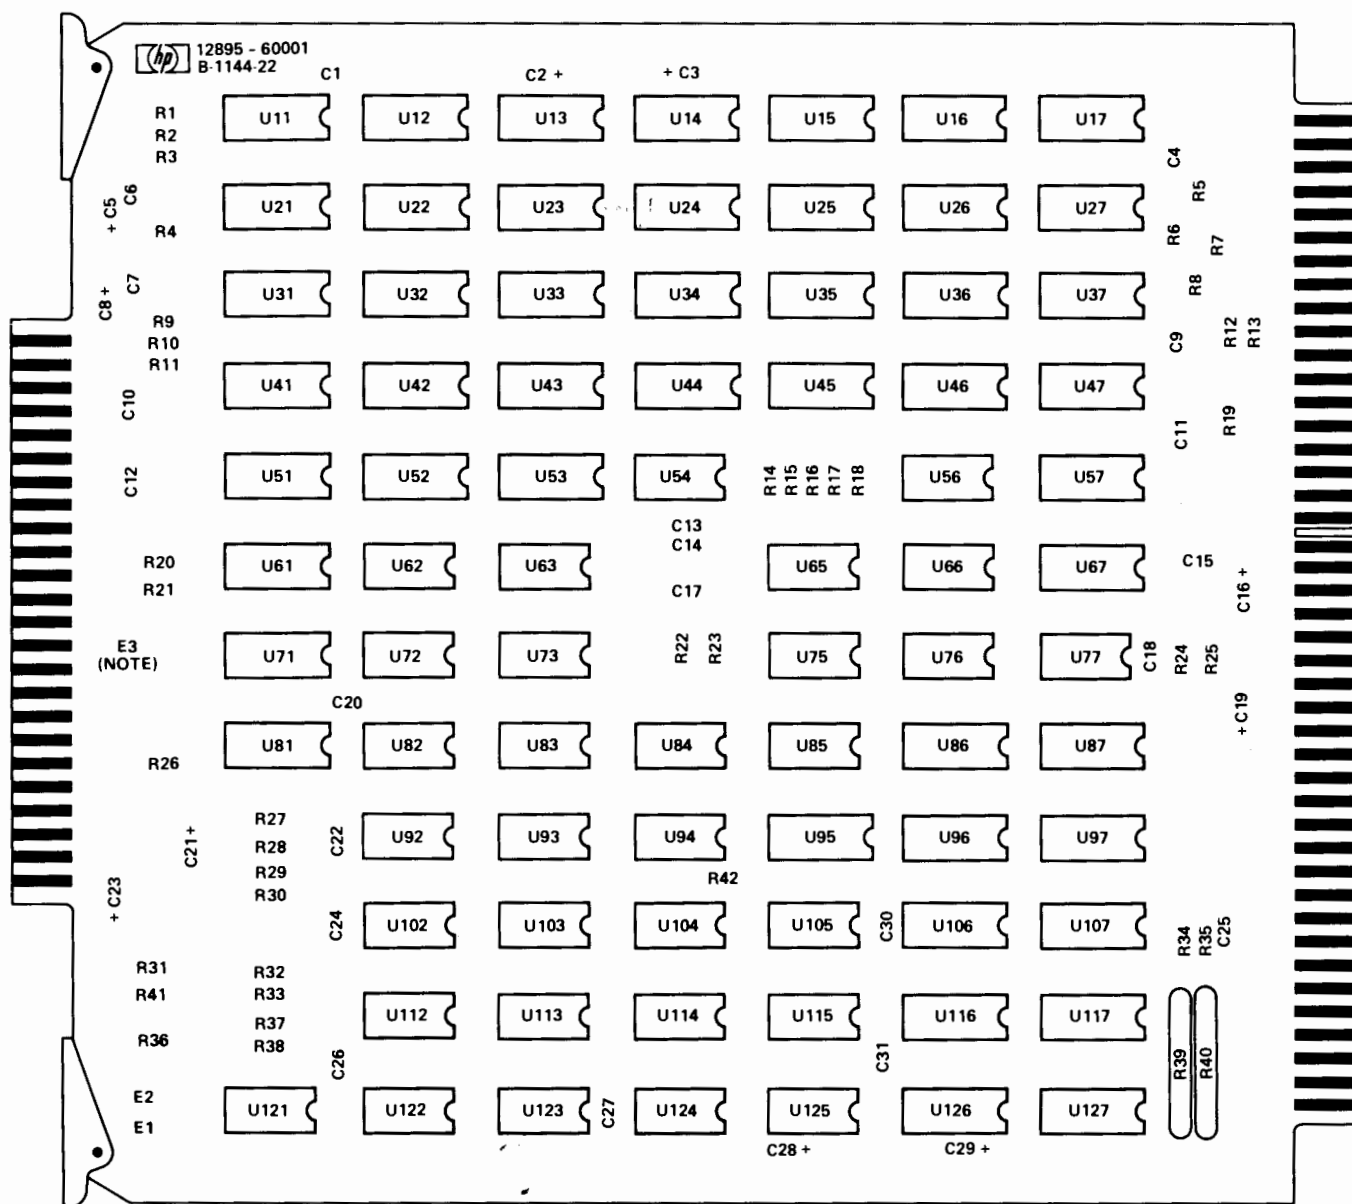

See table 4-11 for replaceable parts.

Table 4-12. A16 I/O Terminator Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A16	02100-60060	1	I/O TERMINATOR CARD	28480	02100-60060
A16R1 THRU	0683-2215	32	R:FXD COMP 220 OHM 5% 1/4W	01121	CB 2215
A16R15					
A16R16	0683-1025	2	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025
A16R17 THRU	0683-2215		R:FXD COMP 220 OHM 5% 1/4W	01121	CB 2215
A16R21					
A16R22	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025
A16R23 THRU	0683-2215		R:FXD COMP 220 OHM 5% 1/4W	01121	CB 2215
A16R34					

REF. NO.	BACKPLANE LOCATION				* INDICATES SIGNAL SOURCE		

A10	THRU	A23					
17	A7-10	A8-66*	A9-44	A10-21	THRU	A23-21	
18	A4-76	A7-5	A8-51*	A9-24	A10-7	THRU	A23-7
30	A7-19*	A9-82	A10-13	THRU	A23-13		
36	A9-15*	A10-62	THRU	A23-62			
38	A1-50	A7-4	A8-57*	A9-29	A10-46	THRU	A23-46
49	A7-71	A16-4*	A17-4*	49*	THRU	A23-4*	49*
50	A7-34	A16-49*	A10-4*,49*	THRU	A15-4*,49*		
58	A7-14*	A8-84	A10-10	THRU	A23-10		
205	A8-13*	A24-71	A10-26,35	THRU	A23-26,35		
206	A8-12*	A24-70	A10-29,38	THRU	A23-29,38		
207	A8-11*	A24-68	A10-30,41	THRU	A23-30,41		
208	A8-17*	A24-72	A10-45,64	THRU	A23-45,64		
209	A8-16*	A24-54	A10-42,77	THRU	A23-42,77		
210	A8-15*	A24-53	A10-51,80	THRU	A23-51,80		
211	A8-10*	A24-63	A10-53,81	THRU	A23-53,81		
212	A8-32*	A24-61	A10-52,84	THRU	A23-52,84		
213	A8-31*	A24-32	A10-27,54	THRU	A23-27,54		
214	A8-29*	A24-34	A10-28,56	THRU	A23-28,56		
215	A8-28*	A24-46	A10-31,58	THRU	A23-31,58		
216	A8-27*	A24-44	A10-55,60	THRU	A23-55,60		
217	A8-26*	A24-14	A10-57,78	THRU	A23-57,78		
218	A8-25*	A24-16	A10-61,79	THRU	A23-61,79		
219	A8-30*	A24-20	A10-65,82	THRU	A23-65,82		
220	A8-34*	A24-18	A10-74,83	THRU	A23-74,83		
221	A10-18	THRU	A23-18				
222	A3-76	A7-43	A8-46*	A9-45*	A10-15	THRU	A23-15
	A24-6						
225	A7-53	A8-82*	A24-4	A24-80*	A10-24	THRU	A23-24
226	A3-77	A8-78*	A9-32	A24-10	A10-20	THRU	A23-20
246	A7-82	A13-6*	A14-33*	A21-6*	A22-33*		
247	A7-78	A12-6*	A13-33*	A20-6*	A21-33*		
248	A7-80	A11-6*	A12-33*	A19-6*	A20-33*		
249	A7-83	A8-67*	A10-6*	A11-33*	A18-6*	A19-33*	
250	A7-81	A10-33*	A17-6*	A18-33*			
251	A7-84	A16-6*	A17-33*				
255	A10-59	THRU	A23-59				
305	A1-6	A7-8*	A24-67	A104-42	A107-70		
	A10-66	THRU	A23-66				
306	A7-23*	A24-65	A10-17	THRU	A23-17		
311	A22-23	A23-3*					
312	A21-23	A22-3*					
313	A20-23	A21-3*					
314	A19-23	A20-3*					
315	A18-23	A19-3*					
316	A17-23	A18-3*					
317	A16-23	A17-3*					
318	A14-23	A15-3*					
319	A13-23	A14-3*					
320	A12-23	A13-3*					
321	A11-23	A12-3*					
322	A10-23	A11-3*					
323	A7-52	A16-3*					
375	A1-49*	A10-50	THRU	A23-50			
418	A7-69*	A9-51*	A15-16	A16-34	A23-16		
419	A7-70*	A9-52*	A14-16	A15-34	A22-16	A23-34	
420	A7-72*	A9-59*	A13-16	A14-34	A21-16	A22-34	
421	A7-73*	A9-58*	A12-16	A13-34	A20-16	A21-34	
422	A7-74*	A9-60*	A11-16	A12-34	A19-16	A20-34	
423	A7-75*	A9-56*	A10-16	A11-34	A18-16	A19-34	
424	A7-76*	A9-54*	A10-34	A17-16	A18-34		
425	A7-77*	A9-57*	A16-16	A17-34			
427	A7-15*	A9-53*	A16-14	A17-14,37	THRU	A23-14,37	
428	A7-18*	A9-61*	A16-37	A10-14,37	THRU	A15-14,37	
433	A4-70	A7-17	A8-52*	A10-5	THRU	A23-5	
435	A4-72	A7-24	A8-59*	A10-25	THRU	A23-25	
436	A10-73	THRU	A23-73				
439	A8-56*	A10-32	THRU	A23-32			
440	A1-17	A4-16*	A7-21*	A10-12*	THRU	A23-12*	
444	A10-68	THRU	A23-68				
455	A9-72	A23-19*					
456	A9-73	A22-19*					

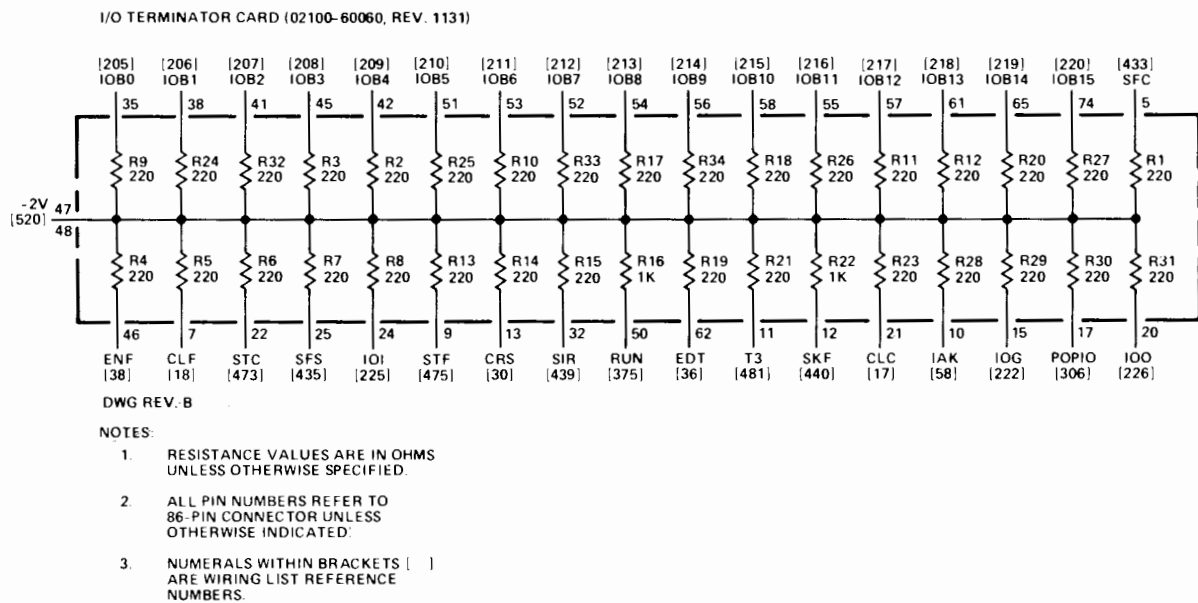


Figure 4-13. A16 I/O Terminator Card, Parts Location and Schematic Diagrams

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A10 THRU A23 (CONT)

457	A9-70	A21-19*		
458	A9-71	A20-19*		
459	A9-63	A19-19*		
460	A9-65	A18-19*		
461	A9-75	A17-19*		
462	A9-77	A16-19*		
463	A9-64	A15-19*		
464	A9-68	A14-19*		
465	A9-67	A13-19*		
466	A9-66	A12-19*		
467	A9-69	A11-19*		
468	A9-74	A10-19*		
473	A7-3	A8-55*	A9-43	A10-22 THRU A23-22
475	A4-73	A7-6	A8-49*	A10-9 THRU A23-9
481	A8-54*	A9-37	A10-11 THRU A23-11	
496	A7-50*	A23-8,23	A16-8 THRU A22-8	
497	A7-55*	A15-8,23	A10-8 THRU A14-8	

(hp) 02100 - 60060
A-1131-22

R1	R5	R13	R21	
		R14		R28
	R6		R22	R29
	R7			R30
	R8		R23	R31
R2				
R3	R9	R15		
R4			R24	R32
	R10	R16	R25	
	R11	R17	R26	R33
	R12	R18		R34
		R19		
		R20		
			R27	

DWG REV. B

See table 4-12 for replaceable parts.

Table 4-13. A24 Operator Panel Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A24	02100-60015	1	OPERATOR PANEL CARD	28480	02100-60015
A24C1	0180-0106	22	C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C4	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C5	0160-2055	26	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C9	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C12	0180-0291	2	C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A24C13	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C14	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C16	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C17	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C18	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C20	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C21	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C22	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C23	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C24	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A24C25	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C26	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C27	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C28	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C29	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C30	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C32	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C33	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C34	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C36	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C37	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C38	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C39	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C41	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C42	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C43	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C44	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C45	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C46	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C47	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C48	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C49	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C50	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C51	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C52	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C53	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C54	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C55	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C56	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24CR1	1901-0040	1	DIODE:SI LICON 30MA 30WV	07263	FDG1088
A24DS1 THRU A24DS38	2140-0364	38	LAMP:INCANDESCENT	28480	2140-0364
A24Q1	1854-0477	4	TSTR:SI NPN	80131	2N2222A
A24Q2	1854-0477		TSTR:SI NPN	80131	2N2222A
A24Q3	1854-0477		TSTR:SI NPN	80131	2N2222A
A24Q4	1854-0477		TSTR:SI NPN	80131	2N2222A
A24R1	1810-0030	10	NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R2	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R3	0698-7260	1	R:FXD FLM 10K OHM 2% 1/8W	28480	0698-7260
A24R4	0698-7236	5	R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A24R5	0698-7244	2	R:FXD FLM 2.15K OHM 2% 1/8W	28480	0698-7244
A24R6	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R7	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R8	0757-0416	3	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A24R9	0757-0280	2	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A24R10 (NOTE 2)	0757-0442	1	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A24R10 (NOTE 1)	0757-0463	1	R:FXD MET FLM 82.5K OHM 1% 1/8W	28480	0757-0463
A24R11	0698-7244		R:FXD FLM 2.15K OHM 2% 1/8W	28480	0698-7244
A24R12	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A24R13	0698-7229	2	R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A24R14	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A24R15	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R16	1810-0063	3	RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063

NOTE: 1. First used on card rev. 1244.
2. Used on card rev. 1123.

Table 4-13. A24 Operator Panel Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A24R17	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R18	1810-0063		RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063
A24R19	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R20	1810-0063		RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063
A24R21	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R22	1810-0063		RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063
A24R23	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R24	1810-0063		RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063
A24R25	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R26	1810-0063		RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063
A24R27	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A24R28	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A24R29	0698-7229		R:FXD FLM 511 OHM 2% 1/8W	28480	0698-7229
A24R30	0698-3441	1	R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A24R31	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A24R32	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A24R33	0698-7236		R:FXD FLM 1K OHM 2% 1/8W	28480	0698-7236
A24S1 THRU	3101-1531	38	SWITCH: REED	28480	3101-1531
A24S38					
A24S39	3101-0973	2	SWITCH: SLIDE DPDT 0.5A 125V AC/DC	79727	G126-0018
A24S40	3101-0973		SWITCH: SLIDE DPDT 0.5A 125V AC/DC	79727	G126-0018
A24U1	1820-0141	17	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U2	1820-0485	4	IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A24U3	1820-0371	4	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A24U4	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A24U5	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U6	1820-0301	10	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U7	1820-0377	1	IC:TTL HS DUAL 2-WIDE 2-INPT	01295	SN74H50N
A24U8	1820-0385	1	IC:TTL HS 4 W-3-2-2-3 INPT AND/OR EXP.	01295	SN74H62N
A24U9	1820-0205	13	IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U10	1820-0370	6	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U11	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U12	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A24U13	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U14	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U15	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A24U16	1820-0186	10	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U17	1820-0668	2	IC:TTL HEX BUFFER/DRIVER W/OPEN COLL.	01295	SN7407N
A24U18	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U68981649X
A24U19(NOTE 1)	1820-0451	6	IC:TTL DUAL J-K F/F	04713	MC3062P
A24U20(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A24U21(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A24U22(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A24U23	1820-0512	1	IC:TTL DUAL D F/F	01295	SN74H74N
A24U24	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U25	1820-0375	5	IC:TTL HS 8-INPT NAND GATE	01295	SN74H30N
A24U26	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U27	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U28	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U29	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U30	1820-0375		IC:TTL HS 8-INPT NAND GATE	01295	SN74H30N
A24U31	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U32	1820-0375		IC:TTL HS 8-INPT NAND GATE	01295	SN74H30N
A24U33	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U34	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U35	1820-0424	4	IC:TTL HS HEX INVERTER	04713	SN74H04N
A24U36	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A24U37	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U38	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A24U39	1820-0372	2	IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A24U40	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U41	1820-0372		IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A24U42	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U43	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A24U44	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U45	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U46	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A24U47	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U48	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U49	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U50	1820-0769	11	IC:TTL DIGITAL	28480	1820-0769
A24U51	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U52	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U53	1820-0617	4	IC:TTL QUAD 2-INPT EXCL. NOR GATE	04713	MC3022P
A24U54	1820-0769		IC:TTL DIGITAL	28480	1820-0769

NOTES: 1. Part no. 1820-0695 used on some cards; the two parts are interchangeable.

Table 4-13. A24 Operator Panel Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A24U55	1820-1018		IC:TTL HS 8-INPT NAND GATE	01295	SN74H30H
A24U56	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U57	1820-0617		IC:TTL QUAD 2-INPT EXCL. NOR GATE	04713	MC3022P
A24U58	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U59	1820-0617		IC:TTL QUAD 2-INPT EXCL. NOR GATE	04713	MC3022P
A24U60	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U61	1820-0617		IC:TTL QUAD 2-INPT EXCL. NOR GATE	04713	MC3022P
A24U62	1820-0375		IC:TTL HS 8-INPT NAND GATE	01295	SN74H30H
A24U63	1820-0769	1	IC:TTL DIGITAL	28480	1820-0769
A24U64	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U65	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U66	1820-0769		IC:TTL DIGITAL	28480	1820-0769
A24U67	1820-0140		IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A24U68	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U69(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A24U70	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U71	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U72	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U73	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U74	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U75	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U76	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U77	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U78	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U79	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U80	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U81	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U82	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U83	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U84	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U85	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U86	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U87	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A24U88	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U89	1820-0668		IC:TTL HEX BUFFER/DRIVER W/OPEN COLL.	01295	SN7407N
A24U90	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P
A24U91	1820-0301	4	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U92	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U93	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U94	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P
A24U95	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U96	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U97	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U98	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P
A24U99	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U100	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U101	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U102	1820-0437		IC:TTL QUAD D F/F	04713	MC4015P
A24U103	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U104	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U105	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A24U107(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A24W1	8159-0005	3	JUMPER WIRE	28480	8159-0005
A24W2	8159-0005		JUMPER WIRE	28480	8159-0005
A24W3	8159-0005		JUMPER WIRE	28480	8159-0005

REF. NO.	BACKPLANE LOCATION						* INDICATES SIGNAL SOURCE
A24							
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64	
	A107-69						
28	A1-52*	A4-19	A24-43				
32	A6-73*	A9-36*	A24-55*	A107-76			
33	A1-42	A24-60*	A107-6				
35	A3-25	A24-76	A107-81*				
43	A7-42*	A24-12					
44	A4-10	A6-82*	A24-22				
47	A1-67	A4-64	A24-21*				
56	A1-65	A7-65*	A8-50*	A24-74			
198	A7-35*	A8-79	A24-24				
200	A1-37	A24-33*	A107-79				
225	A7-53	A8-82*	A24-4	A24-80*	A10-24 THRU A23-24		
258	A3-29	A24-78	A107-77*				
292	A4-68*	A6-8	A24-51				
300	A3-41*	A7-13	A24-56				
301	A24-79	S1A-8*					
302	A3-60	A4-28	A24-38*				
303	A3-72	A4-26	A24-41*				
304	A3-32	A24-36*					
305	A1-6	A7-8*	A24-67	A104-42	A107-70		
	A10-66 THRU A23-66						
306	A7-23*	A24-65	A10-17 THRU A23-17				
324	A7-22	A24-7*					
325	A1-4	A24-13*					
334	A1-54*	A3-28*	A4-27	A9-31*	A24-77*	A107-72	
368	A3-24*	A4-57*	A5-35,36	A24-23*			
376	A6-74*	A9-34*	A24-57*	A107-75			
416	A1-66	A24-11*					
417	A1-68	A24-5*					
429	A1-79	A24-3*					
431	A1-53*	A3-22*	A8-60	A9-35*	A24-42*	A107-66	
438	A3-46*	A8-62	A9-33*	A24-75*			
453	A1-74	A24-62*					
469	A1-62	A24-58*					
470	A1-64	A24-59*					
477	A3-53*	A9-38*	A24-73	A107-73			
483	A3-26	A7-58	A8-43*	A9-81	A24-66		
495	A24-9*	A107-67					
499	A4-63	A24-35*					





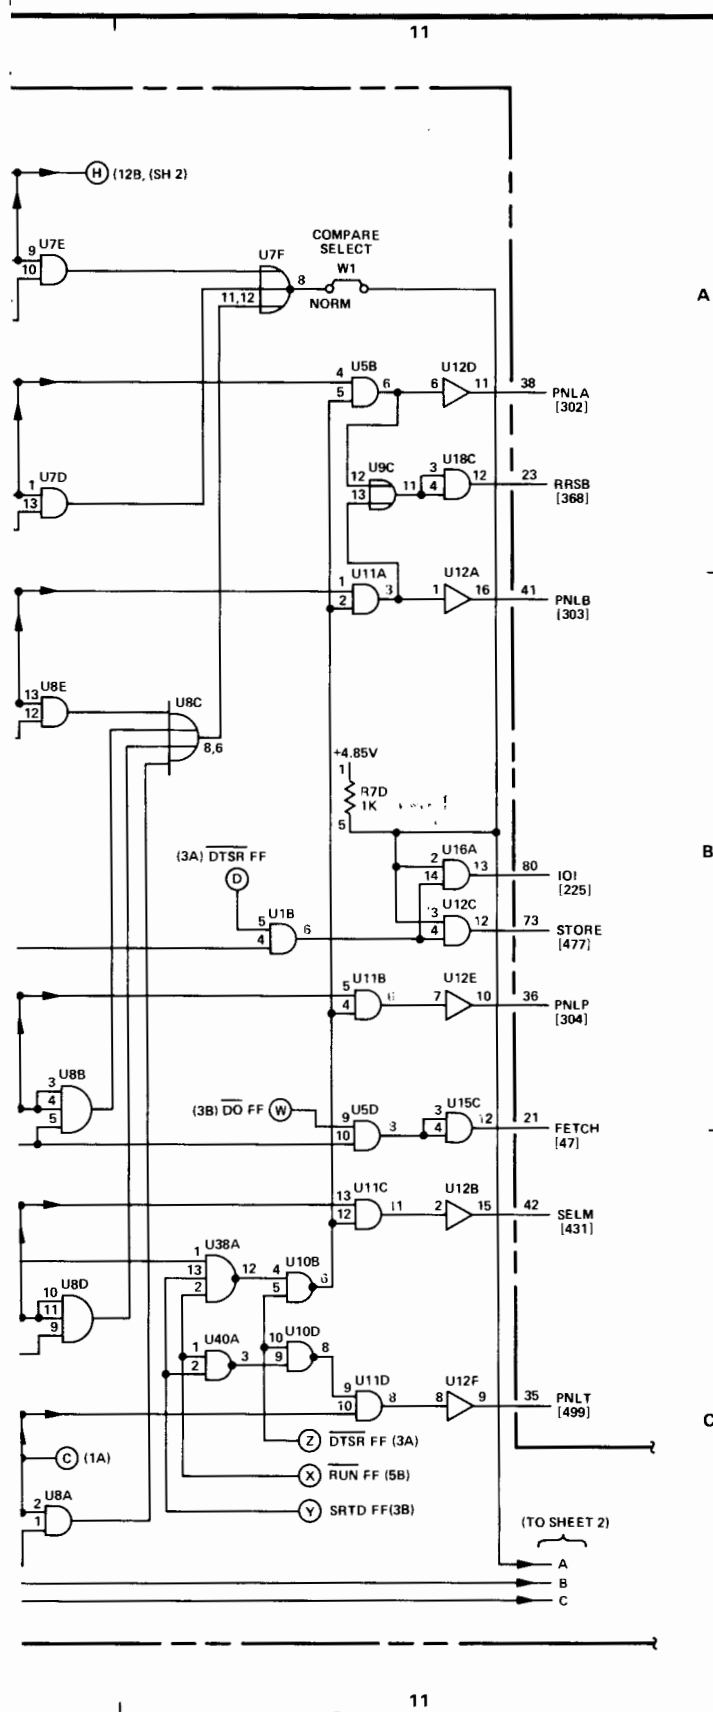


Figure 4-14. A24 Operator Panel Card, Parts Location and Schematic Diagrams (Sheet 1 of 2)

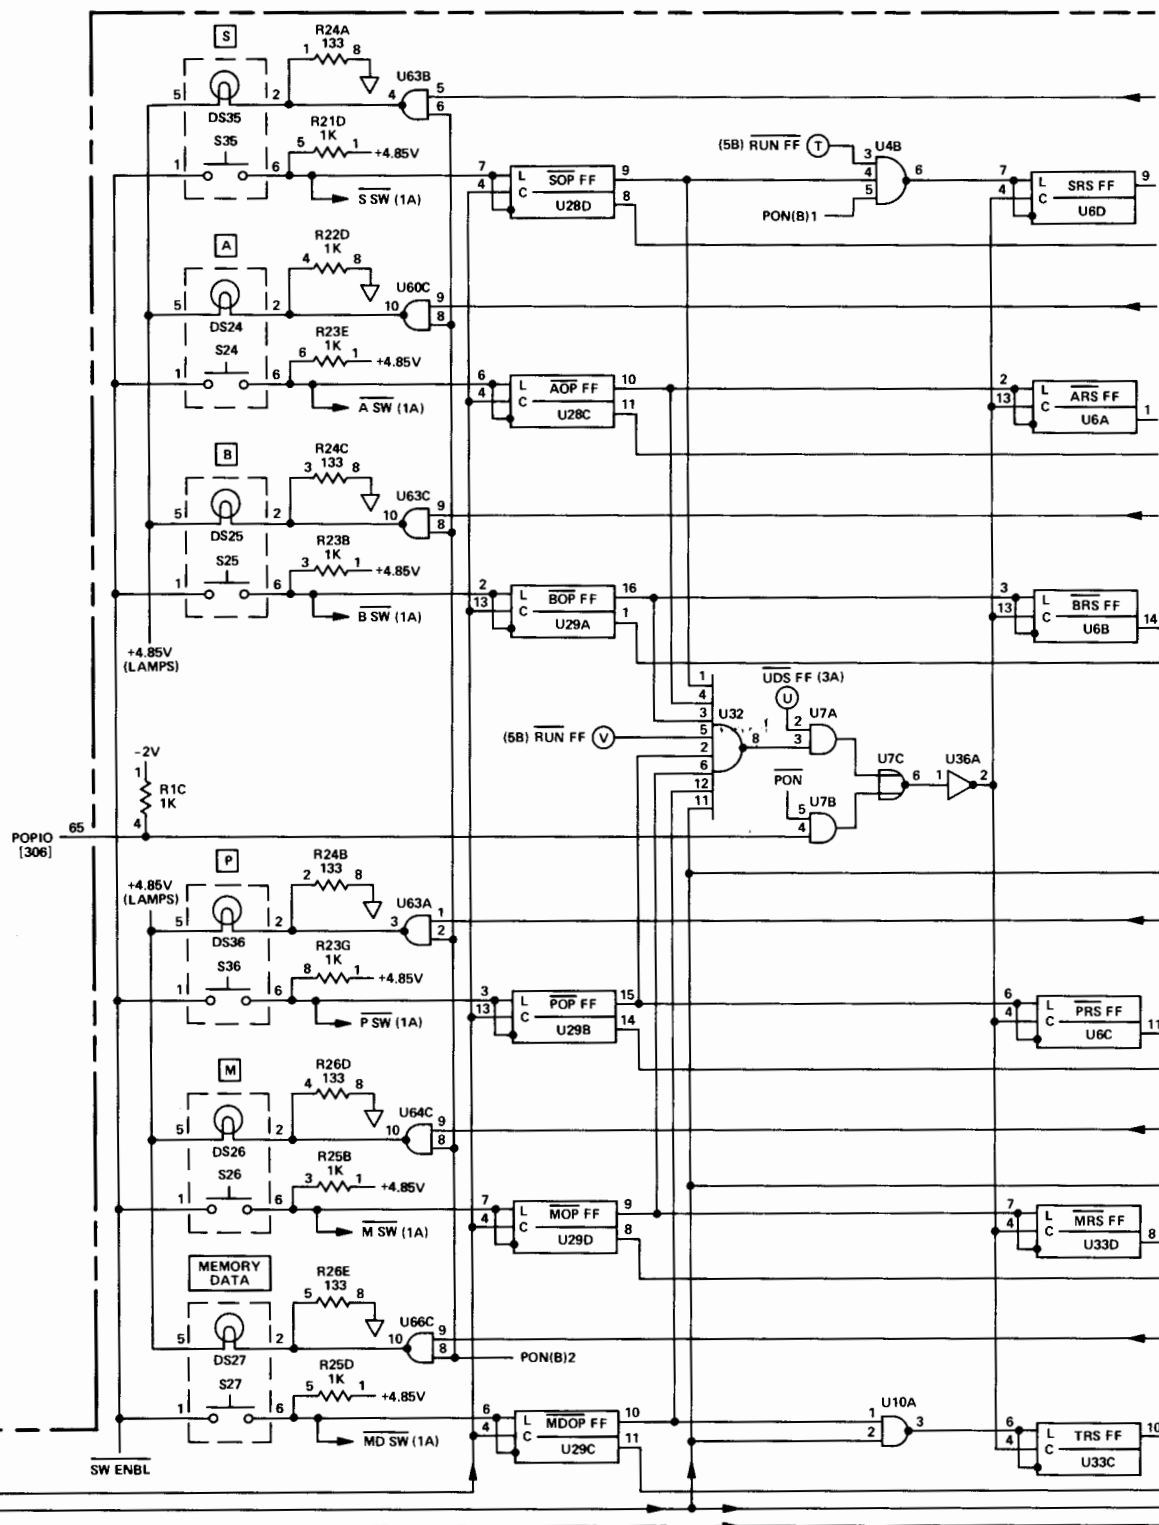

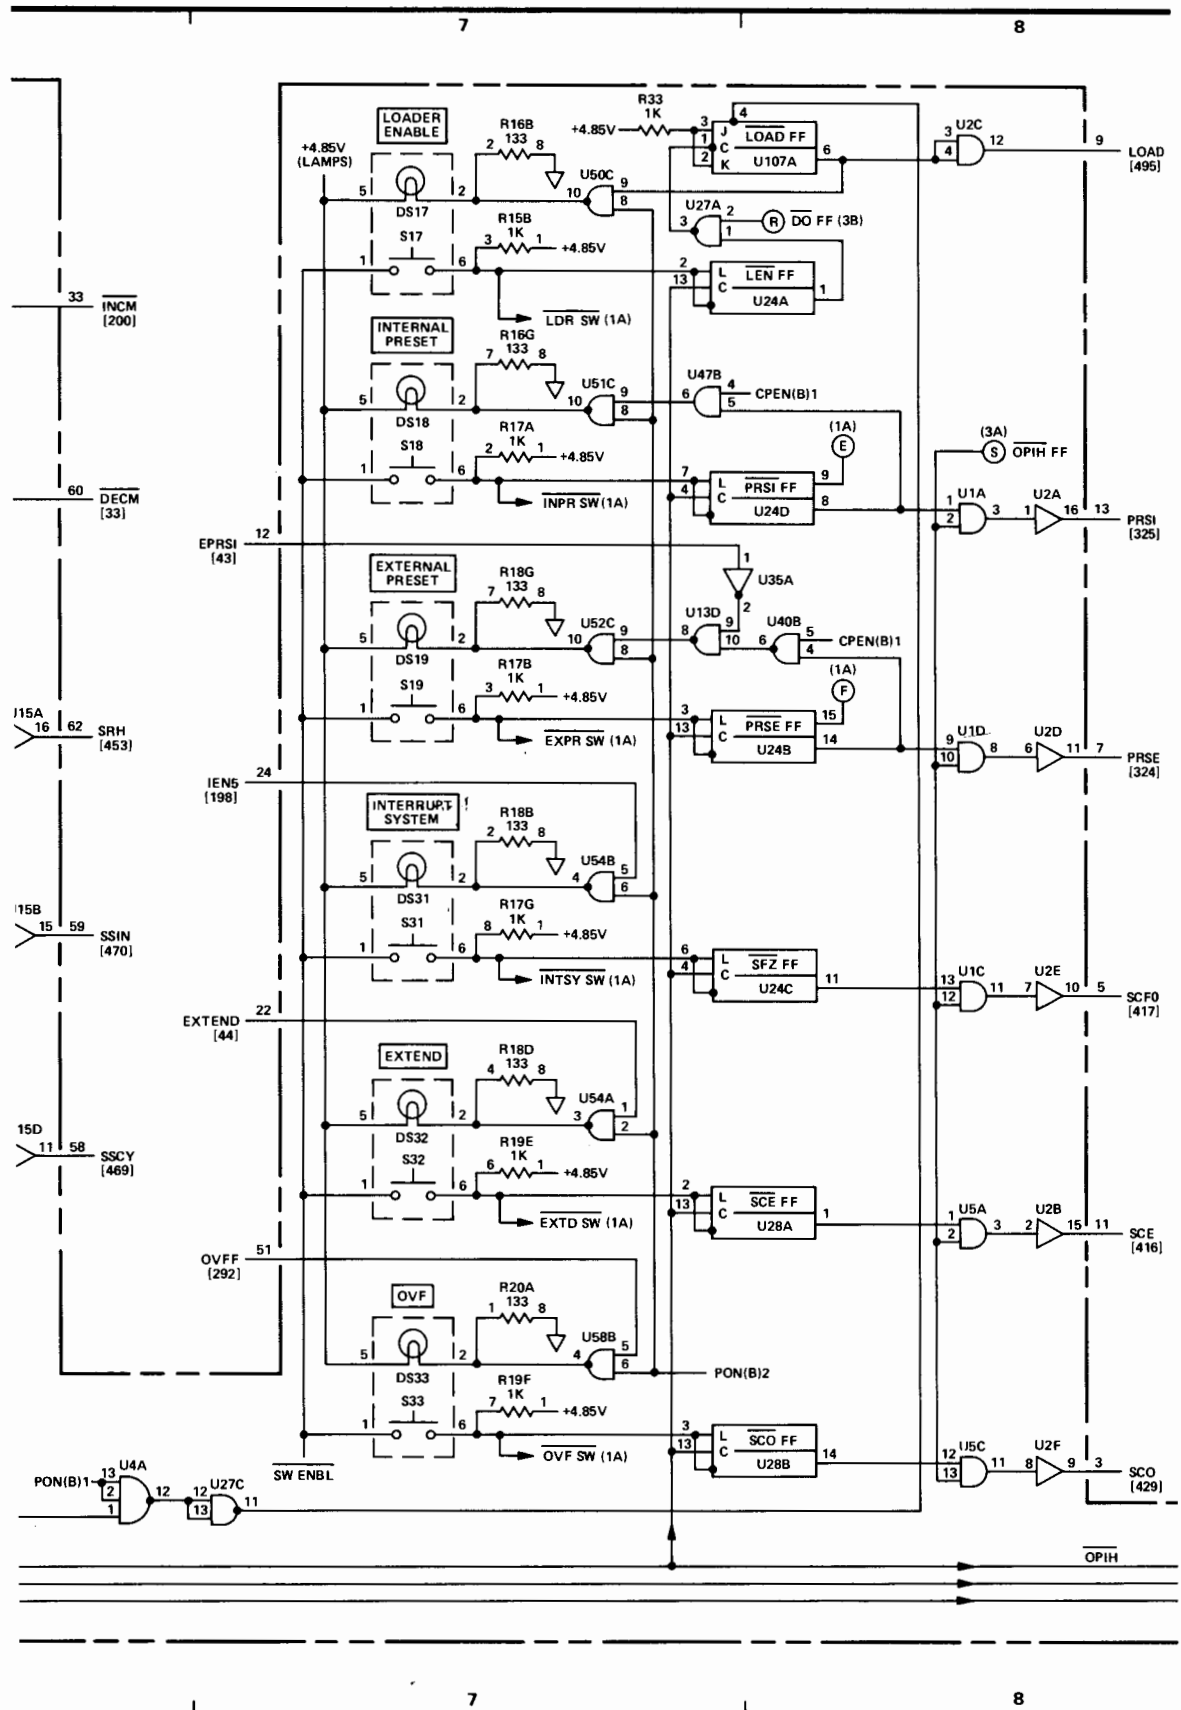

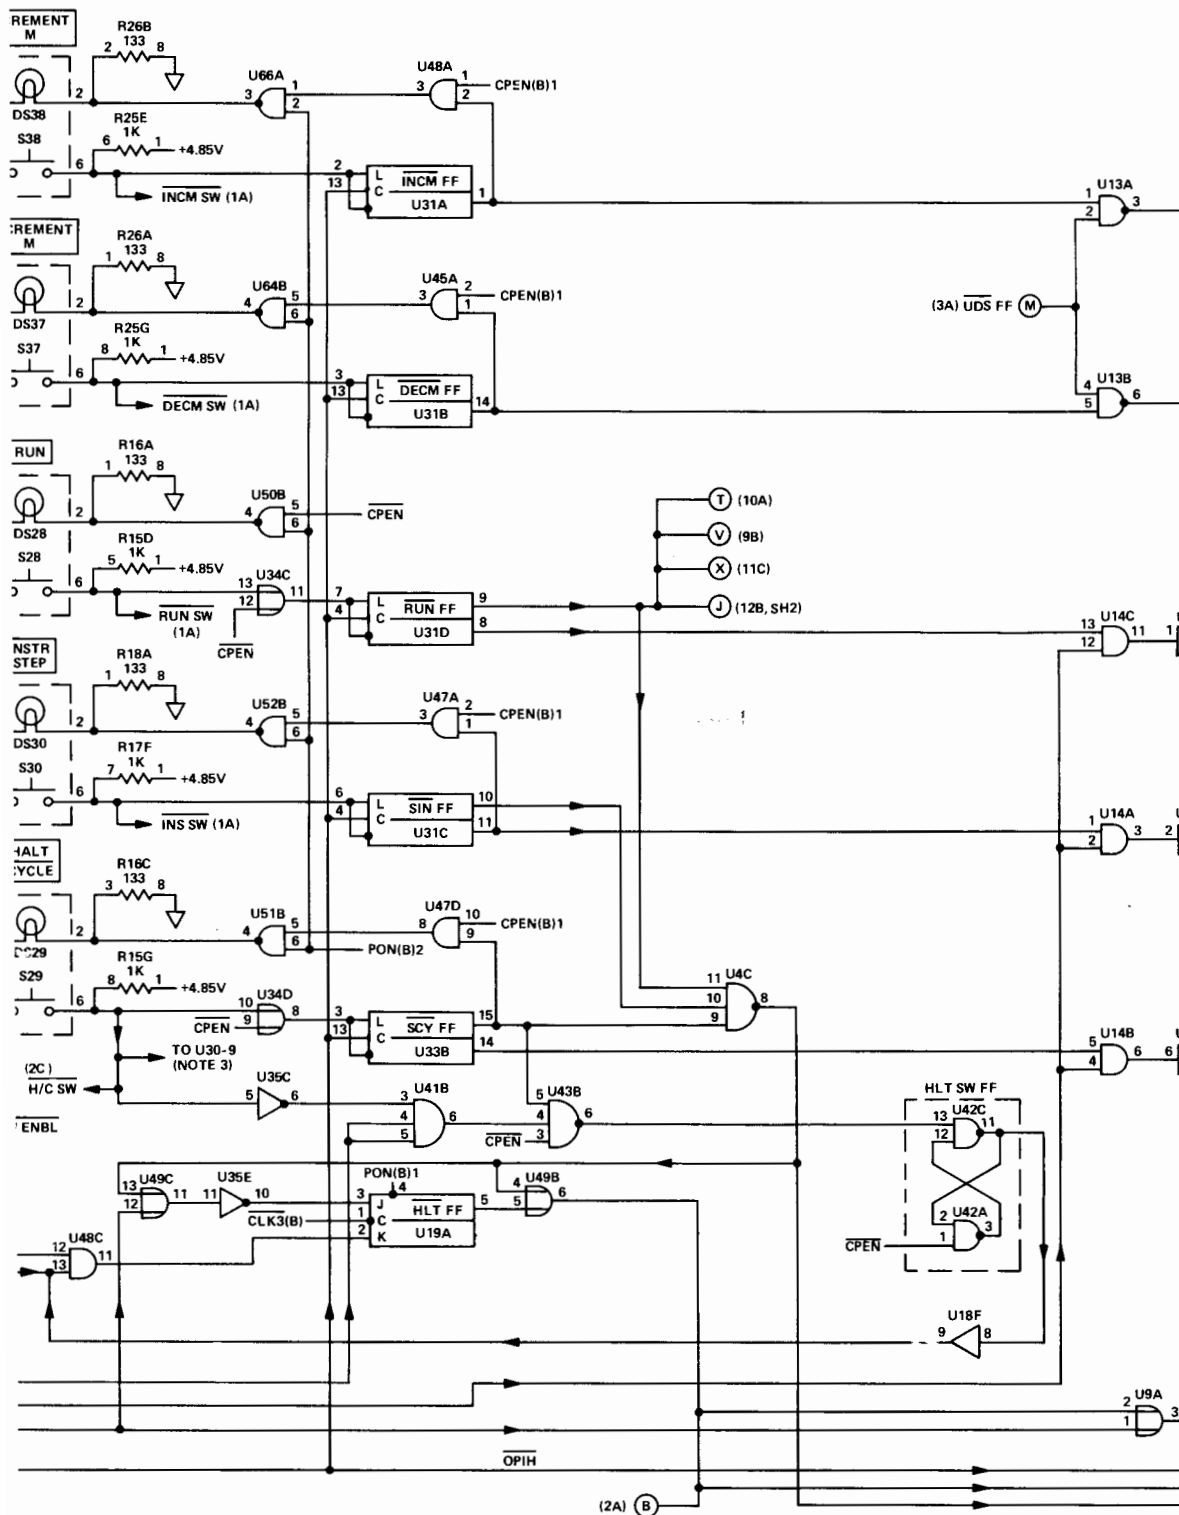

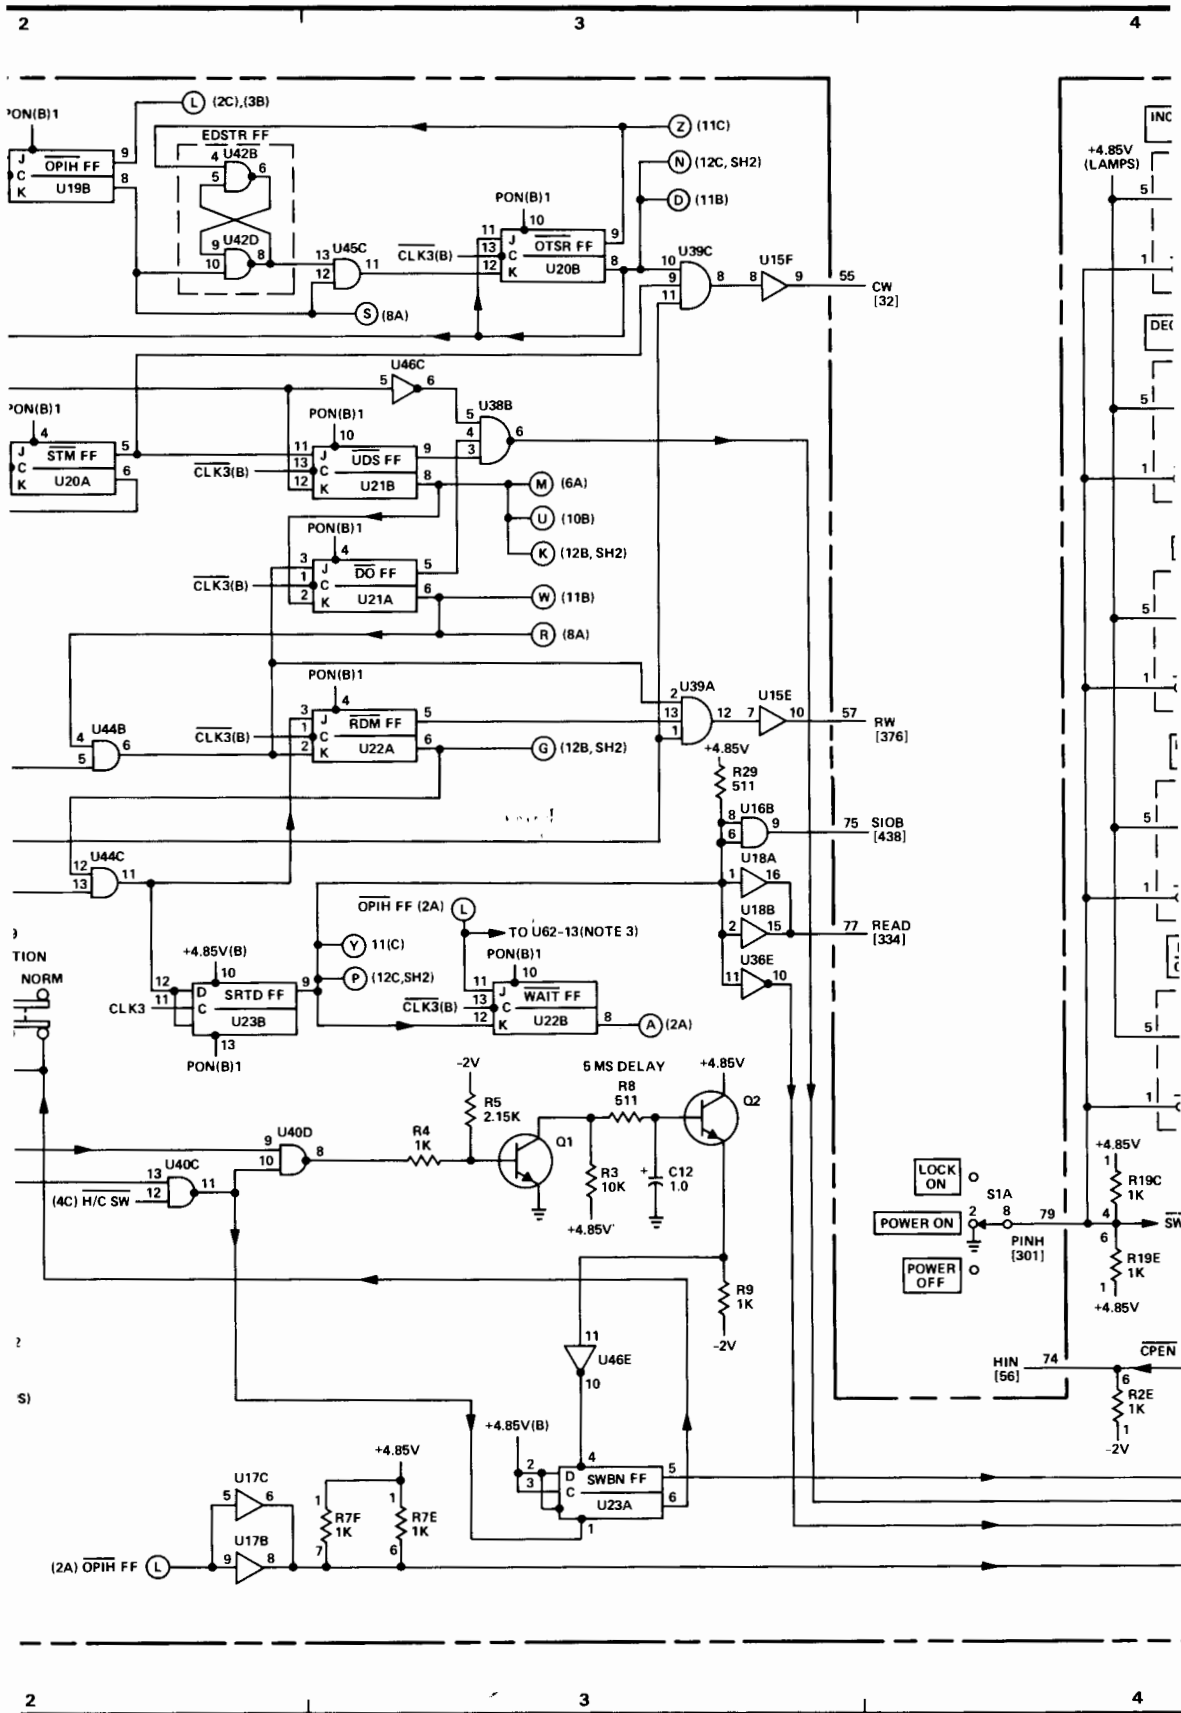


```


= "NOT" A OPERATE
= "NOT" A REGISTER SELECT
= "NOT" B OPERATE
= "NOT" B REGISTER SELECT
= "NOT" DECREMENT M
= "NOT" DO
= "NOT" DISPLAY TO SWITCH REGISTER
= ENABLE DTSR
= "NOT" HALT
= HALT SWITCH
= "NOT" INCREMENT M
= "NOT" LOADER ENABLE
= "NOT" MEMORY DATA OPERATE
= "NOT" M OPERATE
= "NOT" M REGISTER SELECT
= "NOT" OPERATION INHIBIT
= "NOT" P OPERATE
= "NOT" P REGISTER SELECT
= "NOT" PRESET INTERNAL
= "NOT" READ MEMORY
= "NOT" RUN
= "NOT" SET/CLEAR EXTEND
= "NOT" SET/CLEAR OVERFLOW
= "NOT" SINGLE CYCLE
= "NOT" SET FLAG ZERO
= "NOT" SINGLE INSTRUCTION
= "NOT" S OPERATE
= SWITCH REGISTER SELECT
= SWITCH REGISTER TO DISPLAY
= "NOT" STORE MEMORY
= T REGISTER SELECT
= UPDATE SELECT

```


**SCHEMATIC DIAGRAM
FOR RESISTOR NETWORKS
R16,R18,R20,R22,R24,R26**




**SCHEMATIC DIAGRAM
FOR RESISTOR NETWORKS
R2,R6,R7,R15,R17,R19,R21,R2**




**PIN IDENTIFICATION FOR
SWITCH-LAMP ASSEMBLIES
S1-DS1 THRU S38-DS38**

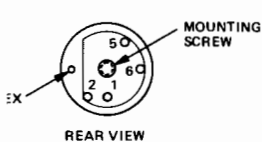


REAR VIEW



REAR VIEW

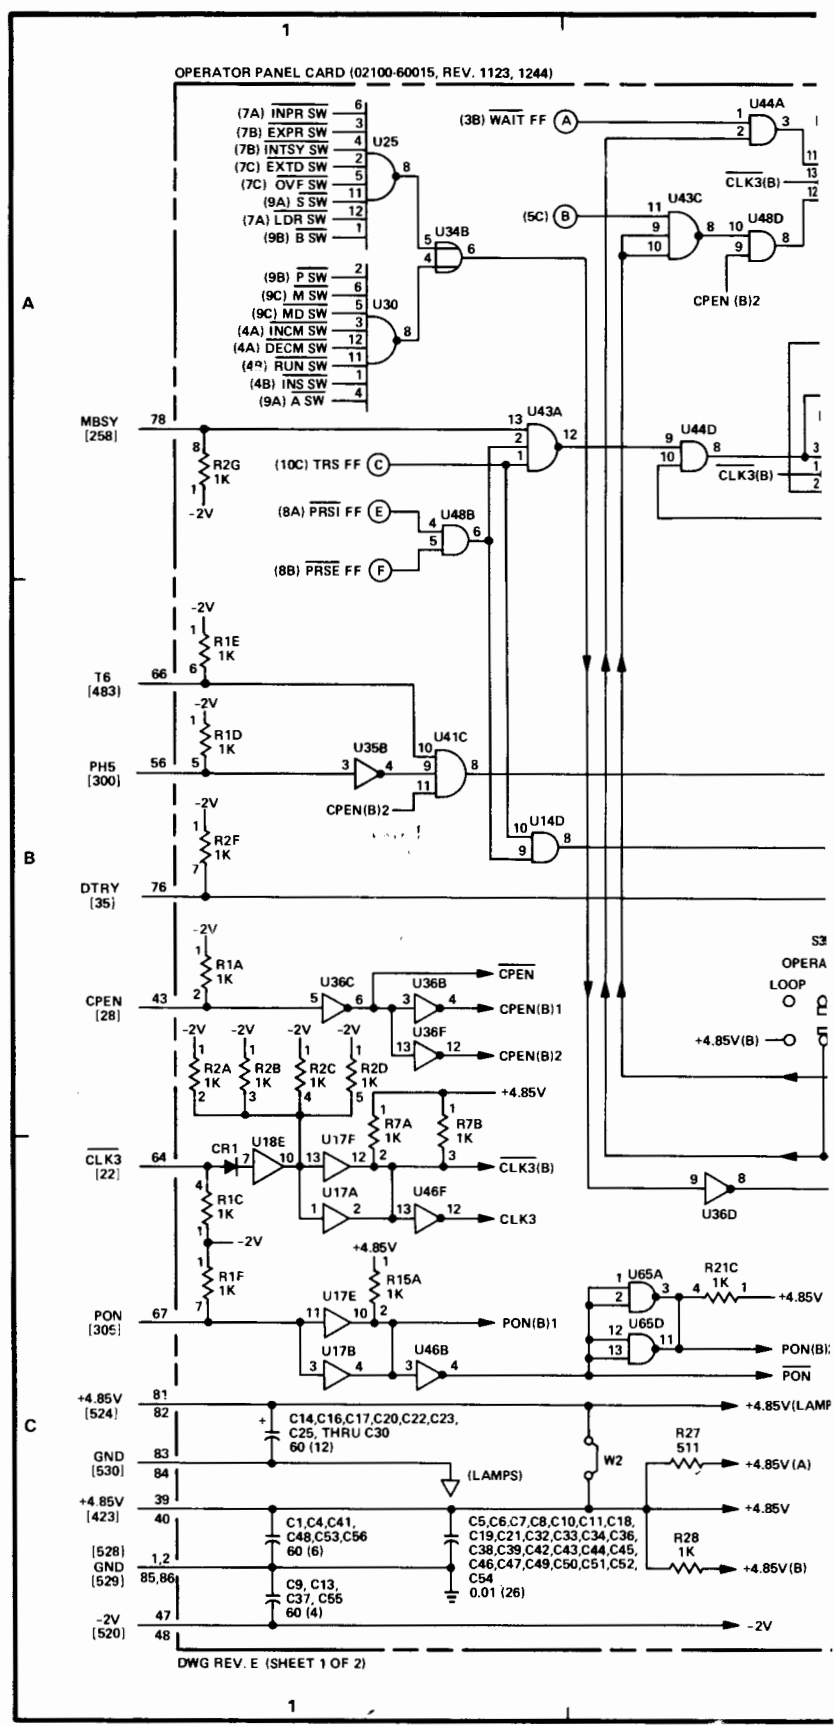

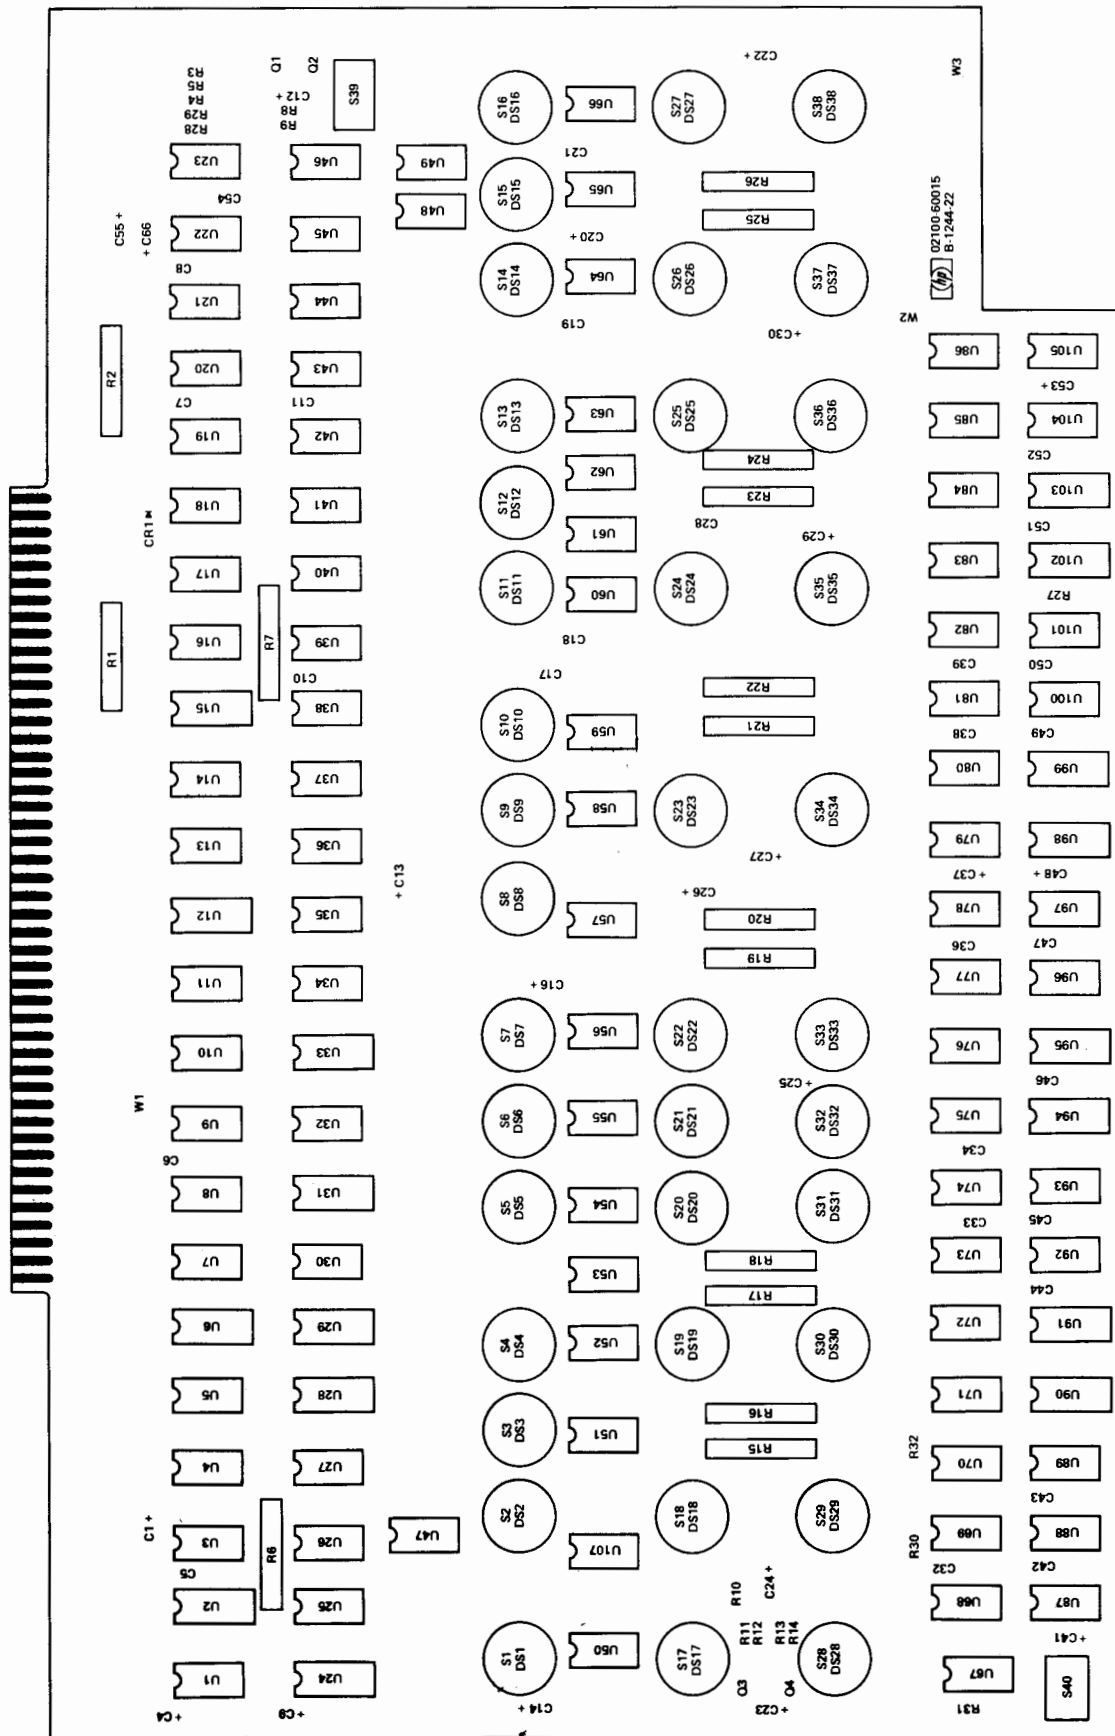

NOTE: THIS DIAGRAM ALSO APPLIES TO CARD REV A-1123-22 AND A-1244-22.

SEE TABLE 4-13 FOR REPLACEABLE PARTS.

DWG REV. H

AOP
ARS
BOP
BRS
DECM
DO
DTSR
EDTSR
HLT
INCM
LEN
MDOP
MOP
MRS
OPH
POP
PRS
FRS
RDM
RUN
SCE
SCO
SCY
SFZ
SIN
SOP
SRS
SRTD
STM
TRS
UDS

NOTES:
1. RE
AN
UF
2. NU
ARI
NM
PIN
ARI
SHK
4. NU
PAF
FOR
OF
RE
IST
CAI



IND

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE	
A24					
205	A8-13*	A24-71	A10-26,35	THRU	A23-26,35
206	A8-12*	A24-70	A10-29,38	THRU	A23-29,38
207	A8-11*	A24-68	A10-30,41	THRU	A23-30,41
208	A8-17*	A24-72	A10-45,64	THRU	A23-45,64
209	A8-16*	A24-54	A10-42,77	THRU	A23-42,77
210	A8-15*	A24-53	A10-51,80	THRU	A23-51,80
211	A8-10*	A24-63	A10-53,81	THRU	A23-53,81
212	A8-32*	A24-61	A10-52,84	THRU	A23-52,84
213	A8-31*	A24-32	A10-27,54	THRU	A23-27,54
214	A8-29*	A24-34	A10-28,56	THRU	A23-28,56
215	A8-28*	A24-46	A10-31,58	THRU	A23-31,58
216	A8-27*	A24-44	A10-55,60	THRU	A23-55,60
217	A8-26*	A24-14	A10-57,78	THRU	A23-57,78
218	A8-25*	A24-16	A10-61,79	THRU	A23-61,79
219	A8-30*	A24-20	A10-65,82	THRU	A23-65,82
220	A8-34*	A24-18	A10-74,83	THRU	A23-74,83
222	A3-76	A7-43	A8-46*	A9-45*	A10-15 THRU A23-15
	A24-6				
225	A7-53	A8-82*	A24-4	A24-80*	A10-24 THRU A23-24
226	A3-77	A8-78*	A9-32	A24-10	A10-20 THRU A23-20
294	A8-69*	A24-52			
296	A1-41*	A8-53	A24-49		
297	A1-30*	A7-12	A8-71	A24-50	
298	A1-28*	A24-28			
299	A1-26*	A24-30			
412	A4-71	A7-49*	A8-74	A24-8	




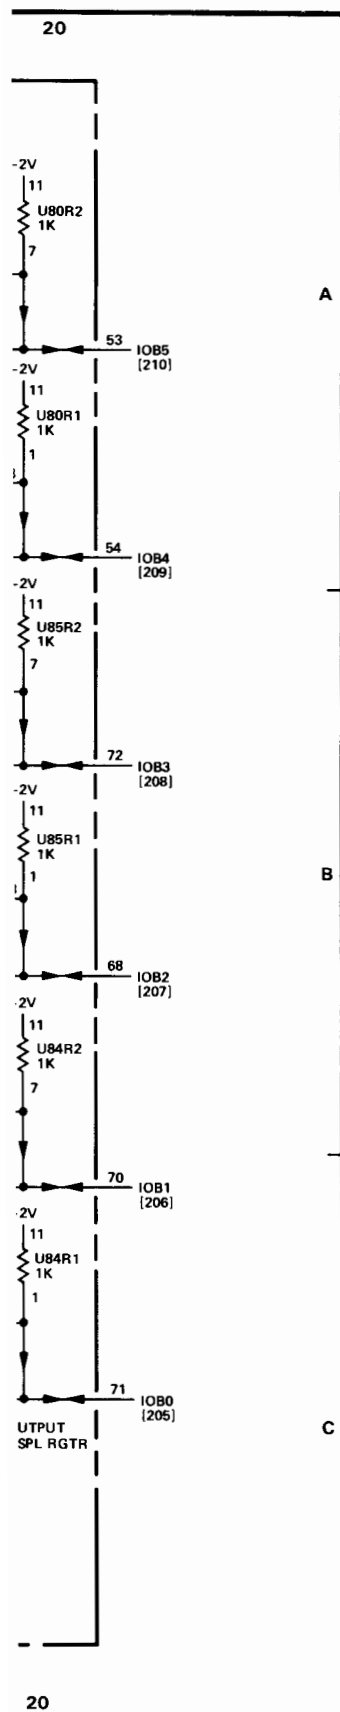


Figure 4-14. A24 Operator Panel Card, Parts Location and Schematic Diagrams (Sheet 2 of 2)



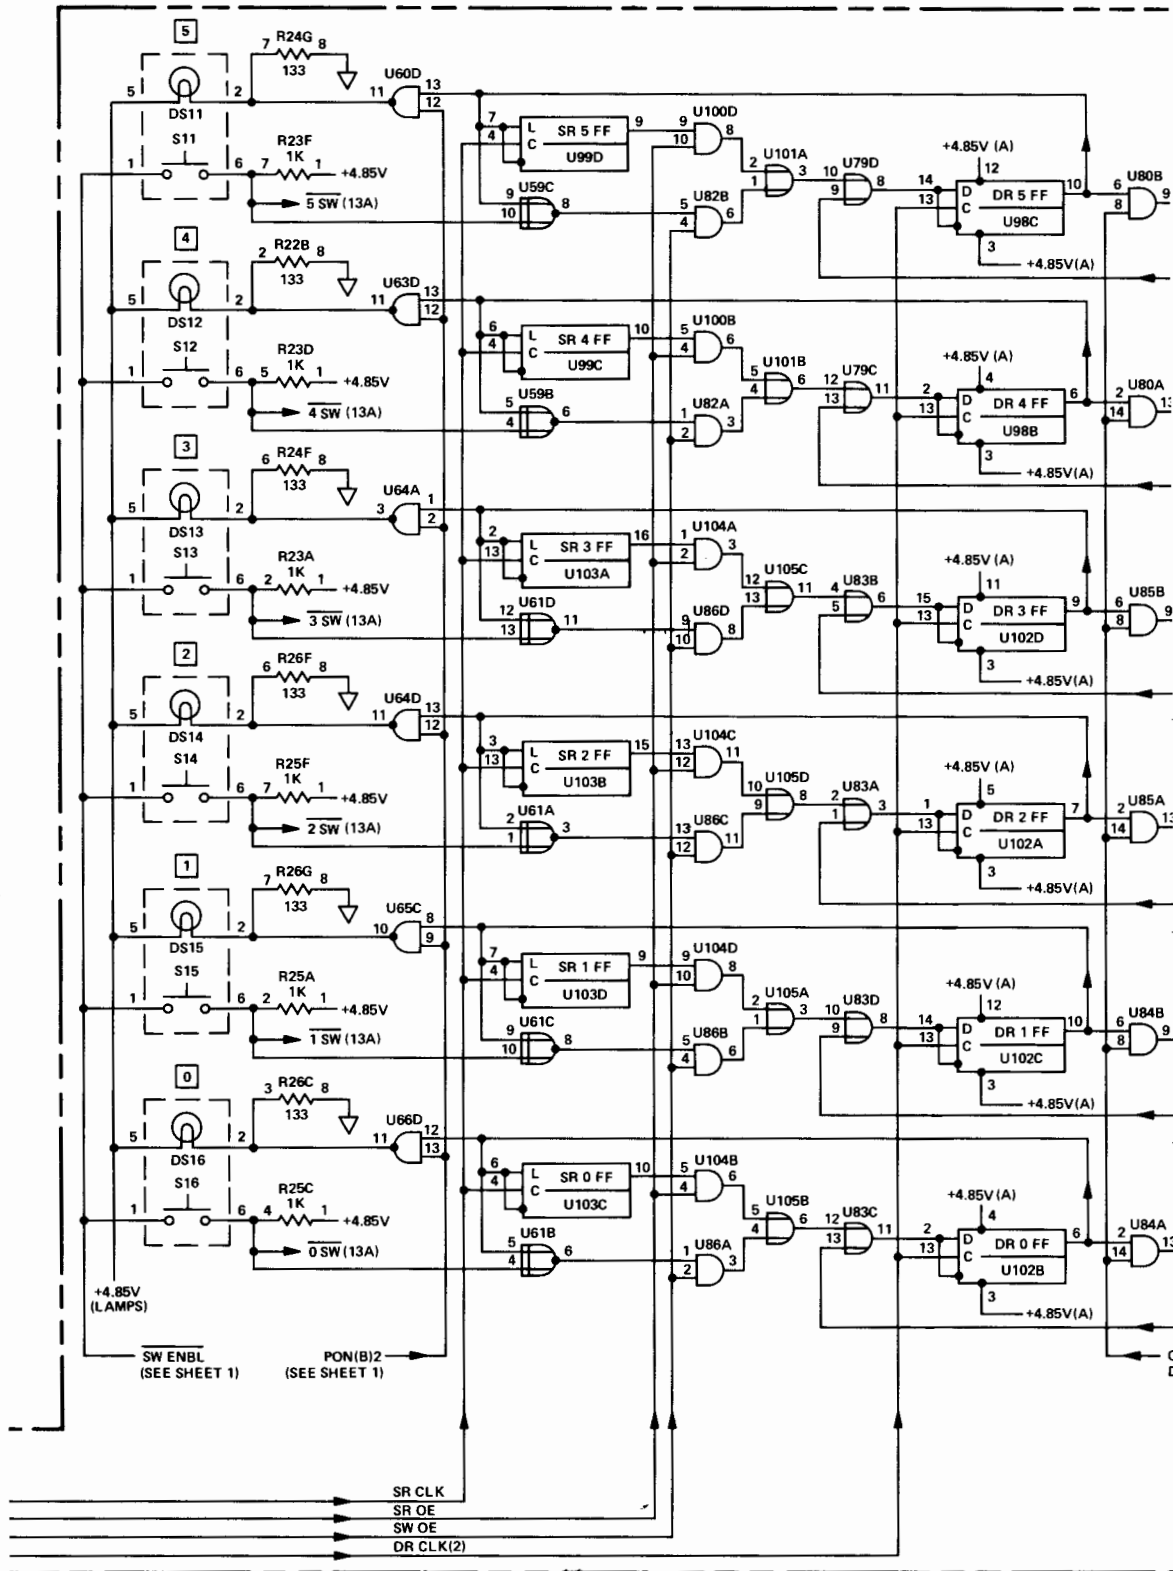

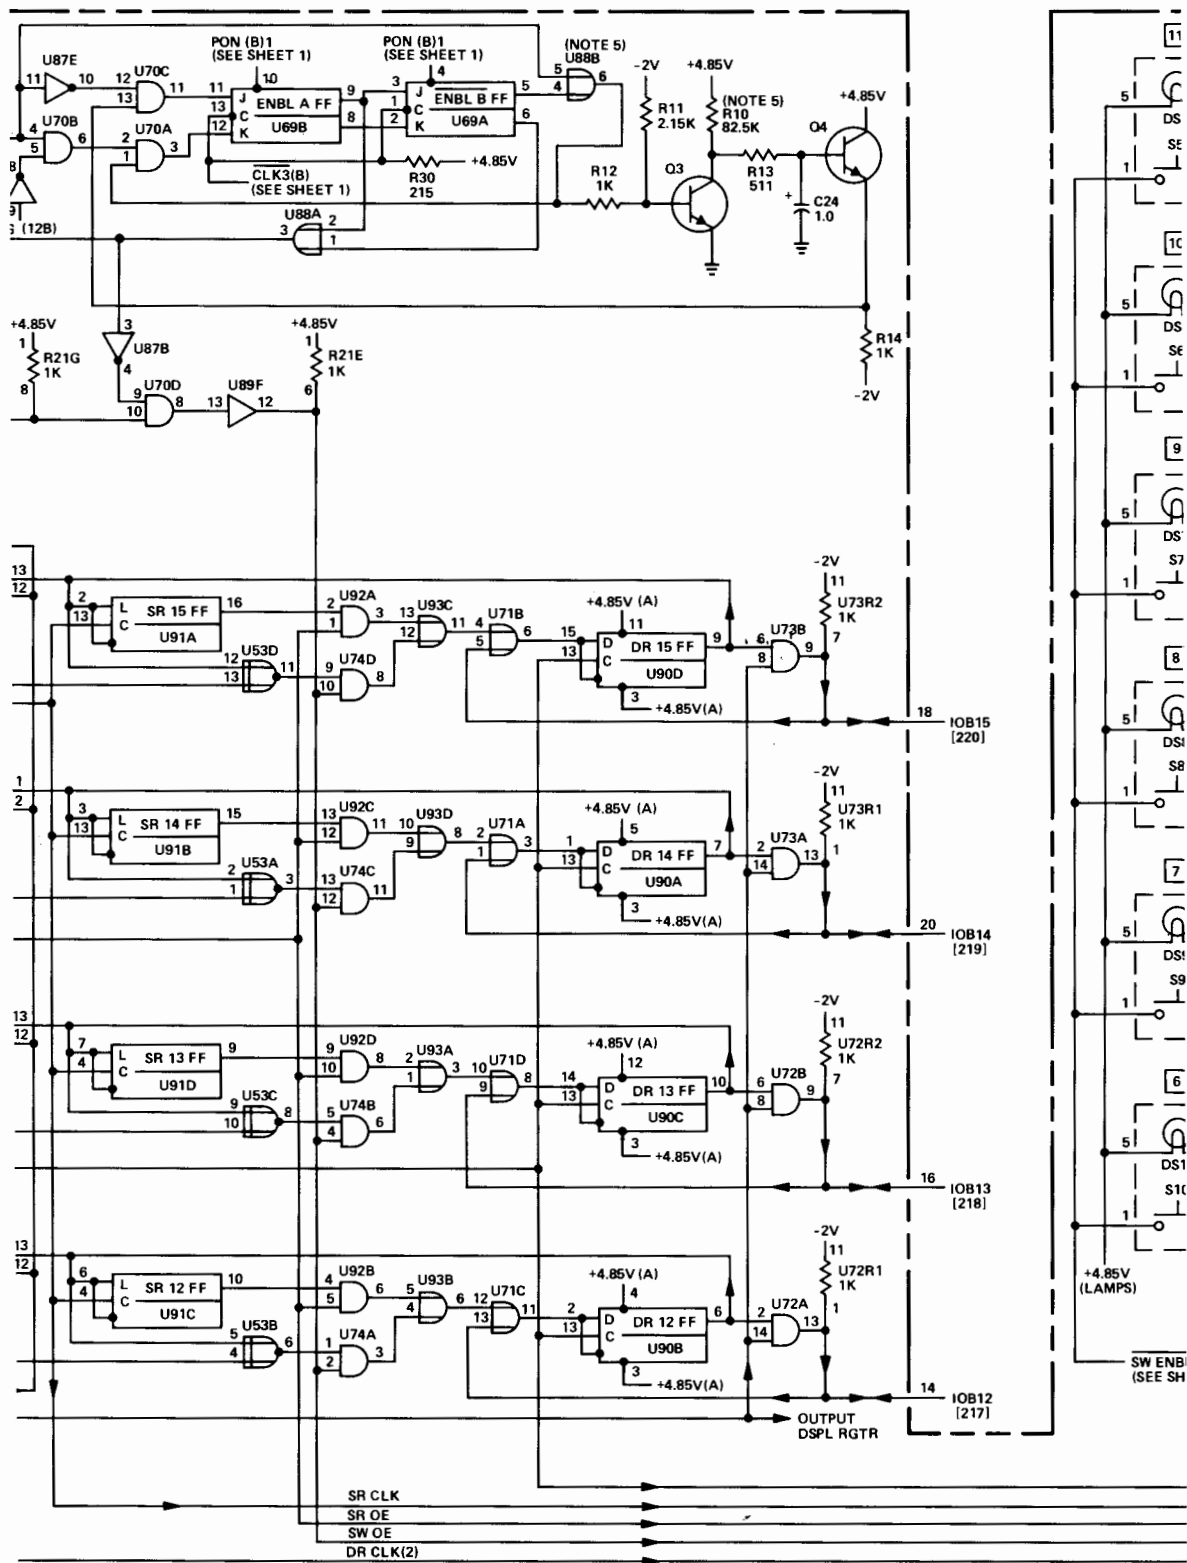

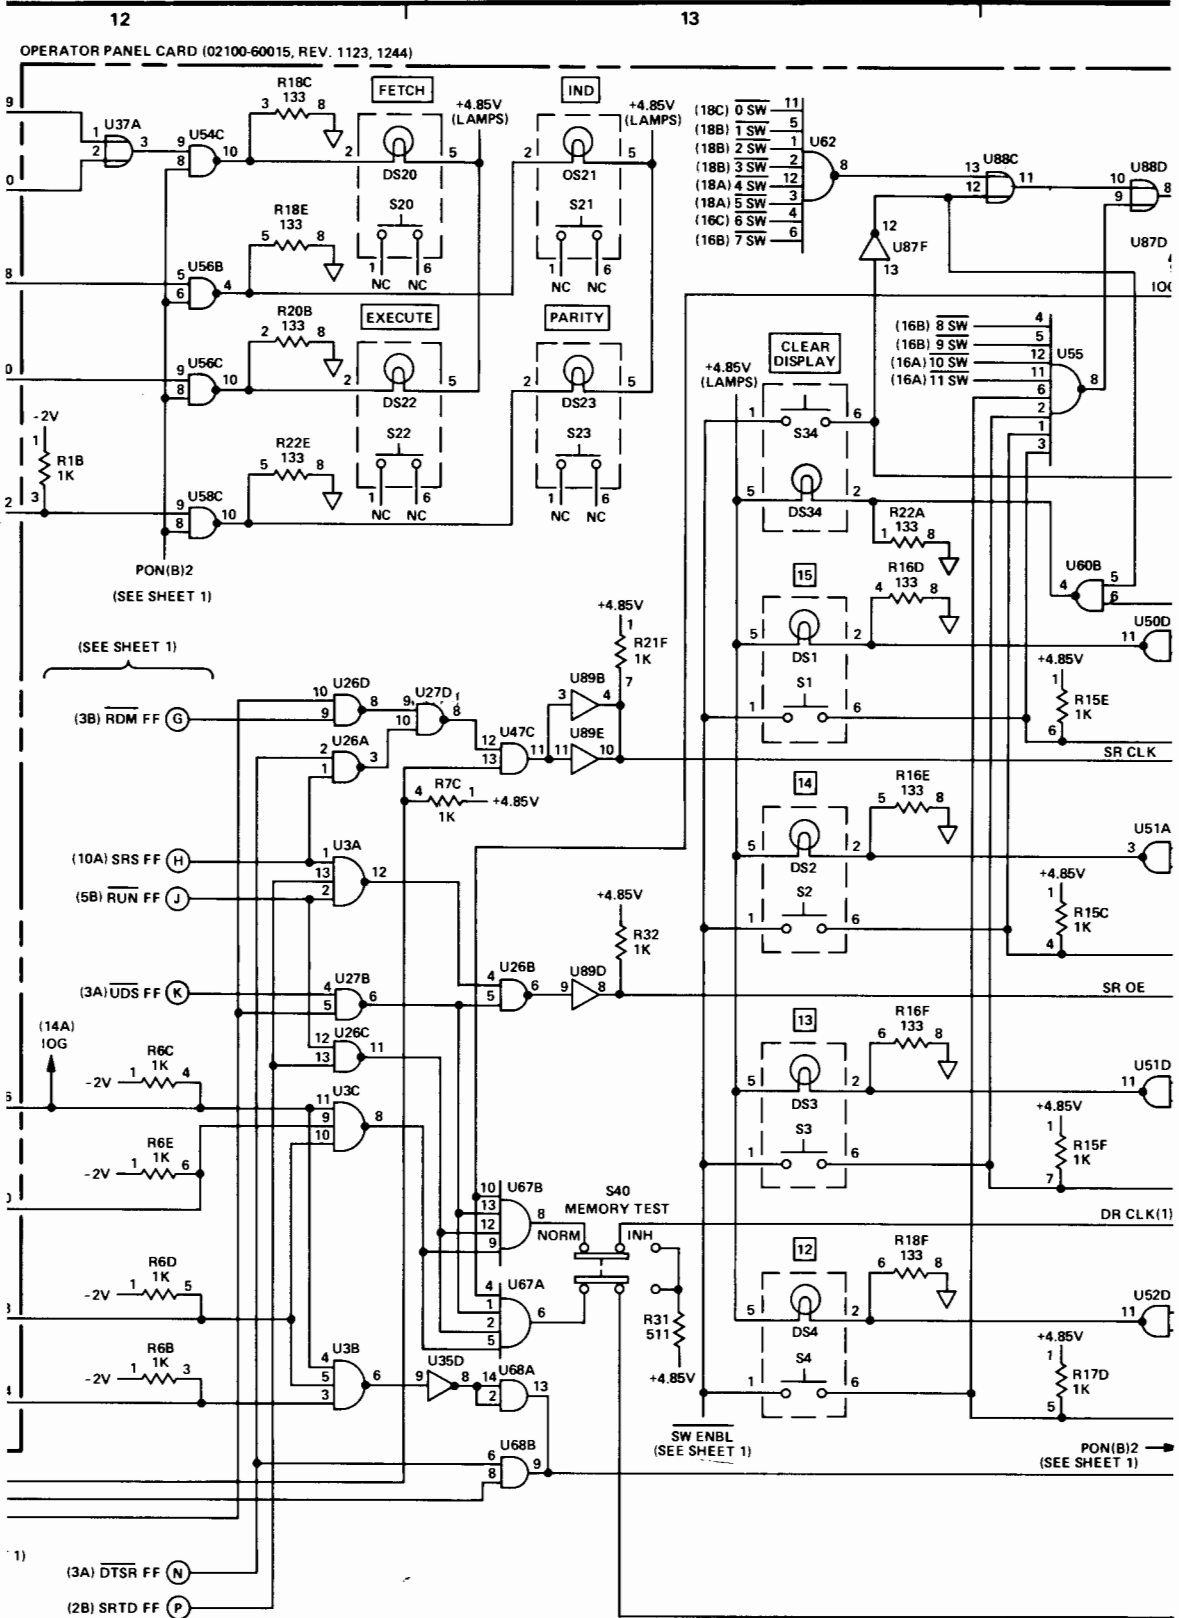

HEET 2 OF 2) SEE SHEET 1 FOR NOTES


FF DEFINITION


DR 0 THRU DR 15 = DISPLAY REGISTER BIT 0 THRU
DISPLAY REGISTER BIT 15

ENBL A = "NOT" ENABLE A

ENBL B = ENABLE B

SR 0 THRU SR 15 = SWITCH REGISTER BIT 0 THRU
REGISTER BIT 15

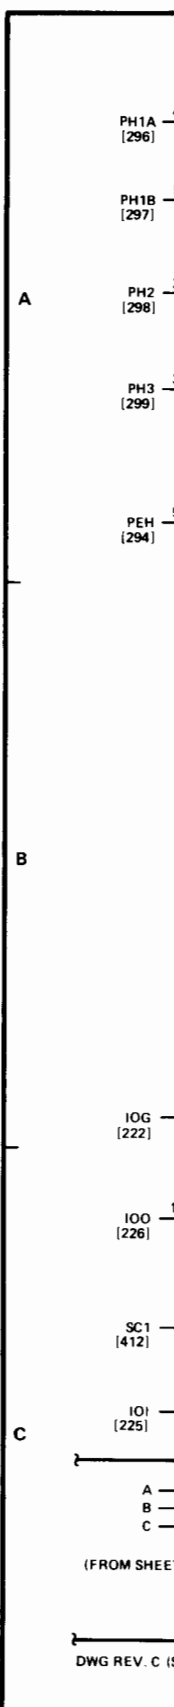

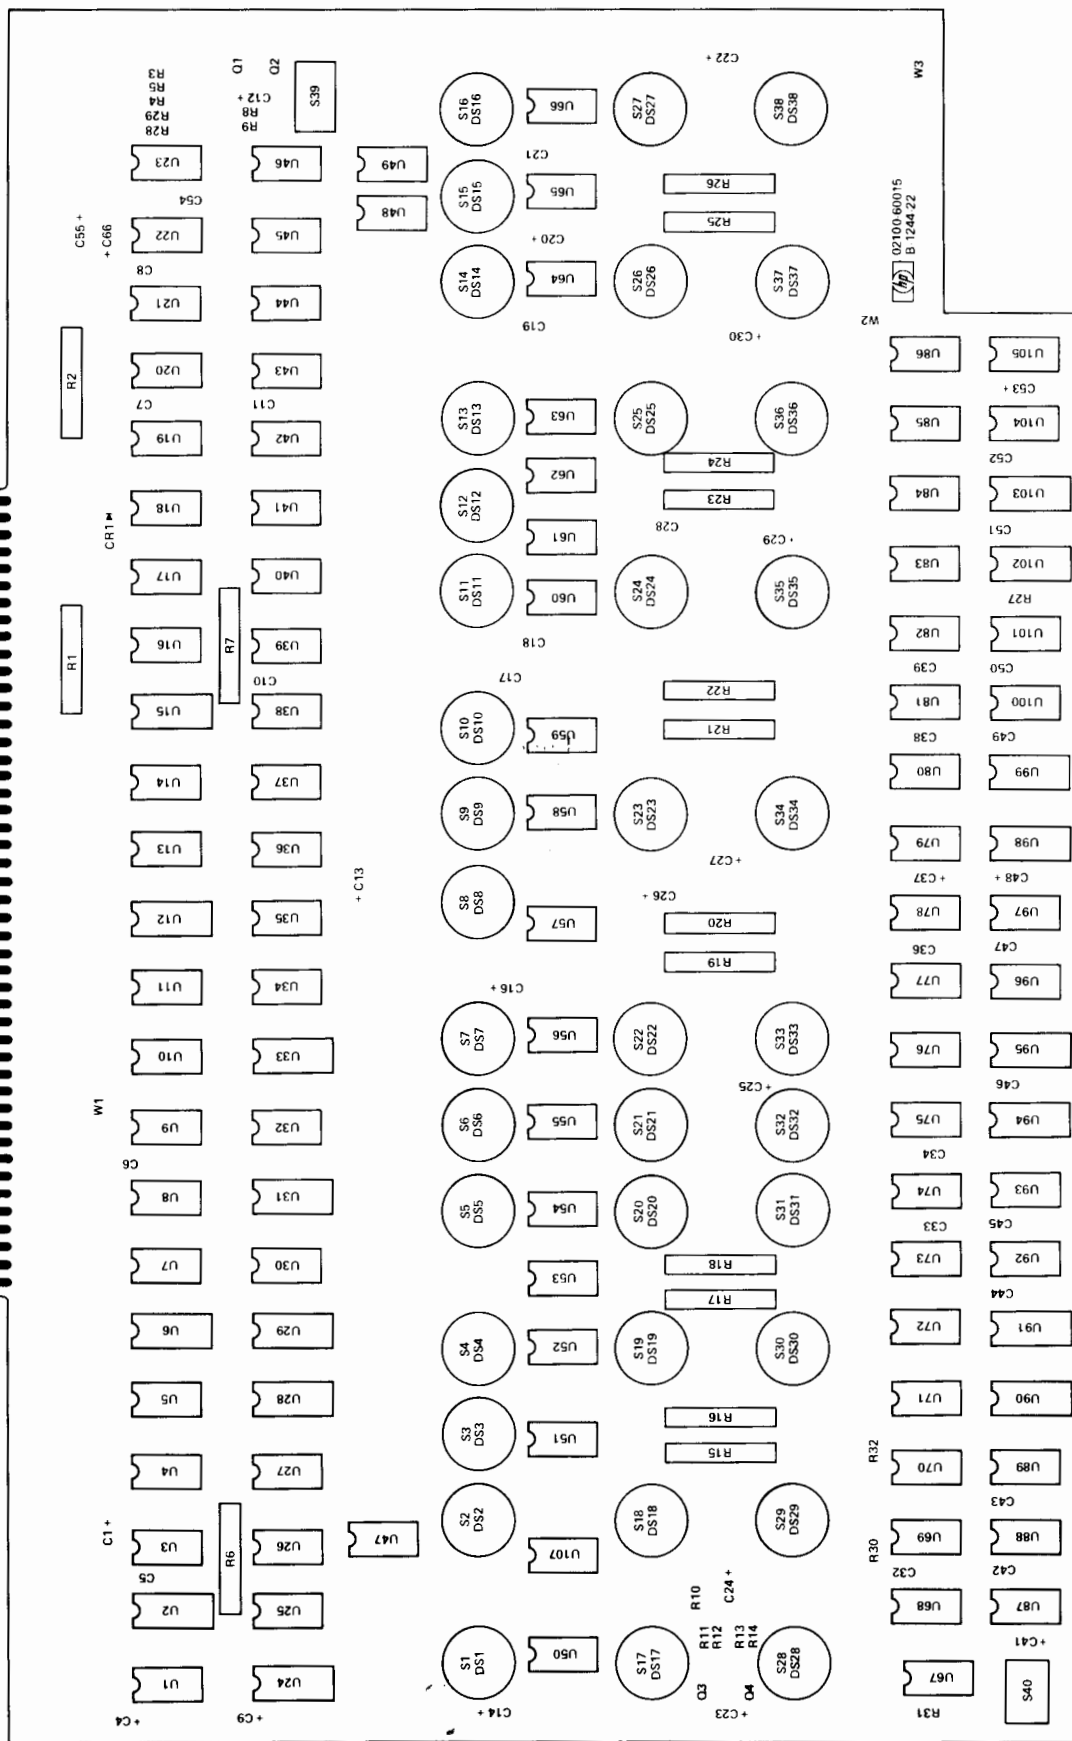

OWG REV. H

SEE TABLE 4-13 FOR REPLACEABLE PARTS.

NOTE: THIS DIAGRAM ALSO APPLIES TO CARD REV. A-1123-22 AND A-1244-22.

Table 4-14. A24 Controller Panel Card (Option 001), Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A24	02100-60017	1	CONTROLLER PANEL CARD	28480	02100-60017
A24C1	0180-0106	7	C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C2	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C3	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C4	0160-2055	13	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C5	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C7	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C10	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C15	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C16	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C17	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C18	0180-0106		C:FXD ELECT 60 UF 20% 6VDCW	28480	0180-0106
A24C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24C20	0180-0197	1	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A24C21	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A24DS1	2140-0364	5	LAMP:INCANDESCENT	28480	2140-0364
A24DS2	2140-0364		LAMP:INCANDESCENT	28480	2140-0364
A24DS3	2140-0364		LAMP:INCANDESCENT	28480	2140-0364
A24DS4	2140-0364		LAMP:INCANDESCENT	28480	2140-0364
A24DS5	2140-0364		LAMP:INCANDESCENT	28480	2140-0364
A24Q1	1854-0477	2	TSTR:SI NPN	80131	2N2222A
A24Q2	1854-0477		TSTR:SI NPN	80131	2N2222A
A24R1	0757-0280	2	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A24R2	0698-0084	1	R:FXD MET FLM 2.15K OHM 1% 1/8W	28480	0698-0084
A24R3	0757-0442	1	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A24R4	0757-0416	1	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A24R5	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A24R6	1810-0030	3	NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R7	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R8	1810-0030		NETWORK:7 RESISTORS 1K OHM 5% 0.15W EA	28480	1810-0030
A24R9	1810-0063	1	RESISTIVE NETWORK:7 X 133 OHM 5% 2W EA	28480	1810-0063
A24S1	3101-1531	5	SWITCH:REED	28480	3101-1531
A24S2	3101-1531		SWITCH:REED	28480	3101-1531
A24S3	3101-1531		SWITCH:REED	28480	3101-1531
A24S4	3101-1531		SWITCH:REED	28480	3101-1531
A24S5	3101-1531		SWITCH:REED	28480	3101-1531
A24U11	1820-0068	1	IC:TTL TRIPLE 3-INPUT POS NAND GATE	12040	SN7410N
A24U12	1820-0301	1	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A24U13	1820-0069	1	IC:TTL DUAL 4-INPT POS NAND GATE	01295	SN7420N
A24U19	1820-0451	2	IC:TTL DUAL J-K F/F	04713	MC3062P
A24U21	1820-0424	1	IC:TTL HS HEX INVERTER	04713	SN74H04N
A24U22	1820-0370	3	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U23	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U24	1820-0256	2	IC:DTL QUAD 2-INPUT POWER GATE	04713	MC858P
A24U31	1820-0141	2	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U32	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A24U33	1820-0485	2	IC:CTL HEX LEVEL RESTORER	07263	U6A985649X
A24U34	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A24U35	1820-0186	7	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U36	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U37	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U38	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U39	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U40	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U41	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A24U42	1820-0451		IC:TTL QUAD J-K F/F	04713	MC3062P
A24U43	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A24U44	1820-0256		IC:DTL QUAD 2-INPUT POWER GATE	04713	MC858P
A24W1	8159-0005	5	JUMPER WIRE	28480	8159-0005
A24W2	8159-0005		JUMPER WIRE	28480	8159-0005
A24W3	8159-0005		JUMPER WIRE	28480	8159-0005
A24W4	8159-0005		JUMPER WIRE	28480	8159-0005
A24W5	8159-0005		JUMPER WIRE	28480	8159-0005

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A24						
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64
	A107-69					
28	A1-52*	A4-19	A24-43			
43	A7-42*	A24-12				
56	A1-65	A7-65*	A8-50*	A24-74		
209	A8-16*	A24-54	A10-42,77	THRU A23-42,77		
210	A8-15*	A24-53	A10-51,80	THRU A23-51,80		
211	A8-10*	A24-63	A10-53,81	THRU A23-53,81		
212	A8-32*	A24-61	A10-52,84	THRU A23-52,84		
213	A8-31*	A24-32	A10-27,54	THRU A23-27,54		
214	A8-29*	A24-34	A10-28,56	THRU A23-28,56		
215	A8-28*	A24-46	A10-31,58	THRU A23-31,58		
216	A8-27*	A24-44	A10-55,60	THRU A23-55,60		
217	A8-26*	A24-14	A10-57,78	THRU A23-57,78		
218	A8-25*	A24-16	A10-61,79	THRU A23-61,79		
219	A8-30*	A24-20	A10-65,82	THRU A23-65,82		
225	A7-53	A8-82*	A24-4	A24-80*	A10-24	THRU A23-24
294	A8-69*	A24-52				
301	A24-79	S1A-8				
302	A3-60	A4-28	A24-38*			
303	A3-72	A4-26	A24-41*			
304	A3-32	A24-36*				
305	A1-6	A7-8*	A24-67	A104-42	A107-70	
	A10-66	THRU A23-66				
324	A7-22	A24-7*				
325	A1-4	A24-13*				
453	A1-74	A24-62*				
477	A3-53*	A9-38*	A24-73	A107-73		
495	A24-9*	A107-67				



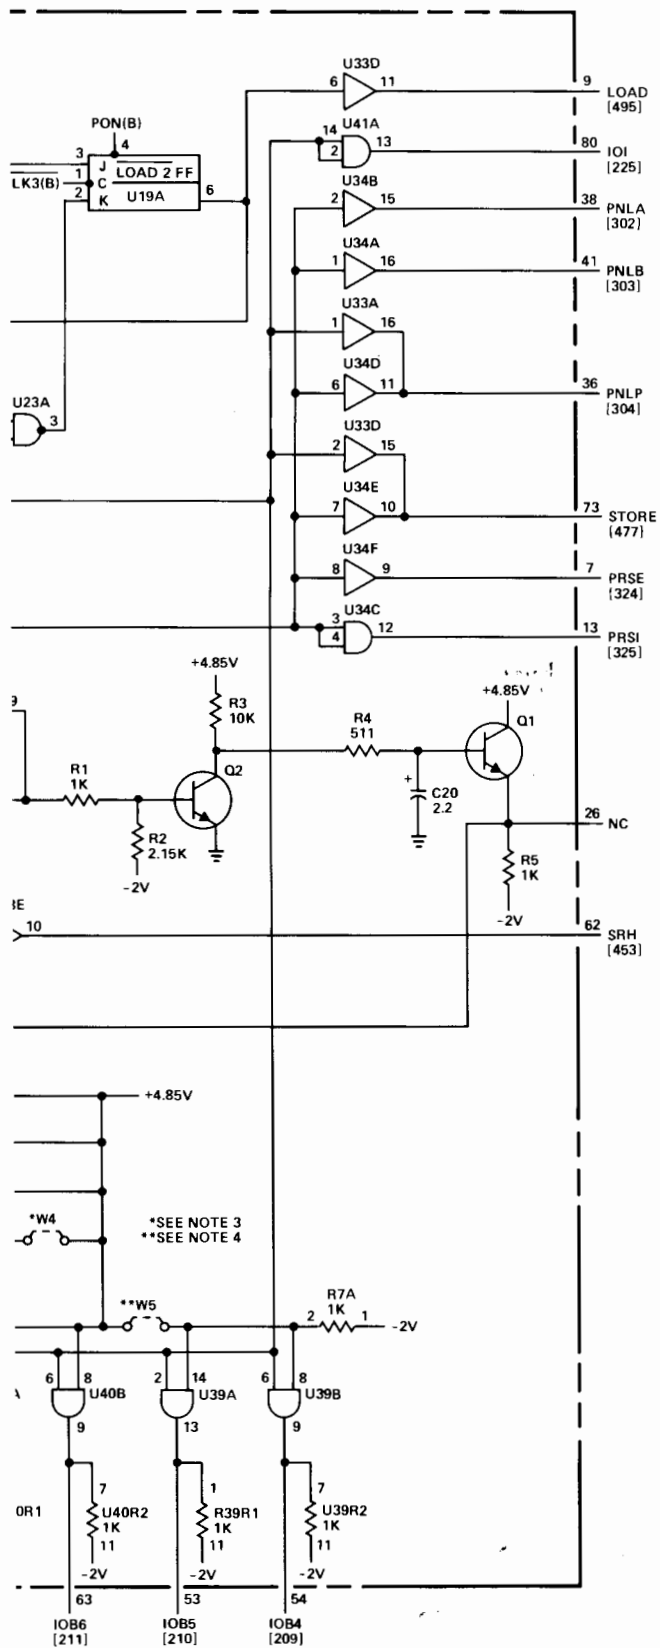


Figure 4-15. A24 Controller Panel Card (Option 001),
Parts Location and Schematic Diagrams

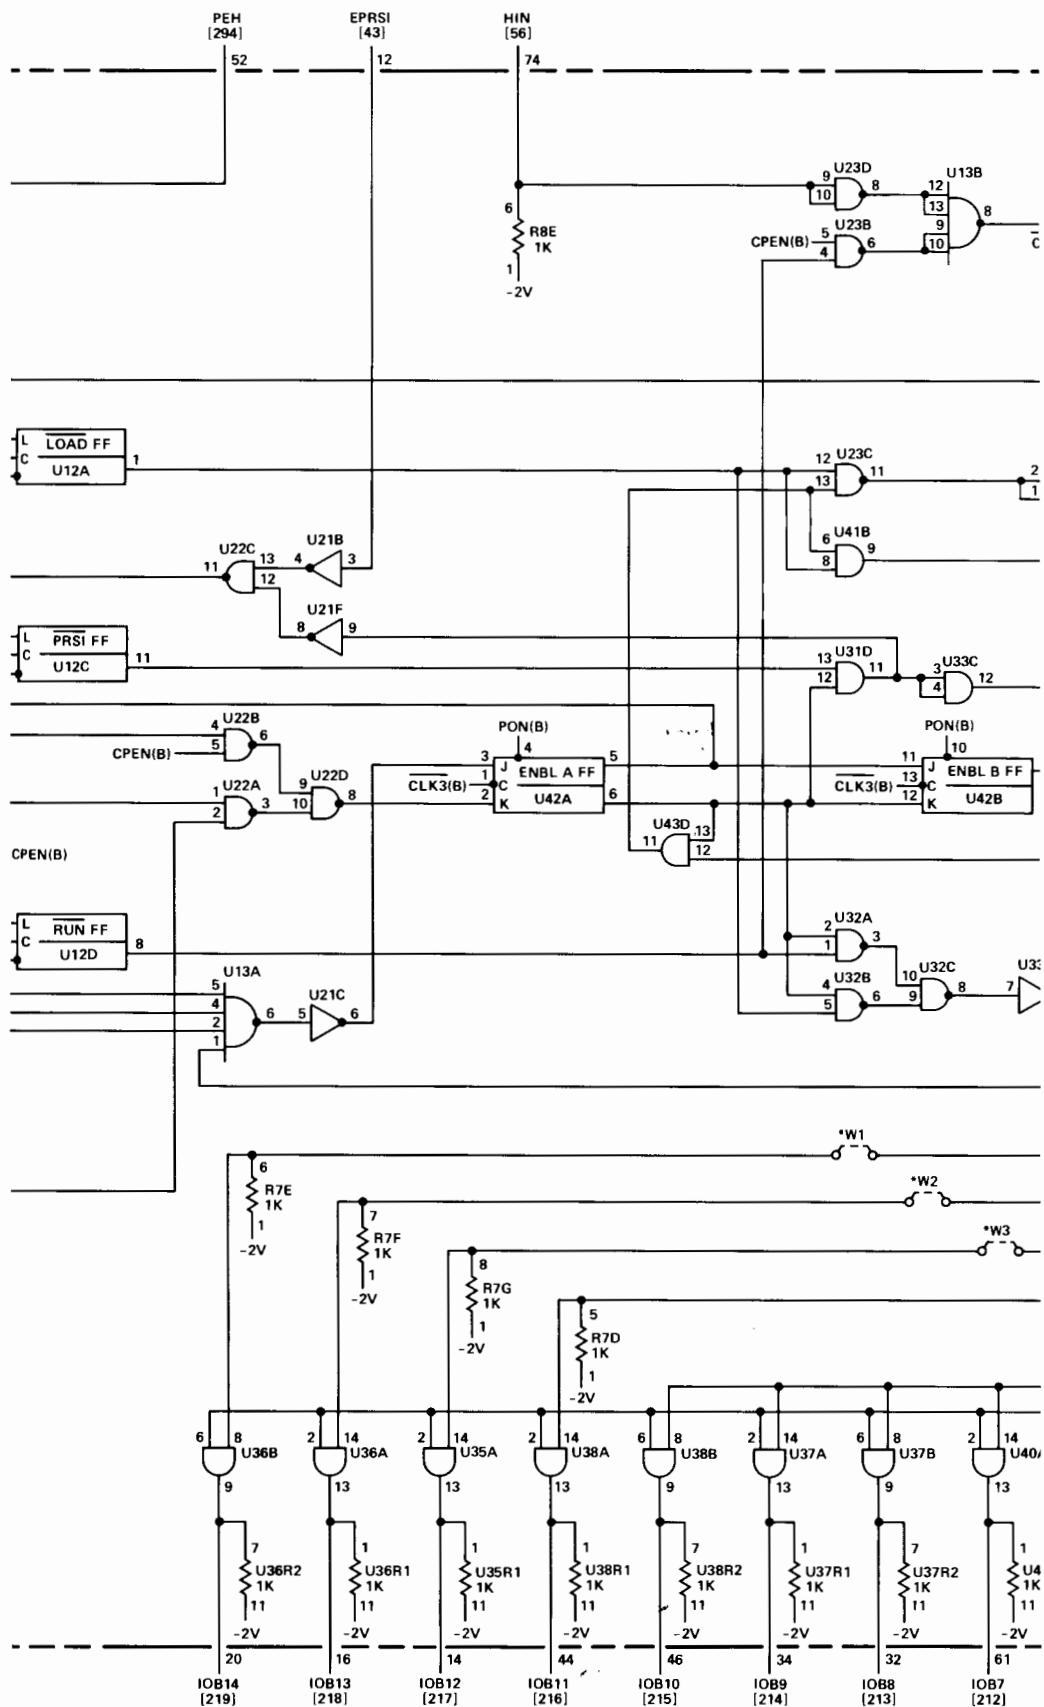

CONTROLLER PANEL CARD (02100-60017, REV. 1128, 1201)

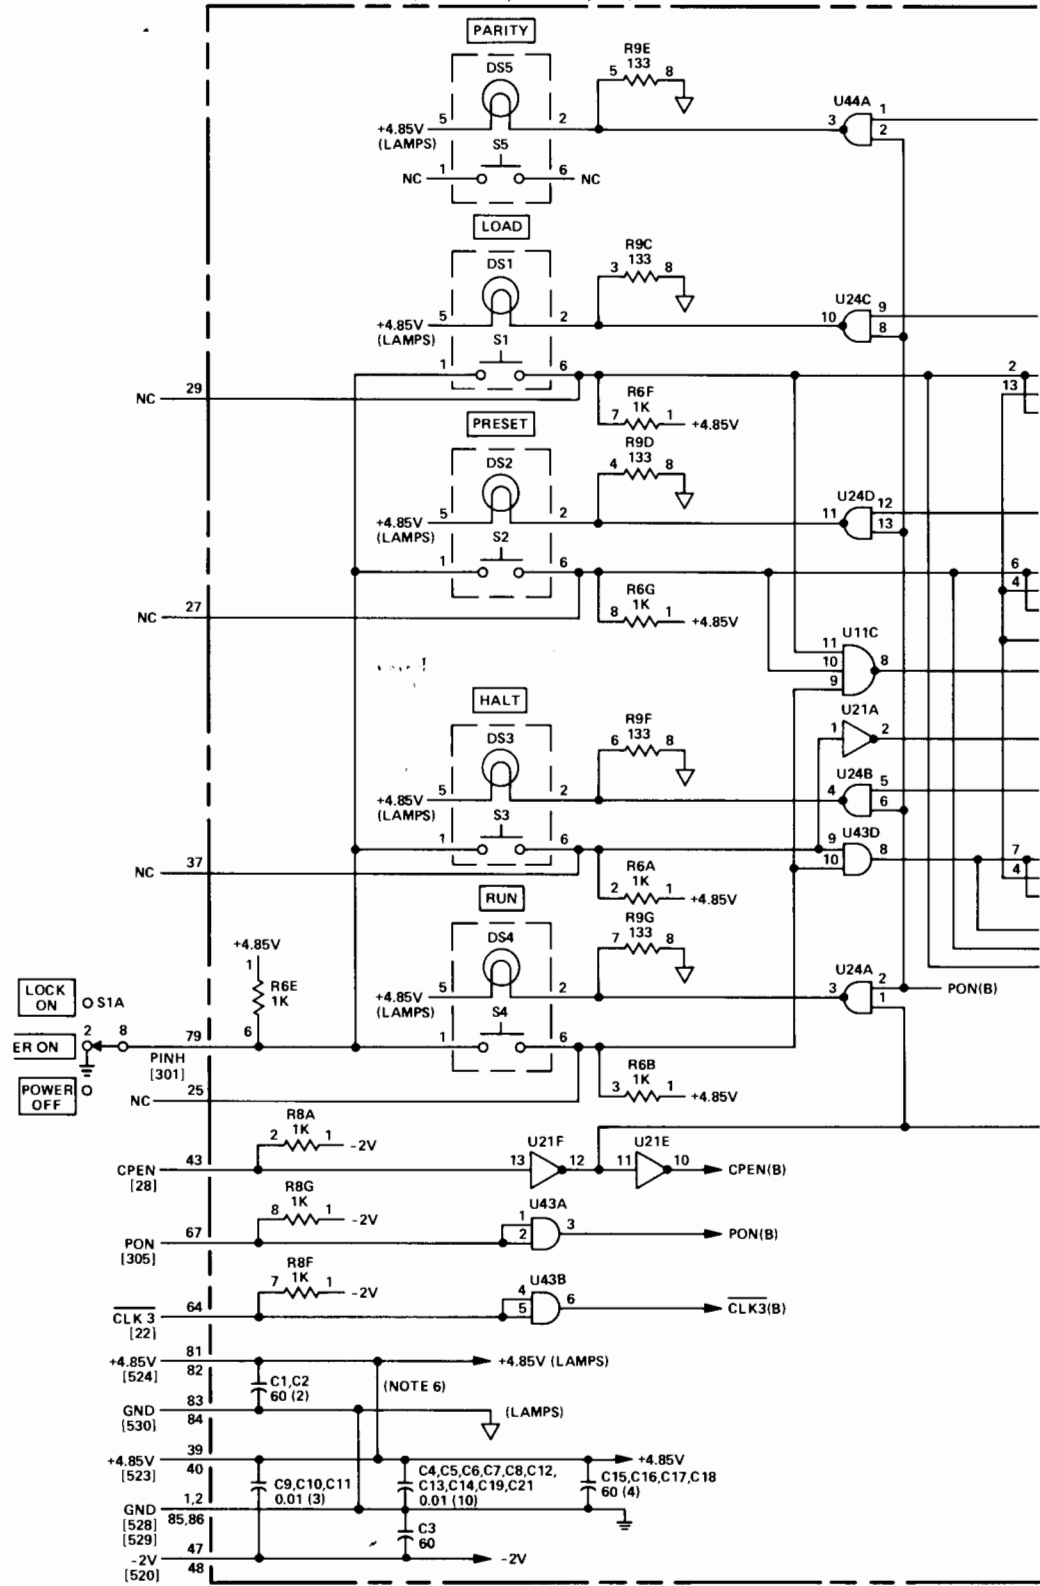

DWG REV. B

FF DEFINITIONS

PRSI	=	"NOT" PRESET INTERNAL
ENABLE A	=	ENABLE A
ENABLE B	=	ENABLE B
LOAD	=	"NOT" LOAD
LOAD 2	=	"NOT" LOAD 2
RUN	=	"NOT" RUN


NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
3. JUMPERS W1 THRU W4 ARE CONFIGURED ACCORDING TO THE MEMORY CAPACITY OF THE COMPUTER, AS SHOWN BELOW.

MEMORY CAPACITY	JUMPERS CONNECTED	JUMPERS REMOVED
2K	NONE	W1,W2,W3,W4
4K	W4	W1,W2,W3
6K	W3	W1,W2,W4
8K	W3,W4	W1,W2
12K	W2,W4	W1,W3
14K	W2,W3	W1,W4
16K	W2,W3,W4	W1
24K	W1,W3,W4	W2
32K	W1,W2,W3,W4	NONE


4. JUMPER W5 IS CONNECTED WHEN A DISC-TYPE LOADER IS USED AND IS REMOVED WHEN A PAPER TAPE LOADER IS USED.
5. NO INTERNAL CONNECTION IS PROVIDED TO PINS 25, 26, 27, 29, AND 37 ON CARD REV. 1128.
6. CONNECTION BETWEEN +4.85V SUPPLIES AND THE RESPECTIVE COMMON RETURN LINES ARE NOT PROVIDED ON CARD REV. 1128.

SCHEMATIC DIAGRAM
FOR RESISTOR NETWORK R4




POW

SCHEMATIC DIAGRAM
FOR RESISTOR NETWORKS R1, R2, R3



PIN IDENTIFICATION FOR
SWITCH-LAMP ASSEMBLIES
S1-DS1 THRU S5-DS5

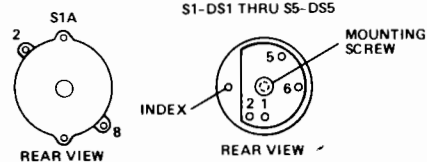


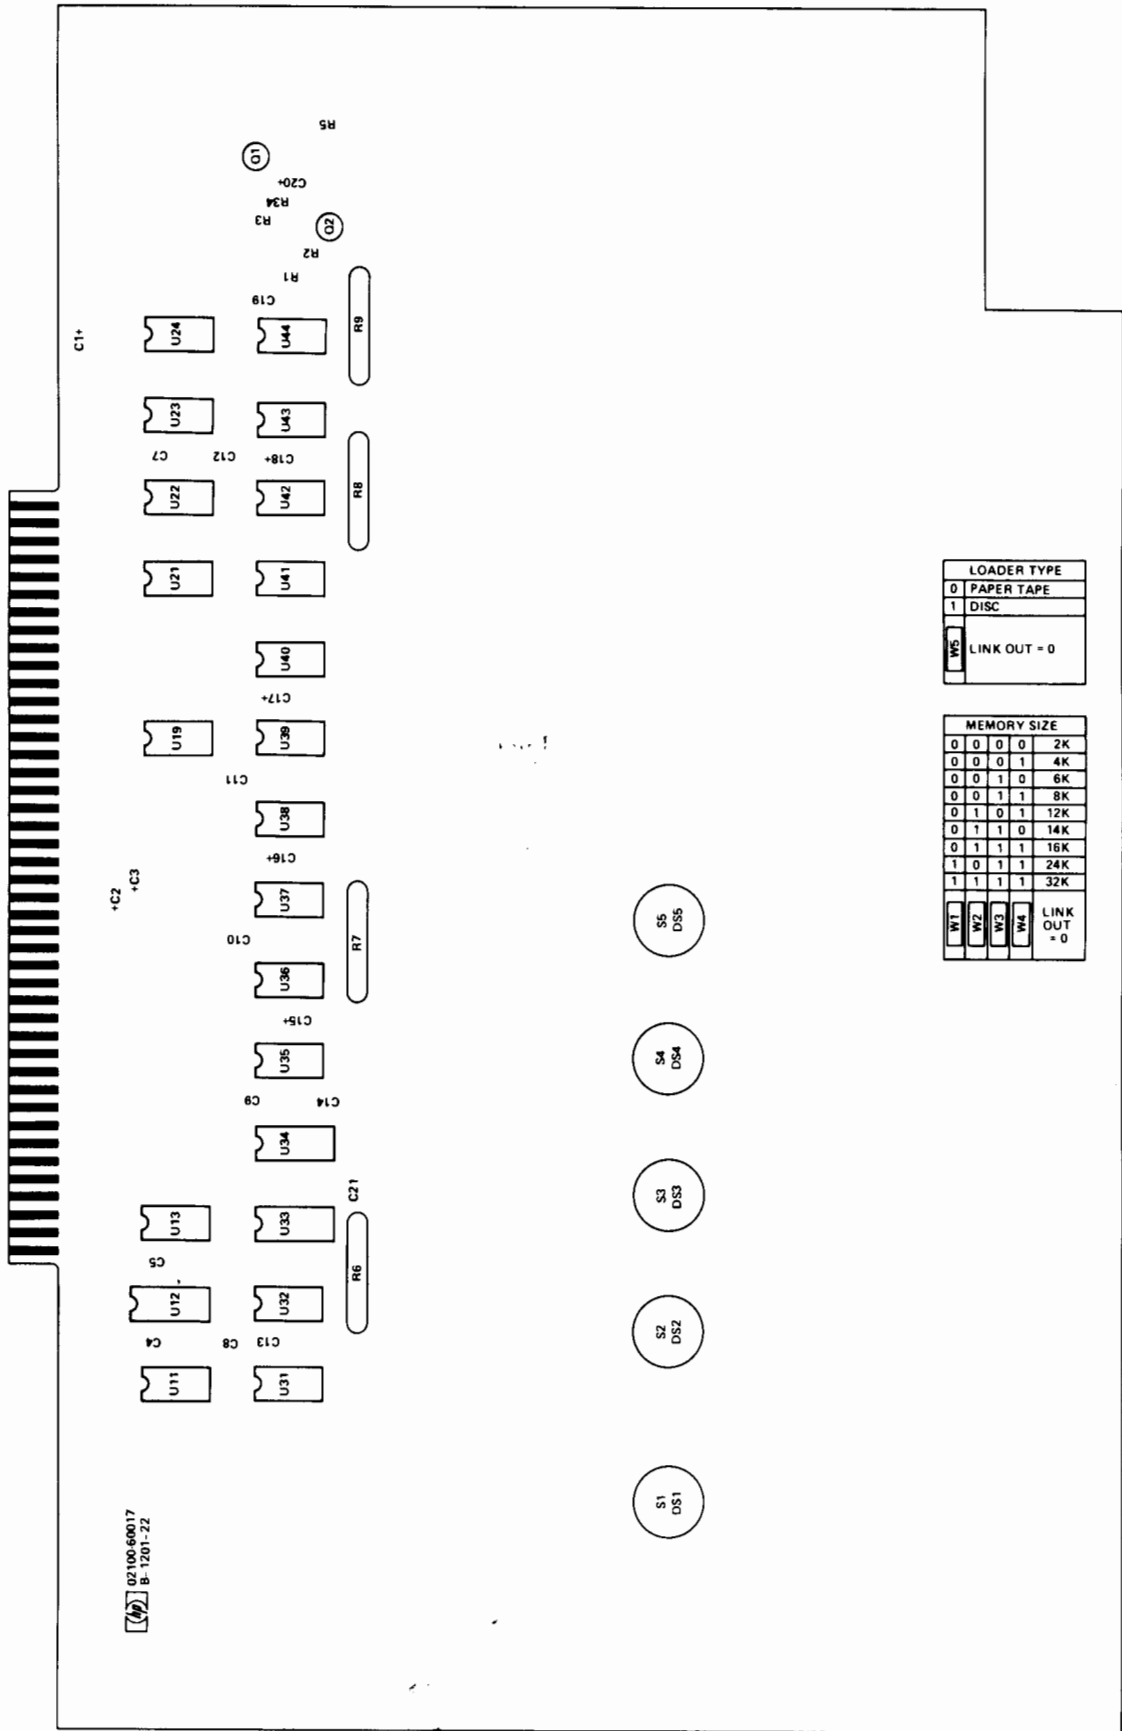




Table 4-15. A101, A104, A109, A112 X-Y Driver/Switch Card, Replaceable Parts


Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A101	02100-60012	4	X-Y DRIVER/SWITCH CARD	28480	02100-60012
A101C1	0160-2940	3	C:FXD MICA 470 PF 5% 300VDCW	72136	RD15F471J3C
A101C2	0160-2940		C:FXD MICA 470 PF 5% 300VDCW	72136	RD15F471J3C
A101C3	0160-2940		C:FXD MICA 470 PF 5% 300VDCW	72136	RD15F471J3C
A101C5	0160-0127	8	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C6	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C7	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C8	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C9	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C10	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C11	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C12	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A101C13	0180-0161	2	C:FXD ELECT 3.3 UF 20% 35VDCW	56289	150D335X0035B2-DYS
A101C14	0180-0161		C:FXD ELECT 3.3 UF 20% 35VDCW	56289	150D335X0035B2-DYS
A101CR1 THRU A101CR96	1901-0040	96	DIODE: SILICON 30MA 30WV	07263	FDG1088
A101E1	0360-0294	6	TERMINAL:SOLDER POINT	28480	0360-0294
A101E2	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A101E3	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A101E4	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A101E5	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A101E6	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A101Q1	1853-0015	4	TSTR:SI PNP	80131	2N3640
A101Q2	1854-0019	4	TSTR:SI NPN	28480	1854-0019
A101Q3	1854-0019		TSTR:SI NPN	28480	1854-0019
A101Q4	1853-0015		TSTR:SI PNP	80131	2N3640
A101Q5	1853-0015		TSTR:SI PNP	80131	2N3640
A101Q6	1854-0019		TSTR:SI NPN	28480	1854-0019
A101Q7	1853-0015		TSTR:SI PNP	80131	2N3640
A101Q8	1854-0019		TSTR:SI NPN	28480	1854-0019
A101R1 THRU A101R32	0757-0280	36	R: FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A101R33 THRU A101R48	0698-3444	16	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A101R49 THRU A101R116	0757-0180	68	R:FXD MET FLM 31.6 OHM 1% 1/8W	28480	0757-0180
A101R117	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A101R118	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A101R119	0698-3437	4	R:FXD MET FLM 133 OHM 1% 1/8W	28480	0698-3437
A101R120	0757-0421	4	R:FXD MET FLM 825 OHM 1% 1/8W	28480	0757-0421
A101R121	0757-0274	4	R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A101R122	0698-3437		R:FXD MET FLM 133 OHM 1% 1/8W	28480	0698-3437
A101R123	0757-0421		R:FXD MET FLM 825 OHM 1% 1/8W	28480	0757-0421
A101R124	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A101R125	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A101R126	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A101R127	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A101R128	0698-3437		R:FXD MET FLM 133 OHM 1% 1/8W	28480	0698-3437
A101R129	0757-0421		R:FXD MET FLM 825 OHM 1% 1/8W	28480	0757-0421
A101R130	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A101R131	0698-3437		R:FXD MET FLM 133 OHM 1% 1/8W	28480	0698-3437
A101R132	0757-0421		R:FXD MET FLM 825 OHM 1% 1/8W	28480	0757-0421
A101R133	0757-1090	4	R:FXD MET FLM 261 OHM 1% 1/2W	28480	0757-1090
A101R134	0757-1090		R:FXD MET FLM 261 OHM 1% 1/2W	28480	0757-1090
A101R135	0757-1090		R:FXD MET FLM 261 OHM 1% 1/2W	28480	0757-1090
A101R156	0757-1090		R:FXD MET FLM 261 OHM 1% 1/2W	28480	0757-1090
A101R157	0811-2084	4	R:FXD WW 43 OHM 1% 5W	28480	0811-2084
A101R158	0811-2084		R:FXD WW 43 OHM 1% 5W	28480	0811-2084
A101R159	0811-2084		R:FXD WW 43 OHM 1% 5W	28480	0811-2084
A101R160	0811-2084		R:FXD WW 43 OHM 1% 5W	28480	0811-2084
A101R161 THRU A101R224	0757-0403	64	R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A101T1 THRU A101T16	9100-3130	16	TRANSFORMER:PULSE	28480	9100-3130
A101U1 THRU A101U16	1821-0006	16	TSTR:QUAD NPN NETWORK	28480	1821-0006
A101U17	1820-0482	8	IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U18	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U19	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U20	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U21	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U22	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U23	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101U24	1820-0482		IC:CTL 1 OF 8 DECODER	07263	U68983849X
A101W1	8159-0005	6	JUMPER WIRE	28480	8159-0005
A101W2	8159-0005		JUMPER WIRE	28480	8159-0005

Table 4-15. A101, A104, A109, A112 X-Y Driver/Switch Card, Replaceable Parts (Continued)


Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A101W3	8159-0005		JUMPER WIRE	28480	8159-0005
A101W4	8159-0005		JUMPER WIRE	28480	8159-0005
A101W5	8159-0005		JUMPER WIRE	28480	8159-0005
A101W6	8159-0005		JUMPER WIRE	28480	8159-0005
A104			SAME AS A101, USE PREFIX A104		
A109			SAME AS A101, USE PREFIX A109		
A112			SAME AS A101, USE PREFIX A112		



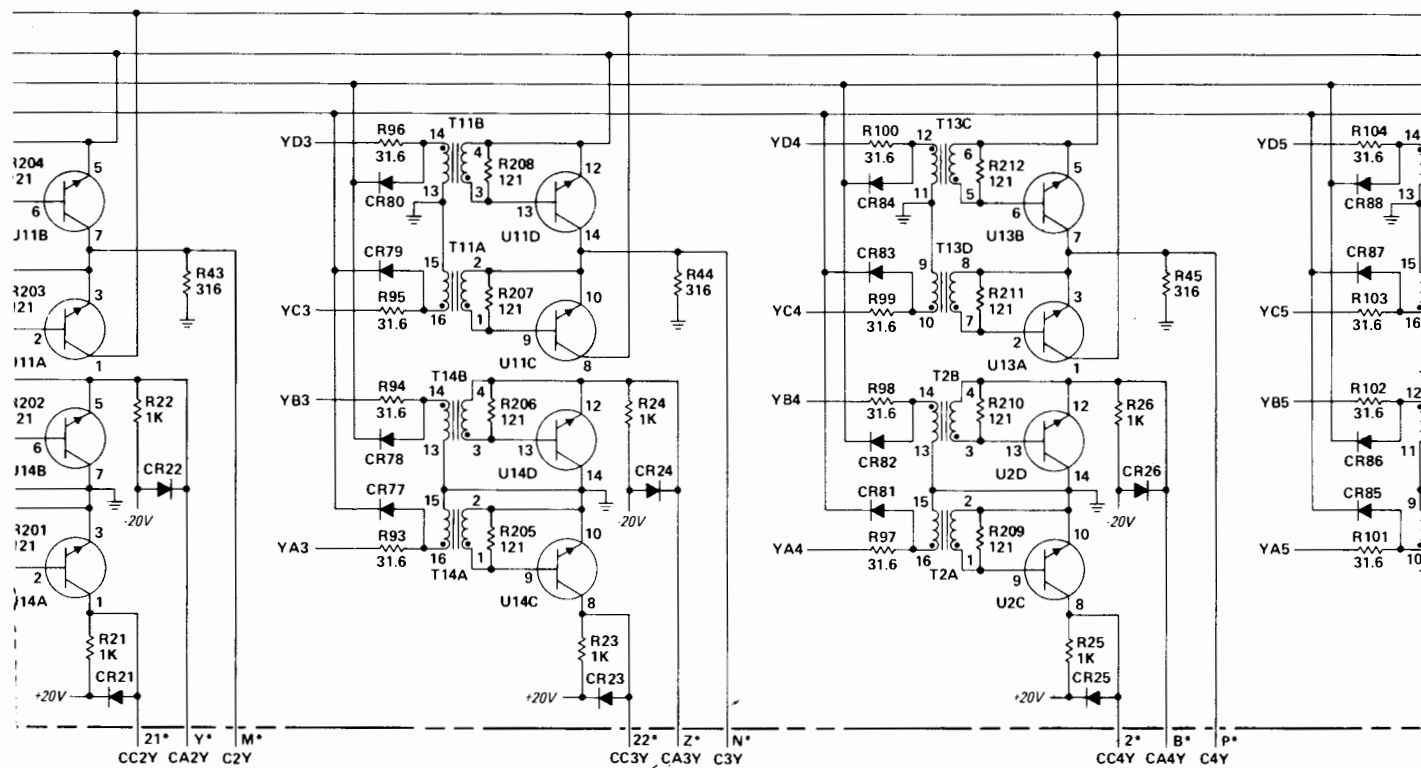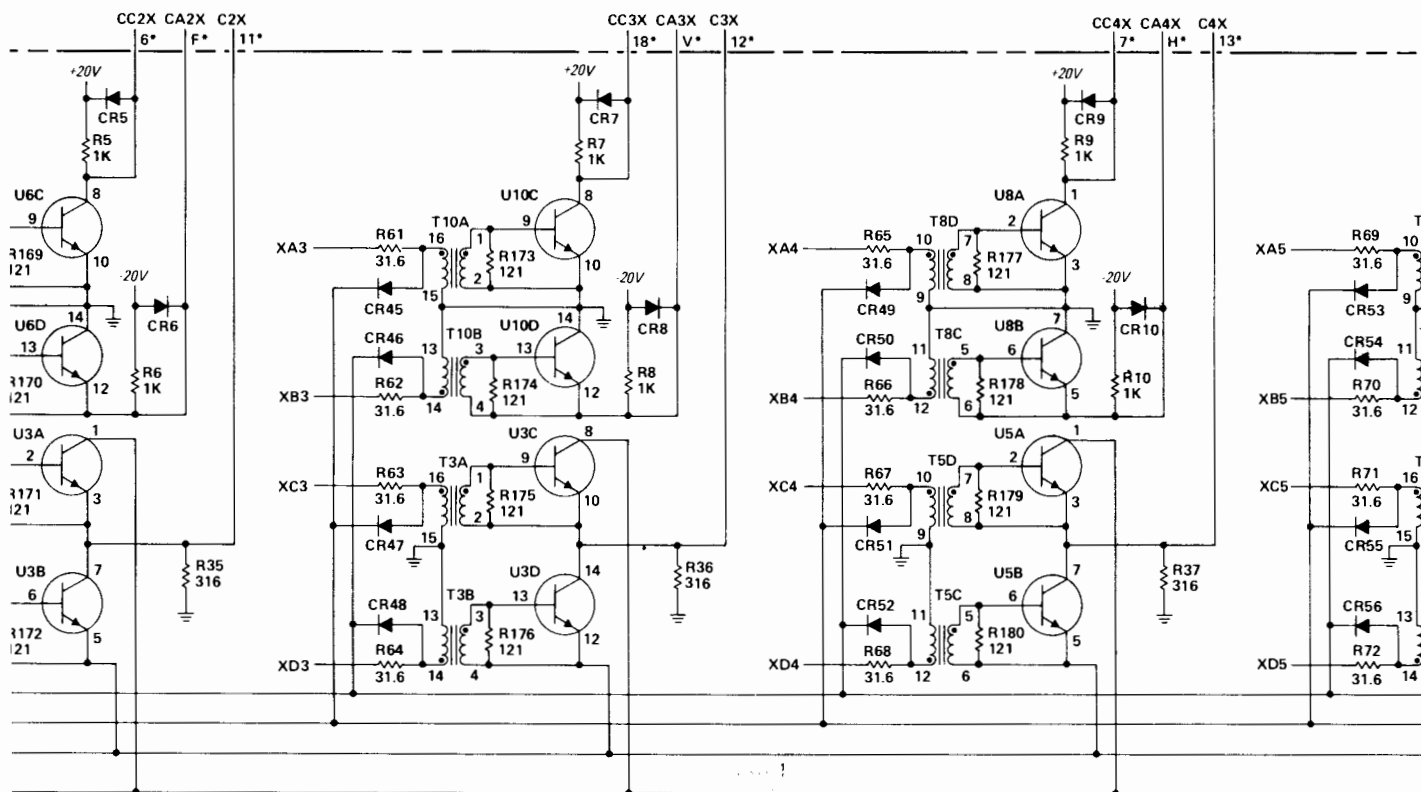

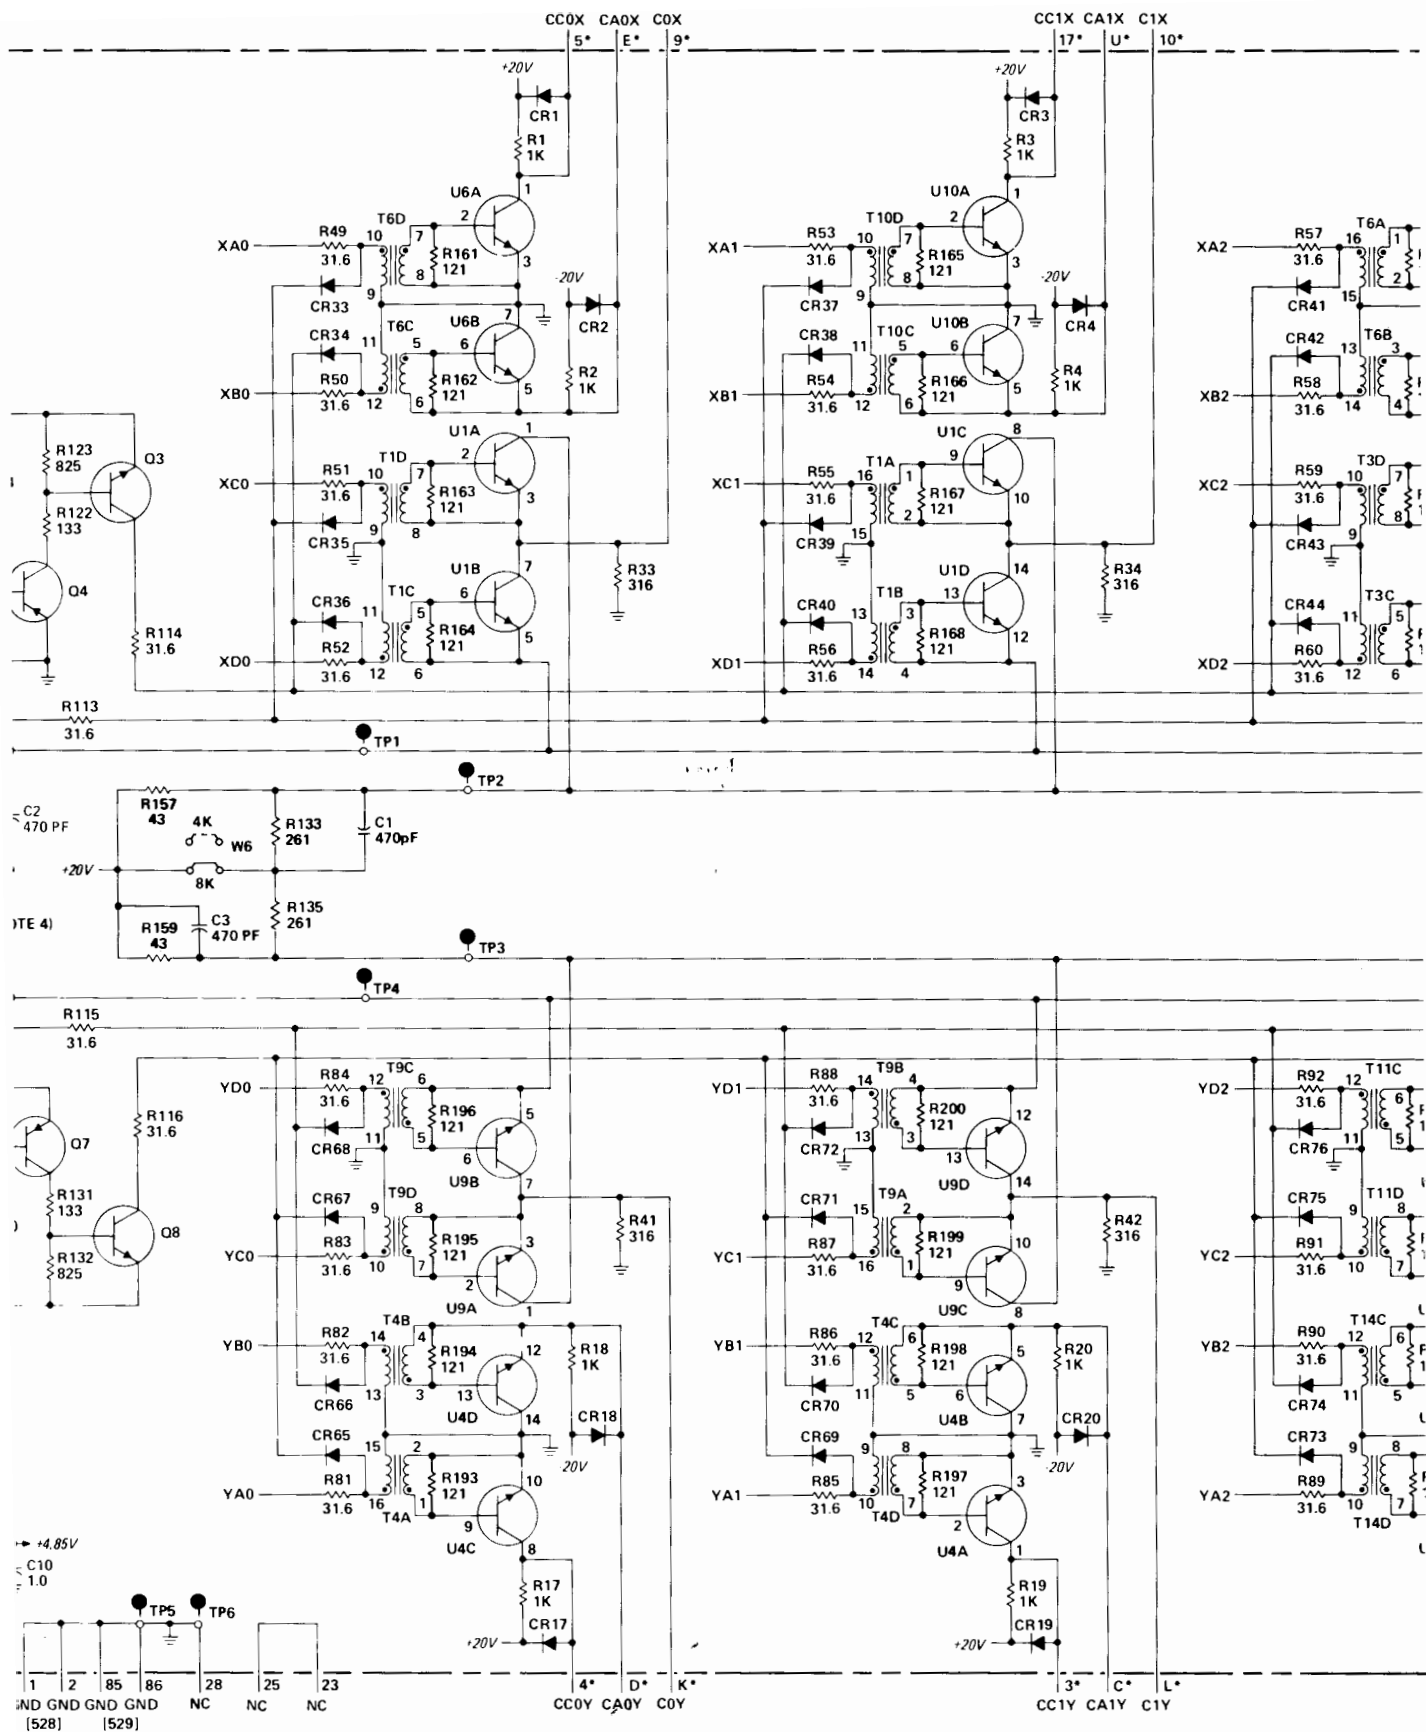

X-Y DRIVER/SWITCH CARD (02100-60012, REV. 1121, 1132, 1152)

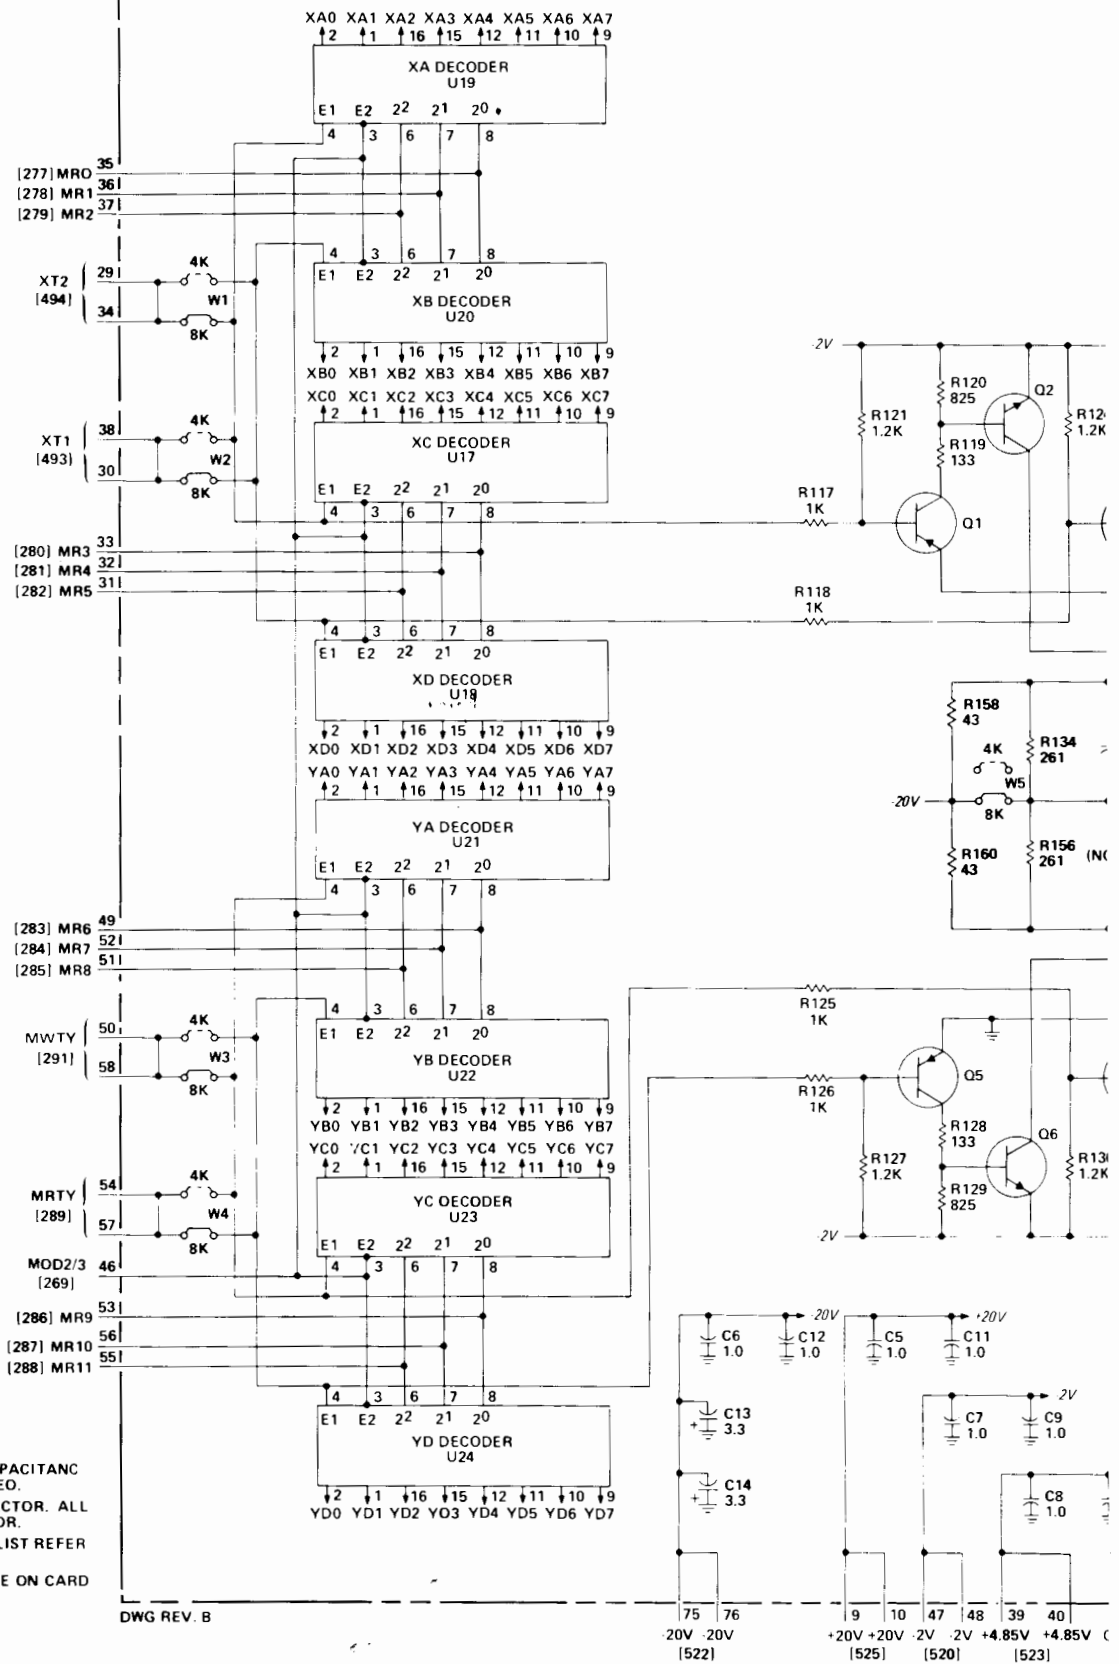

DWG REV. B

RESISTOR VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN P.F. UNLESS OTHERWISE SPECIFIED.
 PIN NUMBERS OF 48-PIN CONNECTOR. ALL IN NUMBERS ARE FOR 86-PIN CONNECTOR.
 SIGNALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCES.
 POSITION SHOWN BY DASHED LINE ON CARD 2 AND 1121.

Table 4-16. A102, A103 Core Stack/Sense Amplifier Card (4K), Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A102	02100-60040	2	CORE STACK/SENSE AMPL CARD-4K	28480	02100-60040
A102A1	5087-0002	2	4K CORE STACK ASSY	28480	5087-0002
A102C1	0160-2055	9	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C2	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C3	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C4	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C5	0160-0127	9	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C6	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C7	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C8	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C9	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C10	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C11	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C13	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C15	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A102C16	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C17	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C18	0160-2307	1	C:FXD MICA 47 PF 5%	28480	0160-2307
A102C19 (NOTE1)	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C20 (NOTE1)	0180-0229	3	C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A102C21 (NOTE1)	0180-0229		C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A102C22 (NOTE1)	0180-0229		C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A102CR1	1910-0016	1	DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A102Q1	1854-0215	18	TSTR:SI NPN	80131	2N3904
A102Q2	1853-0086	35	TSTR:SI PNP	80131	2N5087
A102Q3	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q4	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q5	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q6	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q7	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q8	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q9	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q10	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q11	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q12	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q13	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q14	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q15	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q16	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q17	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q18	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q19	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q20	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q21	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q22	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q23	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q24	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q25	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q26	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q27	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q28	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q29	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q30	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q31	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q32	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q33	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q34	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q35	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q36	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q37	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q38	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q39	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q40	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q41	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q42	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q43	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q44	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q45	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q46	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q47	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q48	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q49	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q50	1854-0215		TSTR:SI NPN	80131	2N3904

NOTES: 1. First used on card rev. 1148.

Table 4-16. A102, A103 Core Stack/Sense Amplifier Card (4K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A102Q51	1853-0C86		TSTR:SI PNP	80131	2N5087
A102Q52	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q53	1854-0215		TSTR:SI NPN	80131	2N3904
A102R1	0698-7310	34	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R2	C757-0290	17	R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R3	0698-3447	17	R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R4	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R5	0757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R6	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R7	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R8	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R9	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R10	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R11	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R12	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R13	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R14	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R15	C698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R16	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R17	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R18	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R19	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R20	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R21	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R22	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R23	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R24	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R25	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R26	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R27	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R28	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R29	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R30	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R31	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R32	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R33	C698-3447	1	R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3447
A102R34	C757-0280	1	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A102R35	C757-0417	1	R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A102R36	C757-0420	1	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A102R37	C698-0082	1	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A102R38	1810-0045	3	RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R39	1810-0045		RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R40	2100-2061	1	R:VAR FLM 200 OHM 10% LIN 1/2W	28480	2100-2061
A102R41	1810-0045		RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R42	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R43	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R44	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R45	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R46	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R47	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R48	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R49	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R50	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R51	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R52	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R53	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R54	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R55	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R56	C698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R57	C698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R58	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R59	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R60	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R61	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R62	C698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R63	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R64	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R65	C698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R66	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R67	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R68	C698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R69	C698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R70	C757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R71	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R72	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310

Table 4-16. A102, A103 Core Stack/Sense Amplifier Card (4K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A102R73	0757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R74	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R75	0698-3447		R:FXD MET FLM 422 OHM 1% 1/8W	28480	0698-3447
A102R76	0757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
A102R77	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R78	0757-0401	1	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A102U1	1858-0001	9	TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U2	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U3	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U4	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U5	0960-0111		BALUN MODULE	28480	0960-0111
A102U6	0960-0111		BALUN MODULE	28480	0960-0111
A102U7	0960-0111		BALUN MODULE	28480	0960-0111
A102U8	0960-0111		BALUN MODULE	28480	0960-0111
A102U9	1820-0370	1	IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74HC0N
A102U10	0960-0111		BALUN MODULE	28480	0960-0111
A102U11	0960-0111		BALUN MODULE	28480	0960-0111
A102U12	0960-0111		BALUN MODULE	28480	0960-0111
A102U13	0960-0111		BALUN MODULE	28480	0960-0111
A102U14	0960-0111		BALUN MODULE	28480	0960-0111
A102U15	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U16	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U17	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U18	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U19	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U36 THRU A102U51 A103	5087-1013	16	DIODE MODULE SAME AS A102, USE PREFIX A103	28480	5087-1013





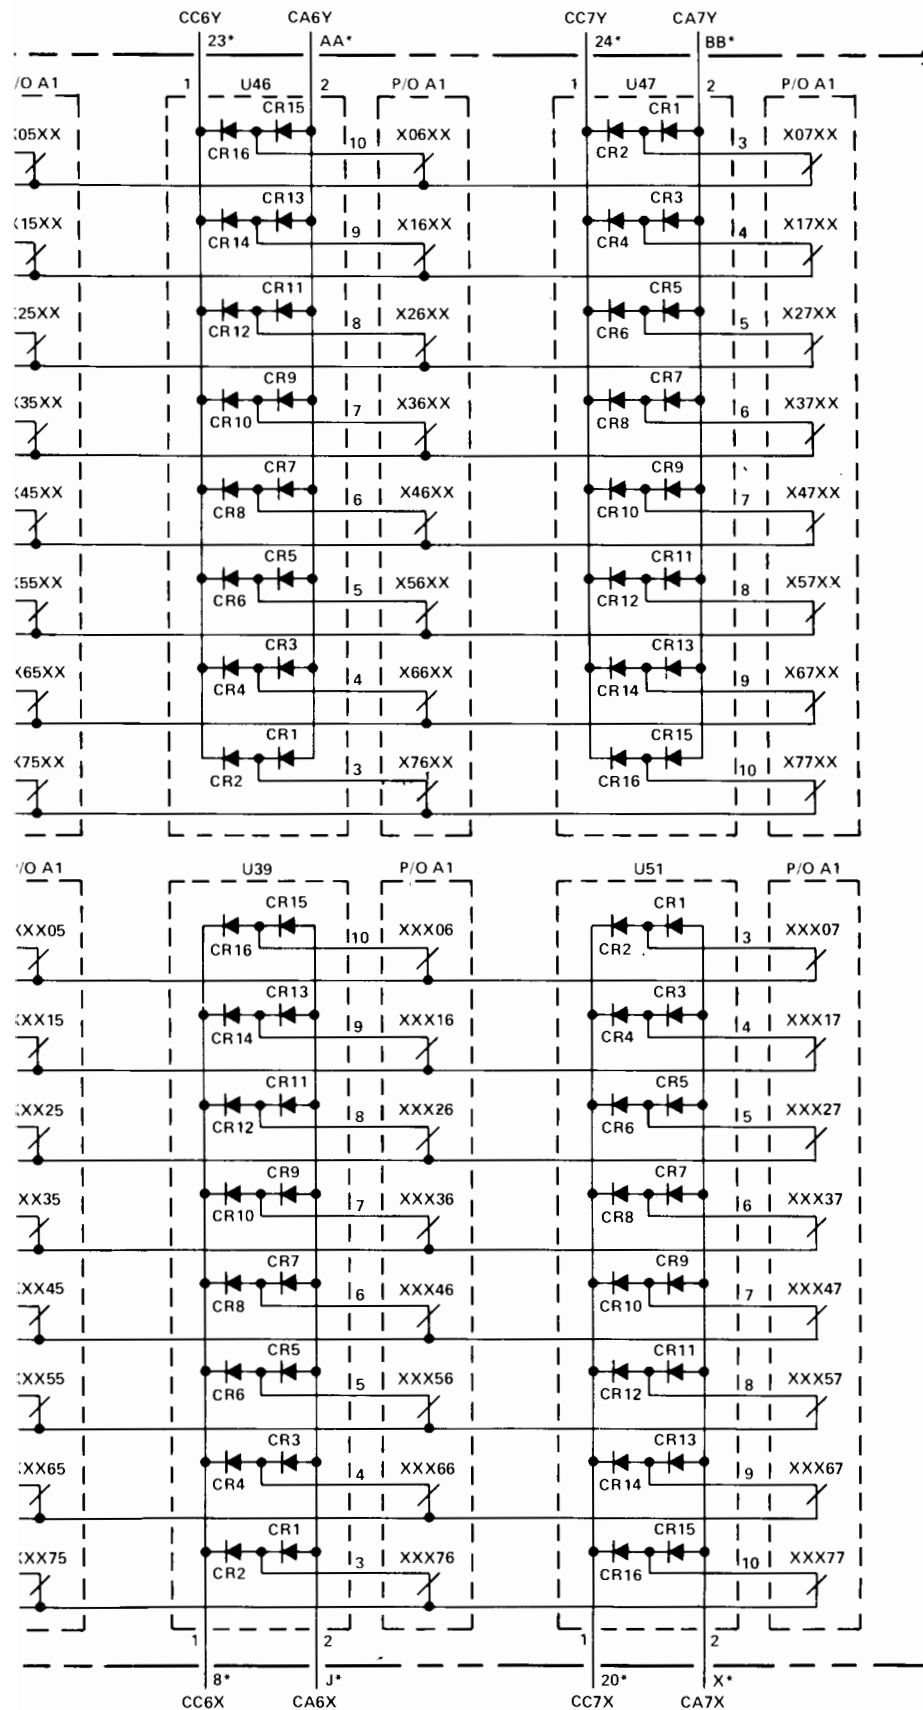


Figure 4-17. A102 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams (Sheet 1 of 3)

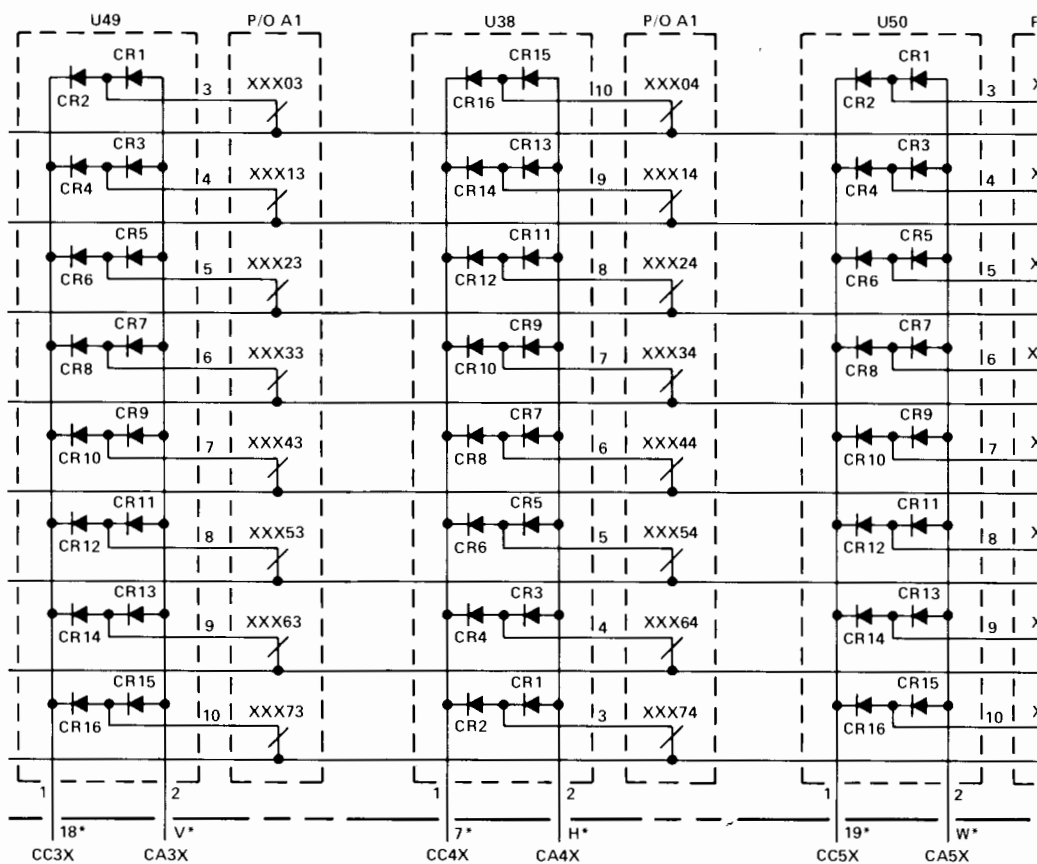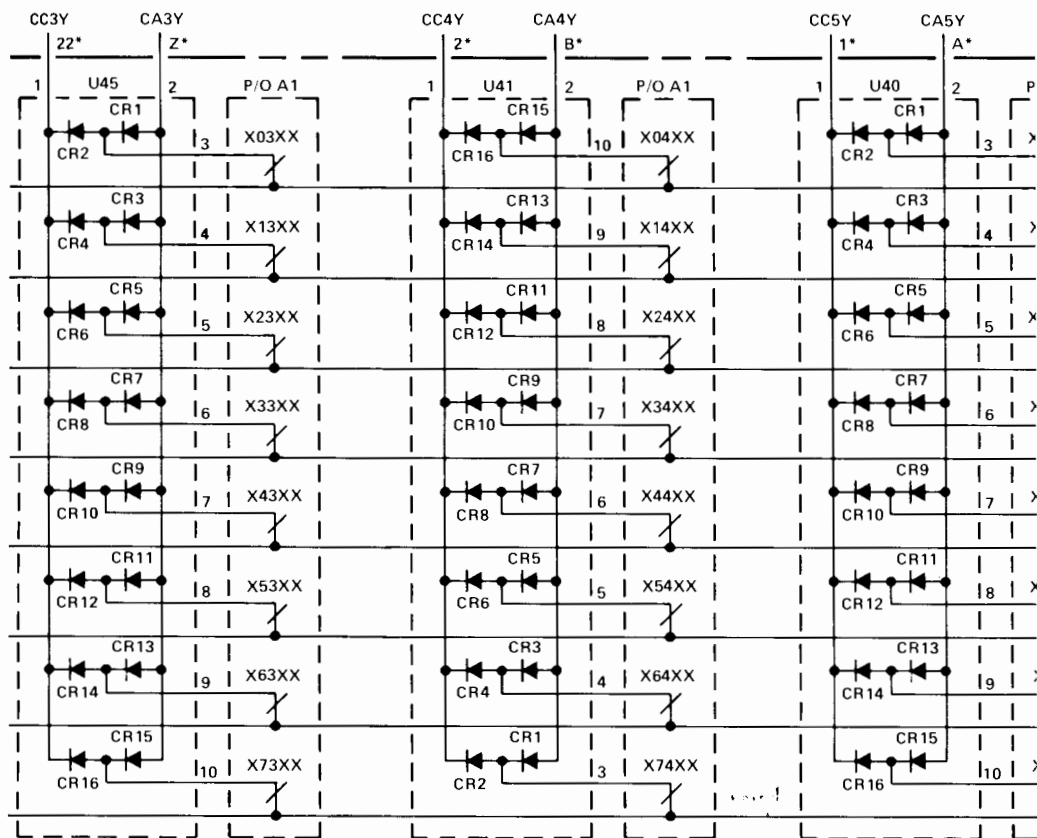

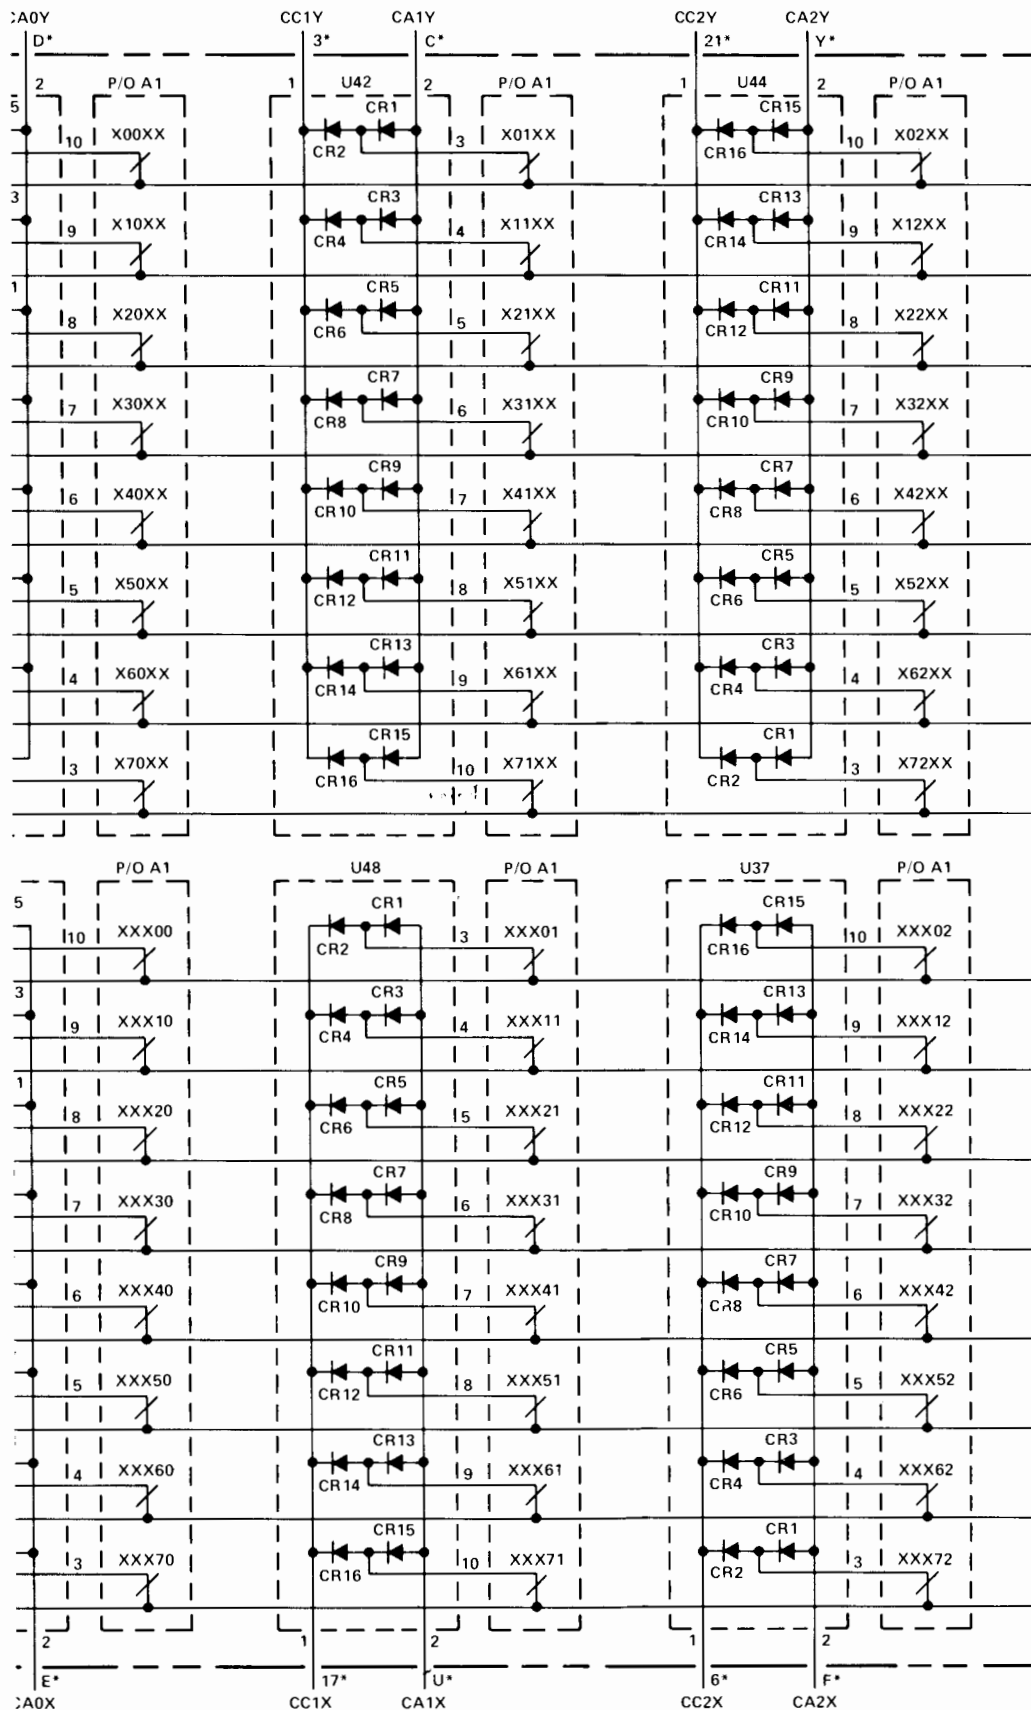

CORE STACK SENSE AMPLIFIER CARD
(02100-60040, REV. 1139, 1148)

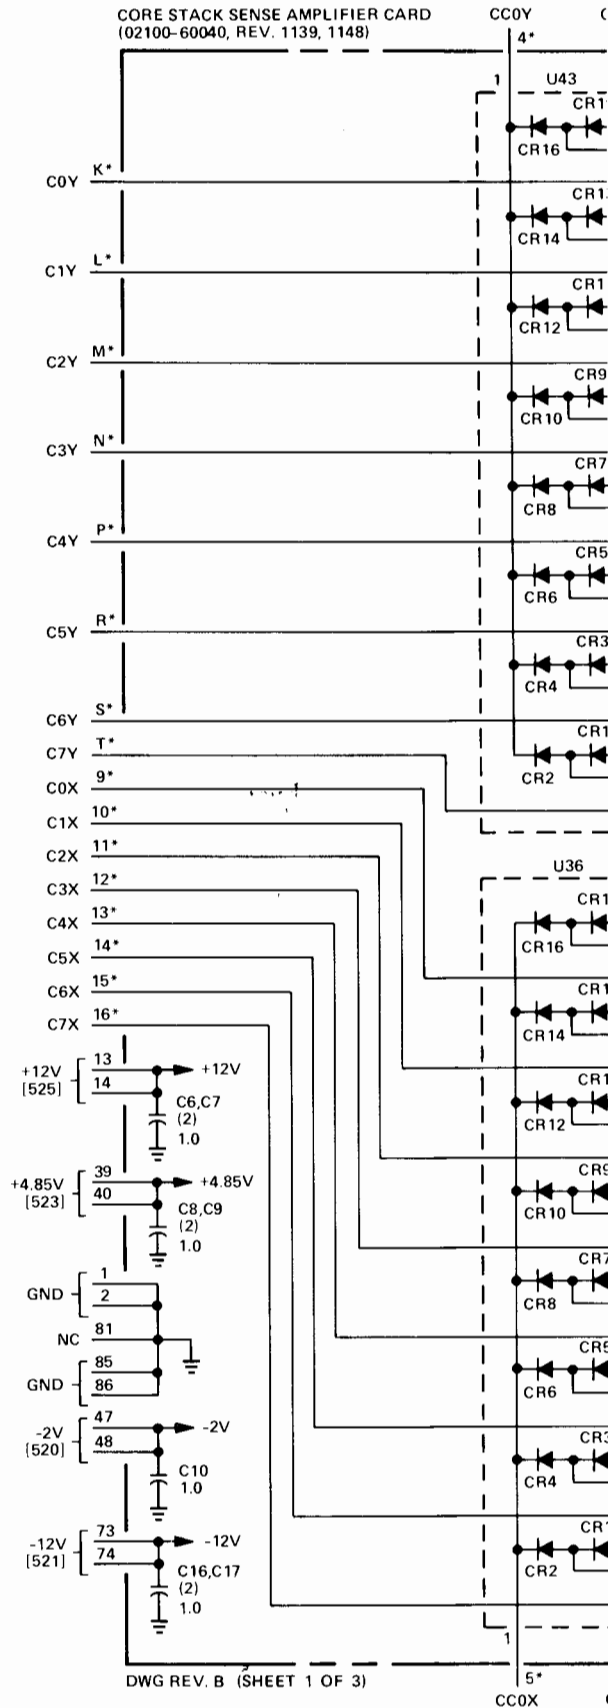


CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR. FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT PRESS ON THE TOP OR BOTTOM OF THE STACK.

NOTES:

1. THIS CARD MUST NOT BE REPAIRED IN THE FIELD. FIELD REMOVAL OR REPLACEMENT OF ANY COMPONENT VOIDS THE WARRANTY ON THE CARD.
2. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
3. * INDICATES PIN NUMBERS OF 48-PIN CONNECTOR. ALL OTHER PIN NUMBERS ARE FOR 86-PIN CONNECTOR.
4. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
5. EACH FERRITE CORE SHOWN REPRESENTS 4,096 CORES.
6. † INDICATES SELECTED RESISTOR. R2, R5, AND R8 SELECTED FROM 5.11K, 5.62K, 6.19K, 6.81K, 7.50K, OR 8.25K. R11, R14, R17, R20, R23, R53, R55, R58, R61, R64, R67, R70, R73, R76 SELECTED FROM 5.62K OR 6.19K. NORMAL VALUES SHOWN.
7. C19 THRU C22 NOT USED ON CARD REV. 1139.

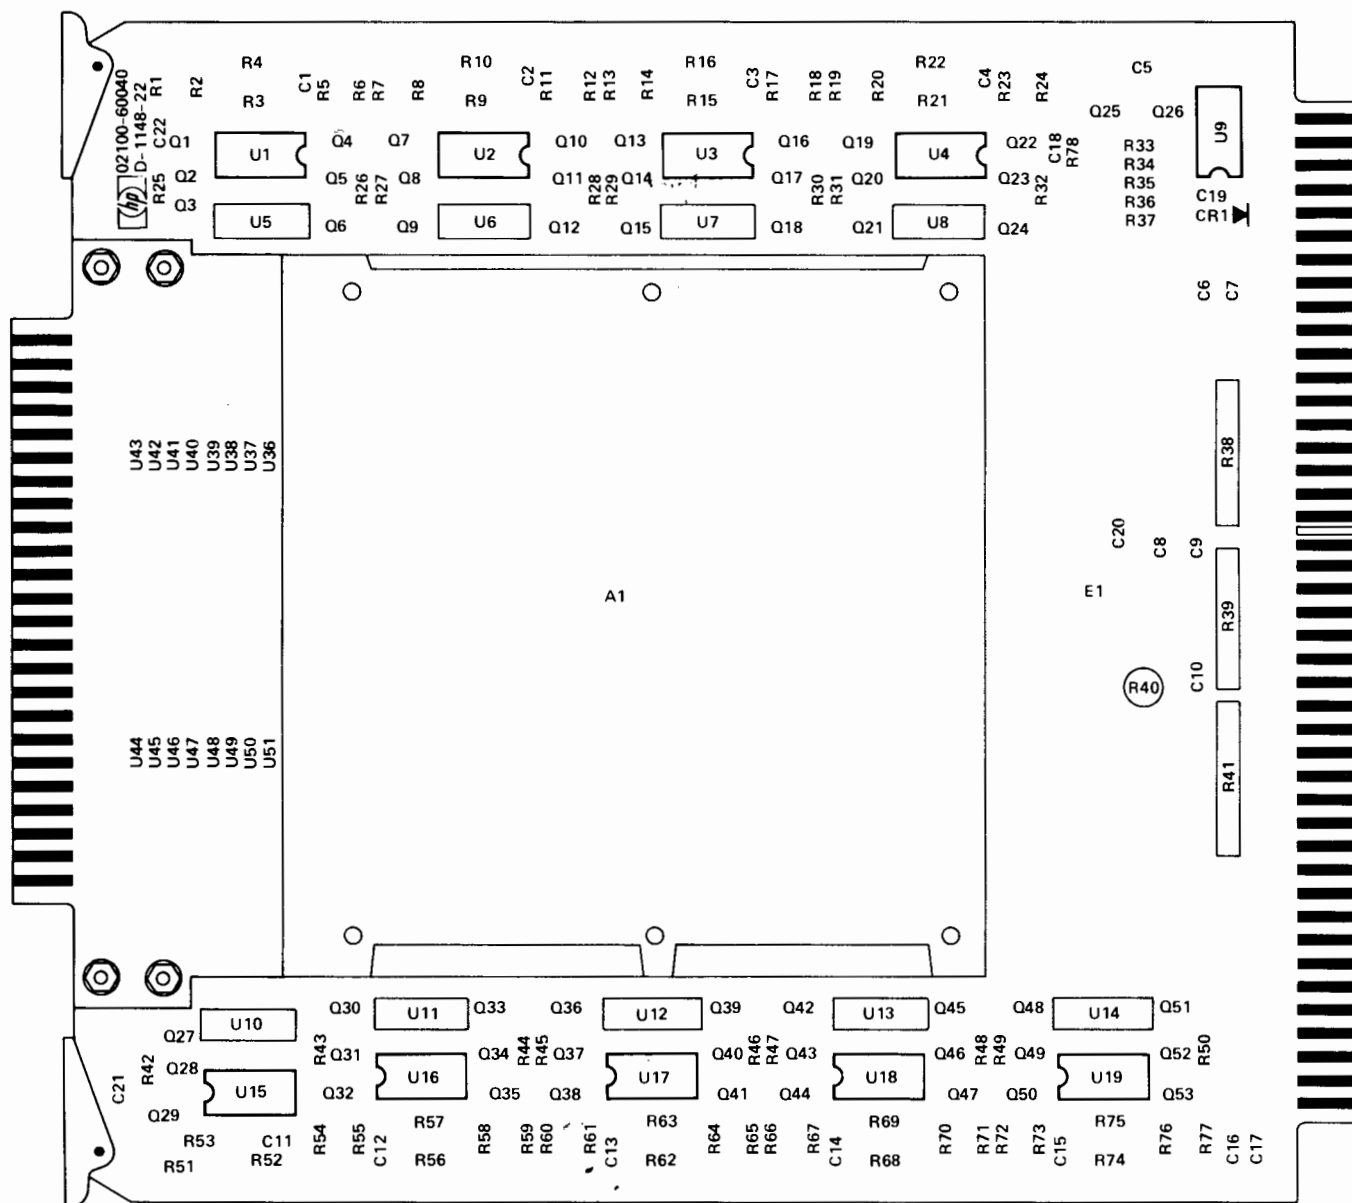

DWG REV. C

NOTE: C19 THRU C22 NOT USED ON CARD REV. C-1139-22.

See table 4-16 for replaceable parts.



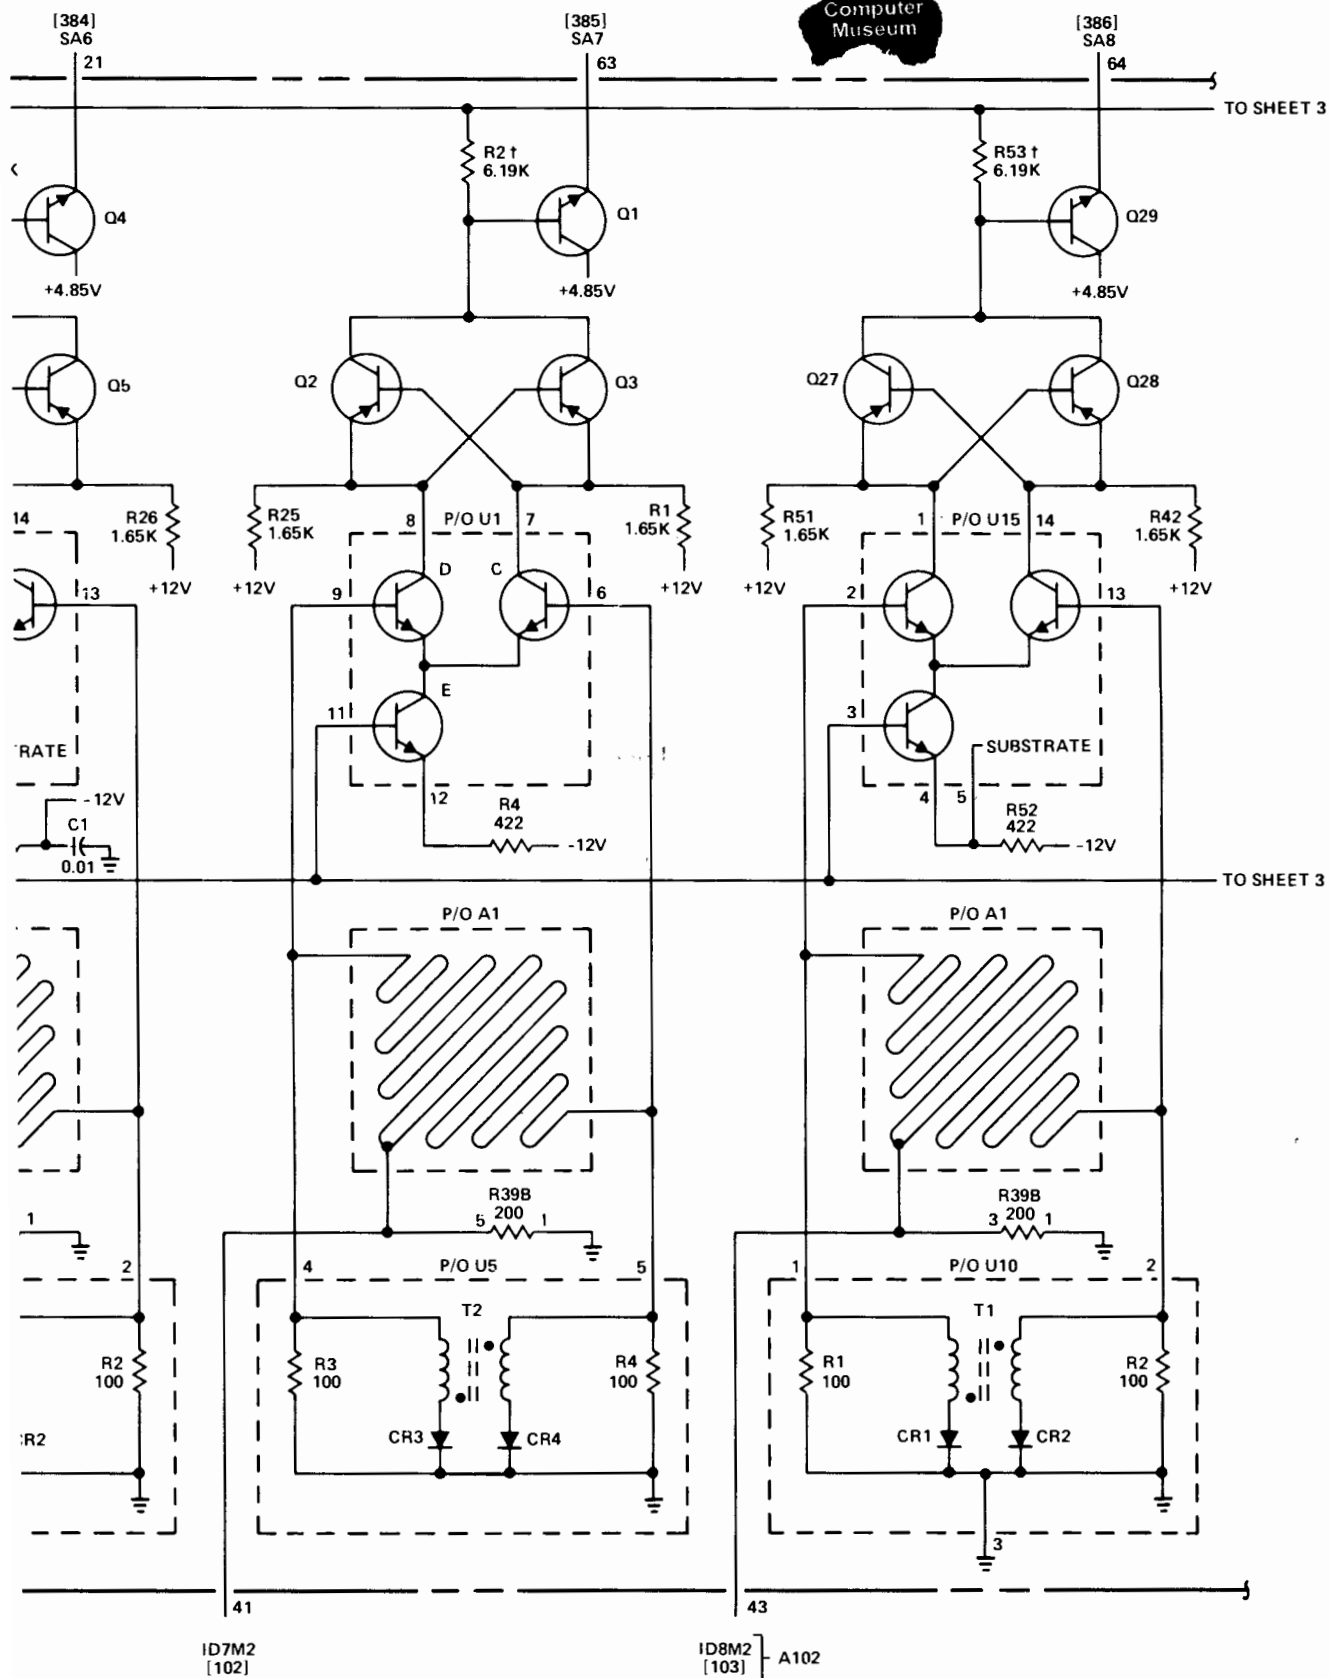


Figure 4-17. A102 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams (Sheet 2 of 3)

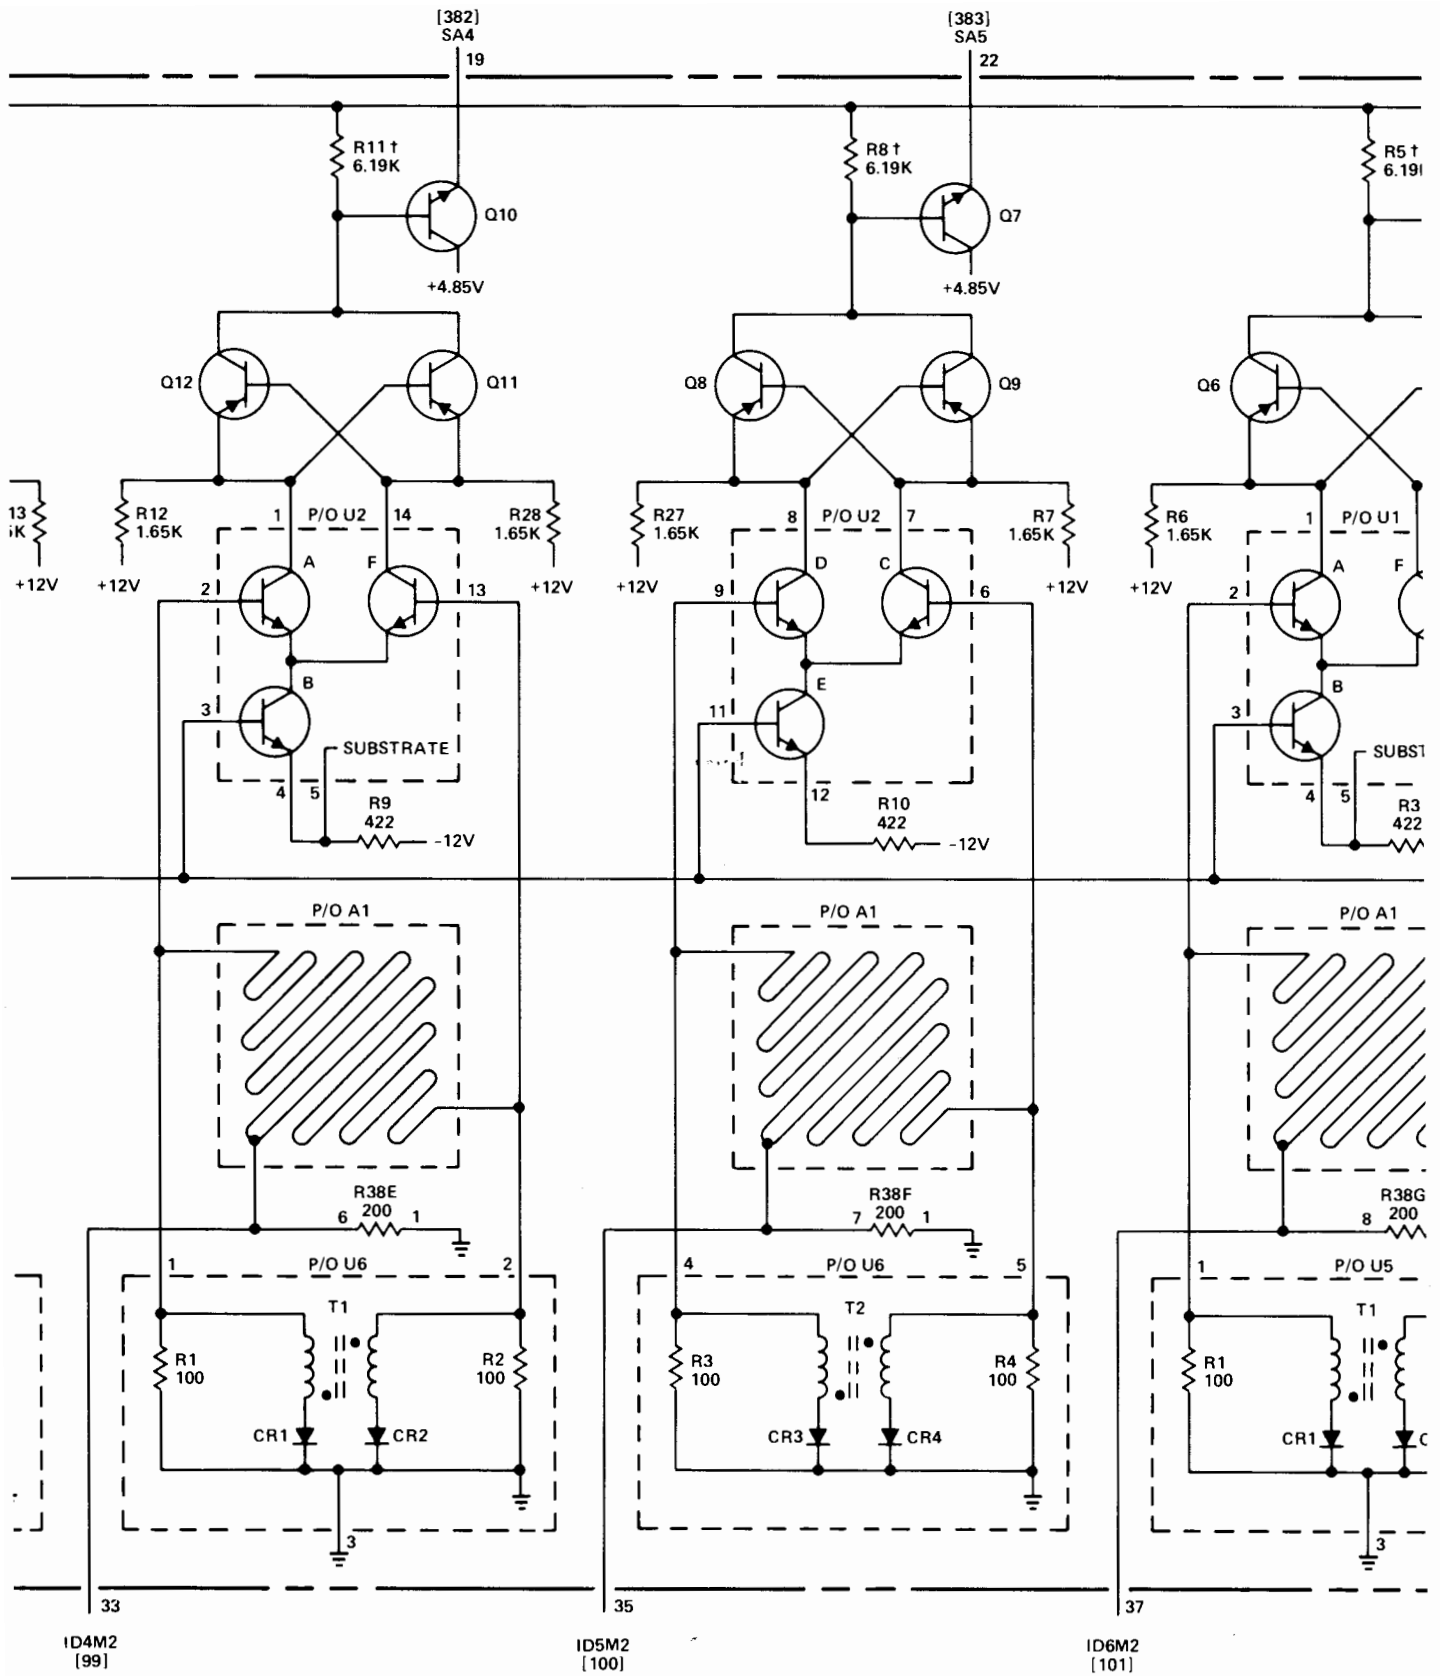

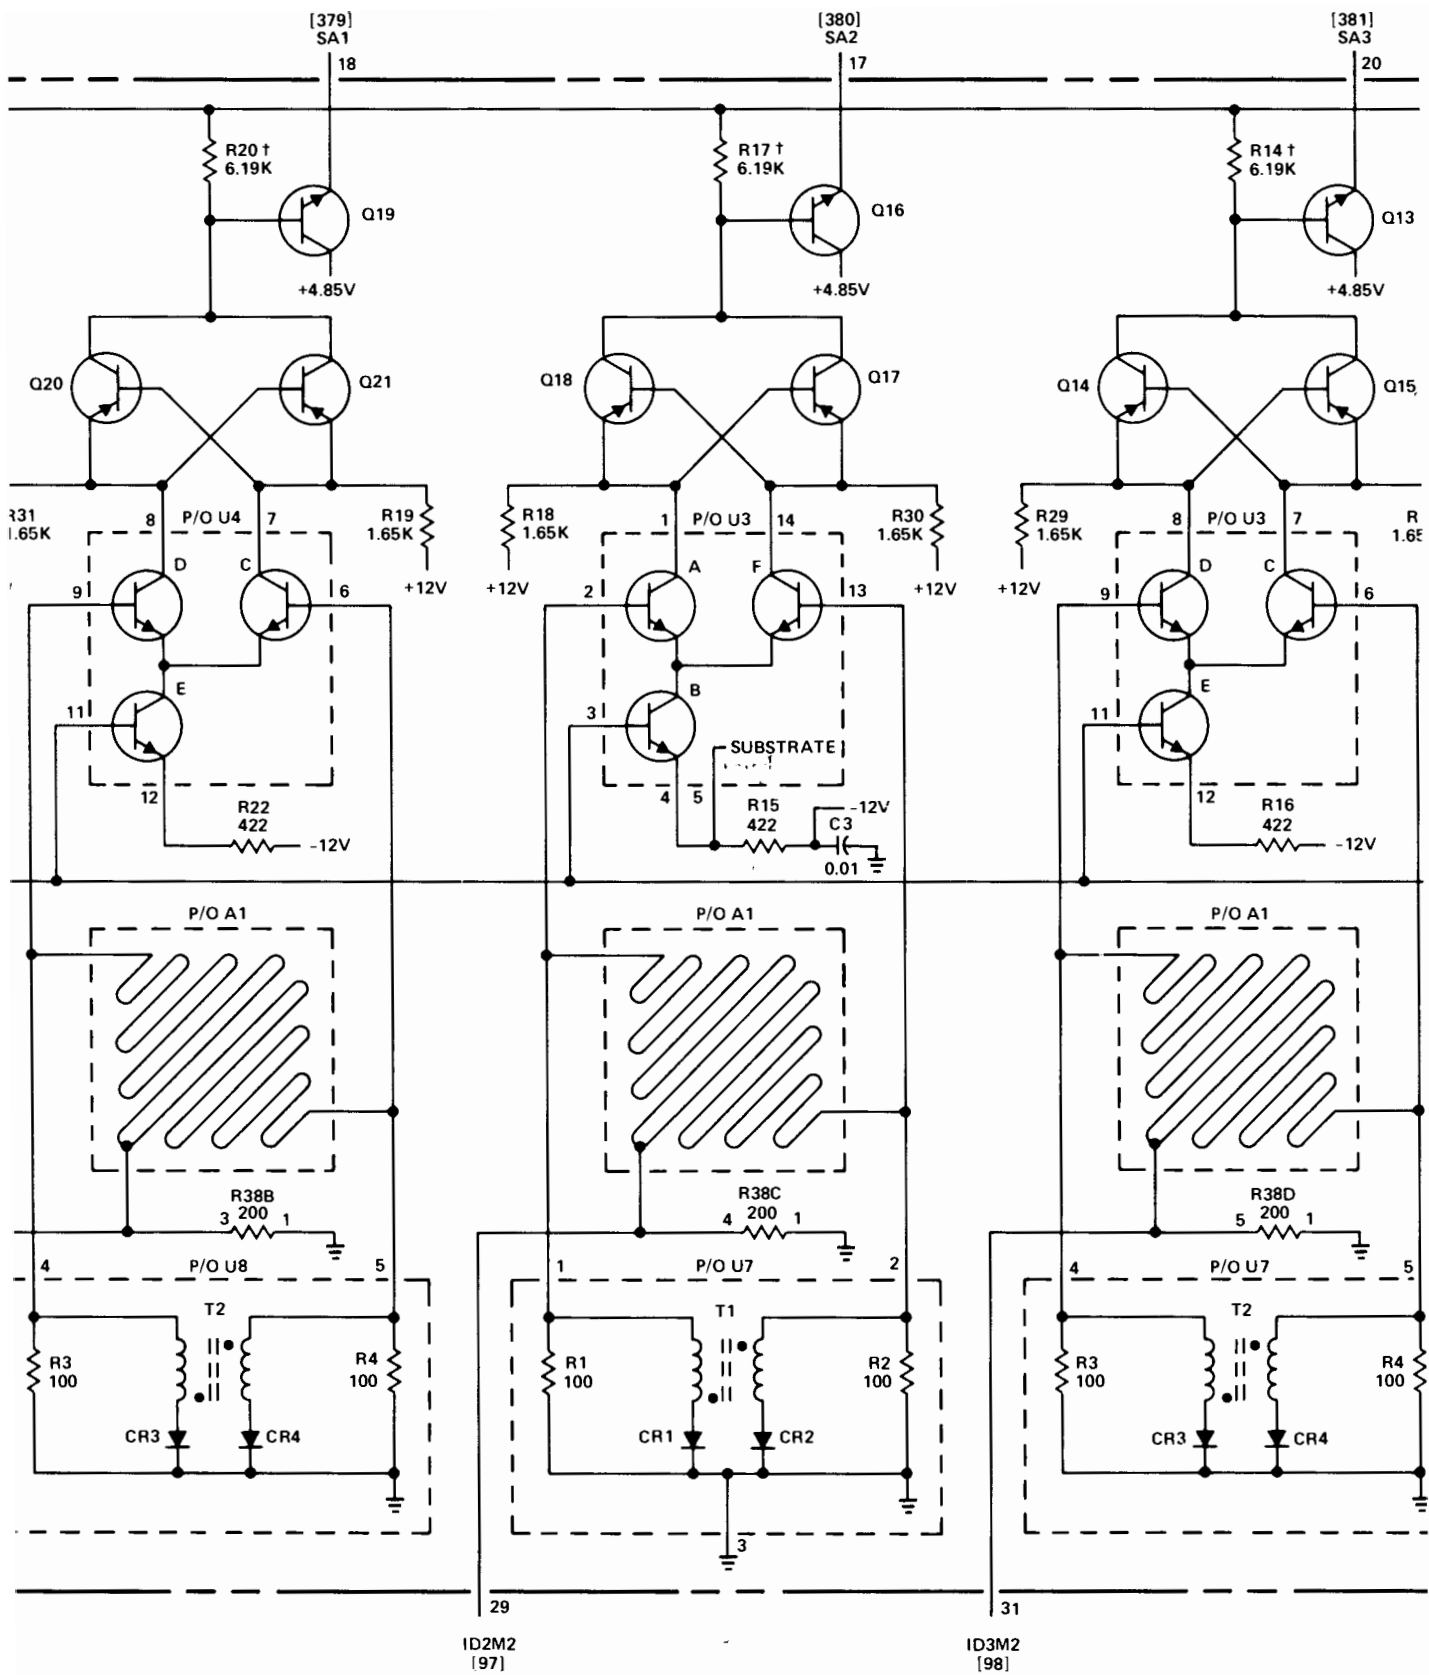


CORE STACK/SENSE AMPLIFIER CARD
(02100-60040, REV. 1139, 1148)

CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT
PRESS ON THE TOP OR BOTTOM OF THE STACK.

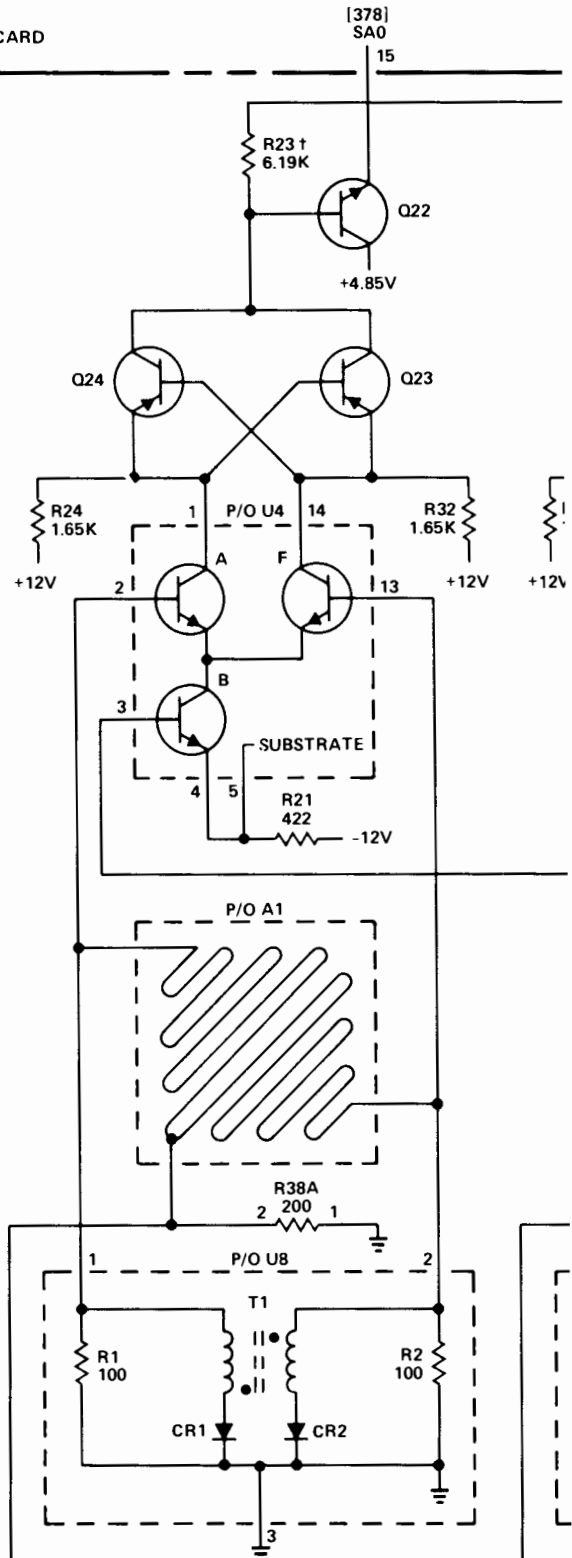

DWG REV. B (SHEET 2 OF 3)
SEE SHEET 1 FOR NOTES


A102 [ID0M2
[95]

ID1M2
[96]

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A102 (4K)

95	A102-25	A105-26*			
96	A102-27	A105-19*			
97	A102-29	A105-25*			
98	A102-31	A105-24*			
99	A102-33	A105-53*			
100	A102-35	A105-60*			
101	A102-37	A105-59*			
102	A102-41	A105-58*			
103	A102-43	A105-52*			
378	A102-15*	A103-15*	A107-13	A110-15*	A111-15*
379	A102-18*	A103-18*	A107-11	A110-18*	A111-18*
380	A102-17*	A103-17*	A107-7	A110-17*	A111-17*
381	A102-20*	A103-20*	A107-9	A110-20*	A111-20*
382	A102-19*	A103-19*	A107-17	A110-19*	A111-19*
383	A102-22*	A103-22*	A107-15	A110-22*	A111-22*
384	A102-21*	A103-21*	A107-19	A110-21*	A111-21*
385	A102-63*	A103-63*	A107-21	A110-63*	A111-63*
386	A102-64*	A103-64*	A107-31	A110-64*	A111-64*

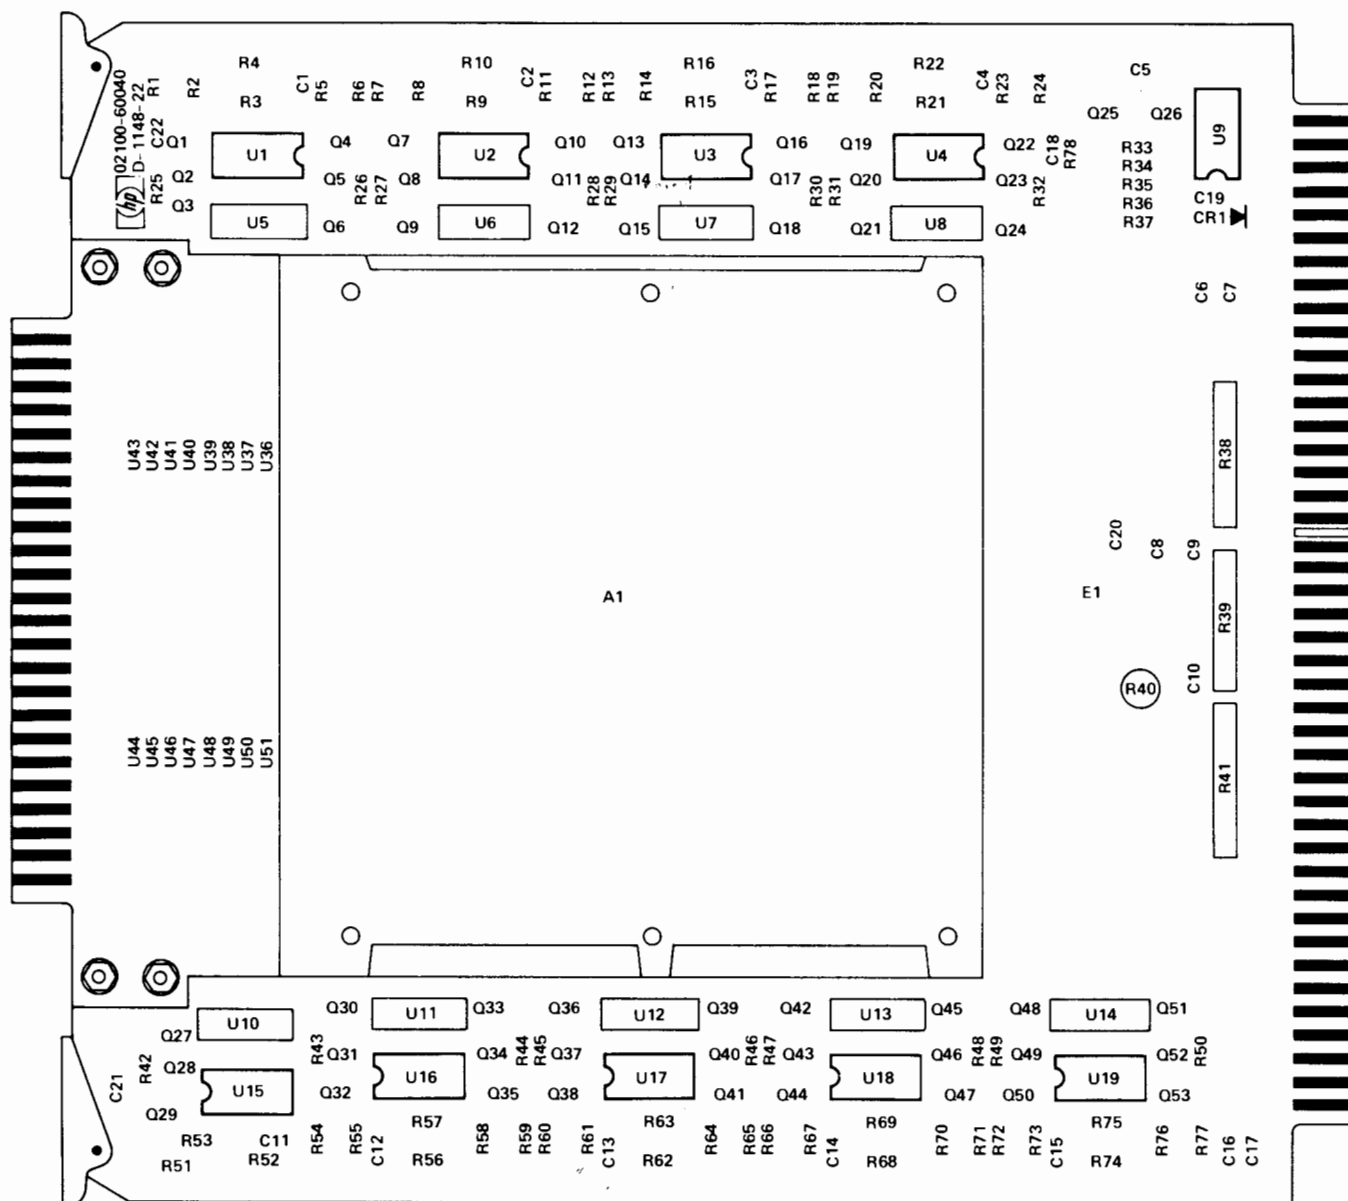

DWG REV. C

NOTE: C19 THRU C22 NOT USED ON CARD REV. C-1139-22.

See table 4-16 for replaceable parts.


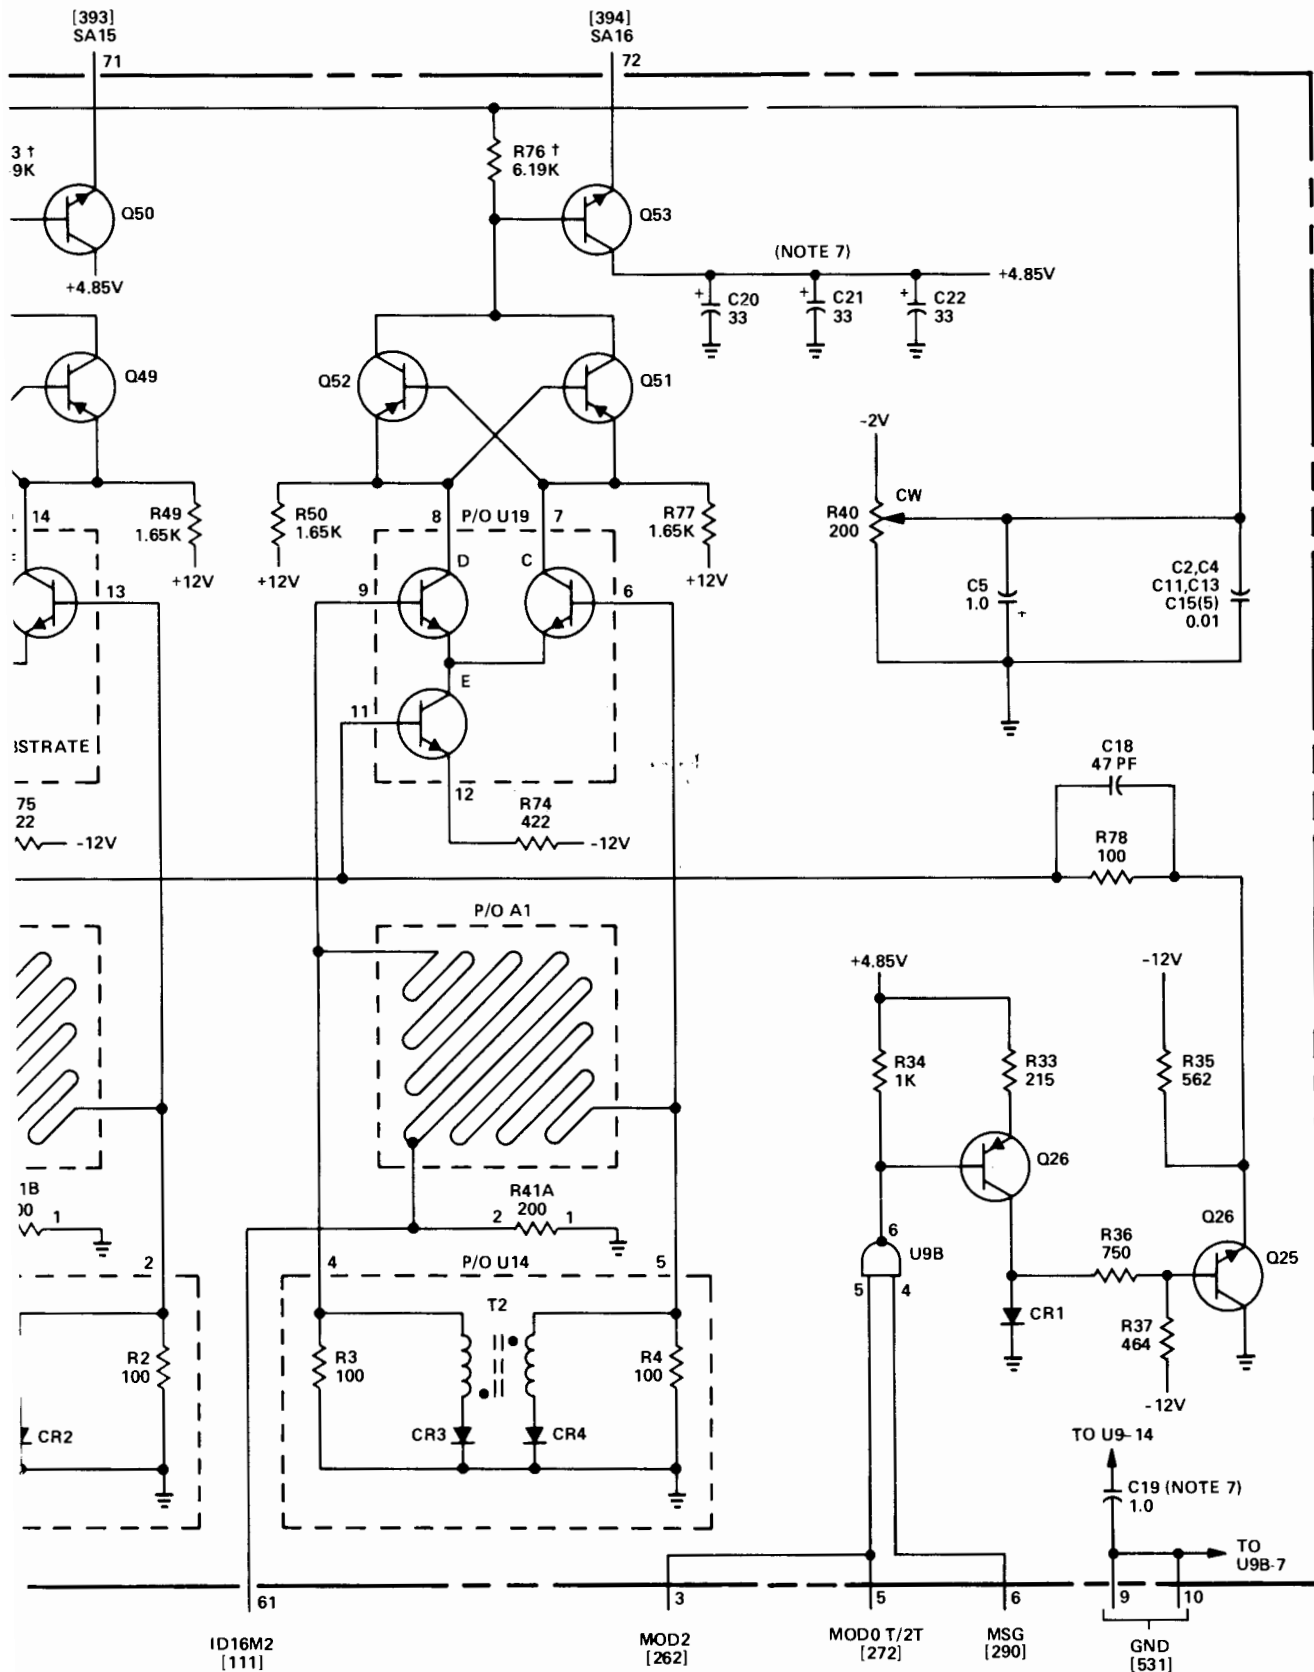



Figure 4-17. A102 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams (Sheet 3 of 3)

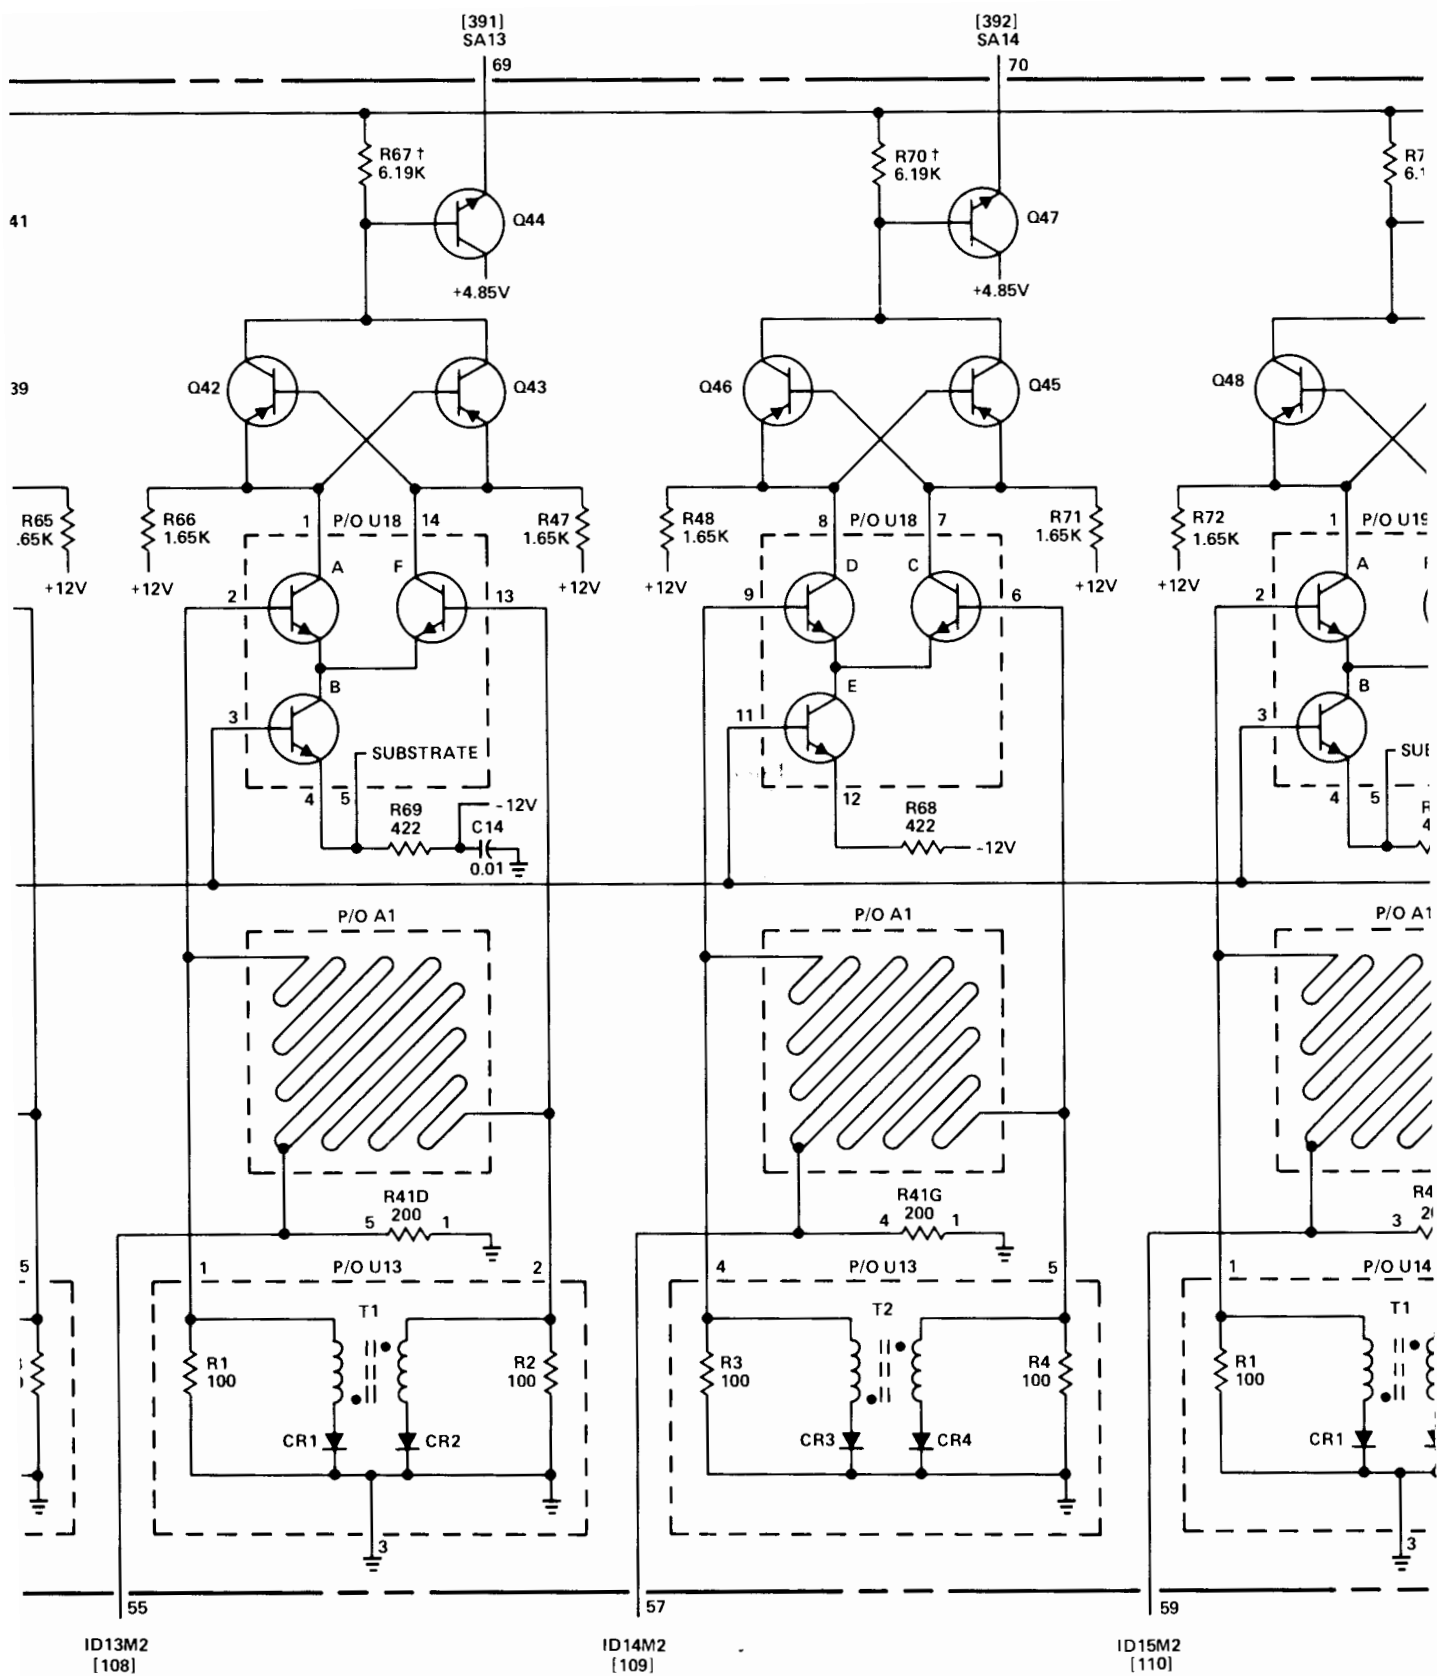

ID13M2
[108]

ID14M2
[109]


ID15M2
[110]

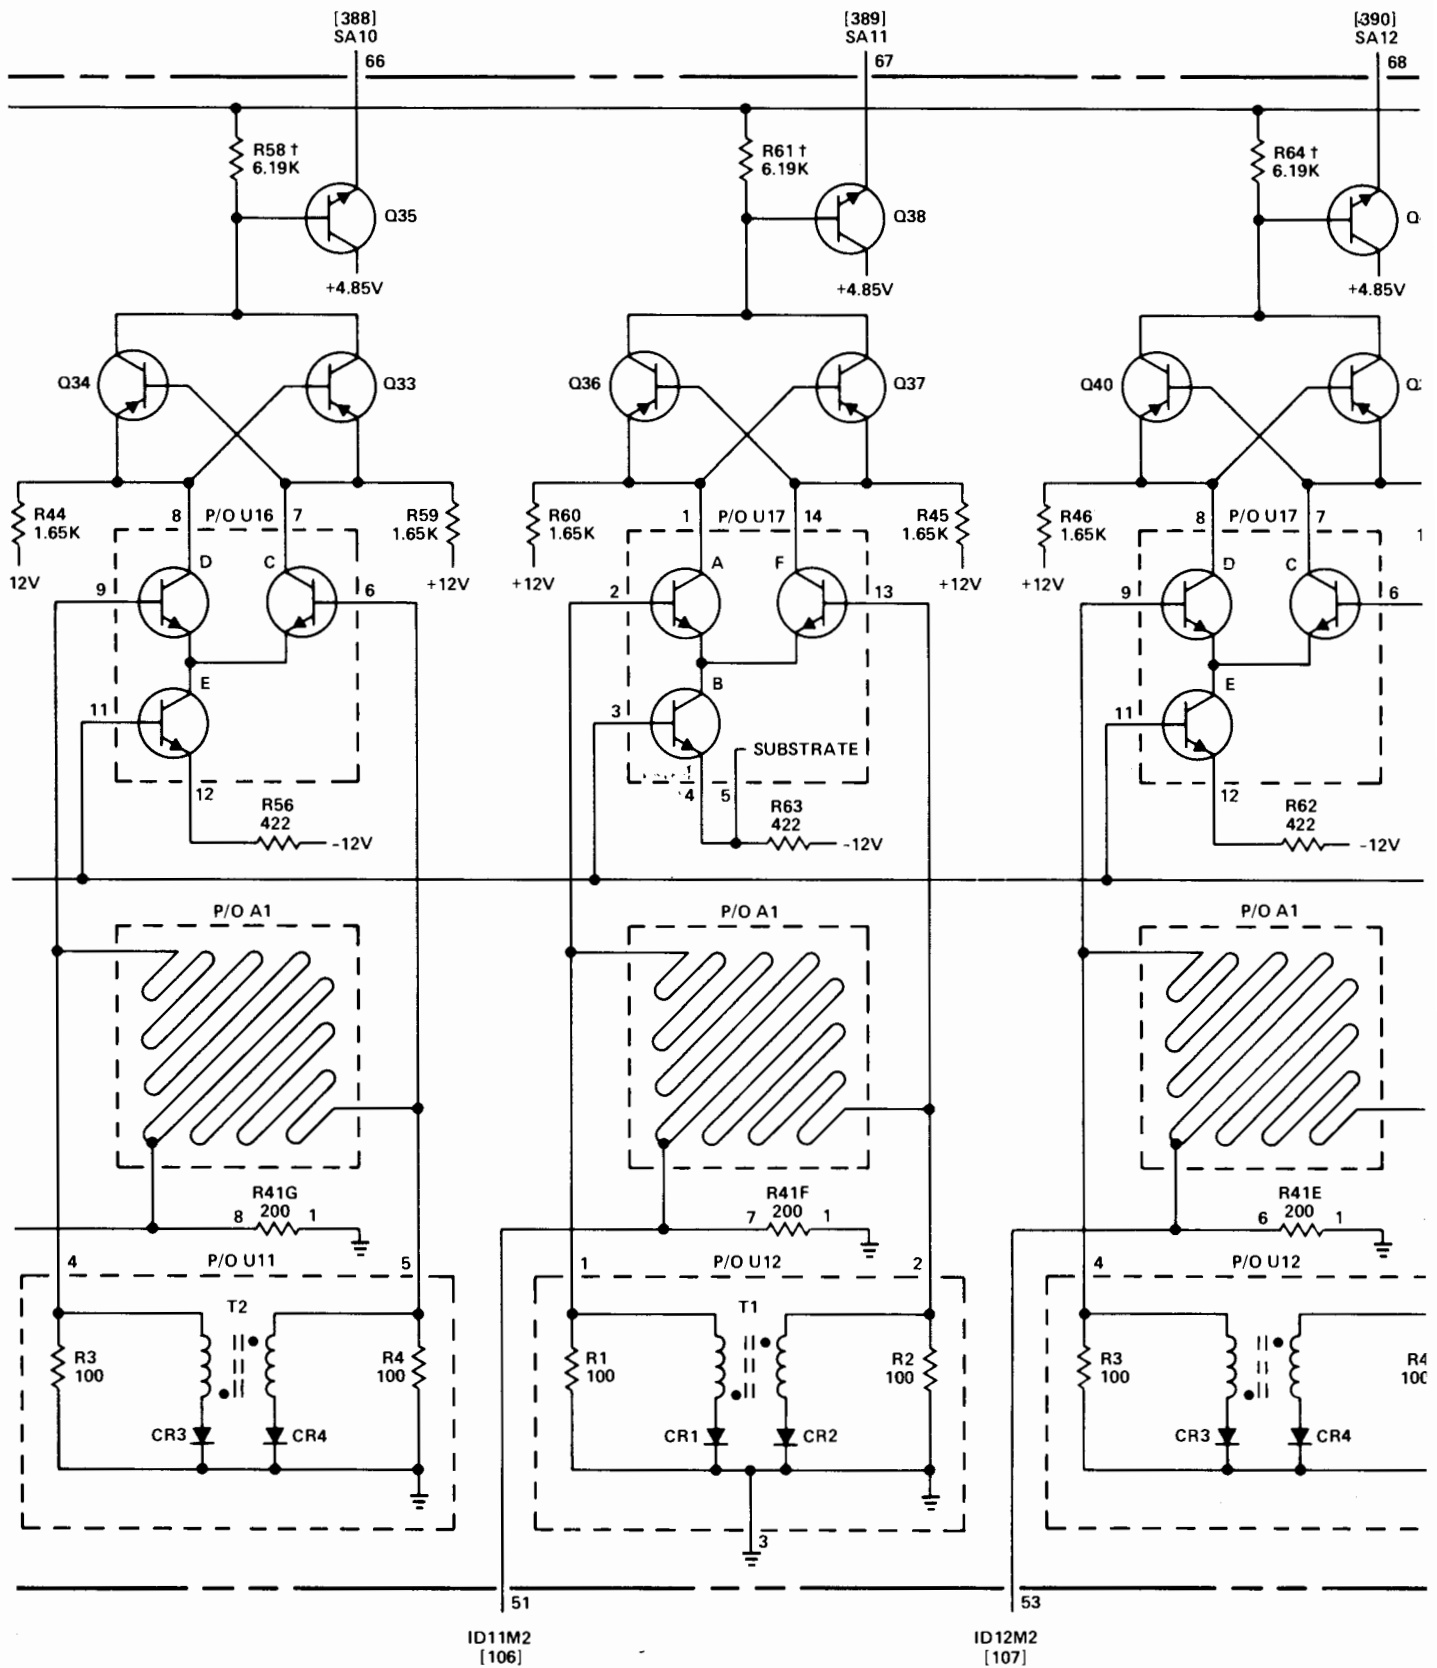

FROM SHEET 2

**RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.**

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT PRESS ON THE TOP OR BOTTOM OF THE STACK.




ID9M2
[104]

ID10M2
[105]

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A102 (4K)

104	A102-45	A105-44*			
105	A102-49	A105-51*			
106	A102-51	A105-45*			
107	A102-53	A105-76*			
108	A102-55	A105-73*			
109	A102-57	A105-74*			
110	A102-59	A105-75*			
111	A102-61	A105-17*			
262	A102-3	A107-55*			
272	A102-5*	A103-5*	A107-80	A110-5*	A111-5*
290	A102-6	A103-6	A107-83*	A110-6	A111-6
387	A102-65*	A103-65*	A107-33	A110-65*	A111-65*
388	A102-66*	A103-66*	A107-35	A110-66*	A111-66*
389	A102-67*	A103-67*	A107-37	A110-67*	A111-67*
390	A102-68*	A103-68*	A107-41	A110-68*	A111-68*
391	A102-69*	A103-69*	A107-43	A110-69*	A111-69*
392	A102-70*	A103-70*	A107-45	A110-70*	A111-70*
393	A102-71*	A103-71*	A107-49	A110-71*	A111-71*
394	A102-72*	A103-72*	A107-71	A110-72*	A111-72*

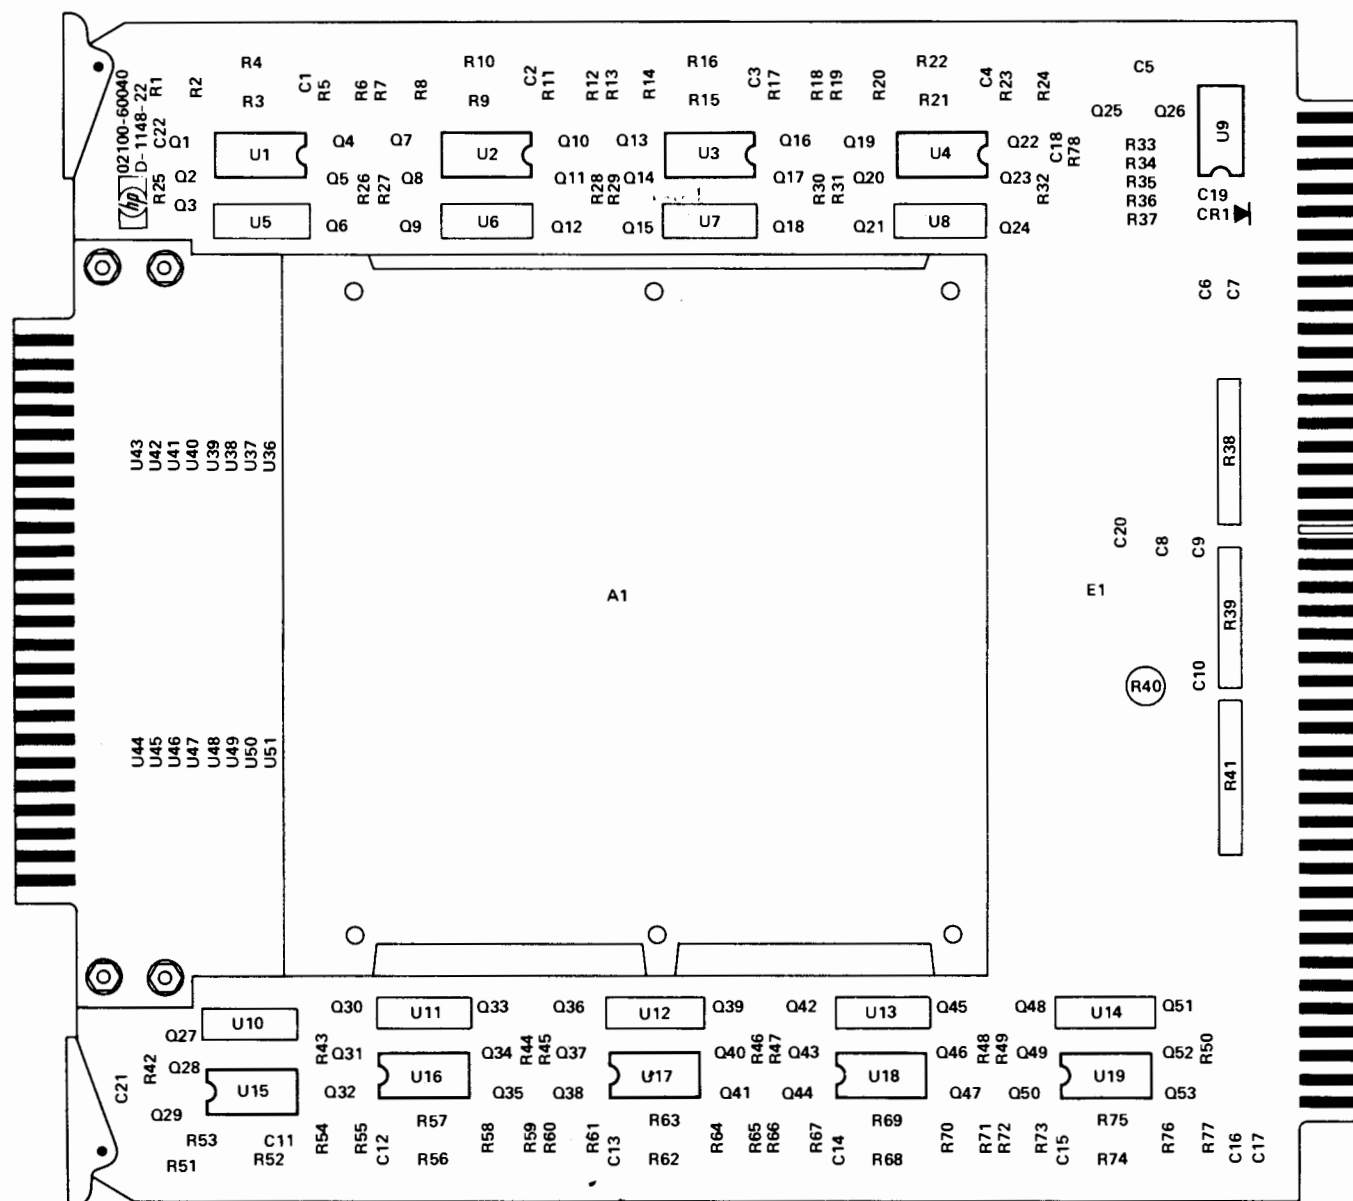

DWG REV. C

NOTE: C19 THRU C22 NOT USED ON CARD REV. C-1139-22.

See table 4-16 for replaceable parts.

Table 4-17. A102, A103, A110, A111 Core Stack/Sense Amplifier Card (8K), Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A102 OR	5060-8331	4	CORE STACK/SENSE AMPL CARD-8K	28480	5060-8331
A102	5060-8324	4	CORE STACK/SENSE AMPL CARD-8K	28480	5060-8324
A102A1	5087-0001	1	8K CORE STACK ASSY	28480	5087-0001
A102C1	0160-0127	11	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C2	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C3	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C4	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C5	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C6	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C7	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C8	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C9	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C10(NOTE 1)	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C11(NOTE 1)	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A102C12(NOTE 1)	0180-0229	3	C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A102C13(NOTE 1)	0180-0229		C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A102C14(NOTE 1)	0180-0229		C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A102C15(NOTE 3)	0160-2306	2	C:FXD MICA 27 PF 5%	28480	0160-2306
A102C16(NOTE 3)	0160-2306		C:FXD MICA 27 PF 5%	28480	0160-2306
A102CR1	1910-0016	2	DIODE:GE 100MA/0.85V 60PIV	93332	D2361
A102CR2	1910-0016		DIODE:GE 100MA/0.85V 60PIV	93332	D2361
A102E1	0360-0294	2	TERMINAL:SOLDER POINT	28480	0360-0294
A102E2	0360-0294		TERMINAL:SOLDER POINT	28480	0360-0294
A102E3 THRU	9170-0847	4	CORE: FERRITE	02114	56-590-65-3B
A102E6 (NOTE 2)					
A102Q1	1853-0086	36	TSTR:SI PNP	80131	2N5087
A102Q2	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q3	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q4	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q5	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q6	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q7	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q8	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q9	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q10	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q11	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q12	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q13	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q14	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q15	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q16	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q17	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q18	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q19	1854-0215	17	TSTR:SI NPN	80131	2N3904
A102Q20	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q21	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q22	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q23	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q24	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q25	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q26	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q27	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q28	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q29	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q30	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q31	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q32	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q33	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q34	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q35	1854-0215		TSTR:SI NPN	80131	2N3904
A102Q36	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q37	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q38	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q39	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q40	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q41	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q42	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q43	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q44	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q45	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q46	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q47	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q48	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q49	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q50	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q51	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q52	1853-0086		TSTR:SI PNP	80131	2N5087
A102Q53	1853-0086		TSTR:SI PNP	80131	2N5087
A102R1	0698-7310	34	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310

NOTES: 1. Used on card part no. 5060-8331 only.
 2. Used on card part no. 5060-8324, rev. 1136 only.
 3. First used on card rev. 1301.

Table 4-17. A102, A103, A110, A111 Core Stack/Sense Amplifier Card (8K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A102R2	0698-3488	68	R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R3	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R4	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R5	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R6	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R7	0698-3488	68	R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R8	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R9	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R10	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R11	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R12	0698-7310	68	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R13	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R14	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R15	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R16	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R17	0698-7310	68	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R18	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R19	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R20	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R21	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R22	0698-3488	2	R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R23	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R24	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R25	0698-3430		R:FXD MET FLM 21.5 OHM 1% 1/8W	28480	0698-3430
A102R26			R:FXD(SELECTED FROM ONE OF THE FOLLOWING)		
	0698-4411	2	R:FXD FLM 140 OHM 1% 1/8W	28480	0698-4411
	0757-0402		R:FXD MET FLM 110 OHM 1% 1/8W	28480	0757-0402
	0757-0284		R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
	0757-0404	2	R:FXD FLM 130 OHM 1% 1/8W	28480	0757-0404
A102R27	0757-0276		R:FXD MET FLM 61.9 OHM 1% 1/8W	28480	0757-0276
A102R28	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A102R29	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A102R30	0698-3430		R:FXD MET FLM 21.5 OHM 1% 1/8W	28480	0698-3430
A102R31	0757-0401	1	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A102R32			R:FXD(SELECTED FROM ONE OF THE FOLLOWING)		
	0698-4411		R:FXD FLM 140 OHM 1% 1/8W	28480	0698-4411
	0757-0402		R:FXD MET FLM 110 OHM 1% 1/8W	28480	0757-0402
	0757-0284		R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
	0757-0401	17	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
	0757-0404		R:FXD FLM 130 OHM 1% 1/8W	28480	0757-0404
A102R33	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A102R34	0757-0276		R:FXD MET FLM 61.9 OHM 1% 1/8W	28480	0757-0276
A102R35 THRU A102R51			R:FXD(SELECTED FROM ONE OF THE FOLLOWING)		
	0757-0200	17	R:FXD MET FLM 5.62K OHM 1% 1/8W	28480	0757-0200
	0757-0290		R:FXD MET FLM 6.19K OHM 1% 1/8W	28480	0757-0290
	0757-0438		R:FXD MET FLM 5.11K OHM 1% 1/8W	28480	0757-0438
	0757-0439		R:FXD MET FLM 6.81K OHM 1% 1/8W	28480	0757-0439
	0757-0440		R:FXD MET FLM 7.50K OHM 1% 1/8W	28480	0757-0440
	0757-0441		R:FXD MET FLM 8.25K OHM 1% 1/8W	28480	0757-0441
A102R52	0698-7310	68	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R53	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R54	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R55	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R56	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R57	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R58	0698-7310	68	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R59	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R60	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R61	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R62	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R63	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R64	0698-7310	68	R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R65	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R66	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R67	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R68	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R69	0698-3488	68	R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R70	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R71	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R72	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R73	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310

Table 4-17. A102, A103, A110, A111 Core Stack/Sense Amplifier Card (8K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A102R74	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R75	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R76	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R77	0698-7310		R:FXD FLM 1.65K OHM 0.25% 1/8W	28480	0698-7310
A102R78	0698-3488		R:FXD MET FLM 442 OHM 1% 1/8W	28480	0698-3488
A102R79	2100-2061	1	R:VAR FLM 200 OHM 10% LIN 1/2W	28480	2100-2061
A102R80	1810-0045	5	RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R81	1810-0045		RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R82	1810-0045		RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R83	1810-0045		RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R84	1810-0045		RESISTOR PACK:7 RES. 200 OHM 5% 0.15W	28480	1810-0045
A102R85	0698-3132	1	R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A102U1	1858-0001	17	TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U2	0960-0111	17	BALUN MODULE	28480	0960-0111
A102U3	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U4	0960-0111		BALUN MODULE	28480	0960-0111
A102U5	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U6	0960-0111		BALUN MODULE	28480	0960-0111
A102U7	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U8	0960-0111		BALUN MODULE	28480	0960-0111
A102U9	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U10	0960-0111		BALUN MODULE	28480	0960-0111
A102U11	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U12	0960-0111		BALUN MODULE	28480	0960-0111
A102U13	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U14	0960-0111		BALUN MODULE	28480	0960-0111
A102U15	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U16	0960-0111		BALUN MODULE	28480	0960-0111
A102U17	1820-0956	1	IC:CTL QUAL 2-INPT AND BUFFER	07263	U6A995679X
A102U18	0960-0111		BALUN MODULE	28480	0960-0111
A102U19	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U20	0960-0111		BALUN MODULE	28480	0960-0111
A102U21	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U22	0960-0111		BALUN MODULE	28480	0960-0111
A102U23	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U24	0960-0111		BALUN MODULE	28480	0960-0111
A102U25	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U26	0960-0111		BALUN MODULE	28480	0960-0111
A102U27	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U28	0960-0111		BALUN MODULE	28480	0960-0111
A102U29	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U30	0960-0111		BALUN MODULE	28480	0960-0111
A102U31	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U32	0960-0111		BALUN MODULE	28480	0960-0111
A102U33	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U34	0960-0111		BALUN MODULE	28480	0960-0111
A102U35	1858-0001		TSTR ARRAY:DUAL DIFF AMPL W/CONST CUR	02735	80381
A102U36 THRU A102U51	5087-1013	16	DIODE MODULE	28480	5087-1013
A102W1	8159-0005	1	JUMPER WIRE	28480	8159-0005
A103			SAME AS A102, USE PREFIX A103		
A110			SAME AS A102, USE PREFIX A110		
A111			SAME AS A102, USE PREFIX A111		

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A102 (8K)

95	A102-25	A105-26*			
96	A102-27	A105-19*			
97	A102-29	A105-25*			
98	A102-31	A105-24*			
99	A102-33	A105-53*			
100	A102-35	A105-60*			
101	A102-37	A105-59*			
102	A102-41	A105-58*			
103	A102-43	A105-52*			
104	A102-45	A105-44*			
105	A102-49	A105-51*			
106	A102-51	A105-45*			
107	A102-53	A105-76*			
108	A102-55	A105-73*			
109	A102-57	A105-74*			
110	A102-59	A105-75*			
111	A102-61	A105-17*			
112	A102-26	A105-20*			
113	A102-28	A105-23*			
114	A102-30	A105-22*			
115	A102-32	A105-21*			
116	A102-34	A105-57*			
117	A102-36	A105-54*			
118	A102-38	A105-56*			
119	A102-42	A105-55*			
120	A102-44	A105-78*			
121	A102-46	A105-79*			
122	A102-50	A105-81*			
123	A102-52	A105-80*			
124	A102-54	A105-84*			
125	A102-56	A105-77*			
126	A102-58	A105-83*			
127	A102-60	A105-82*			
128	A102-62	A105-18*			
262	A102-3	A107-55*			
263	A102-4	A107-56*			
272	A102-5*	A103-5*	A107-80	A110-5*	A111-5*
290	A102-6	A103-6	A107-83*	A110-6	A111-6
378	A102-15*	A103-15*	A107-13	A110-15*	A111-15*
379	A102-18*	A103-18*	A107-11	A110-18*	A111-18*
380	A102-17*	A103-17*	A107-7	A110-17*	A111-17*
381	A102-20*	A103-20*	A107-9	A110-20*	A111-20*
382	A102-19*	A103-19*	A107-17	A110-19*	A111-19*
383	A102-22*	A103-22*	A107-15	A110-22*	A111-22*
384	A102-21*	A103-21*	A107-19	A110-21*	A111-21*
385	A102-63*	A103-63*	A107-21	A110-63*	A111-63*
386	A102-64*	A103-64*	A107-31	A110-64*	A111-64*
387	A102-65*	A103-65*	A107-33	A110-65*	A111-65*
388	A102-66*	A103-66*	A107-35	A110-66*	A111-66*
389	A102-67*	A103-67*	A107-37	A110-67*	A111-67*
390	A102-68*	A103-68*	A107-41	A110-68*	A111-68*
391	A102-69*	A103-69*	A107-43	A110-69*	A111-69*
392	A102-70*	A103-70*	A107-45	A110-70*	A111-70*
393	A102-71*	A103-71*	A107-49	A110-71*	A111-71*
394	A102-72*	A103-72*	A107-71	A110-72*	A111-72*




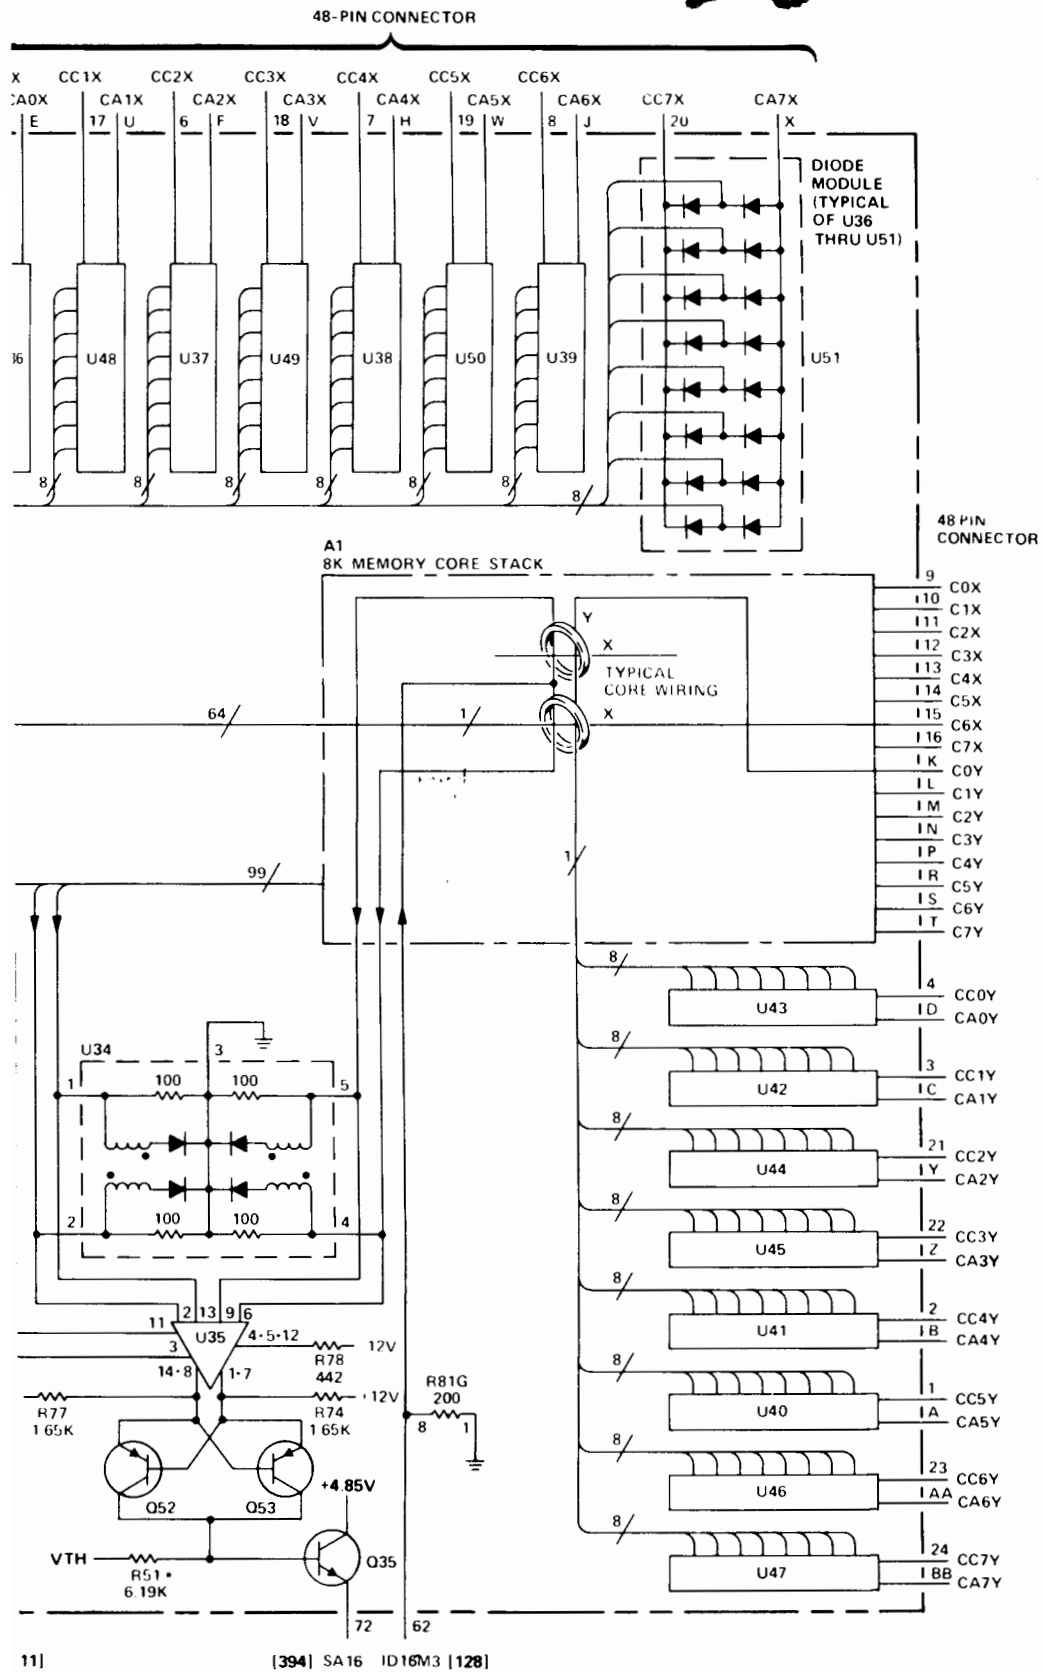


Figure 4-18. A102 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams

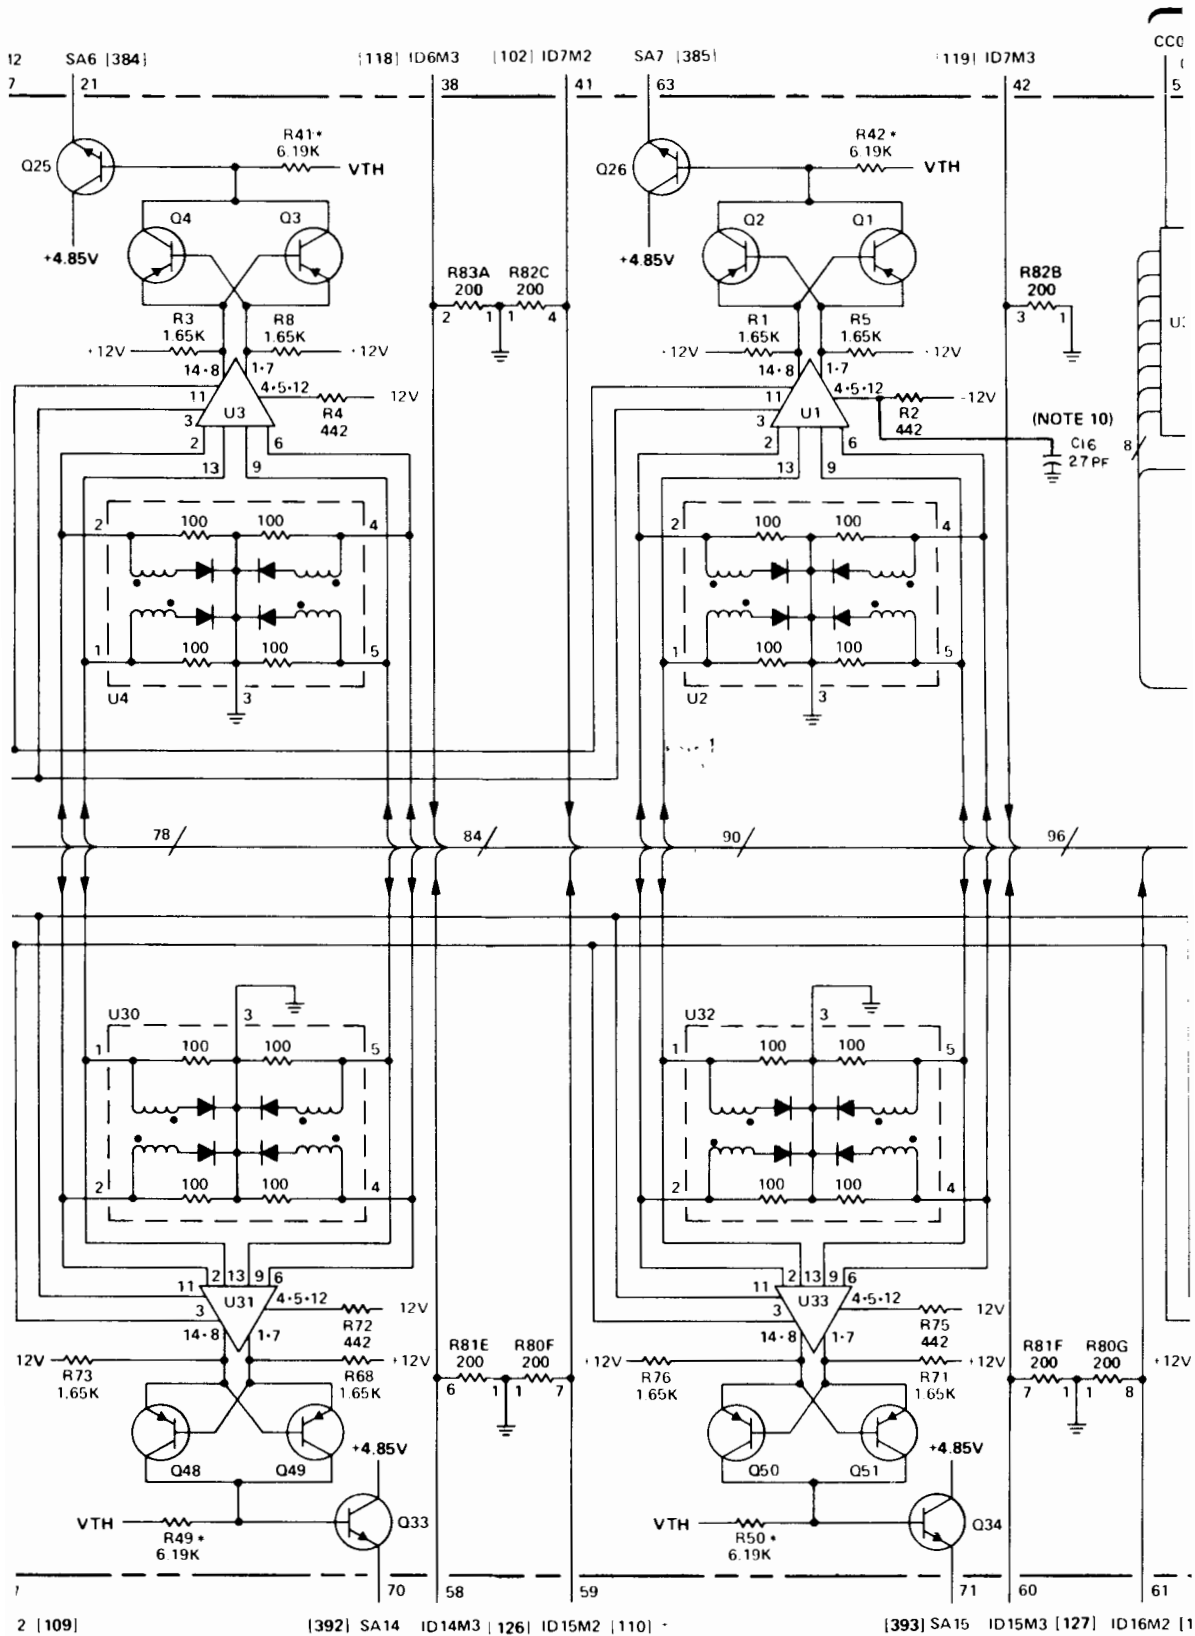

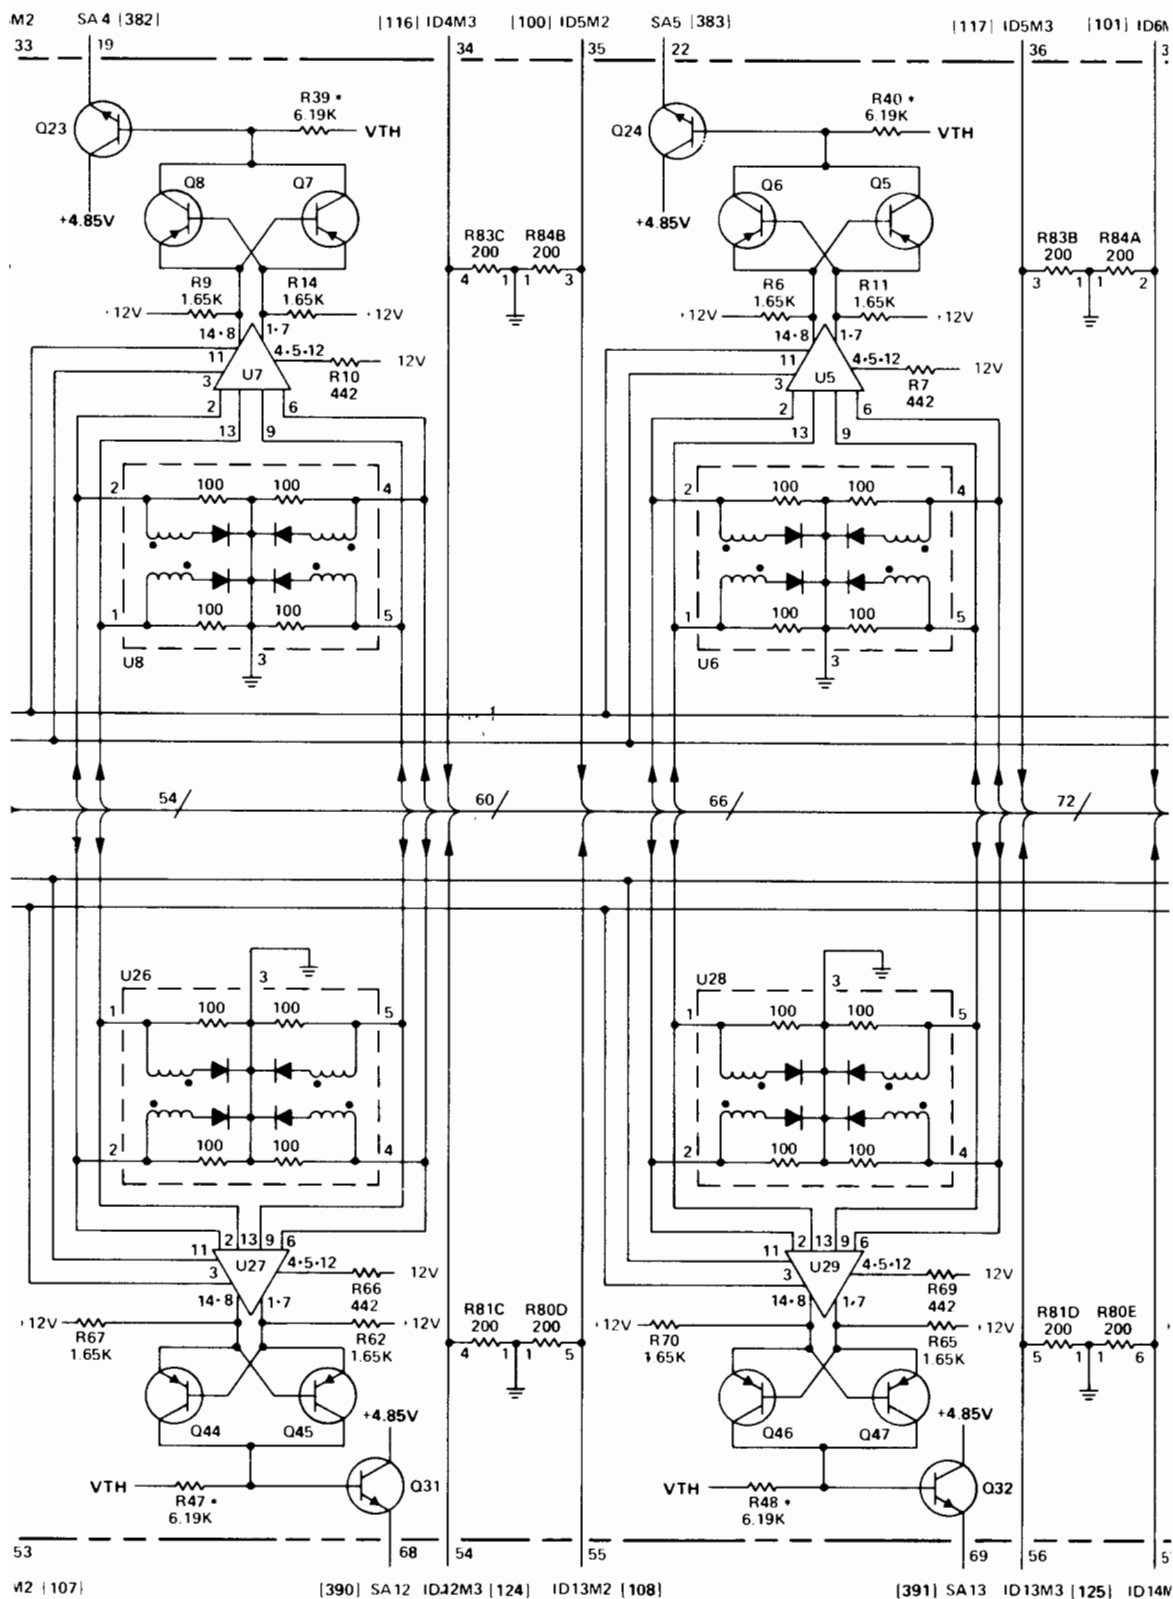


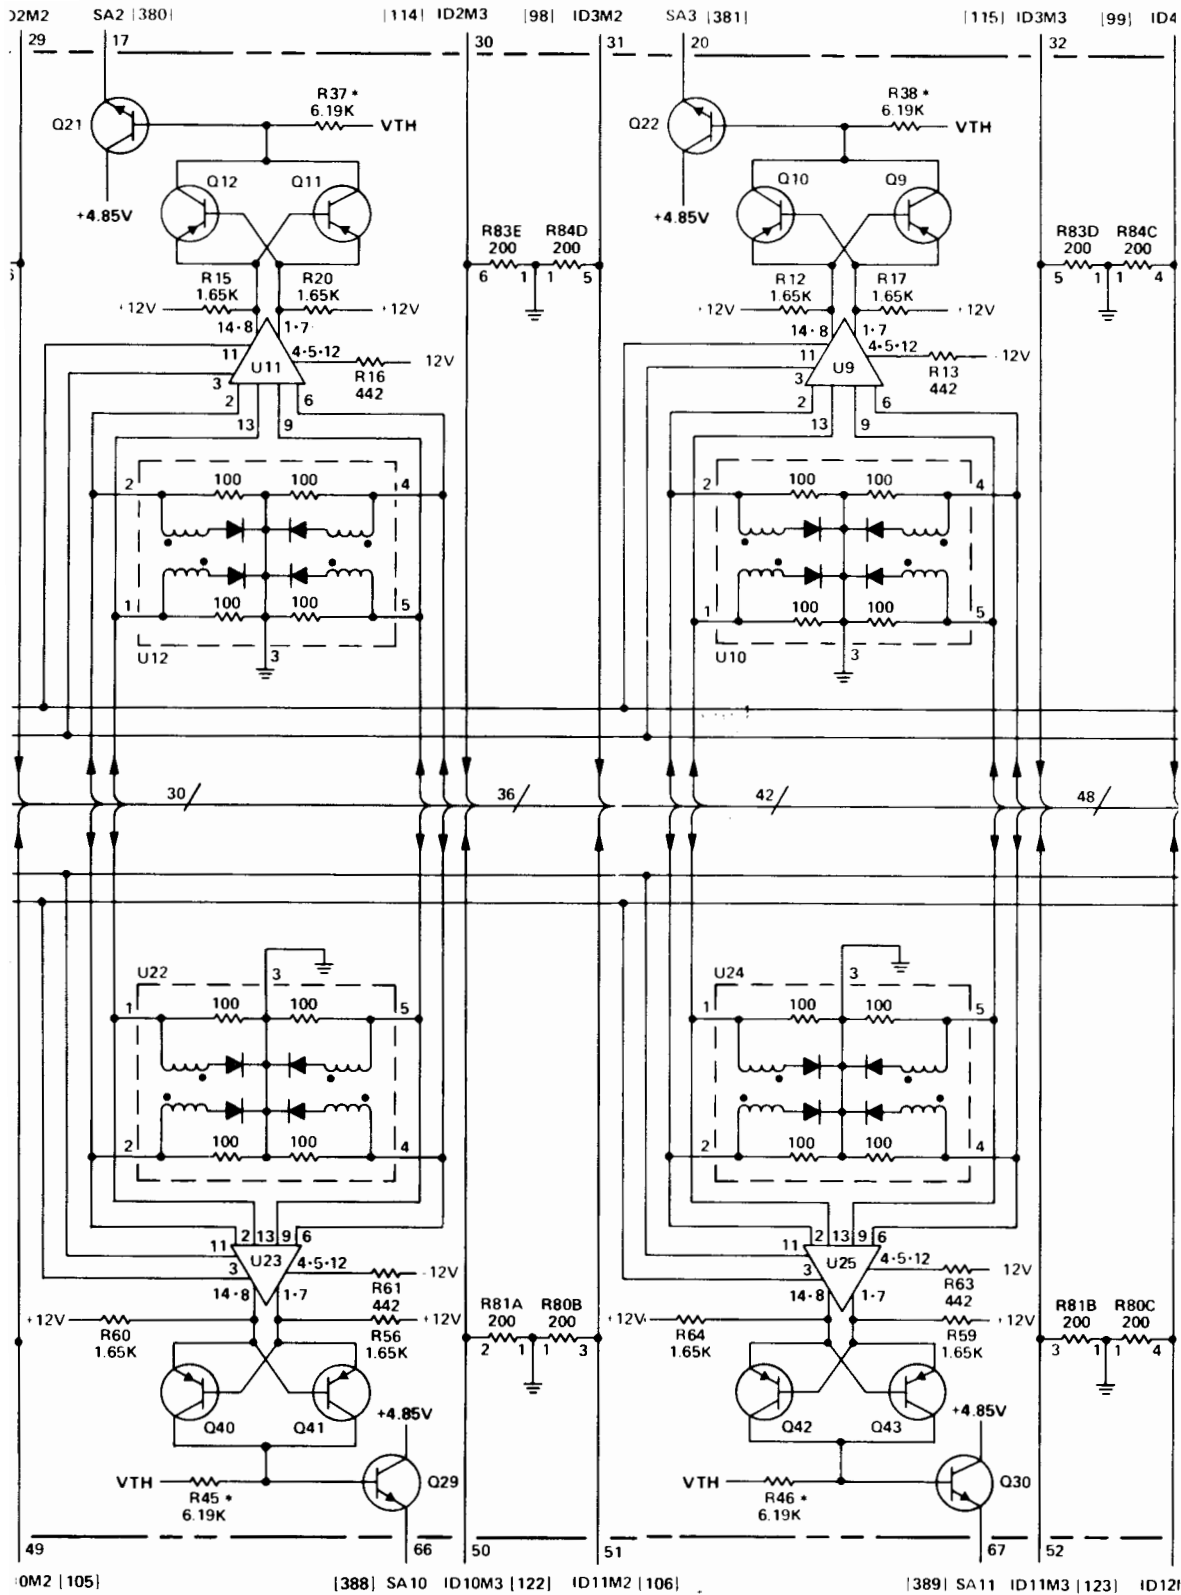


0M2 | 105 |

[388] SA10 ID10M3 | 122 | ID11M2 | 106 |

[389] SA11 ID11M3 | 123 | ID12M3 | 107 |

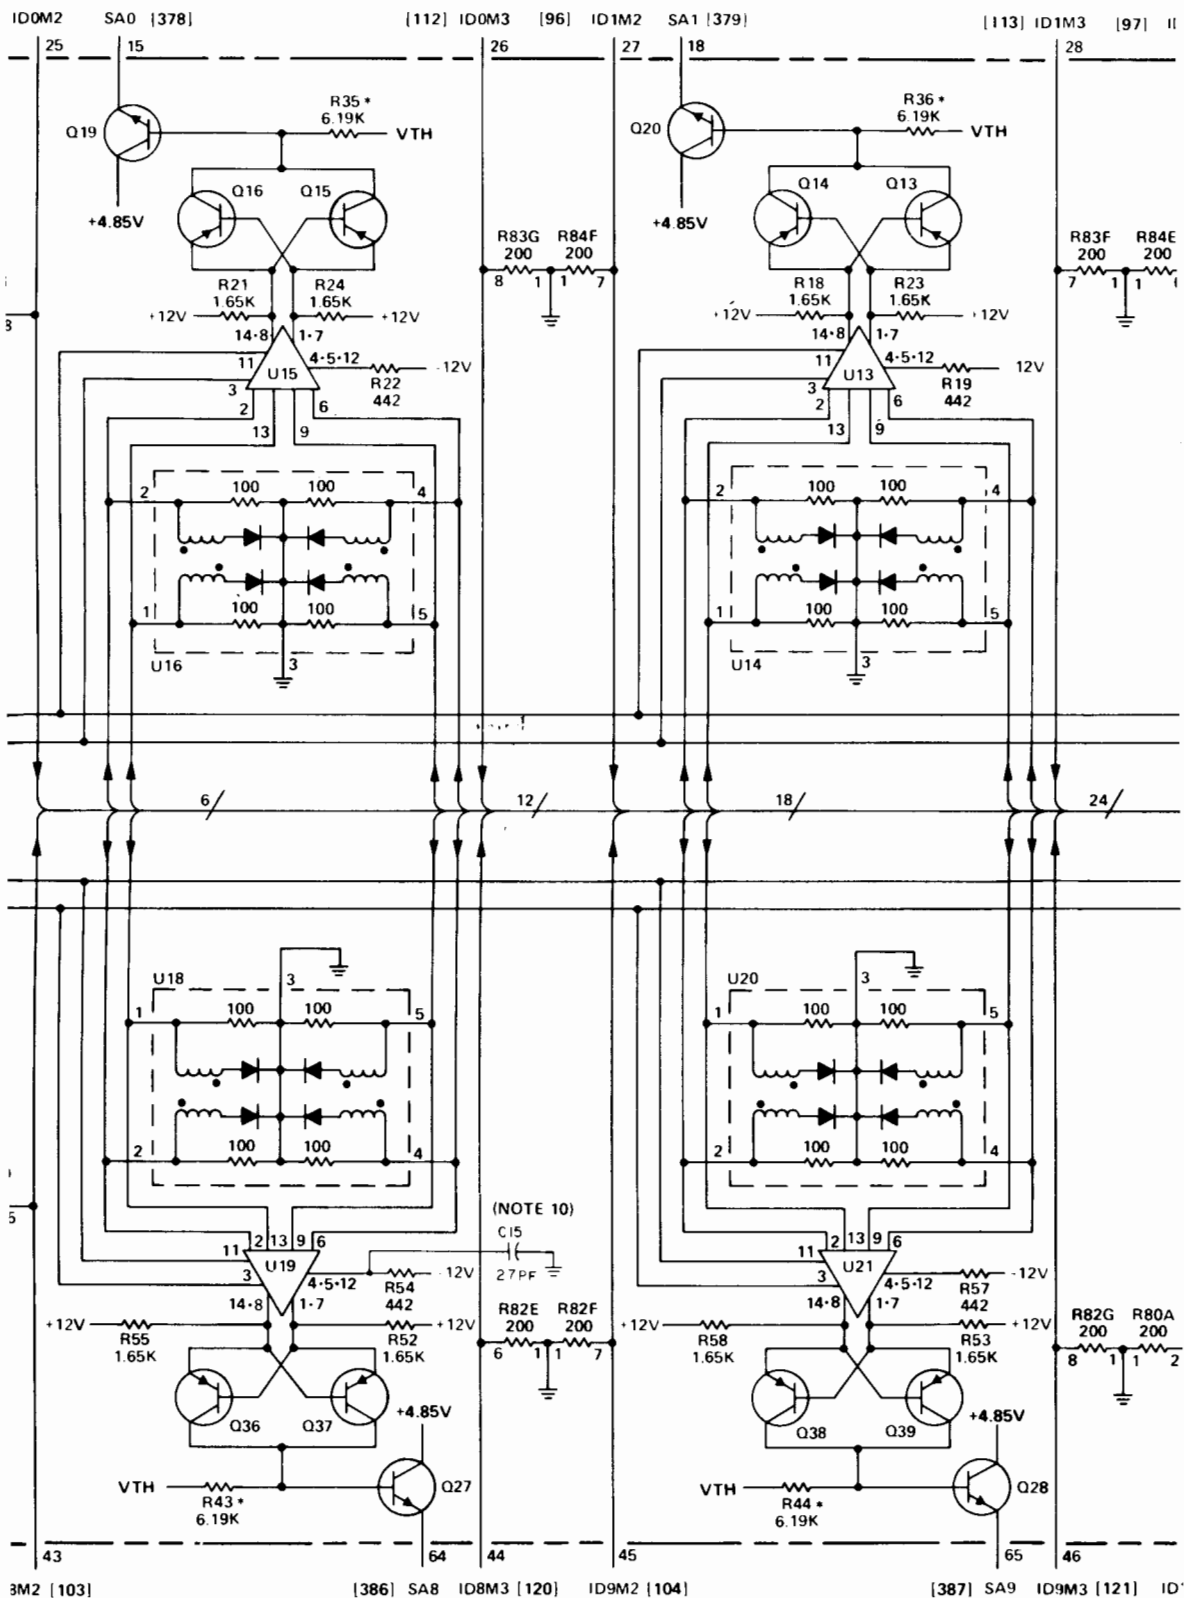

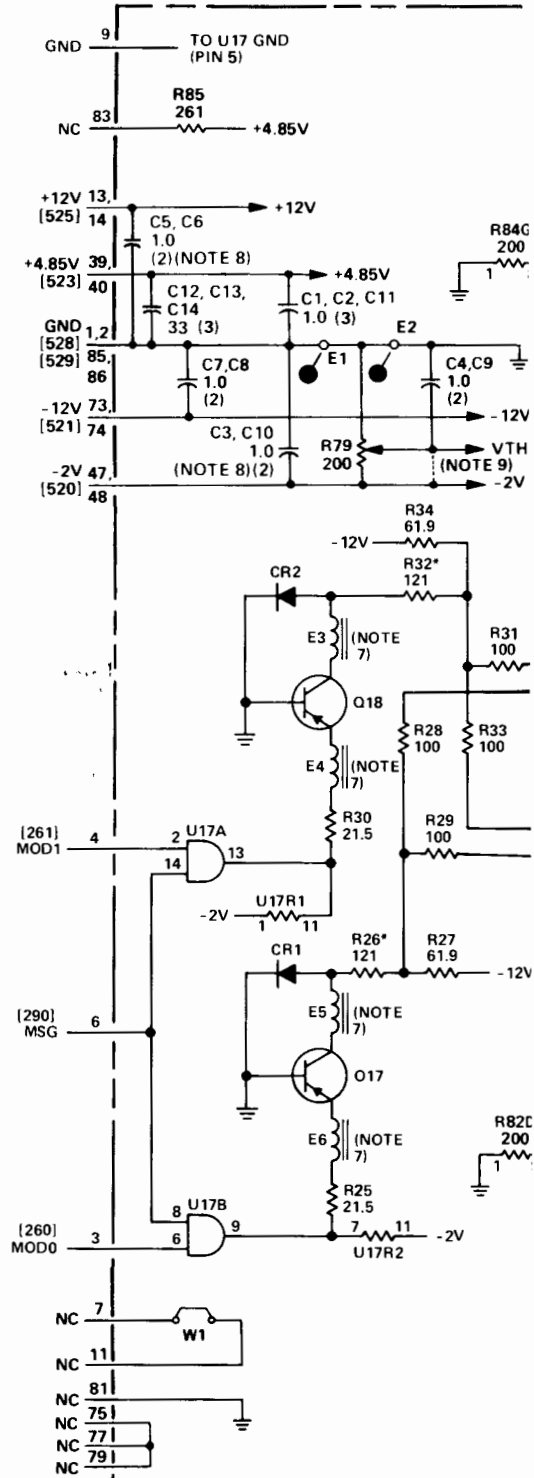


CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT
PRESS ON THE TOP OR BOTTOM OF THE STACK.

NOTES:

1. THIS CARD MUST NOT BE REPAIRED IN THE FIELD.
FIELD REMOVAL OR REPLACEMENT OF ANY COMPONENT VOIDS THE WARRANTY ON THE CARD.
2. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
3. ALL PIN NUMBERS REFER TO 86 PIN CONNECTOR UNLESS OTHERWISE INDICATED.
4. NUMERALS WITHIN BRACKETS ; ! ARE WIRING LIST REFERENCE NUMBERS.
5. DIODES ARE MOUNTED WITH CATHODE END AWAY FROM CARD.
6. * INDICATES SELECTED RESISTOR. R26, R32 ARE SELECTED FROM 100, 110, 121, 130, 140, OR 150. R35 THRU R51 ARE SELECTED FROM 5.1K, 5.62K, 6.19K, 6.81K, 7.50K OR 8.25K.
7. E3 THRU E6 USED ONLY ON CARD 5060-8324, REV. 1136.
8. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
9. R79 IS NOT USED ON ALL CARDS. WHEN R79 IS NOT USED, VTH IS CONNECTED TO 2V AS SHOWN BY DOTTED LINE.
10. C15 AND C16 FIRST USED ON CARD REV. 1301.

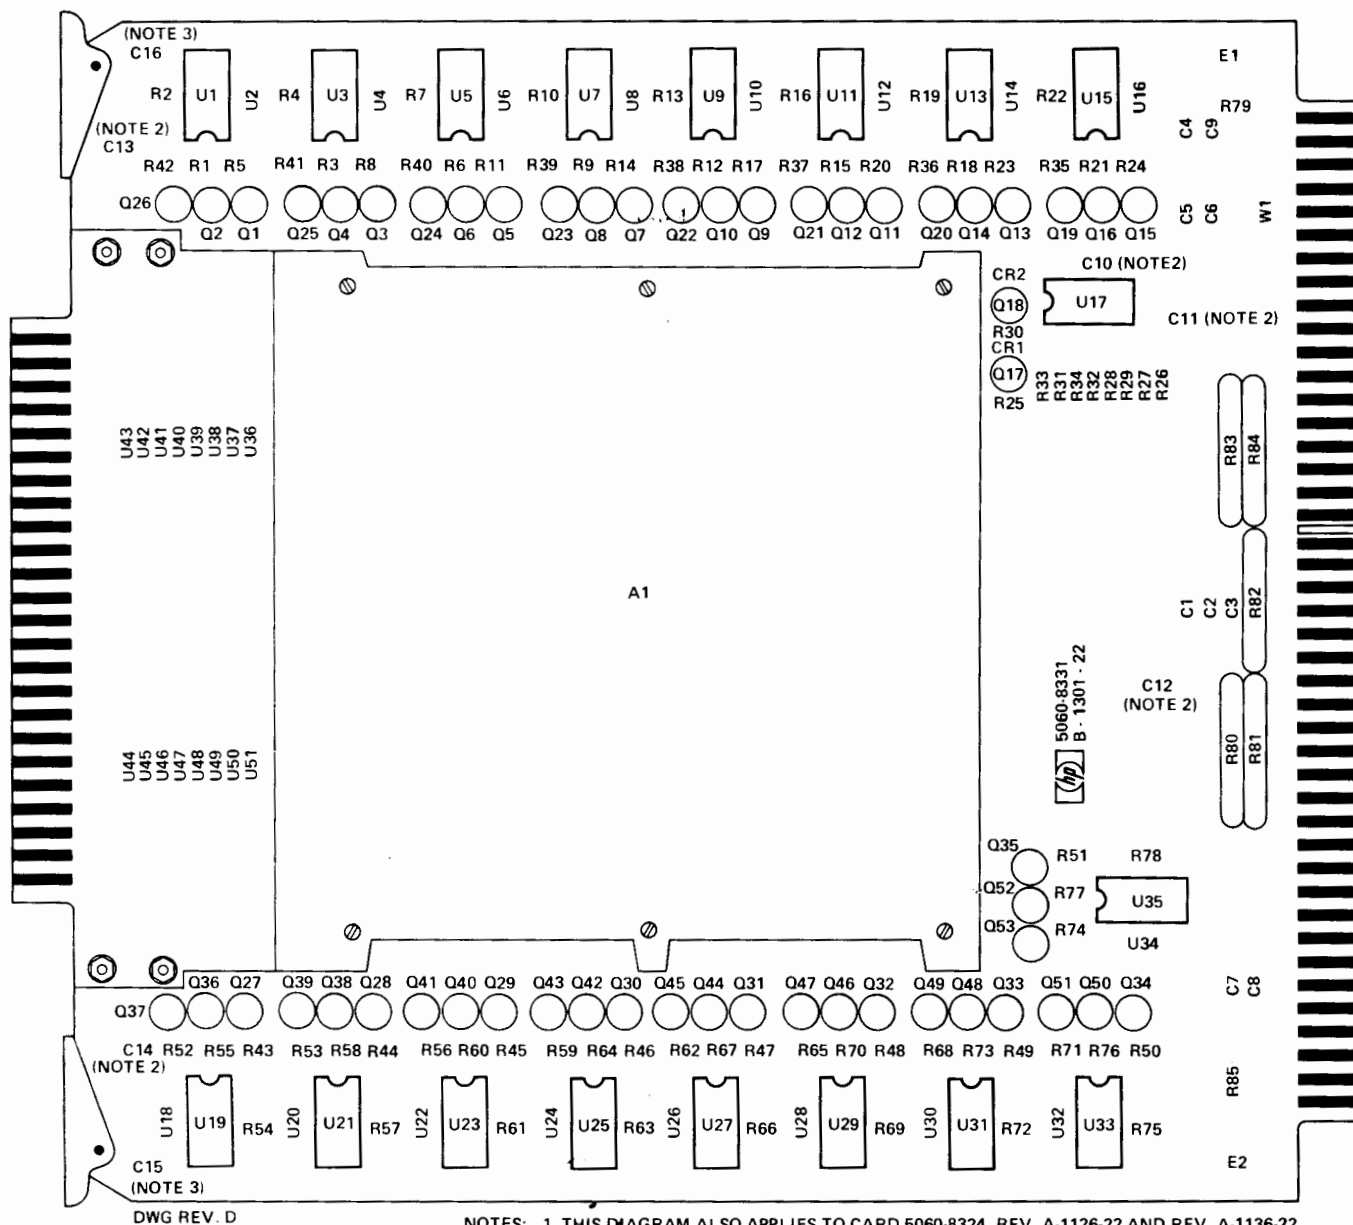

See table 4-17 for replaceable parts.





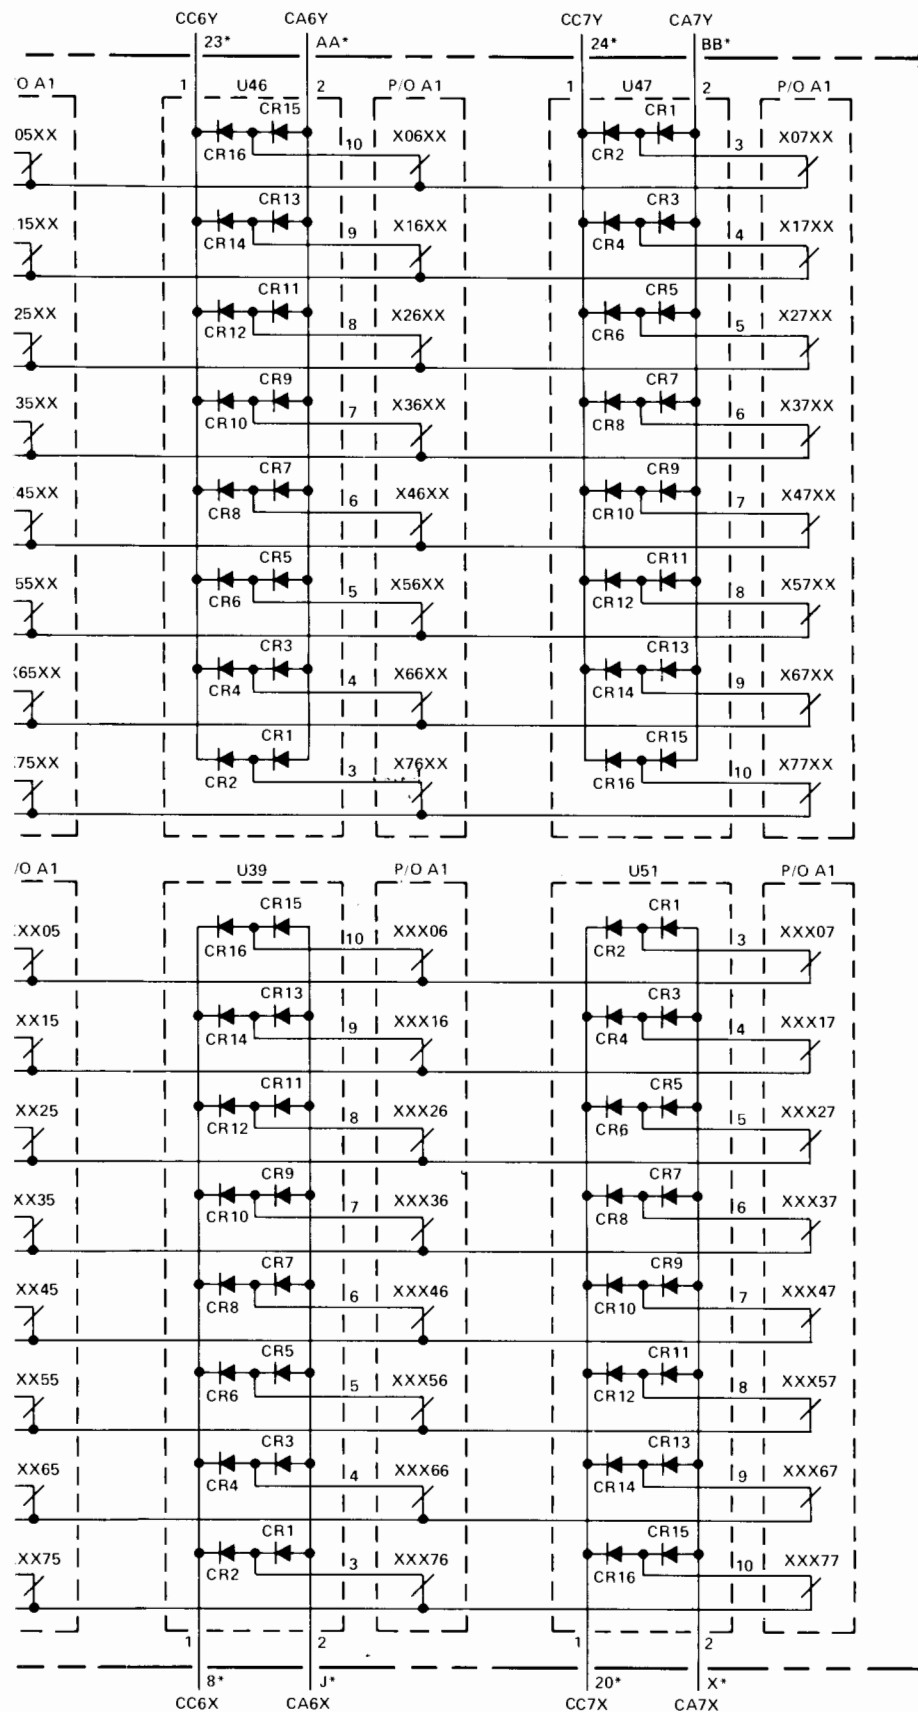


Figure 4-19. A103 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams (Sheet 1 of 3)

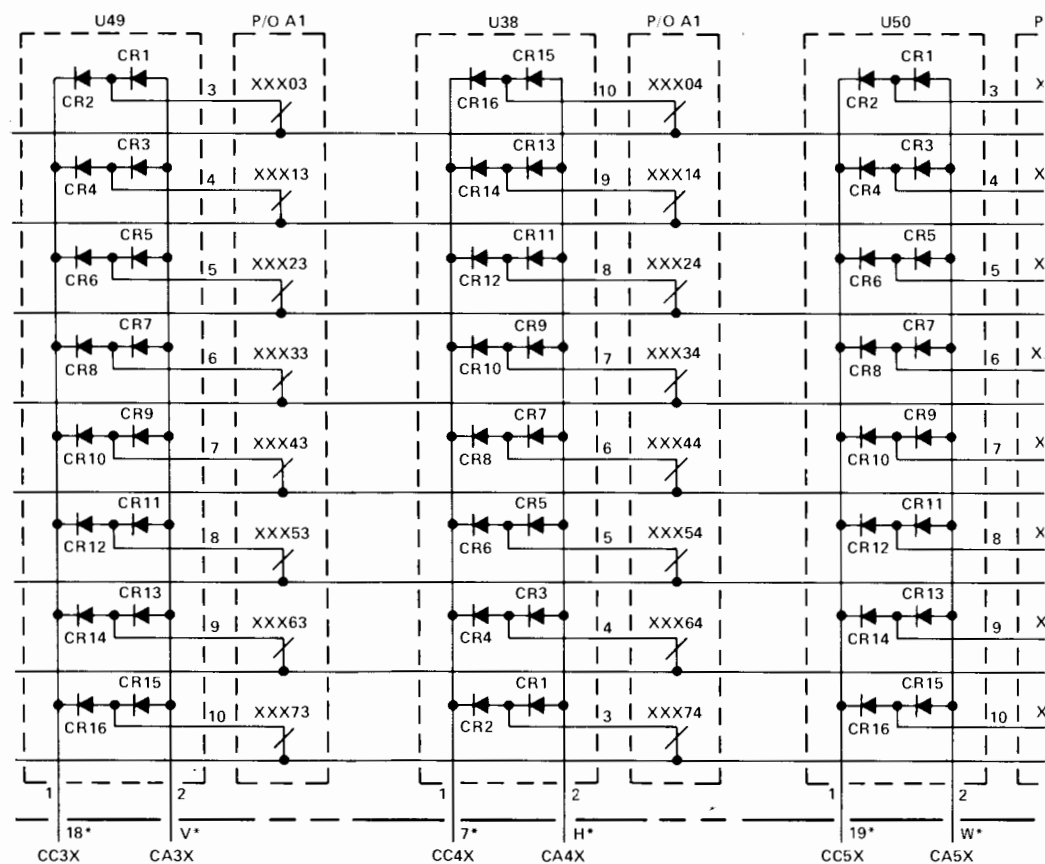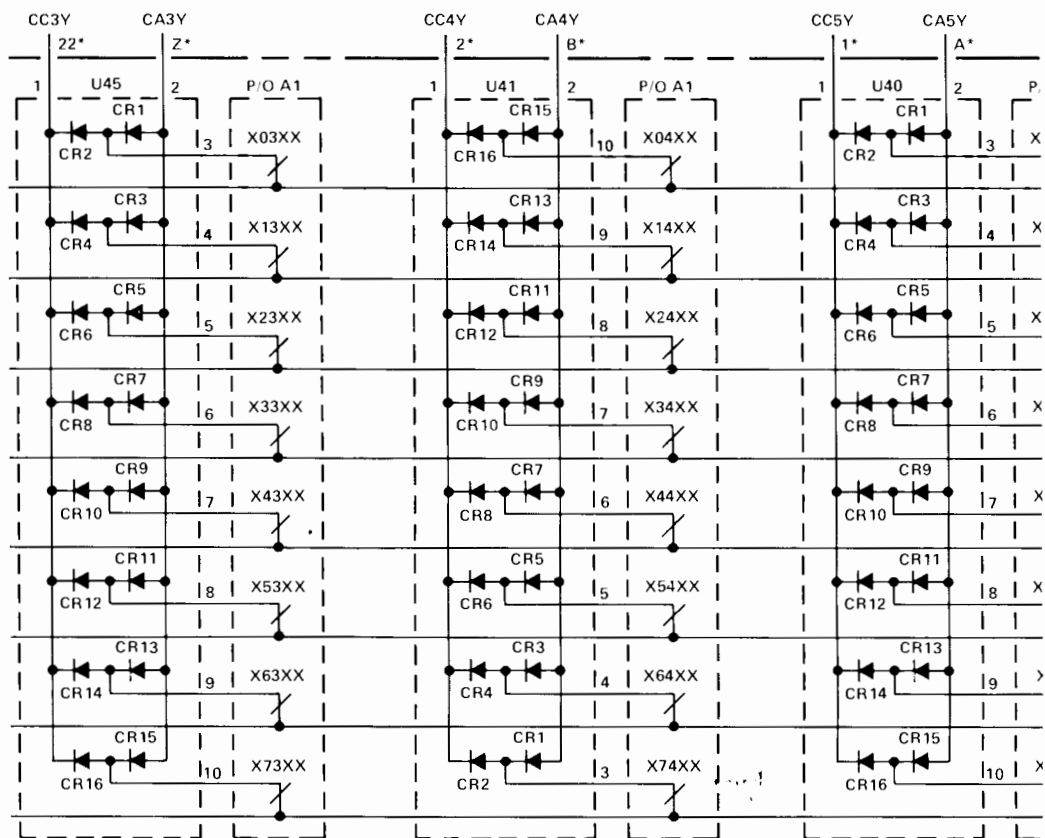

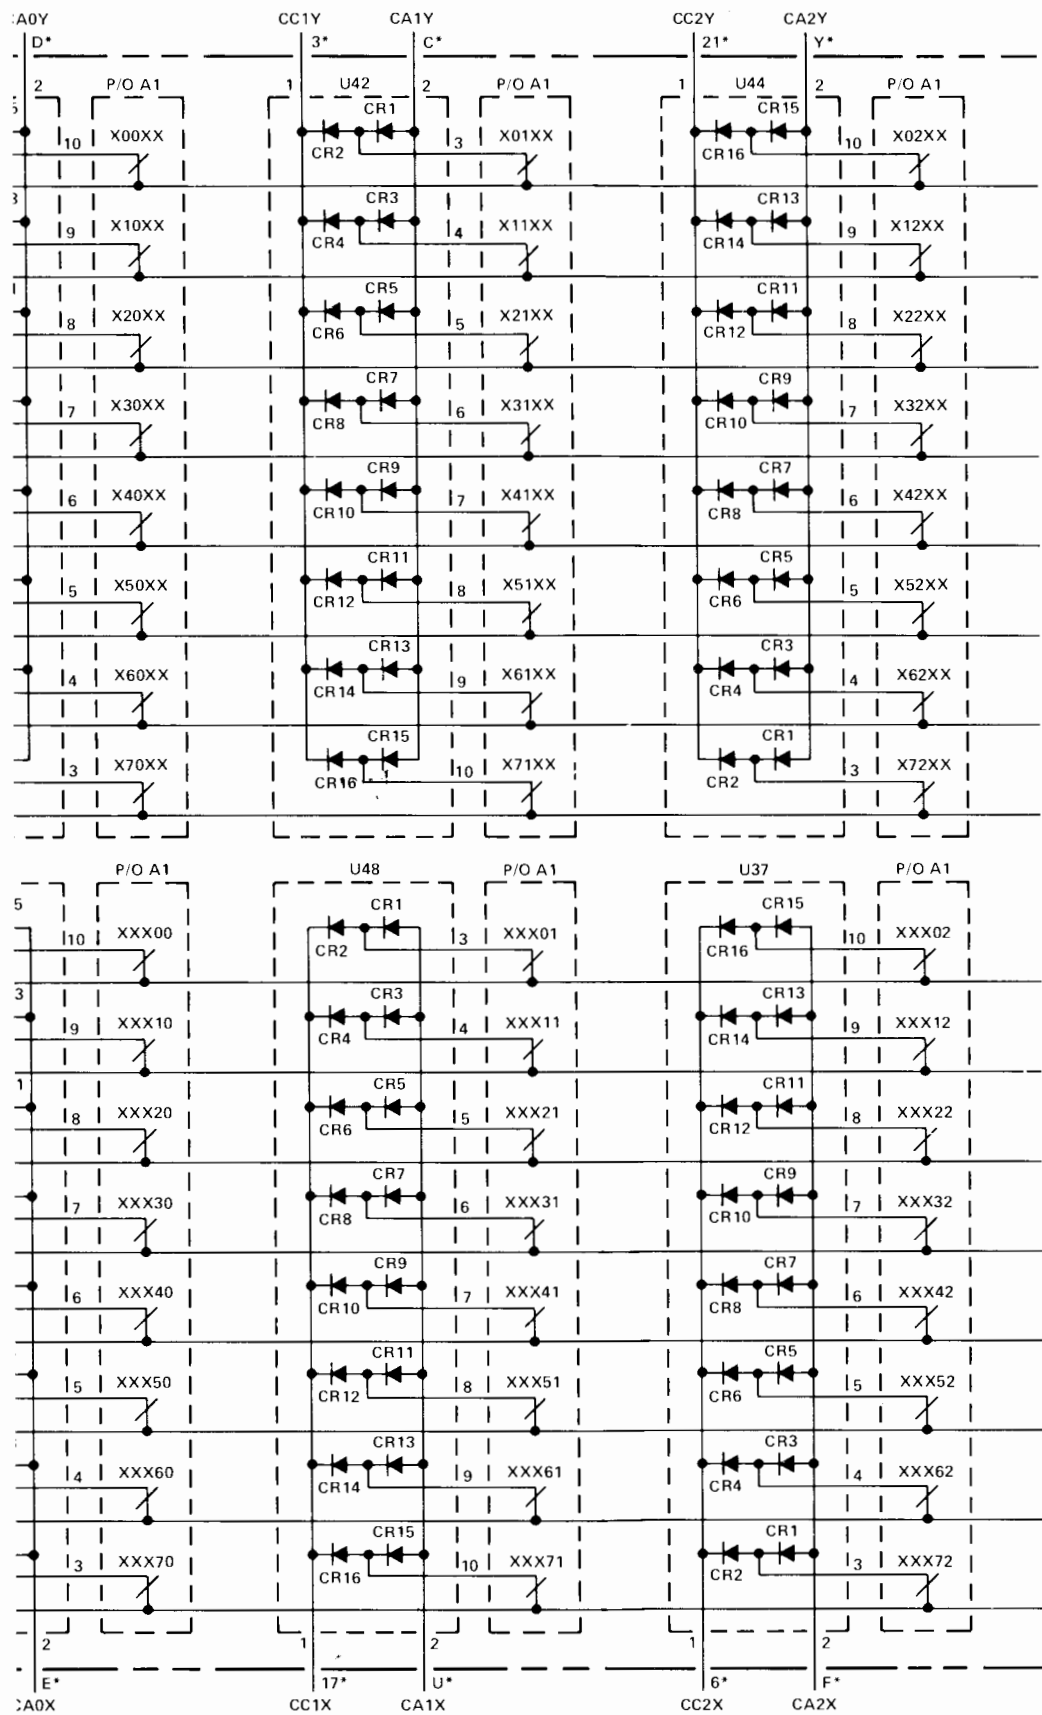

CORE STACK SENSE AMPLIFIER CARD
(02100-60040, REV. 1139, 1148)

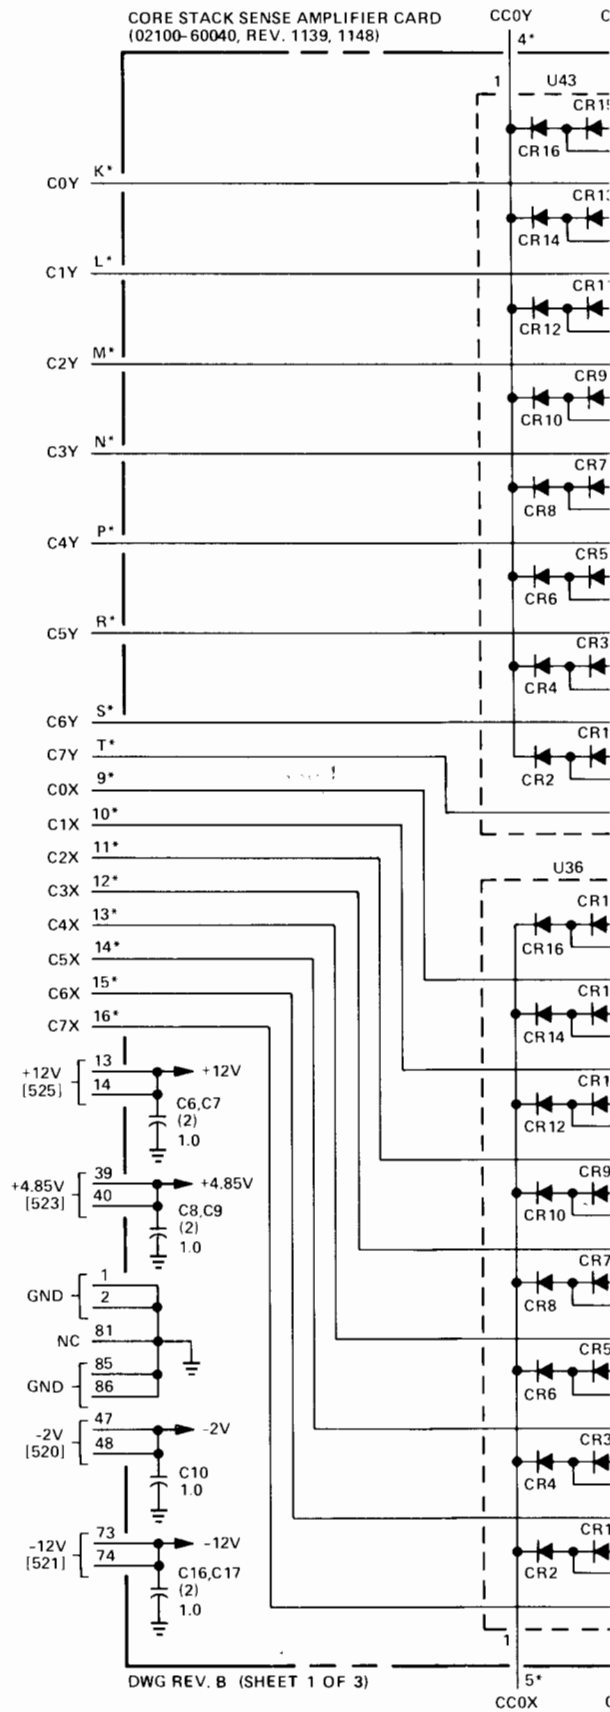


CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT
PRESS ON THE TOP OR BOTTOM OF THE STACK.

NOTES:

1. THIS CARD MUST NOT BE REPAIRED IN THE FIELD. FIELD
REMOVAL OR REPLACEMENT OF ANY COMPONENT VOIDS
THE WARRANTY ON THE CARD.
2. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE
VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
3. * INDICATES PIN NUMBERS OF 48-PIN CONNECTOR. ALL
OTHER PIN NUMBERS ARE FOR 86-PIN CONNECTOR.
4. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST
REFERENCE NUMBERS.
5. EACH FERRITE CORE SHOWN REPRESENTS 4,096 CORES.
6. † INDICATES SELECTED RESISTOR. R2, R5, AND R8
SELECTED FROM 5.11K, 5.62K, 6.19K, 6.81K, 7.50K,
OR 8.25K. R11, R14, R17, R20, R23, R53, R55, R58, R61,
R64, R67, R70, R73, R76 SELECTED FROM 5.62K OR
6.19K. NORMAL VALUES SHOWN.
7. C19 THRU C22 NOT USED ON CARD REV. 1139.

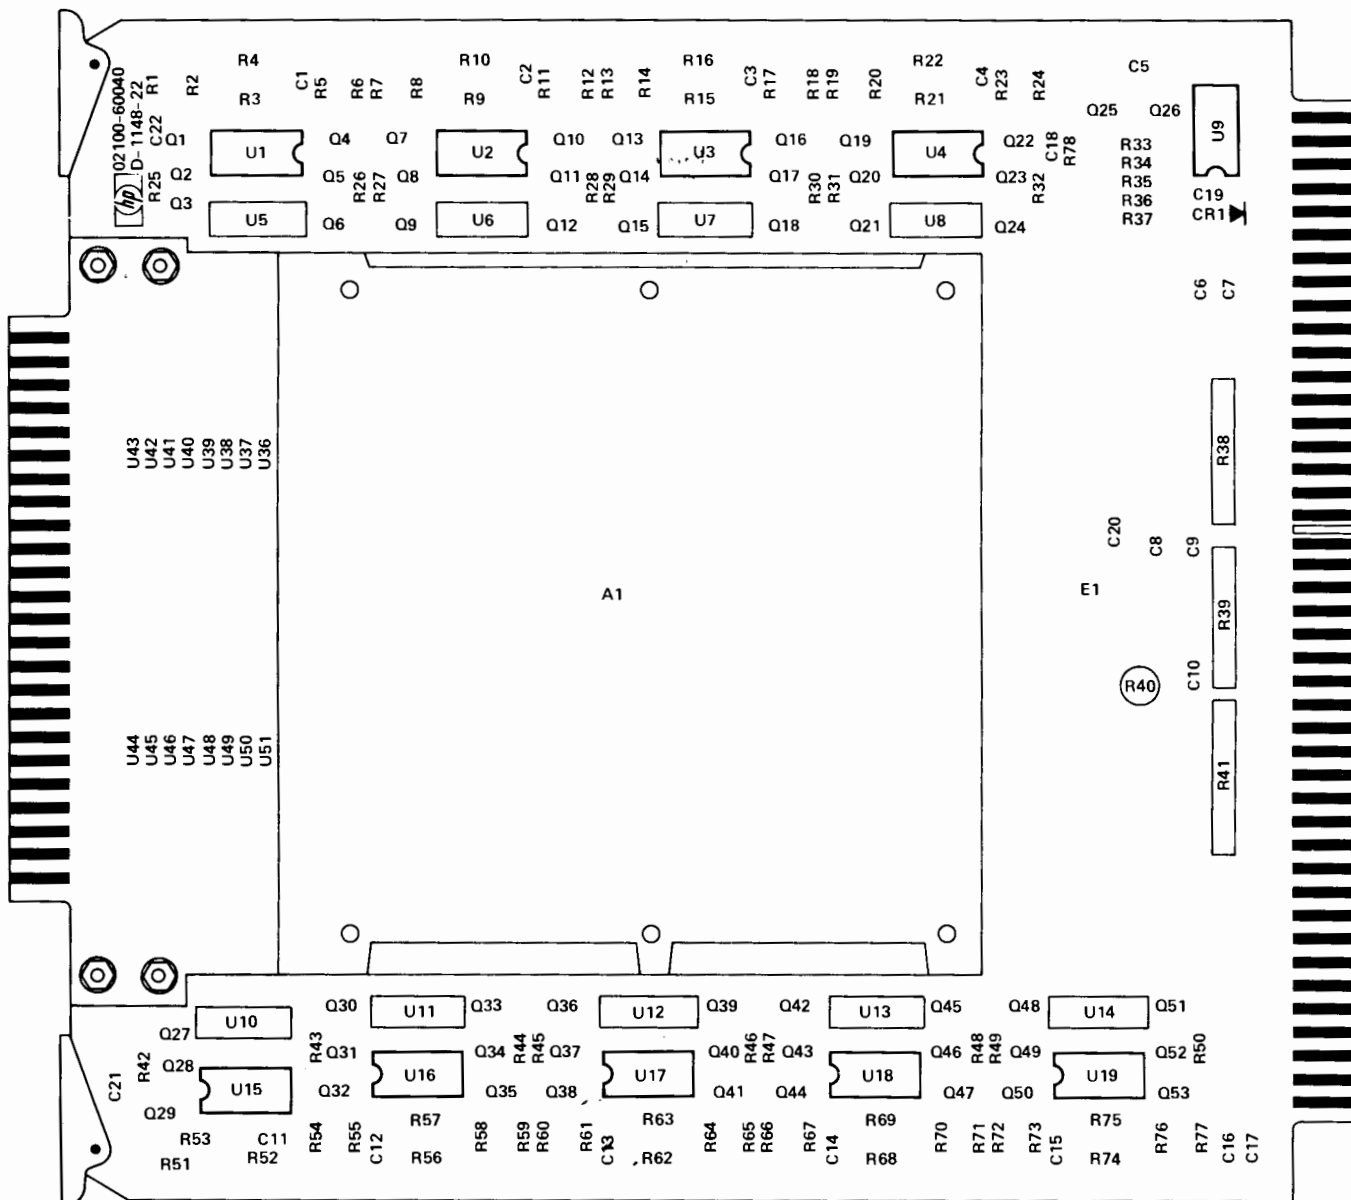

DWG REV. C

NOTE: C19 THRU C22 NOT USED ON CARD REV. C-1139-22.

See table 4-16 for replaceable parts.



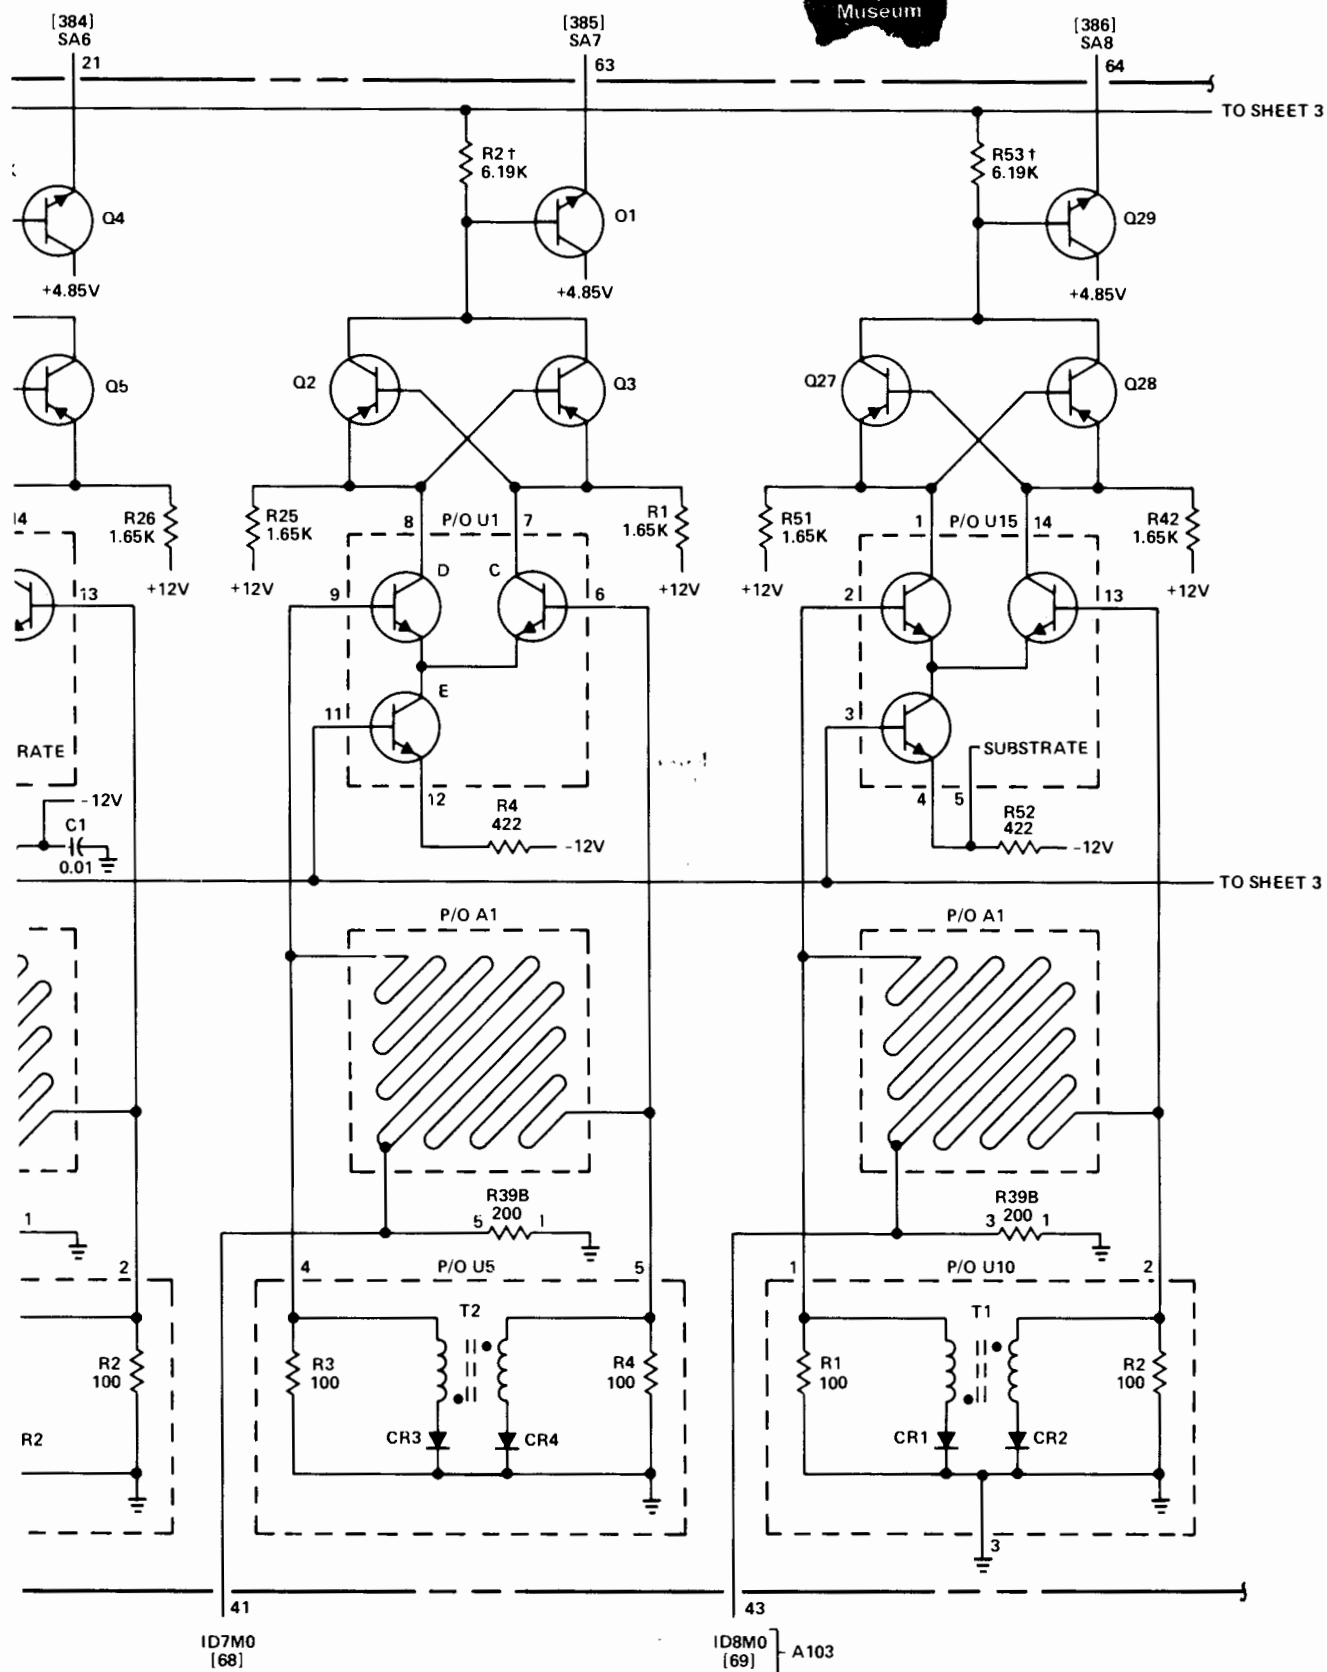
Computer
Museum

Figure 4-19. A103 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams (Sheet 2 of 3)

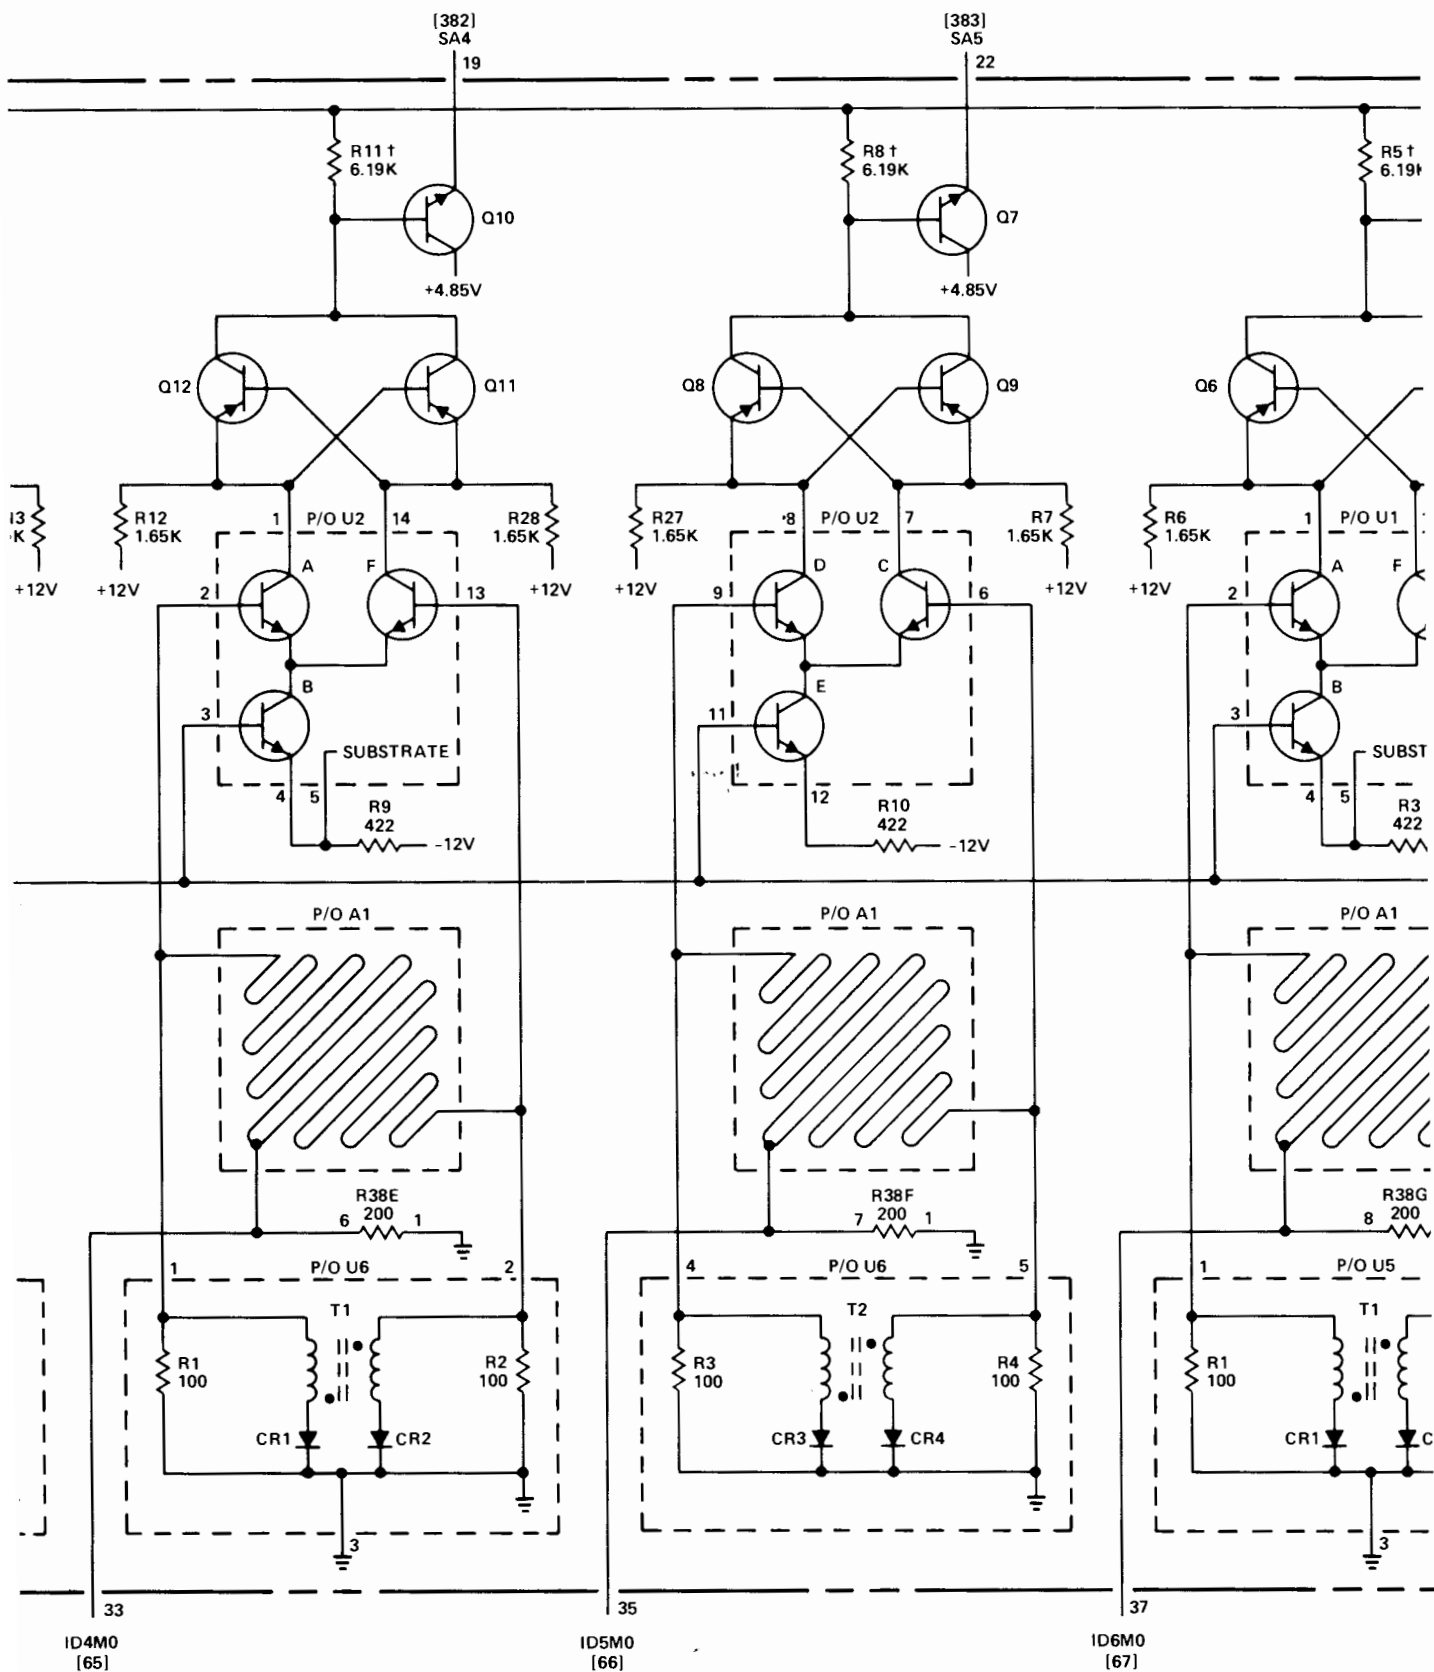

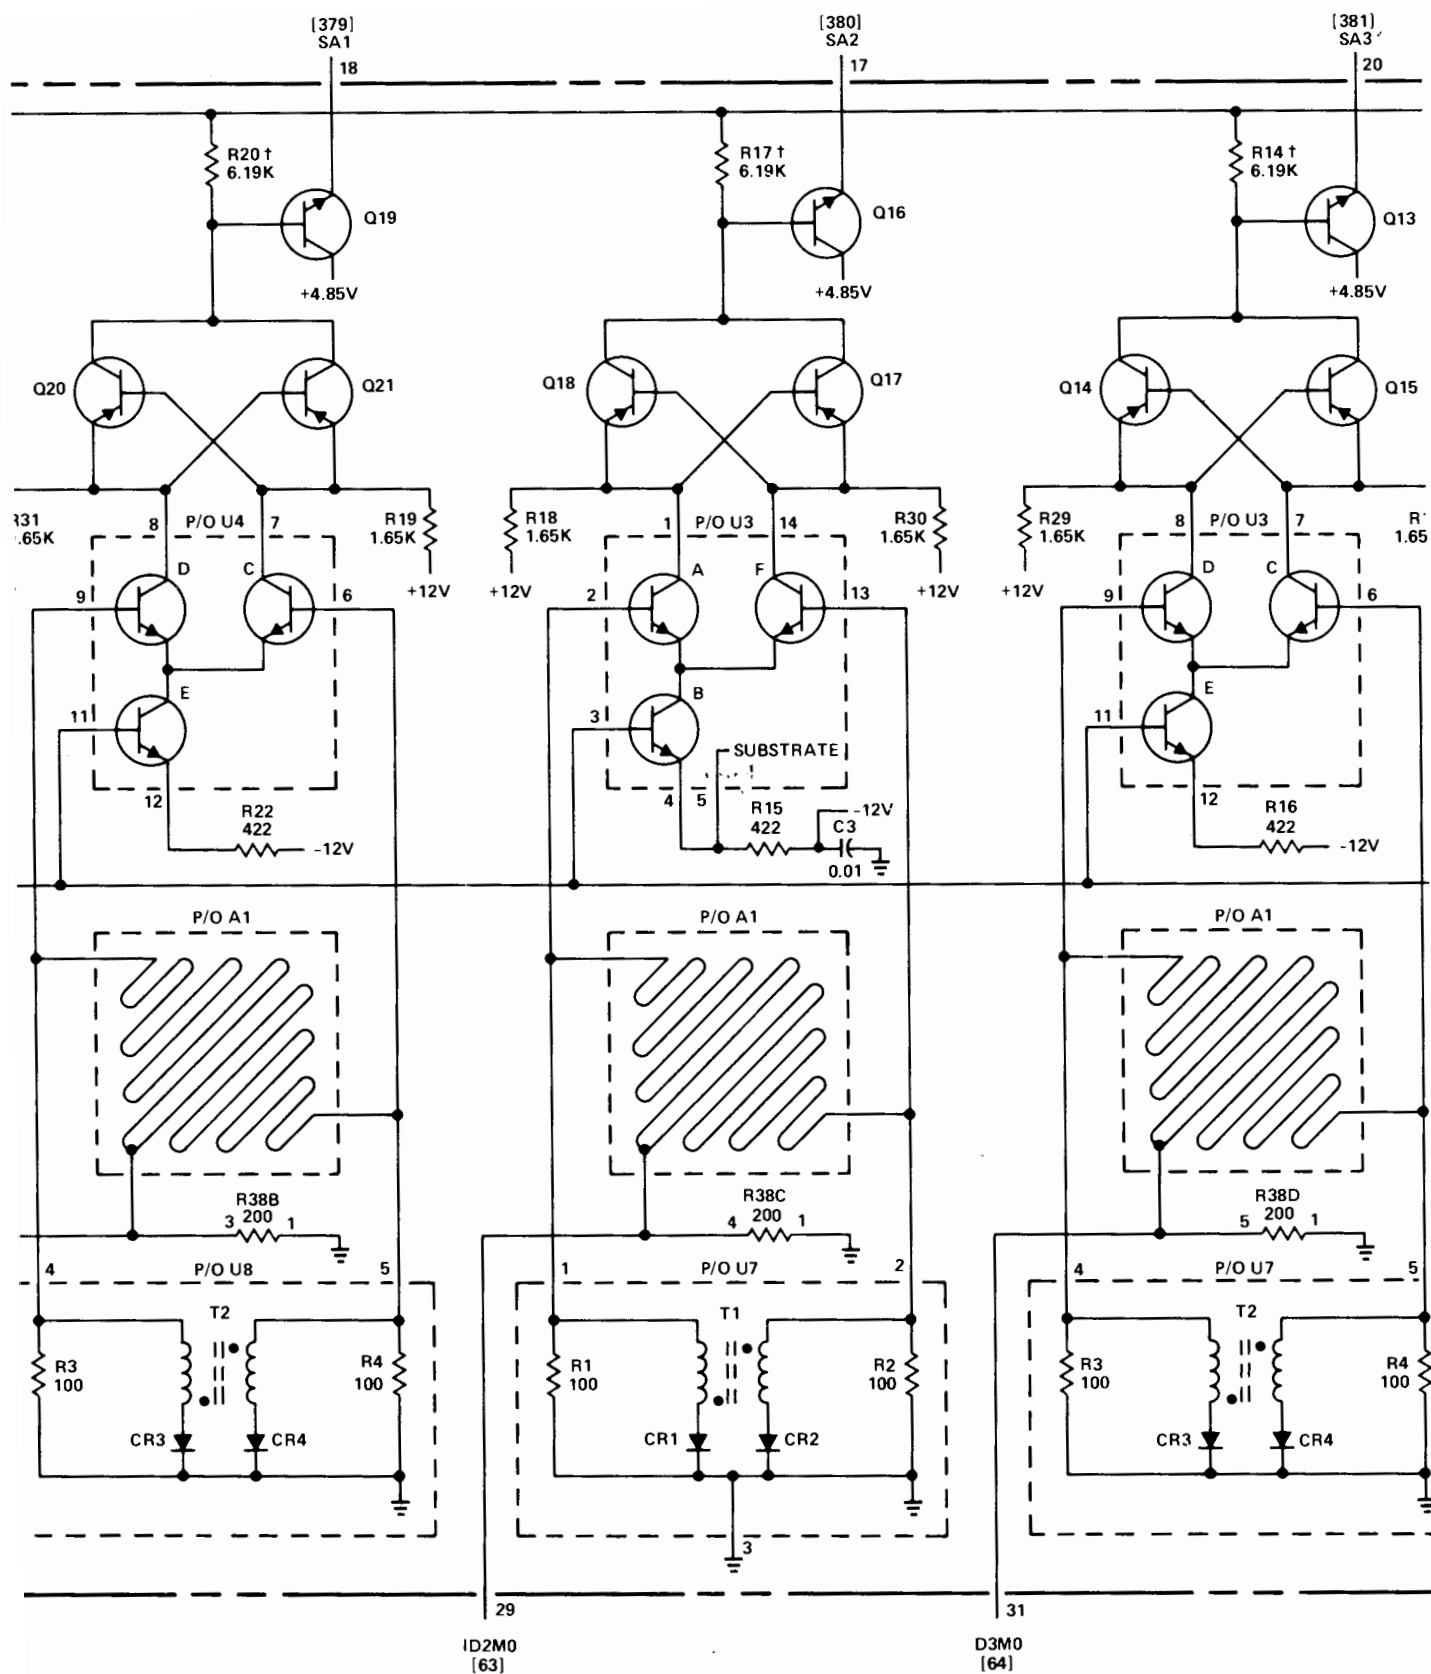


FD-302 (Rev. 11-19-60)

CAUTION

**RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.**

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT PRESS ON THE TOP OR BOTTOM OF THE STACK.

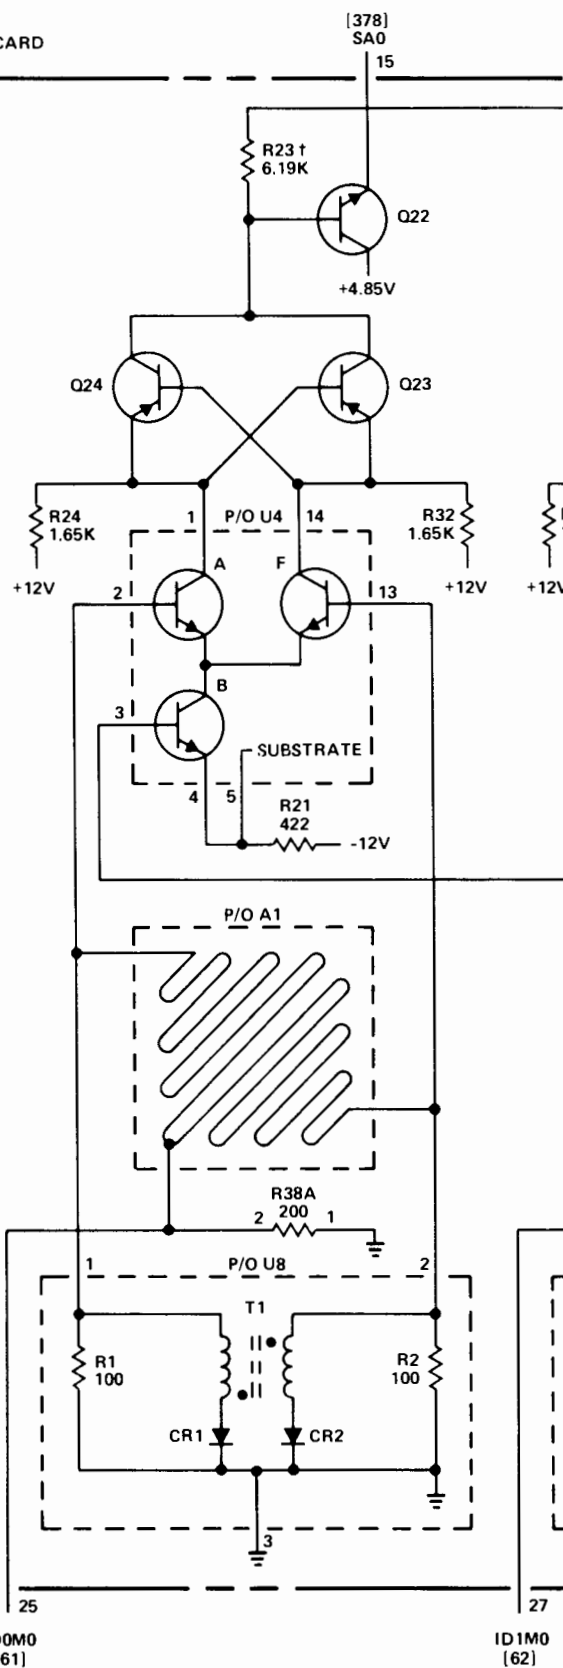

DWG REV. B (SHEET 2 OF 3)
SEE SHEET 1 FOR NOTES


ES A103 { IDOM0
[61]

ID1M0
[62]

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A103 (4K)

61	A103-25	A105-10*			
62	A103-27	A105-7*			
63	A103-29	A105-8*			
64	A103-31	A105-9*			
65	A103-33	A105-37*			
66	A103-35	A105-32*			
67	A103-37	A105-33*			
68	A103-41	A105-34*			
69	A103-43	A105-31*			
378	A102-15*	A103-15*	A107-13	A110-15*	A111-15*
379	A102-18*	A103-18*	A107-11	A110-18*	A111-18*
380	A102-17*	A103-17*	A107-7	A110-17*	A111-17*
381	A102-20*	A103-20*	A107-9	A110-20*	A111-20*
382	A102-19*	A103-19*	A107-17	A110-19*	A111-19*
383	A102-22*	A103-22*	A107-15	A110-22*	A111-22*
384	A102-21*	A103-21*	A107-19	A110-21*	A111-21*
385	A102-63*	A103-63*	A107-21	A110-63*	A111-63*
386	A102-64*	A103-64*	A107-31	A110-64*	A111-64*

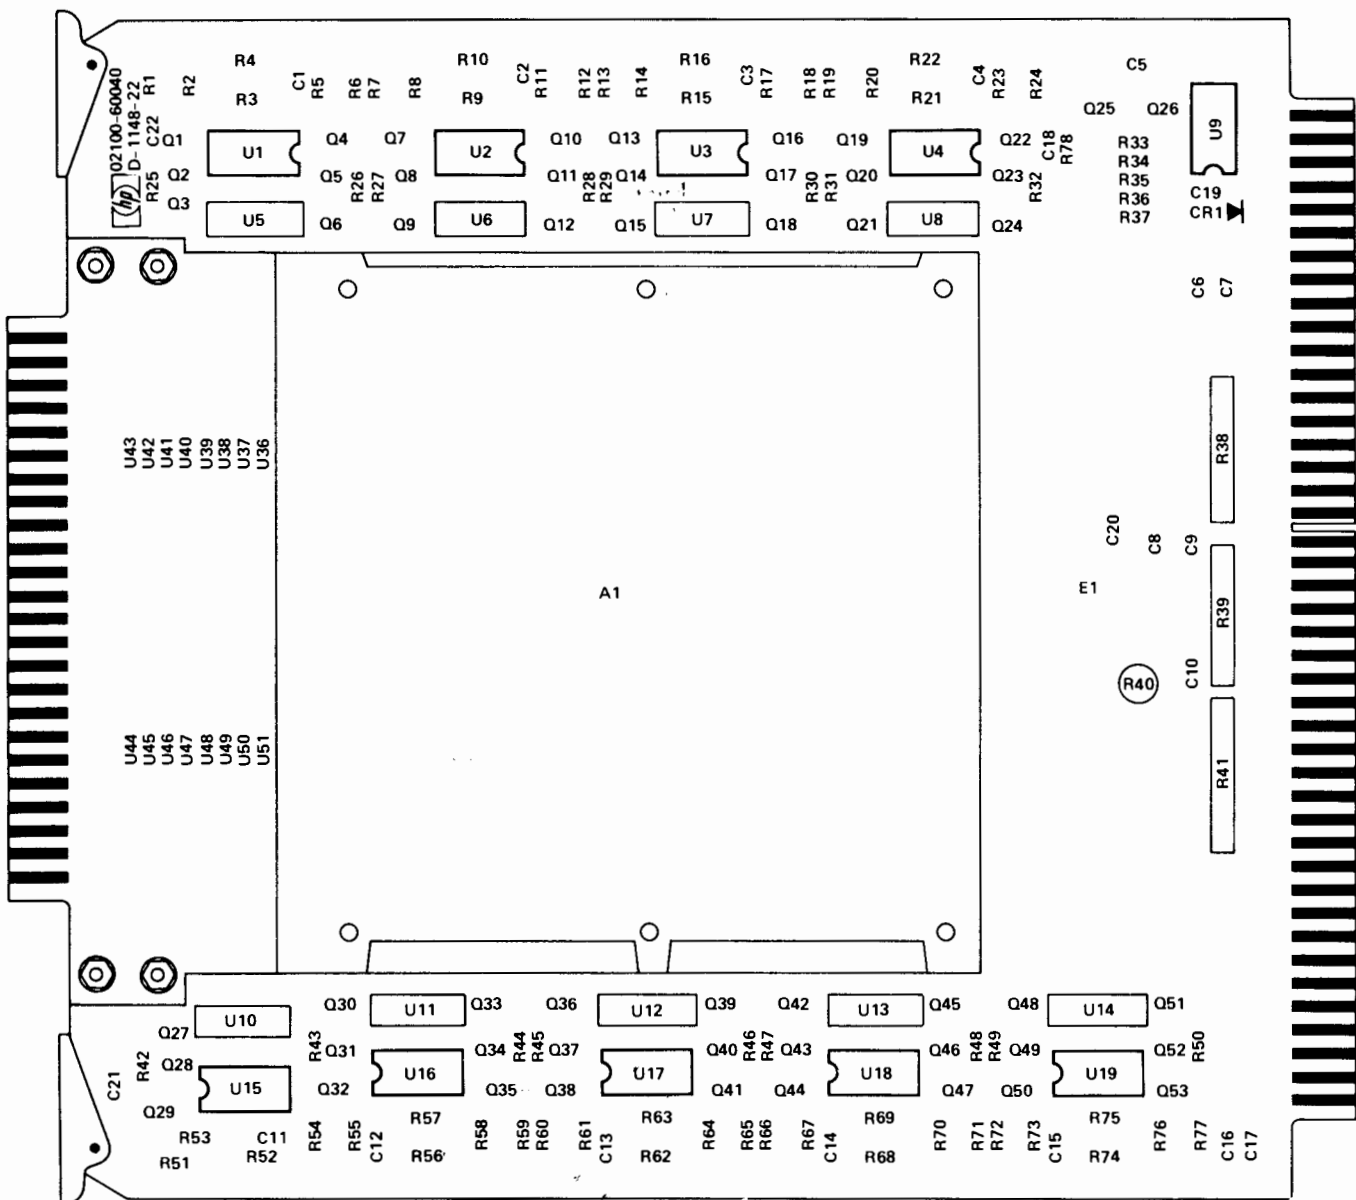

DWG REV. C

NOTE: C19 THRU C22 NOT USED ON CARD REV. C-1139-22.

See table 4-16 for replaceable parts.



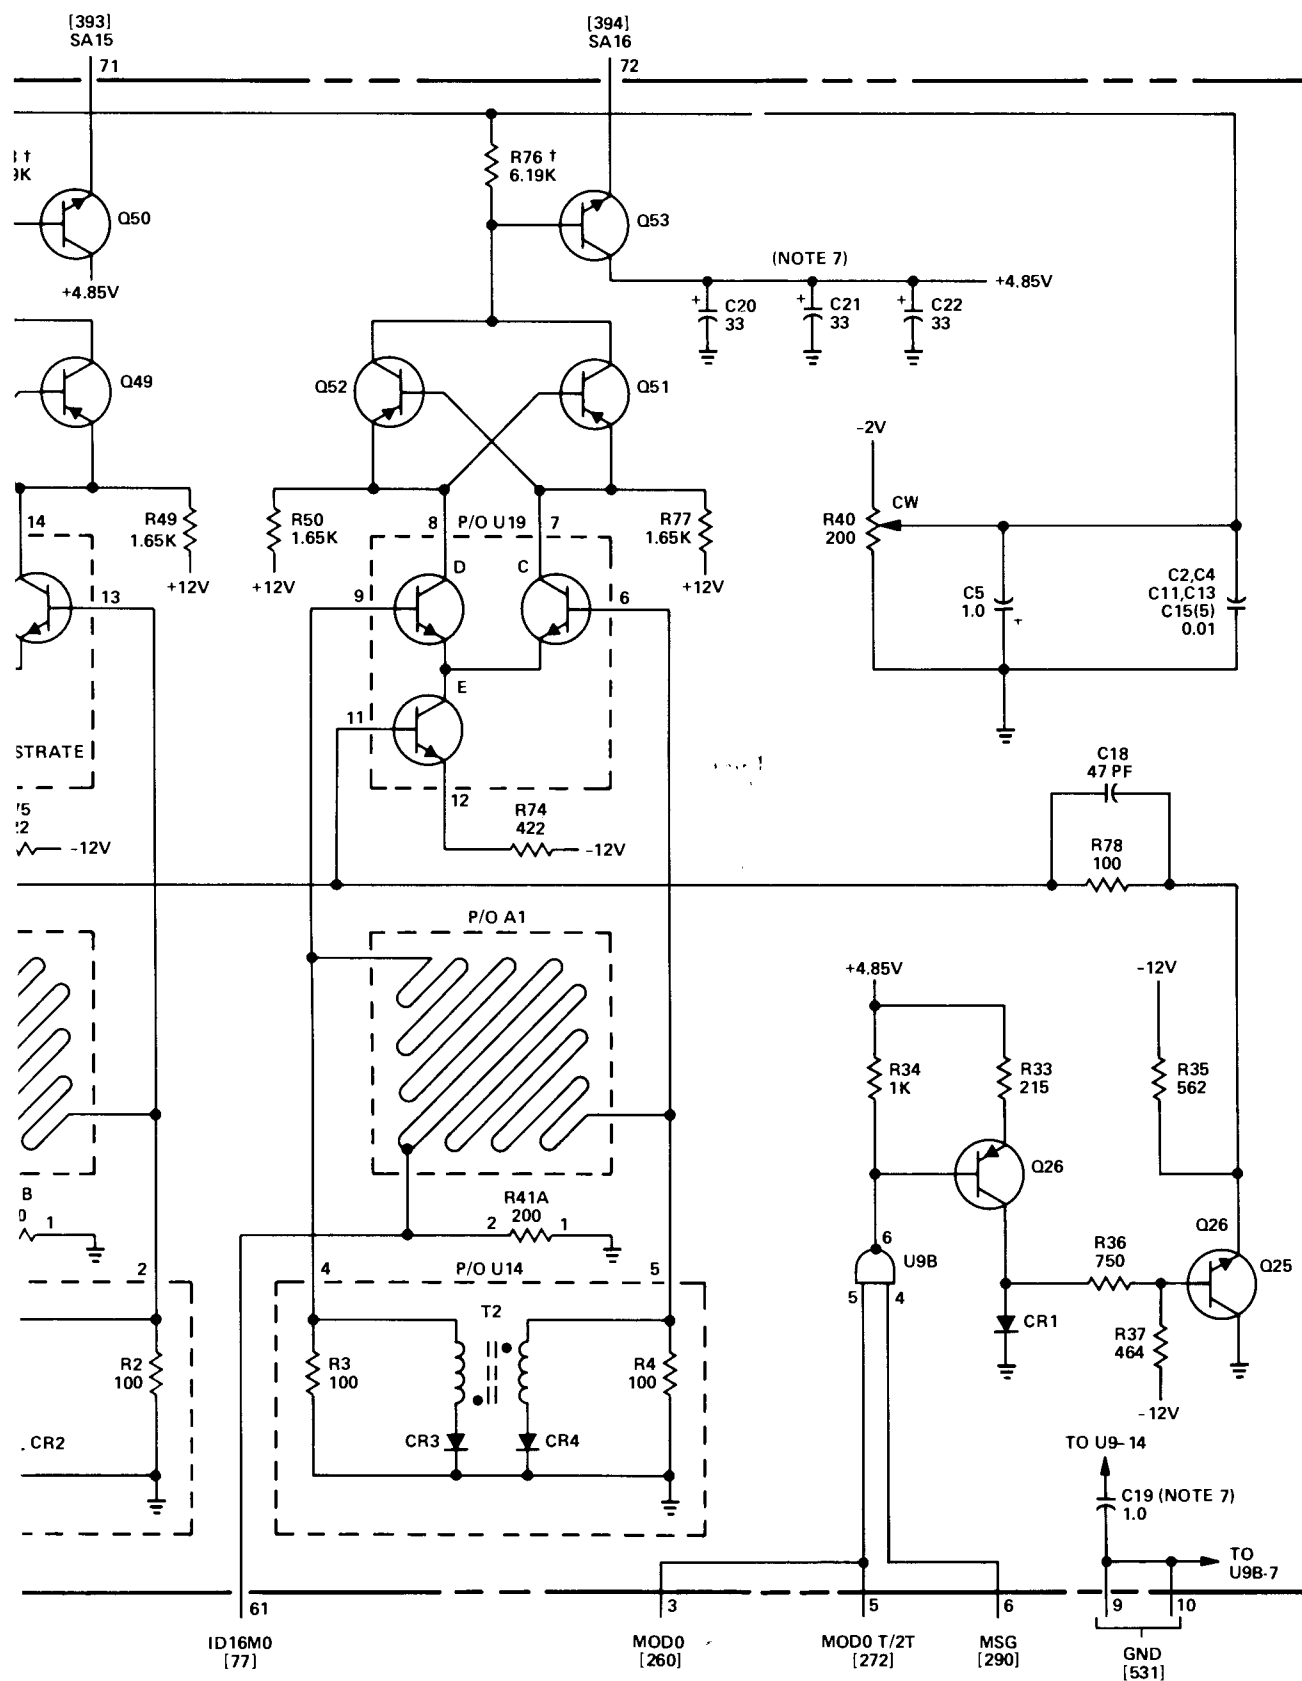


Figure 4-19. A103 Core Stack/Sense Amplifier Card (4K), Parts Location and Schematic Diagrams (Sheet 3 of 3)

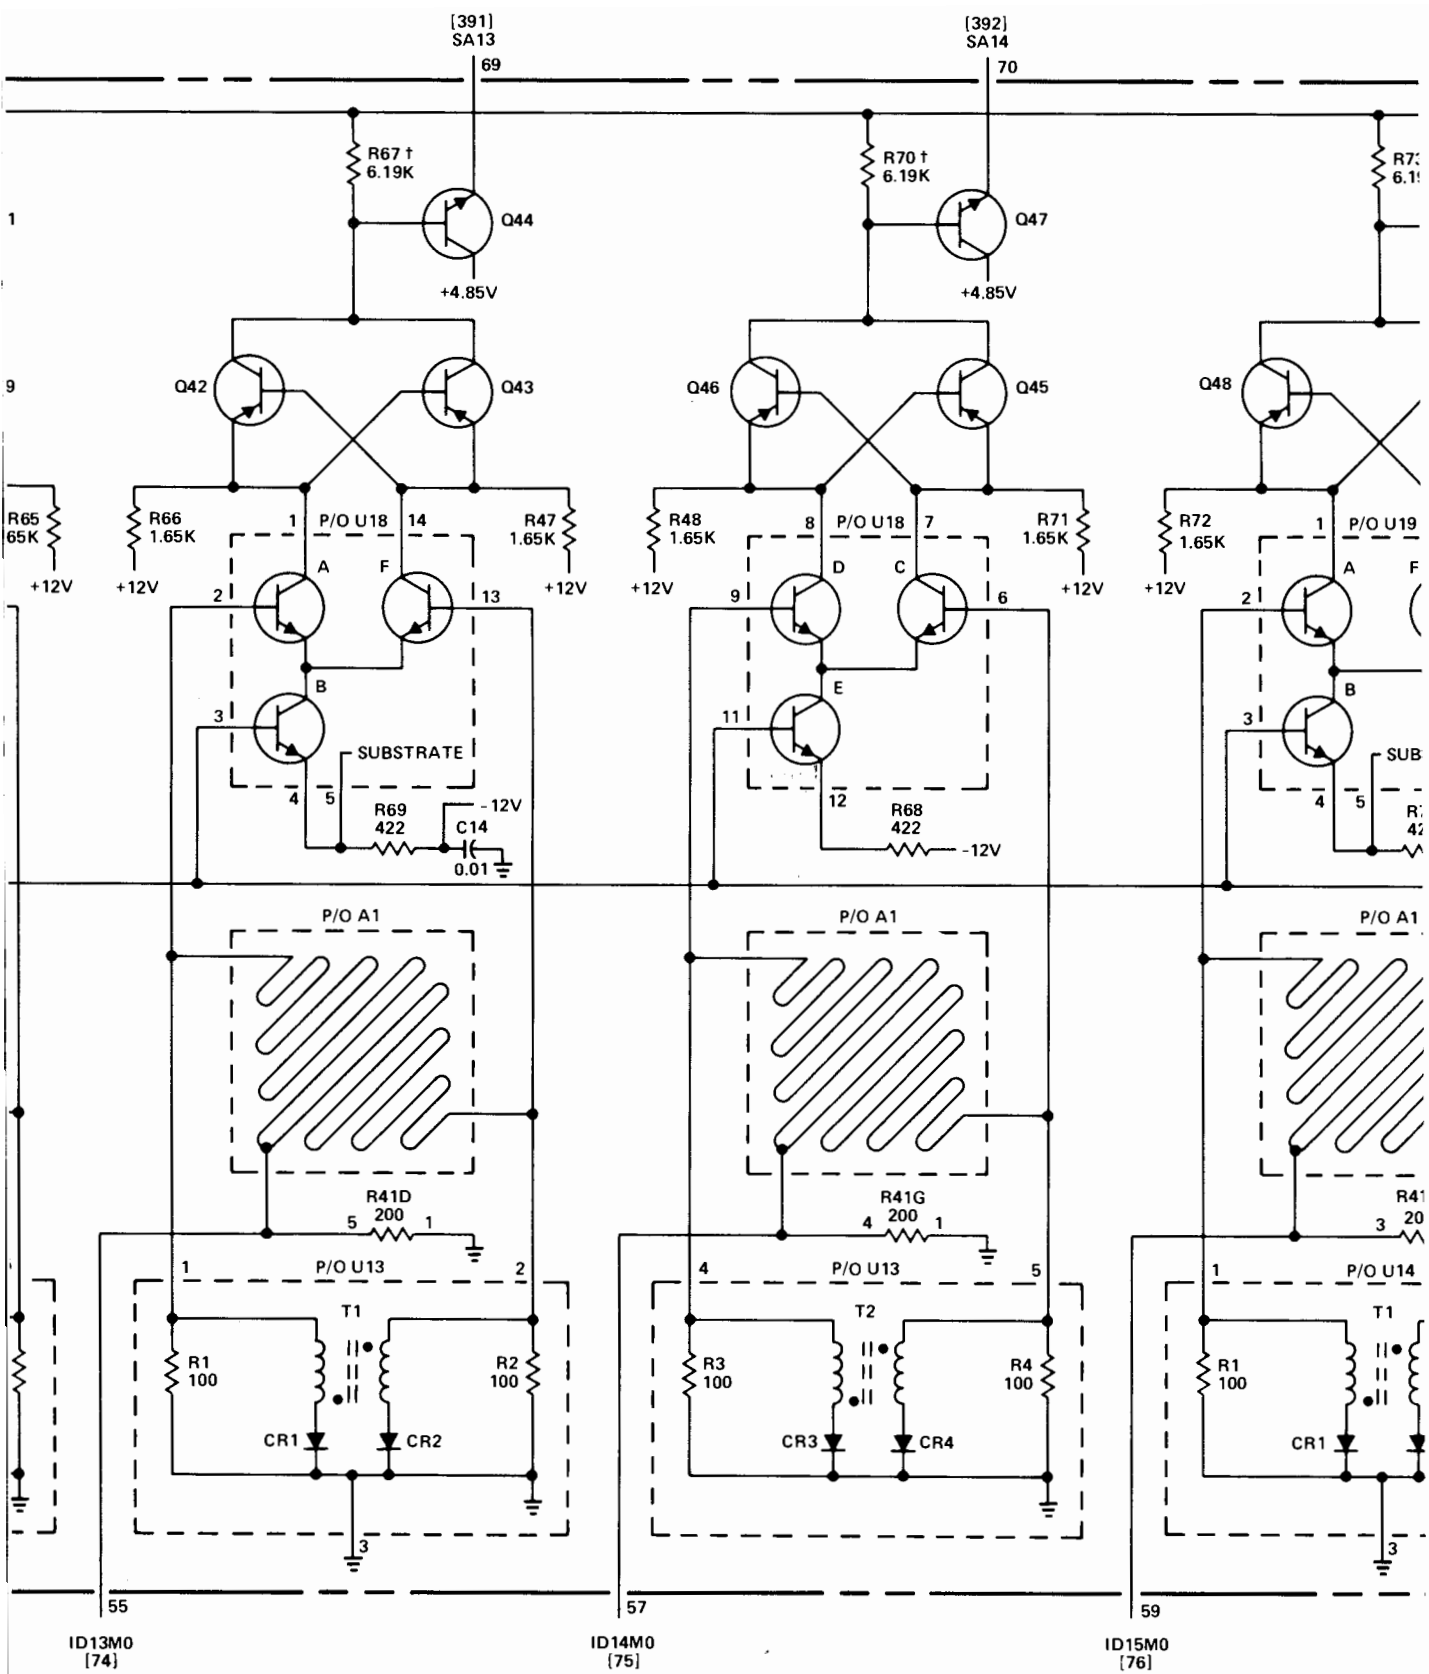

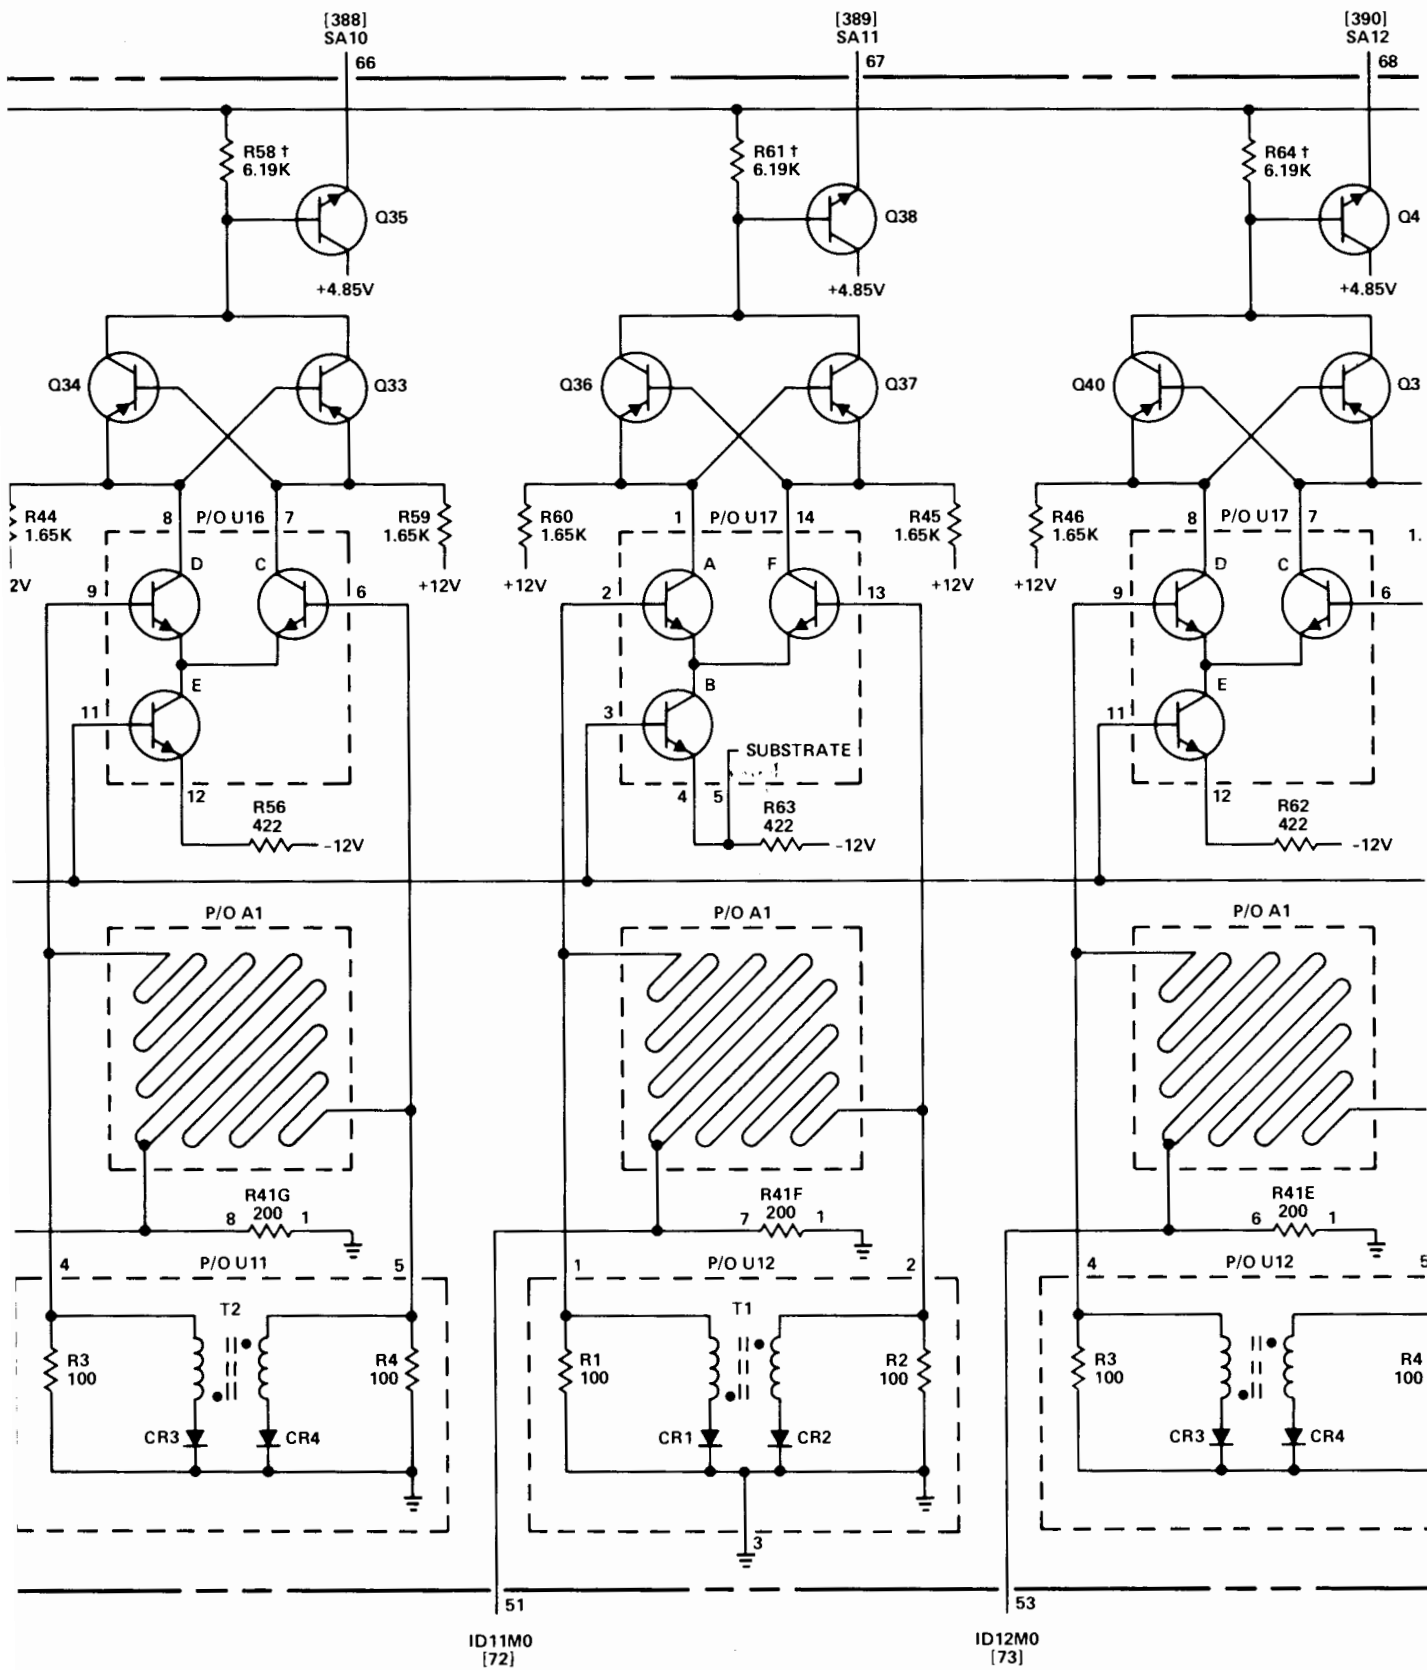

CORE STACK/SENSE AMPLIFIER CARD
(02100-60040, REV. 1139, 1148)

DWG FOR REPAIR.
IT WILL VOID THE

STACK A1, DO NOT
STACK.

[387] SA9 65

FROM SHEET 2

R55 † 6.19K

Q32

+4.85V

Q30 Q31

R54 1.65K P/O U16 R43 1.65K

+12V 1 14 +12V

A F 2 13

B 3 4

SUBSTRATE

5

R57 422 C12 0.01 -12V

FROM SHEET 2

P/O A1

R39A 200 2 1

P/O U11

T1

R1 100 CR1 R2 100 CR2

45

ID9M0 [70]

ID10M [71]

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT PRESS ON THE TOP OR BOTTOM OF THE STACK.

DWG REV. B (SHEET 3 OF 3)
SEE SHEET 1 FOR NOTES


1D9M0
[70]

ID10M0
[71]

REF. NO. BACKPLANE LOCATION * INDICATES SIGNAL SOURCE

A103 (4K)

70	A103-45	A105-46*			
71	A103-49	A105-49*			
72	A103-51	A105-50*			
73	A103-53	A105-61*			
74	A103-55	A105-69*			
75	A103-57	A105-70*			
76	A103-59	A105-71*			
77	A103-61	A105-15*			
260	A103-3	A107-68*			
272	A102-5*	A103-5*	A107-80	A110-5*	A111-5*
290	A102-6	A103-6	A107-83*	A110-6	A111-6
387	A102-65*	A103-65*	A107-33	A110-65*	A111-65*
388	A102-66*	A103-66*	A107-35	A110-66*	A111-66*
389	A102-67*	A103-67*	A107-37	A110-67*	A111-67*
390	A102-68*	A103-68*	A107-41	A110-68*	A111-68*
391	A102-69*	A103-69*	A107-43	A110-69*	A111-69*
392	A102-70*	A103-70*	A107-45	A110-70*	A111-70*
393	A102-71*	A103-71*	A107-49	A110-71*	A111-71*
394	A102-72*	A103-72*	A107-71	A110-72*	A111-72*

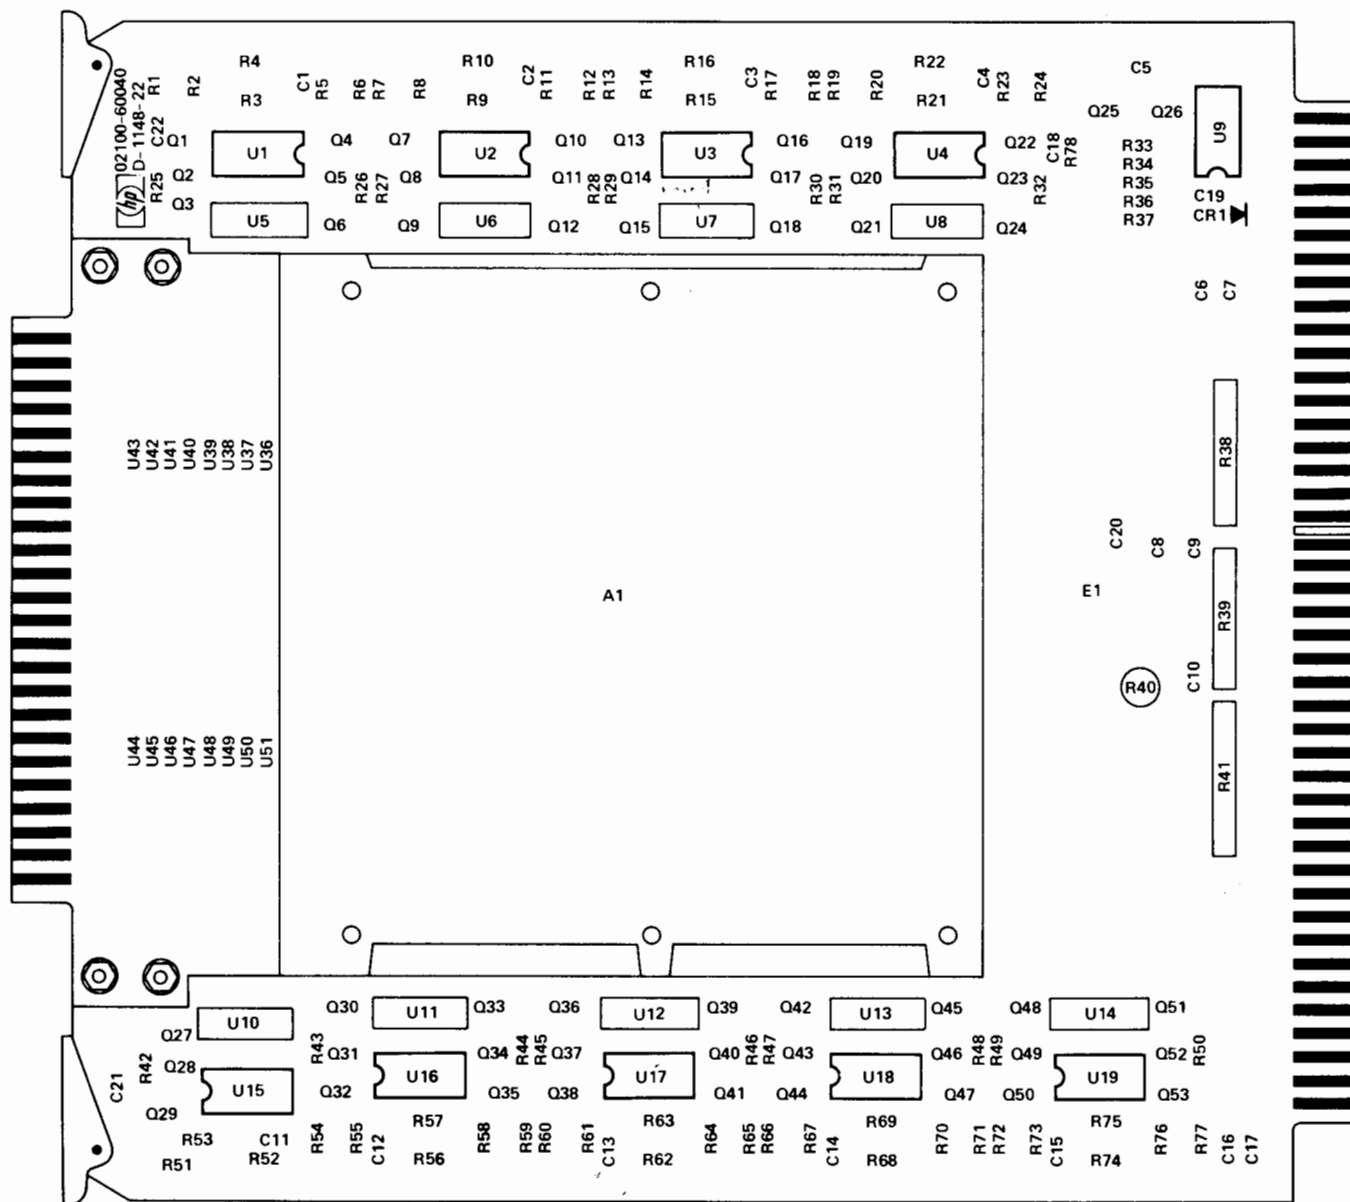

See table 4-16 for replaceable parts.



(Information continues on next page)

REF. * INDICATES SIGNAL SOURCE
NO. BACKPLANE LOCATION

A103 (8K)

61	A103-25	A105-10*		
62	A103-27	A105-7*		
63	A103-29	A105-8*		
64	A103-31	A105-9*		
65	A103-33	A105-37*		
66	A103-35	A105-32*		
67	A103-37	A105-33*		
68	A103-41	A105-34*		
69	A103-43	A105-31*		
70	A103-45	A105-46*		
71	A103-49	A105-49*		
72	A103-51	A105-50*		
73	A103-53	A105-61*		
74	A103-55	A105-69*		
75	A103-57	A105-70*		
76	A103-59	A105-71*		
77	A103-61	A105-15*		
78	A103-26	A105-14*		
79	A103-28	A105-11*		
80	A103-30	A105-12*		
81	A103-32	A105-13*		
82	A103-34	A105-38*		
83	A103-36	A105-43*		
84	A103-38	A105-41*		
85	A103-42	A105-42*		
86	A103-44	A105-72*		
87	A103-46	A105-68*		
88	A103-50	A105-66*		
89	A103-52	A105-67*		
90	A103-54	A105-65*		
91	A103-56	A105-62*		
92	A103-58	A105-63*		
93	A103-60	A105-64*		
94	A103-62	A105-16*		
260	A103-3	A107-68*		
261	A103-4	A107-63*		
272	A102-5*	A103-5*	A107-80	A110-5* A111-5*
290	A102-6	A103-6	A107-83*	A110-6 A111-6
378	A102-15*	A103-15*	A107-13	A110-15* A111-15*
379	A102-18*	A103-18*	A107-11	A110-18* A111-18*
380	A102-17*	A103-17*	A107-7	A110-17* A111-17*
381	A102-20*	A103-20*	A107-9	A110-20* A111-20*
382	A102-19*	A103-19*	A107-17	A110-19* A111-19*
383	A102-22*	A103-22*	A107-15	A110-22* A111-22*
384	A102-21*	A103-21*	A107-19	A110-21* A111-21*
385	A102-63*	A103-63*	A107-21	A110-63* A111-63*
386	A102-64*	A103-64*	A107-31	A110-64* A111-64*
387	A102-65*	A103-65*	A107-33	A110-65* A111-65*
388	A102-66*	A103-66*	A107-35	A110-66* A111-66*
389	A102-67*	A103-67*	A107-37	A110-67* A111-67*
390	A102-68*	A103-68*	A107-41	A110-68* A111-68*
391	A102-69*	A103-69*	A107-43	A110-69* A111-69*
392	A102-70*	A103-70*	A107-45	A110-70* A111-70*
393	A102-71*	A103-71*	A107-49	A110-71* A111-71*
394	A102-72*	A103-72*	A107-71	A110-72* A111-72*





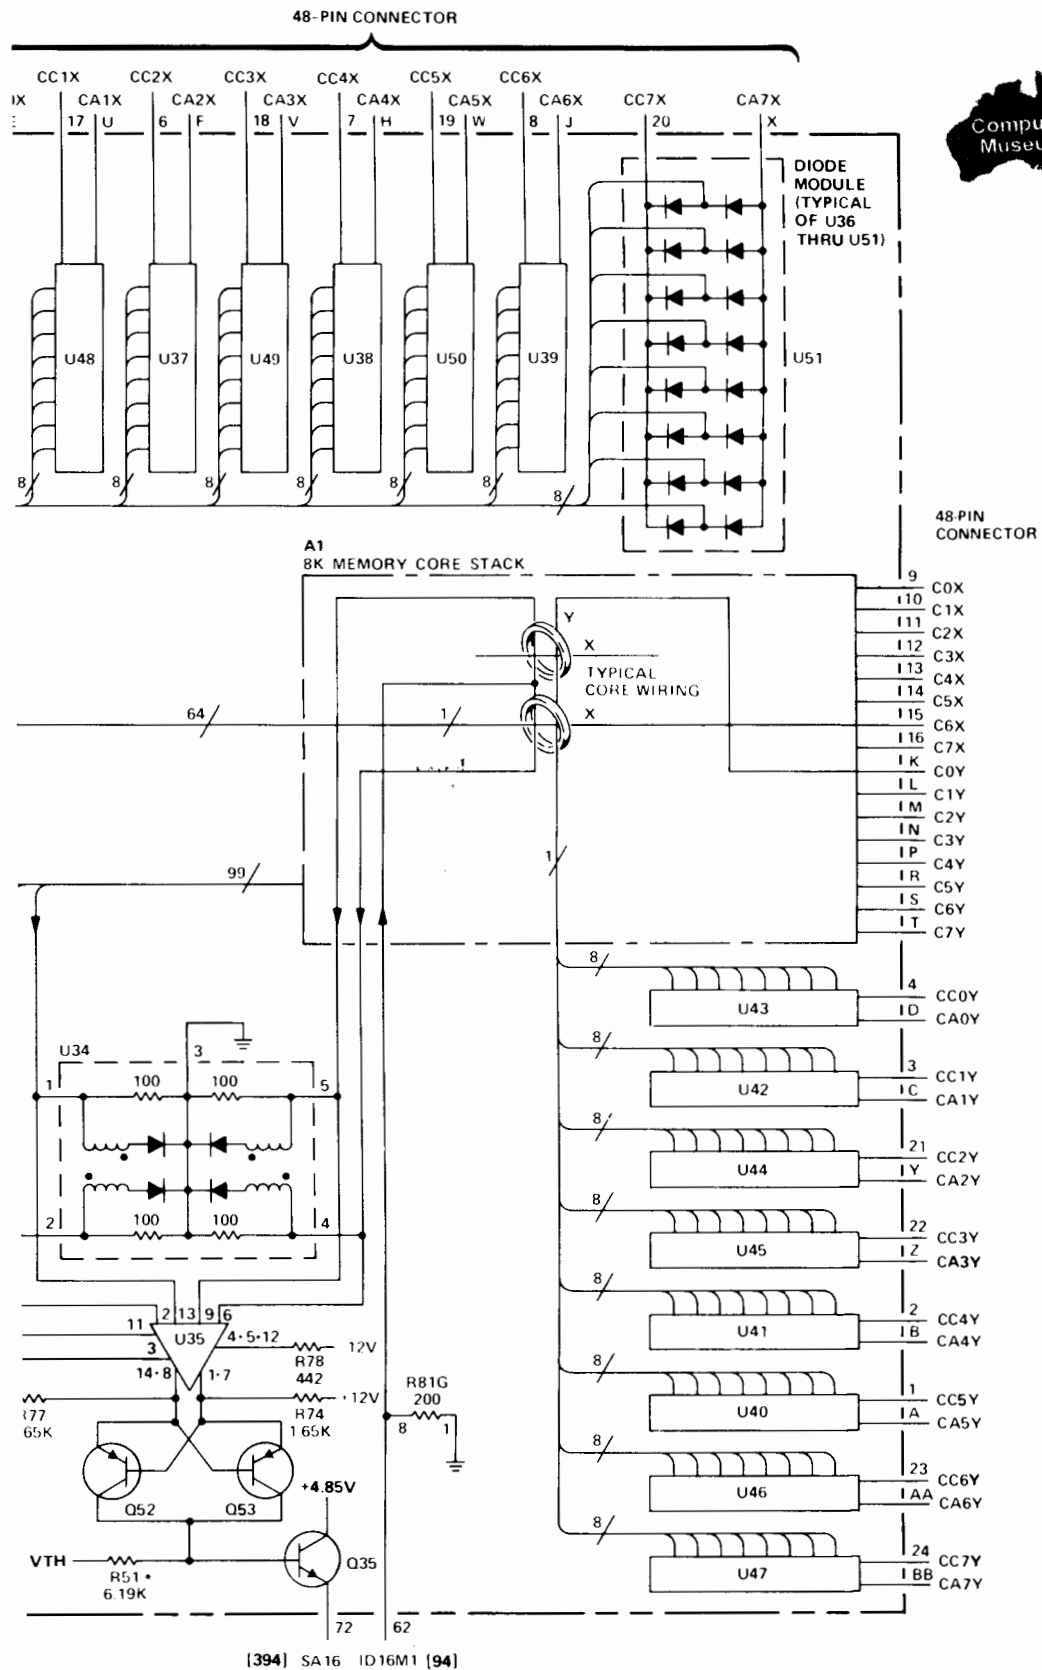


Figure 4-20. A103 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams

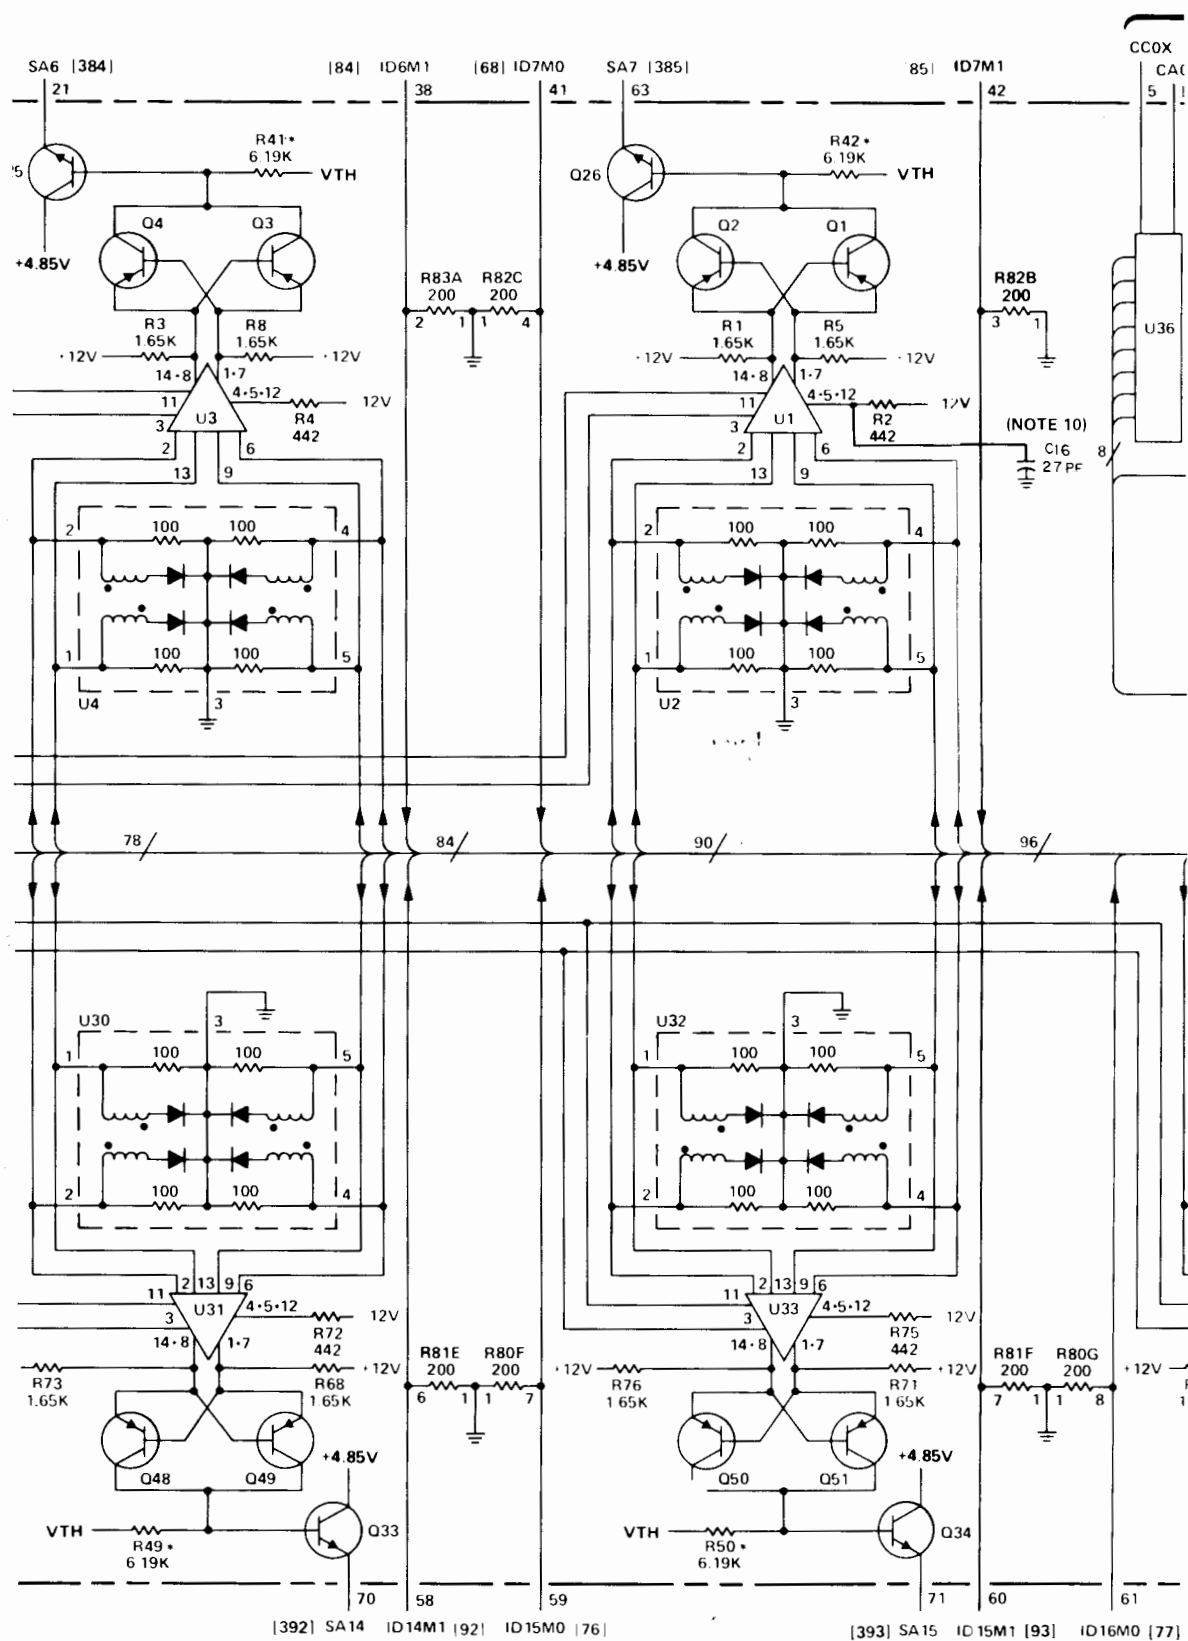

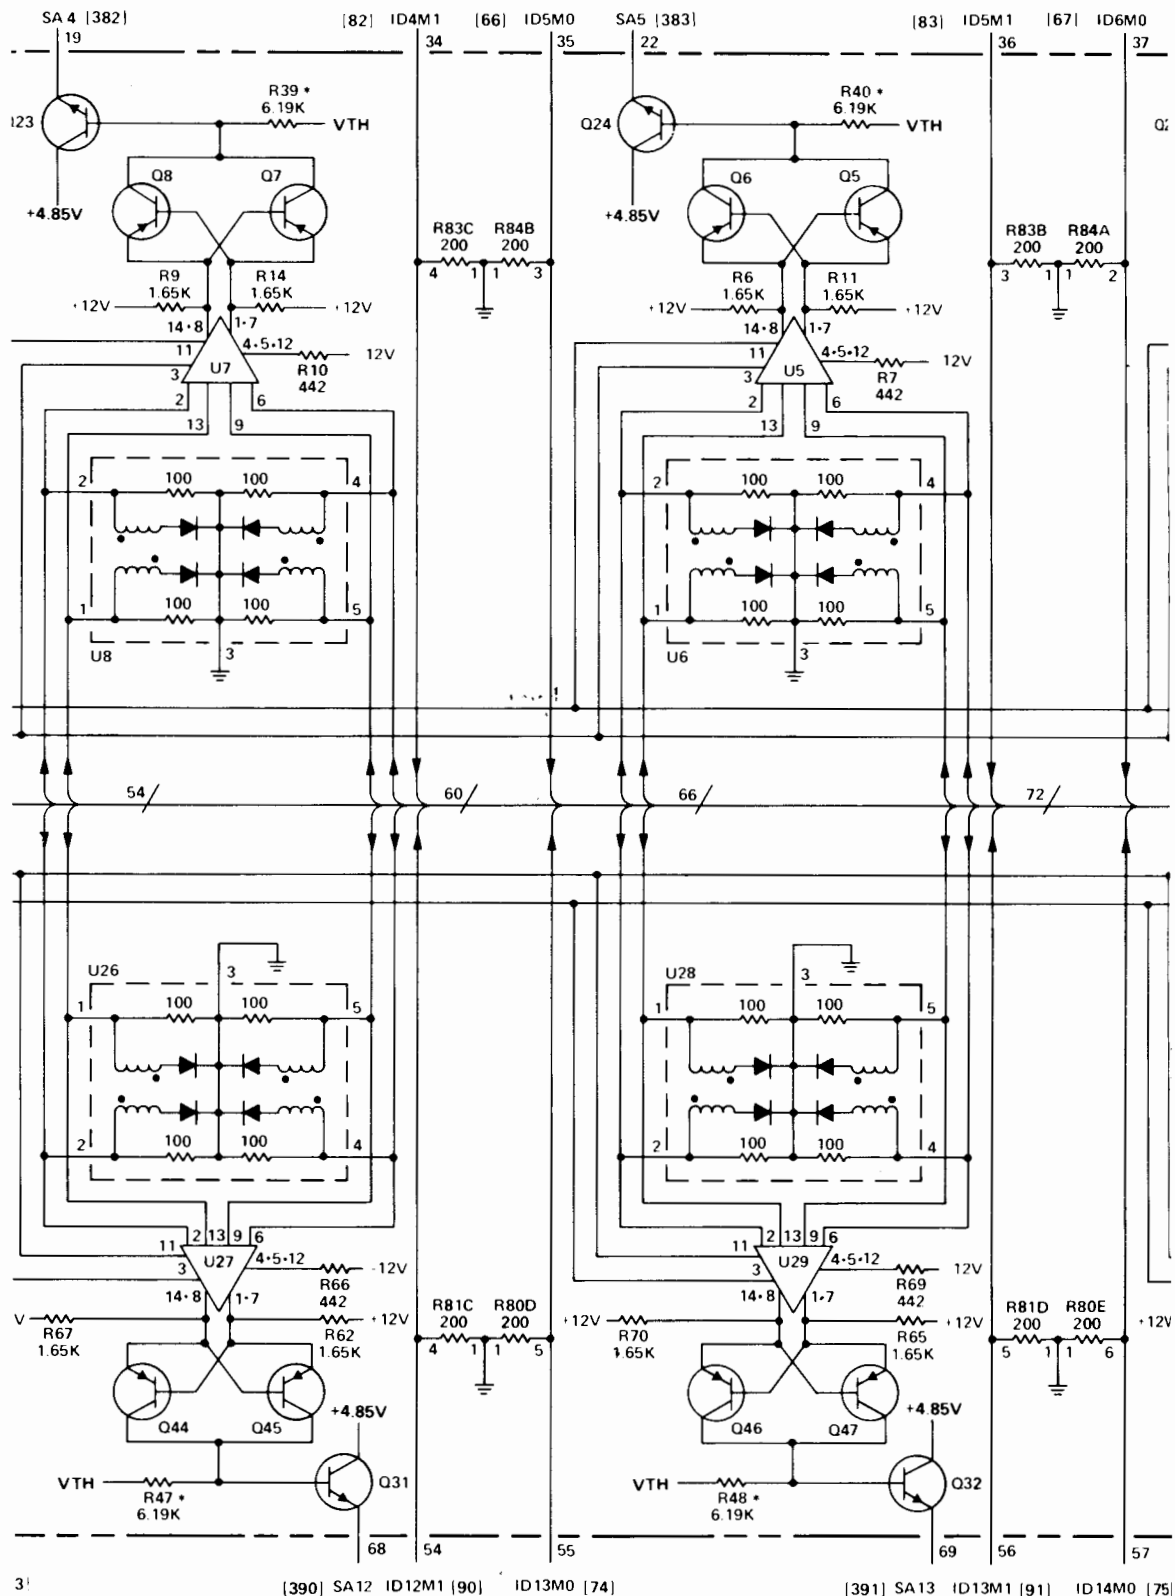


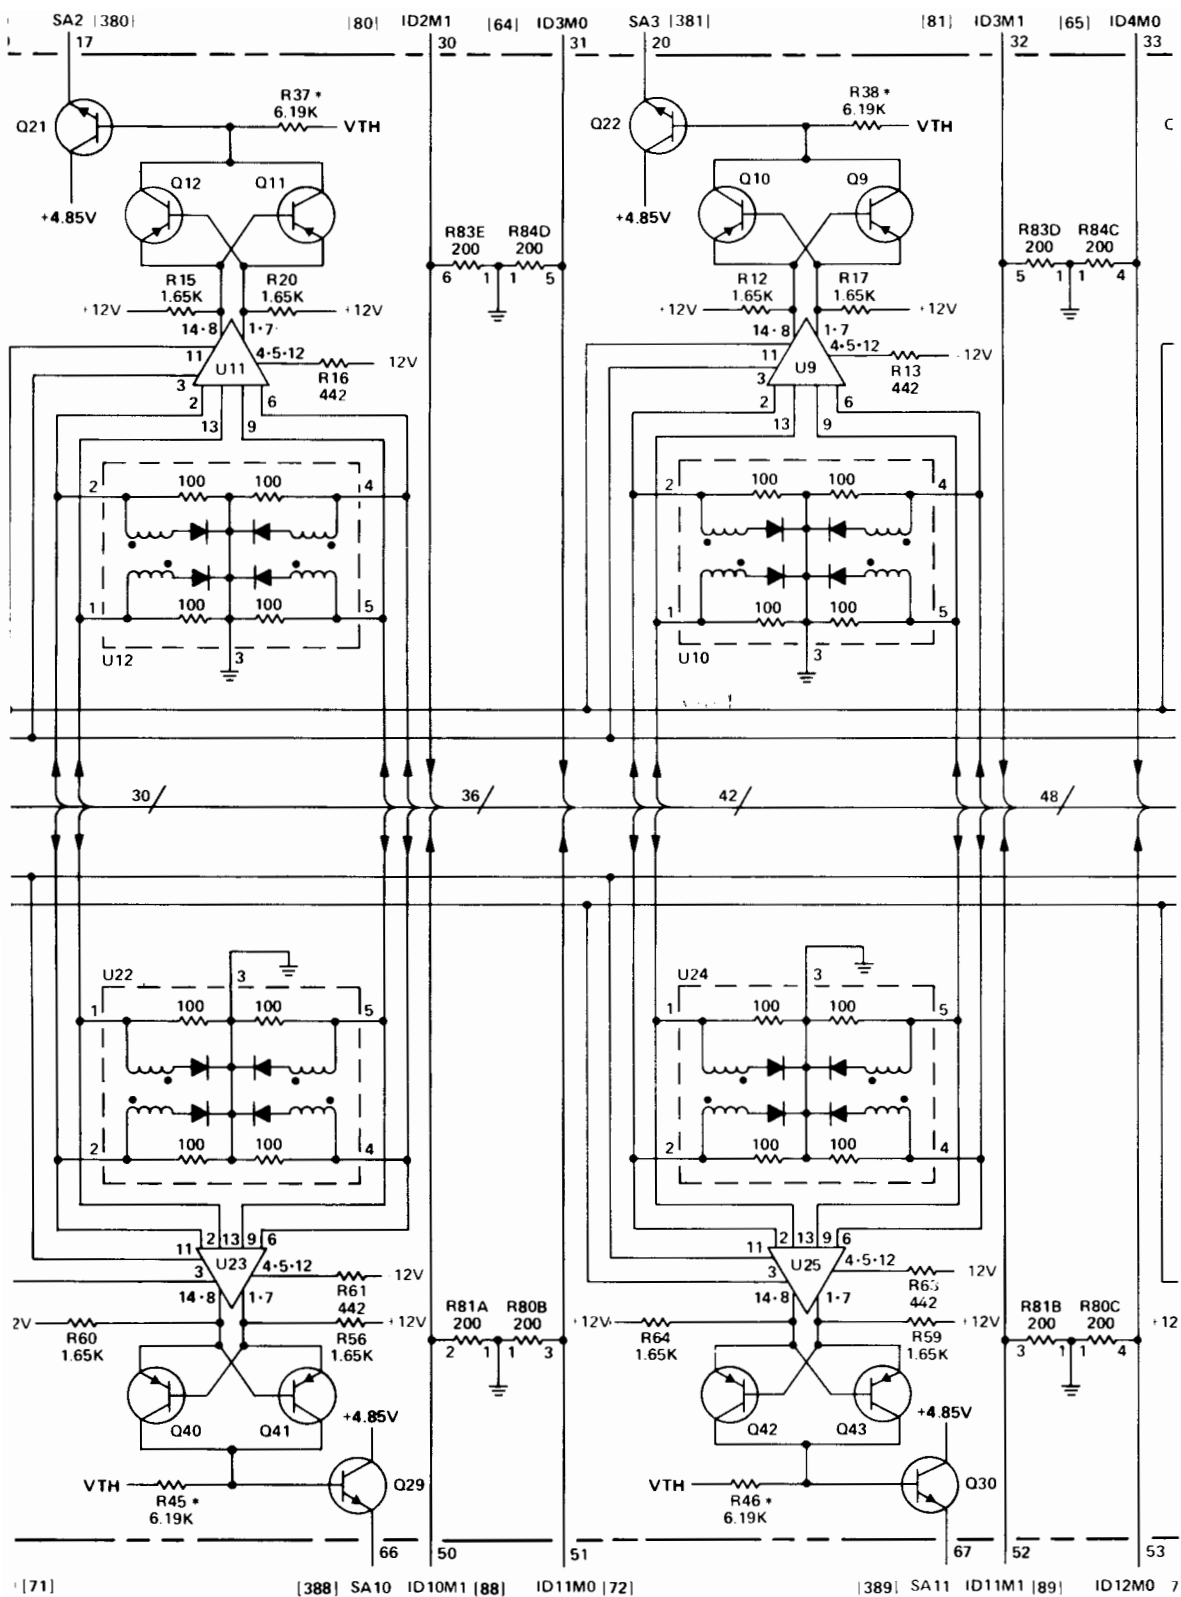

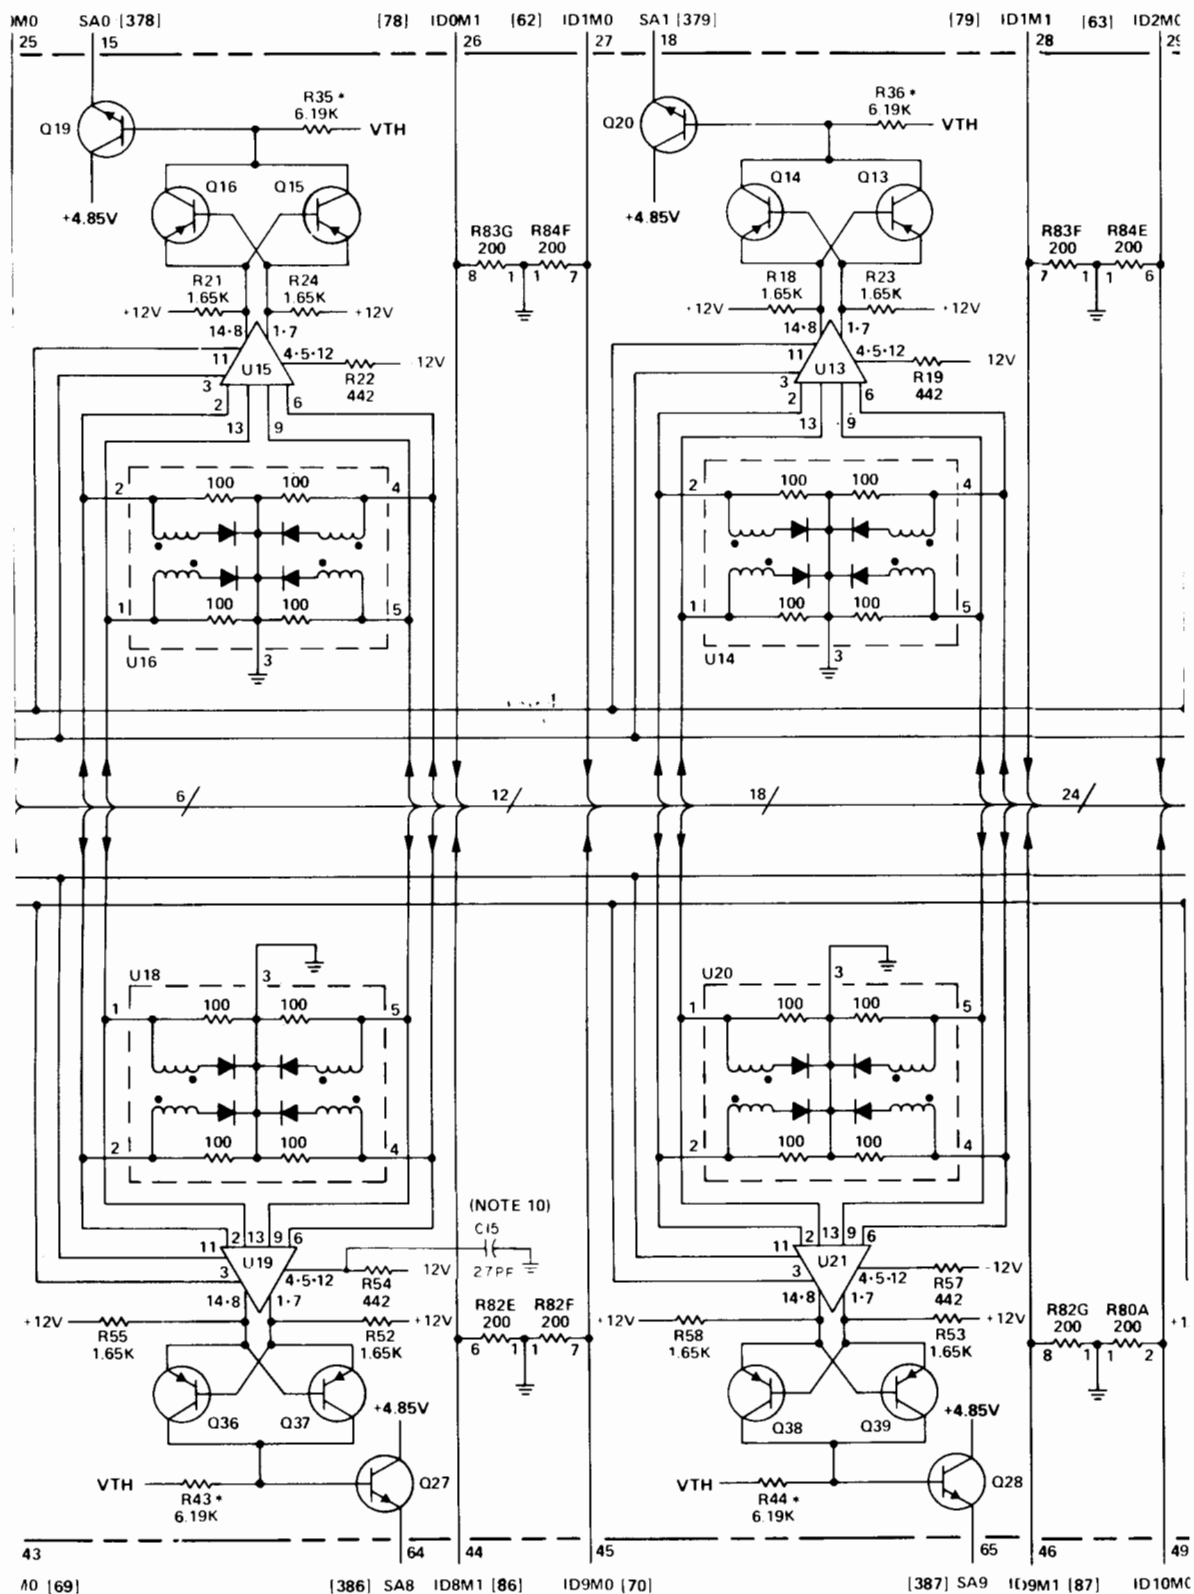

CORE STACK/SENSE AMPLIFIER CARD
(5060-8324, REV. 1126, 1136) AND
(5060-8331, REV. 1208, 1301)

[61] ID

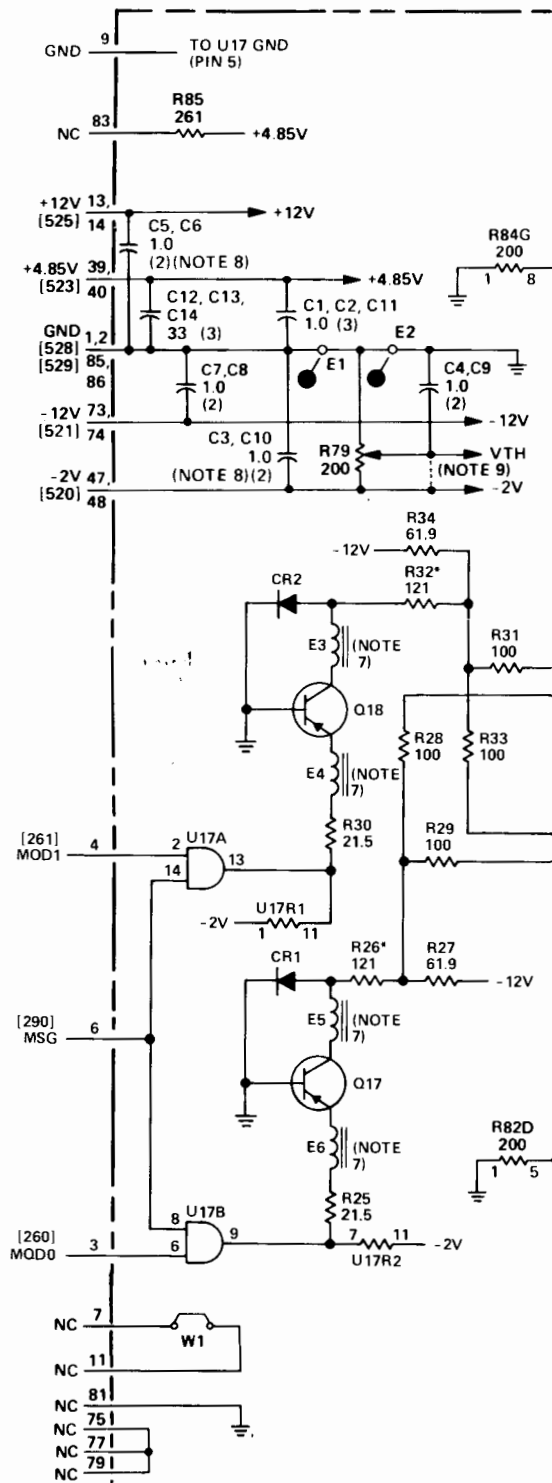

DWG 02100-90125, REV B

ID81


NOTES:

1. THIS CARD MUST NOT BE REPAIRED IN THE FIELD. FIELD REMOVAL OR REPLACEMENT OF ANY COMPONENT VOIDS THE WARRANTY ON THE CARD.
2. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
3. ALL PIN NUMBERS REFER TO 86 PIN CONNECTOR UNLESS OTHERWISE INDICATED.
4. NUMERALS WITHIN BRACKETS ARE WIRING LIST REFERENCE NUMBERS.
5. DIODES ARE MOUNTED WITH CATHODE END AWAY FROM CARD.
6. * INDICATES SELECTED RESISTOR. R26, R32 ARE SELECTED FROM 100, 110, 121, 130, 140, OR 150. R35 THRU R51 ARE SELECTED FROM 5.1K, 5.62K, 6.19K, 6.81K, 7.50K OR 8.25K.
7. E3 THRU E6 USED ONLY ON CARD 5060-8324, REV. 1136.
8. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
9. R79 IS NOT USED ON ALL CARDS. WHEN R79 IS NOT USED, VTH IS CONNECTED TO 2V AS SHOWN BY DOTTED LINE.
10. C15 AND C16 FIRST USED ON CARD REV. 1301.

CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR. FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE WARRANTY ON THE CARD.


TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT PRESS ON THE TOP OR BOTTOM OF THE STACK.

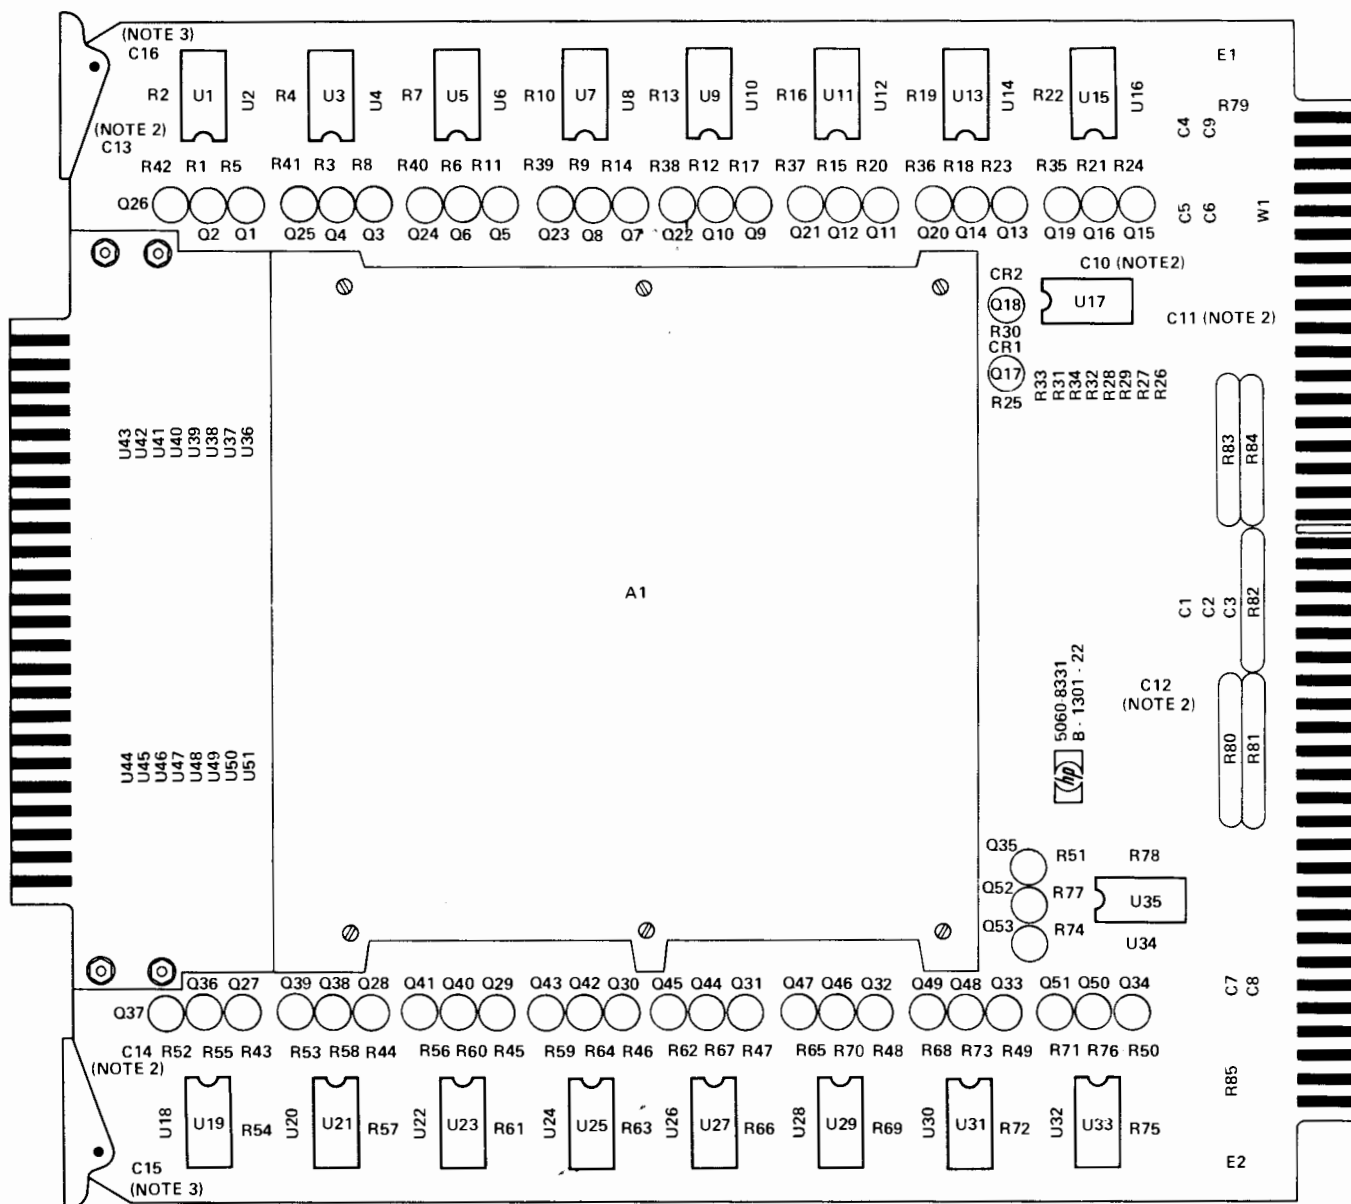


DWG REV. D

- NOTES: 1. THIS DIAGRAM ALSO APPLIES TO CARD 5060-8324, REV. A-1126-22 AND REV. A-1136-22.
 2. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
 3. C15 AND C16 FIRST USED ON CARD 5060-8331, REV. A-1301-22.

See table 4-17 for replaceable parts.

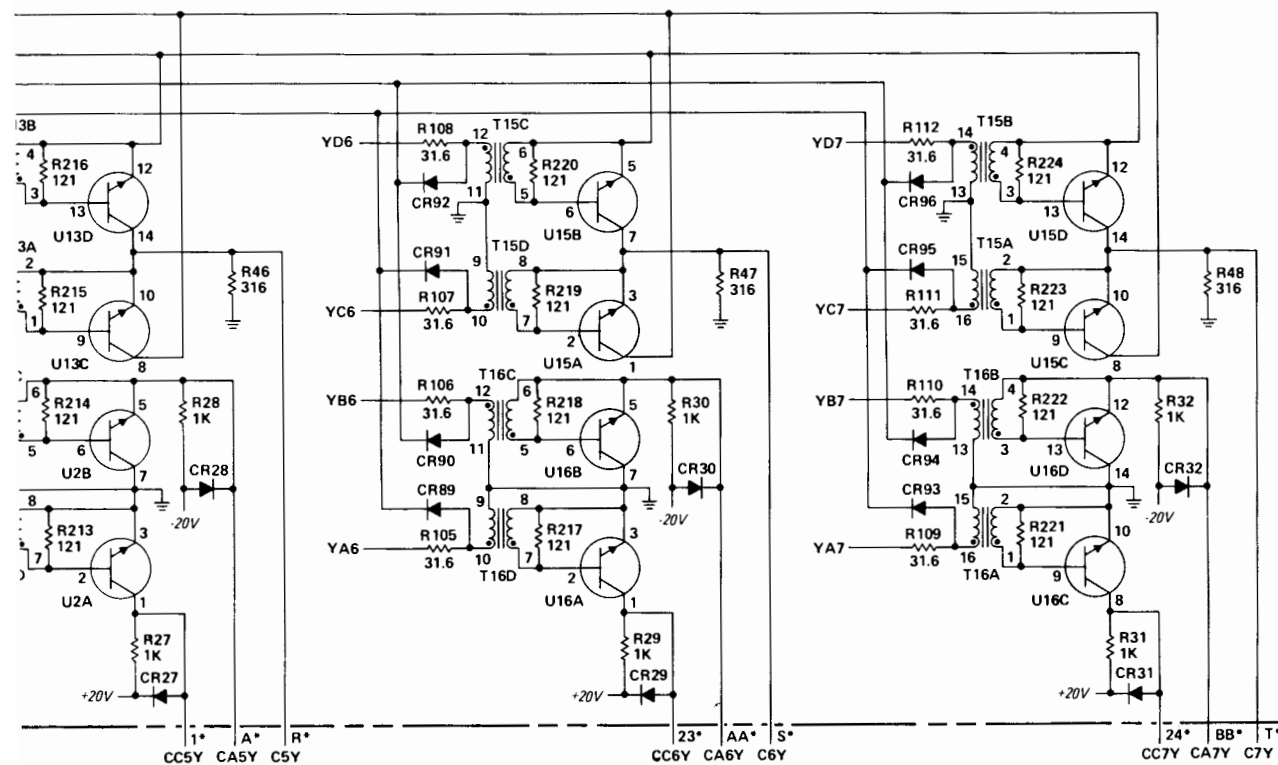

4-137/4-138

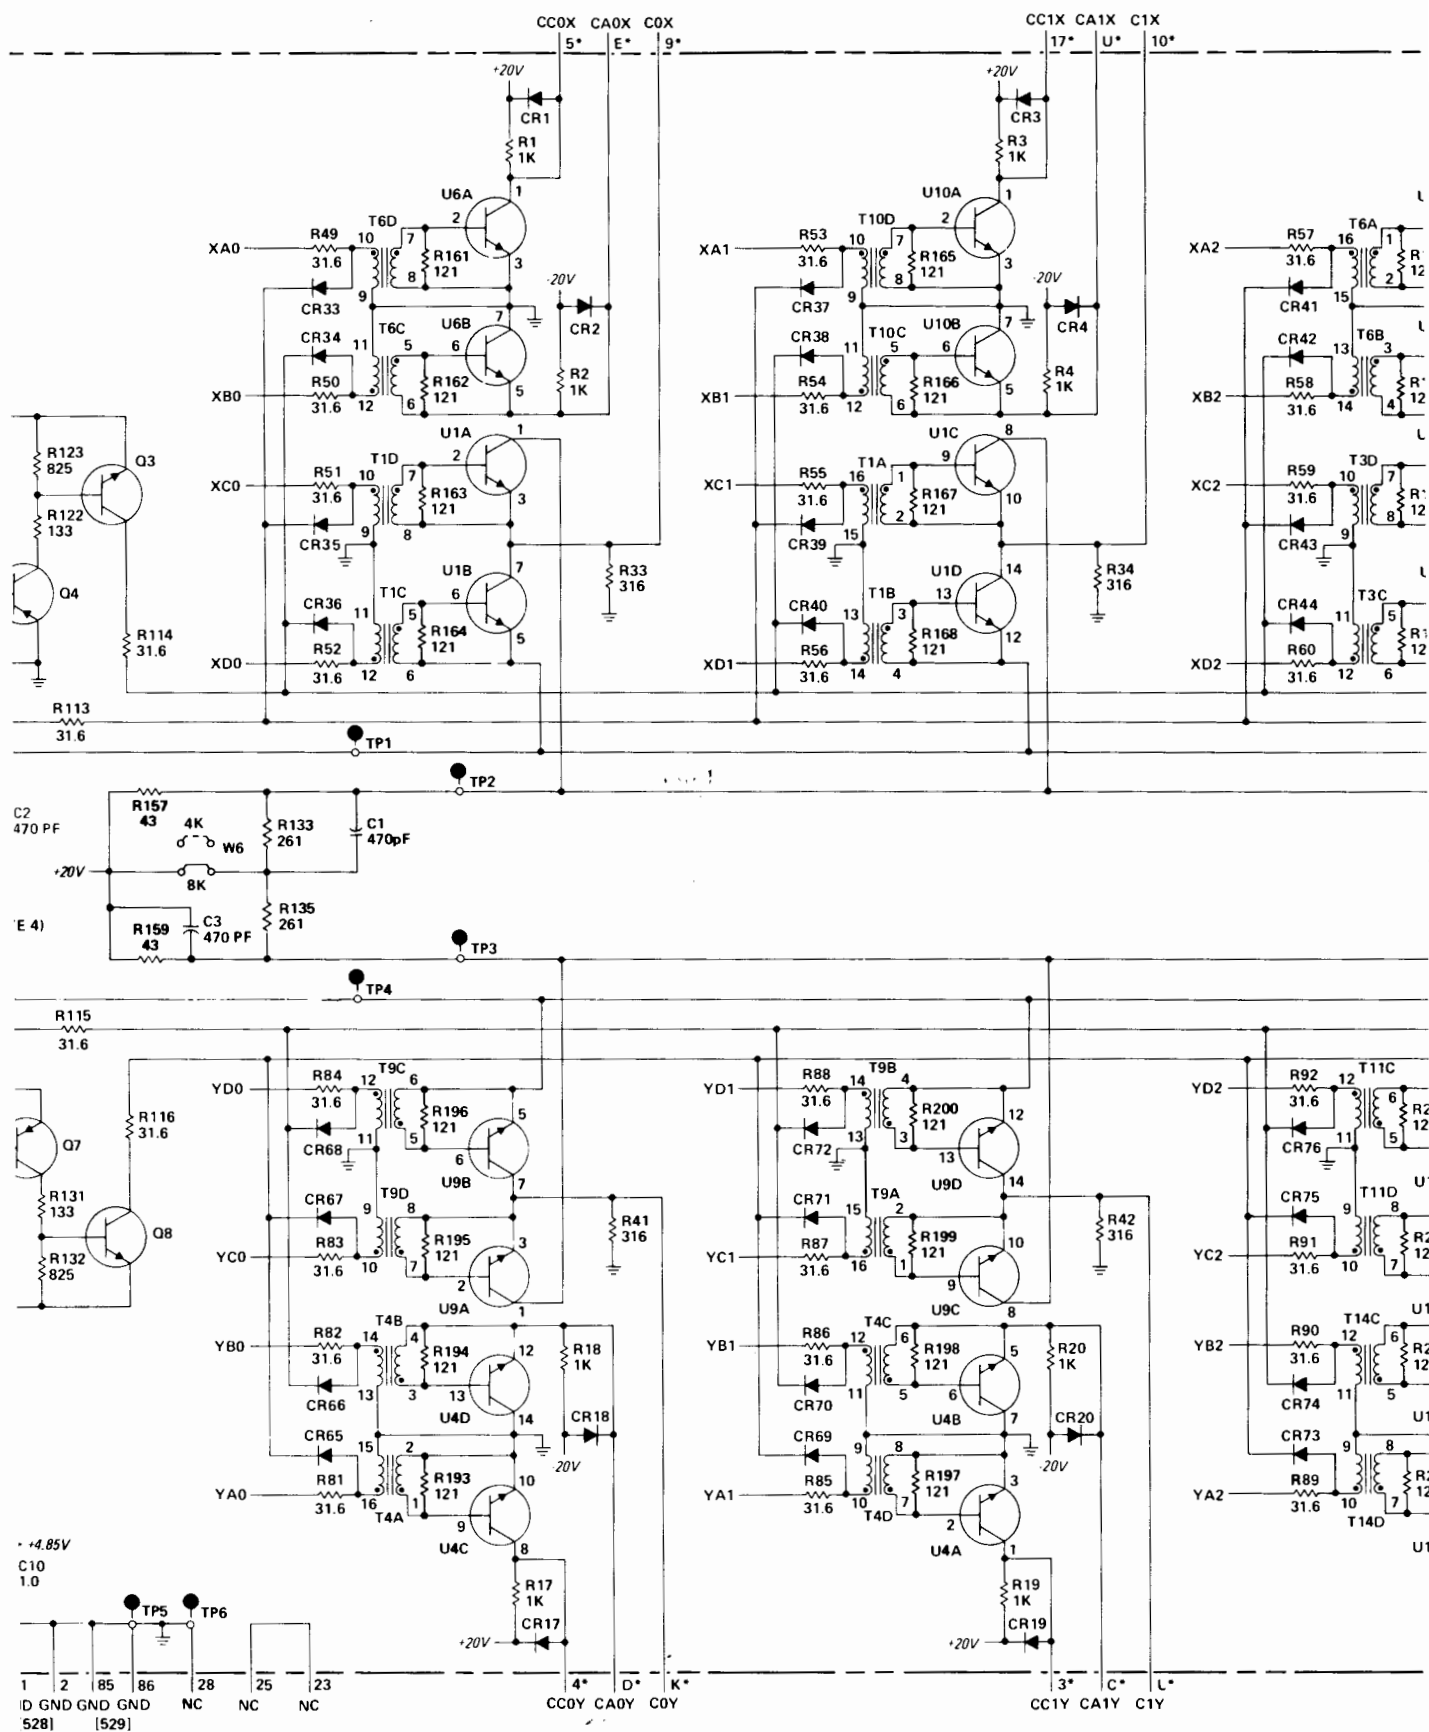


[illegible]

DWG REV. B

* INDICATES SIGNAL SOURCE

A104					
268	A104-46	A107-59*			
277	A101-35	A104-35	A107-3*	A109-35	A112-35
278	A101-36	A104-36	A107-5*	A109-36	A112-36
279	A101-37	A104-37	A107-8*	A109-37	A112-37
280	A101-33	A104-33	A107-10*	A109-33	A112-33
281	A101-32	A104-32	A107-24*	A109-32	A112-32
282	A101-31	A104-31	A107-23*	A109-31	A112-31
283	A101-49	A104-49	A107-25*	A109-49	A112-49
284	A101-52	A104-52	A107-26*	A109-52	A112-52
285	A101-51	A104-51	A107-27*	A109-51	A112-51
286	A101-53	A104-53	A107-4*	A109-53	A112-53
287	A101-56	A104-56	A107-30*	A109-56	A112-56
288	A101-55	A104-55	A107-32*	A109-55	A112-55
289	A107-84*	A101-54,57	A104-54,57	A109-54,57	A112-54,57
291	A107-28*	A101-50,58	A104-50,58	A109-50,58	A112-50,58
305	A1-6	A7-8*	A24-67	A104-42	A107-70
	A10-66 THRU A23-66				
493	A107-65*	A101-30,38	A104-30,38	A109-30,38	A112-30,38
494	A107-64*	A101-29,34	A104-29,34	A109-29,34	A112-29,34

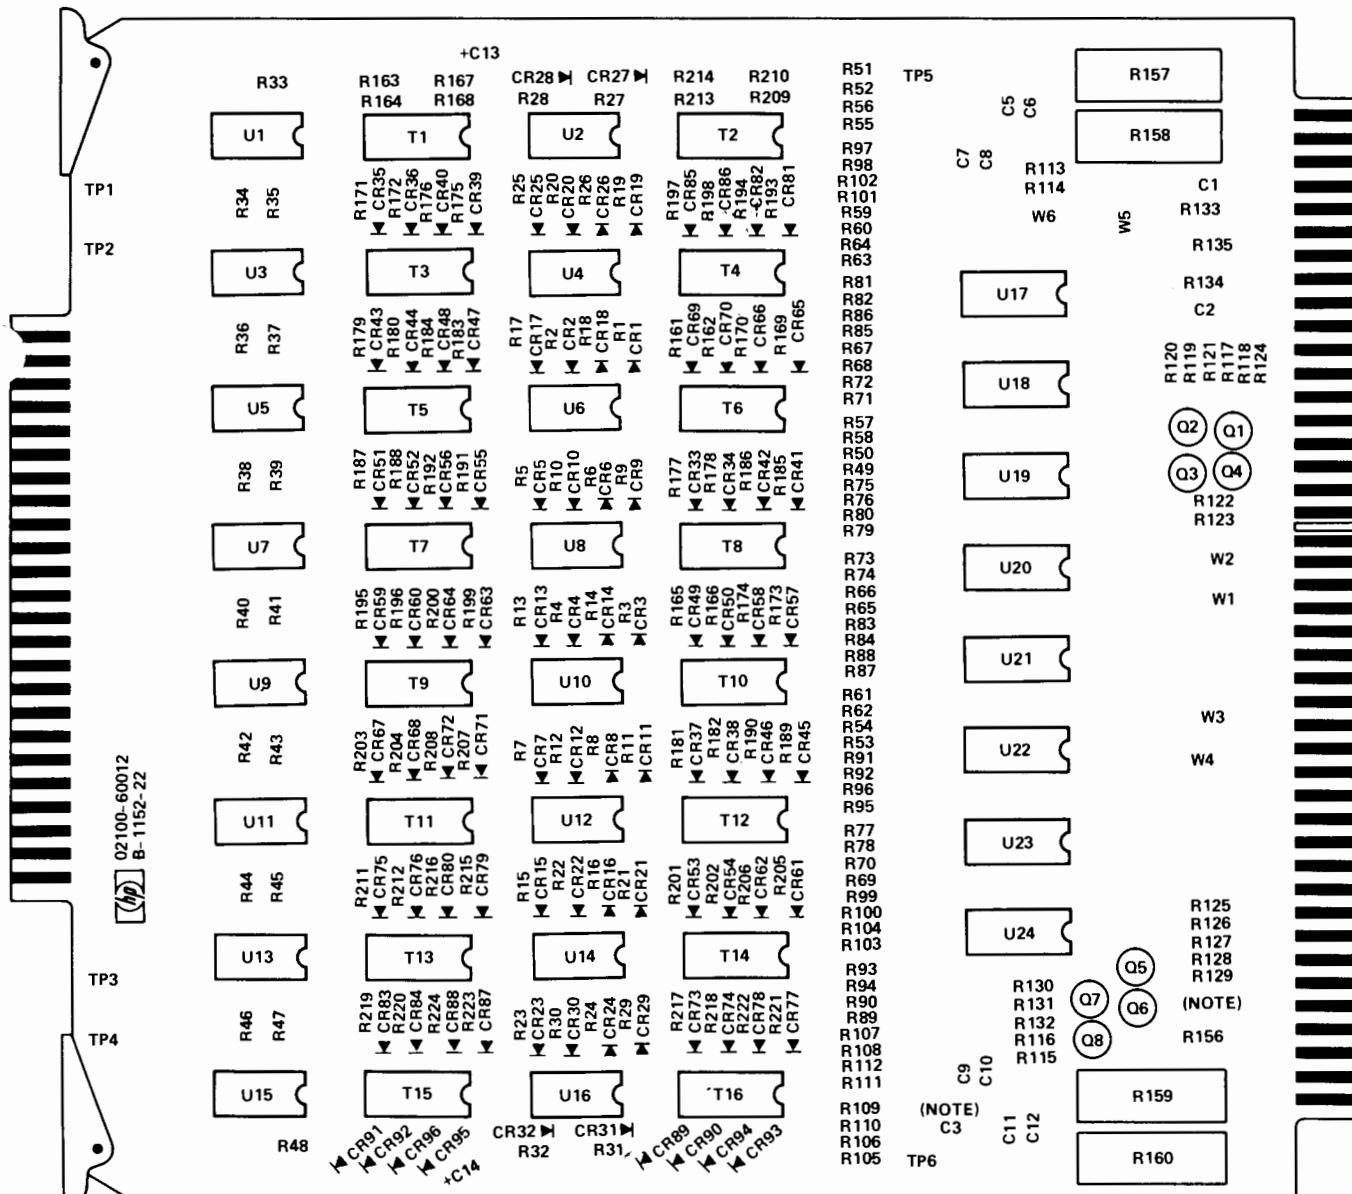

- NOTES:
1. RESISTANCE VALUES ARE
 2. * INDICATE OTHER PIPES
 3. NUMERALS IN BRACKET ARE NUMBERS
 4. C3 WIRED REV. 1132

DWG REV. D

NOTE: C3 IS LOCATED BELOW R129 ON CARD REV. A-1121-22
AND A-1132-22.

See table 4-15 for replaceable parts.

Table 4-18. A105 Inhibit Driver Card (8K), Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A105	02100-60008	1	INHIBIT DRIVER CARD-8K	28480	02100-60008
A105C1	0160-0127	10	C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C2	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C3	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C4	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C7	0160-0128	3	C:FxD CER 2.2 UF 20% 25VDCW	56289	5C152C2S-CML
A105C8	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C9	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C10	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C14	0180-0116	1	C:FxD ELECT 6.8 UF 10% 35VDCW	56289	150D685X9035B2-DYS
A105C15	0180-0374	1	C:FxD TANT. 10 UF 10% 20VDCW	56289	150D106X9020B2-DYS
A105C16	0160-0128		C:FxD CER 2.2 UF 20% 25VDCW	56289	5C152C2S-CML
A105C17	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C18	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C19	0160-0127		C:FxD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C23	0160-0128	34	C:FxD CER 2.2 UF 20% 25VDCW	56289	5C152C2S-CML
A105CR1	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR2	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR3	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR4	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR5	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR6	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR7	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR8	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR9	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR10	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR21	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR22	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR23	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR24	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR25	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR26	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR27	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR28	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR29	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR30	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR31	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR32	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR45	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR46	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR47	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR48	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR49	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR50	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR51	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR52	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR53	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR54	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR55	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105CR56	1901-0620		DIODE BREAKDOWN	28480	1901-0620
A105Q1	1854-0532	34	TSTR:SI NPN	02735	2N5262
A105Q2	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q3	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q4	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q5	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q11	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q12	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q13	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q14	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q15	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q21	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q22	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q23	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q24	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q25	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q26	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q33	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q34	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q35	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q36	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q37	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q38	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q45	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q46	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q47	1854-0532		TSTR:SI NPN	02735	2N5262

Table 4-18. A105 Inhibit Driver Card (8K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A105Q48	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q49	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q50	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q57	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q58	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q59	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q60	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q61	1854-0532		TSTR:SI NPN	02735	2N5262
A105Q62	1854-0532		TSTR:SI NPN	02735	2N5262
A105R1	C757-0394	18	R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R2	C757-0403	34	R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R3	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R4	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R5	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R6	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R7	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R8	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R9	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R10	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R11	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R12	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R14	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R15	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R19	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R24	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R29	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R30	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R31	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R32	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R33	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R34	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R35	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R36	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R37	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R38	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R39	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R40	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R41	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R42	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R43	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R44	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R49	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R54	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R59	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R60	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R61	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R62	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R63	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R64	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R65	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R66	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R67	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R68	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R69	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R70	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R71	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R72	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R73	C757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	Q757-0403
A105R74	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R75	C757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105R84	C757-0394	9	R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	Q757-0394
A105T1	9100-3180		TRANSFORMER	28480	9100-3180
A105T2	9100-3180		TRANSFORMER	28480	9100-3180
A105T3	9100-3180		TRANSFORMER	28480	9100-3180
A105T6	9100-3180		TRANSFORMER	28480	9100-3180
A105T7	9100-3180		TRANSFORMER	28480	9100-3180
A105T8	9100-3180		TRANSFORMER	28480	9100-3180
A105T12	9100-3180		TRANSFORMER	28480	9100-3180
A105T13	9100-3180		TRANSFORMER	28480	9100-3180
A105T14	9100-3180		TRANSFORMER	28480	9100-3180
A105U11	1820-0140	1	IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A105U12	1820-0621	9	IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U13	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U14	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U31	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N

Table 4-18. A105 Inhibit Driver Card (8K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A105U32	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U33	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U41	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U42	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U43	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N



REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE

A105 (8K)			
59	A105-5	A105-6	
61	A103-25	A105-10*	
62	A103-27	A105-7*	
63	A103-29	A105-8*	
64	A103-31	A105-9*	
65	A103-33	A105-37*	
66	A103-35	A105-32*	
67	A103-37	A105-33*	
68	A103-41	A105-34*	
69	A103-43	A105-31*	
70	A103-45	A105-46*	
71	A103-49	A105-49*	
72	A103-51	A105-50*	
73	A103-53	A105-61*	
74	A103-55	A105-69*	
75	A103-57	A105-70*	
76	A103-59	A105-71*	
77	A103-61	A105-15*	
78	A103-26	A105-14*	
79	A103-28	A105-11*	
80	A103-30	A105-12*	
81	A103-32	A105-13*	
82	A103-34	A105-38*	
83	A103-36	A105-43*	
84	A103-38	A105-41*	
85	A103-42	A105-42*	
86	A103-44	A105-72*	
87	A103-46	A105-68*	
88	A103-50	A105-66*	
89	A103-52	A105-67*	
90	A103-54	A105-65*	
91	A103-56	A105-62*	
92	A103-58	A105-63*	
93	A103-60	A105-64*	
94	A103-62	A105-16*	





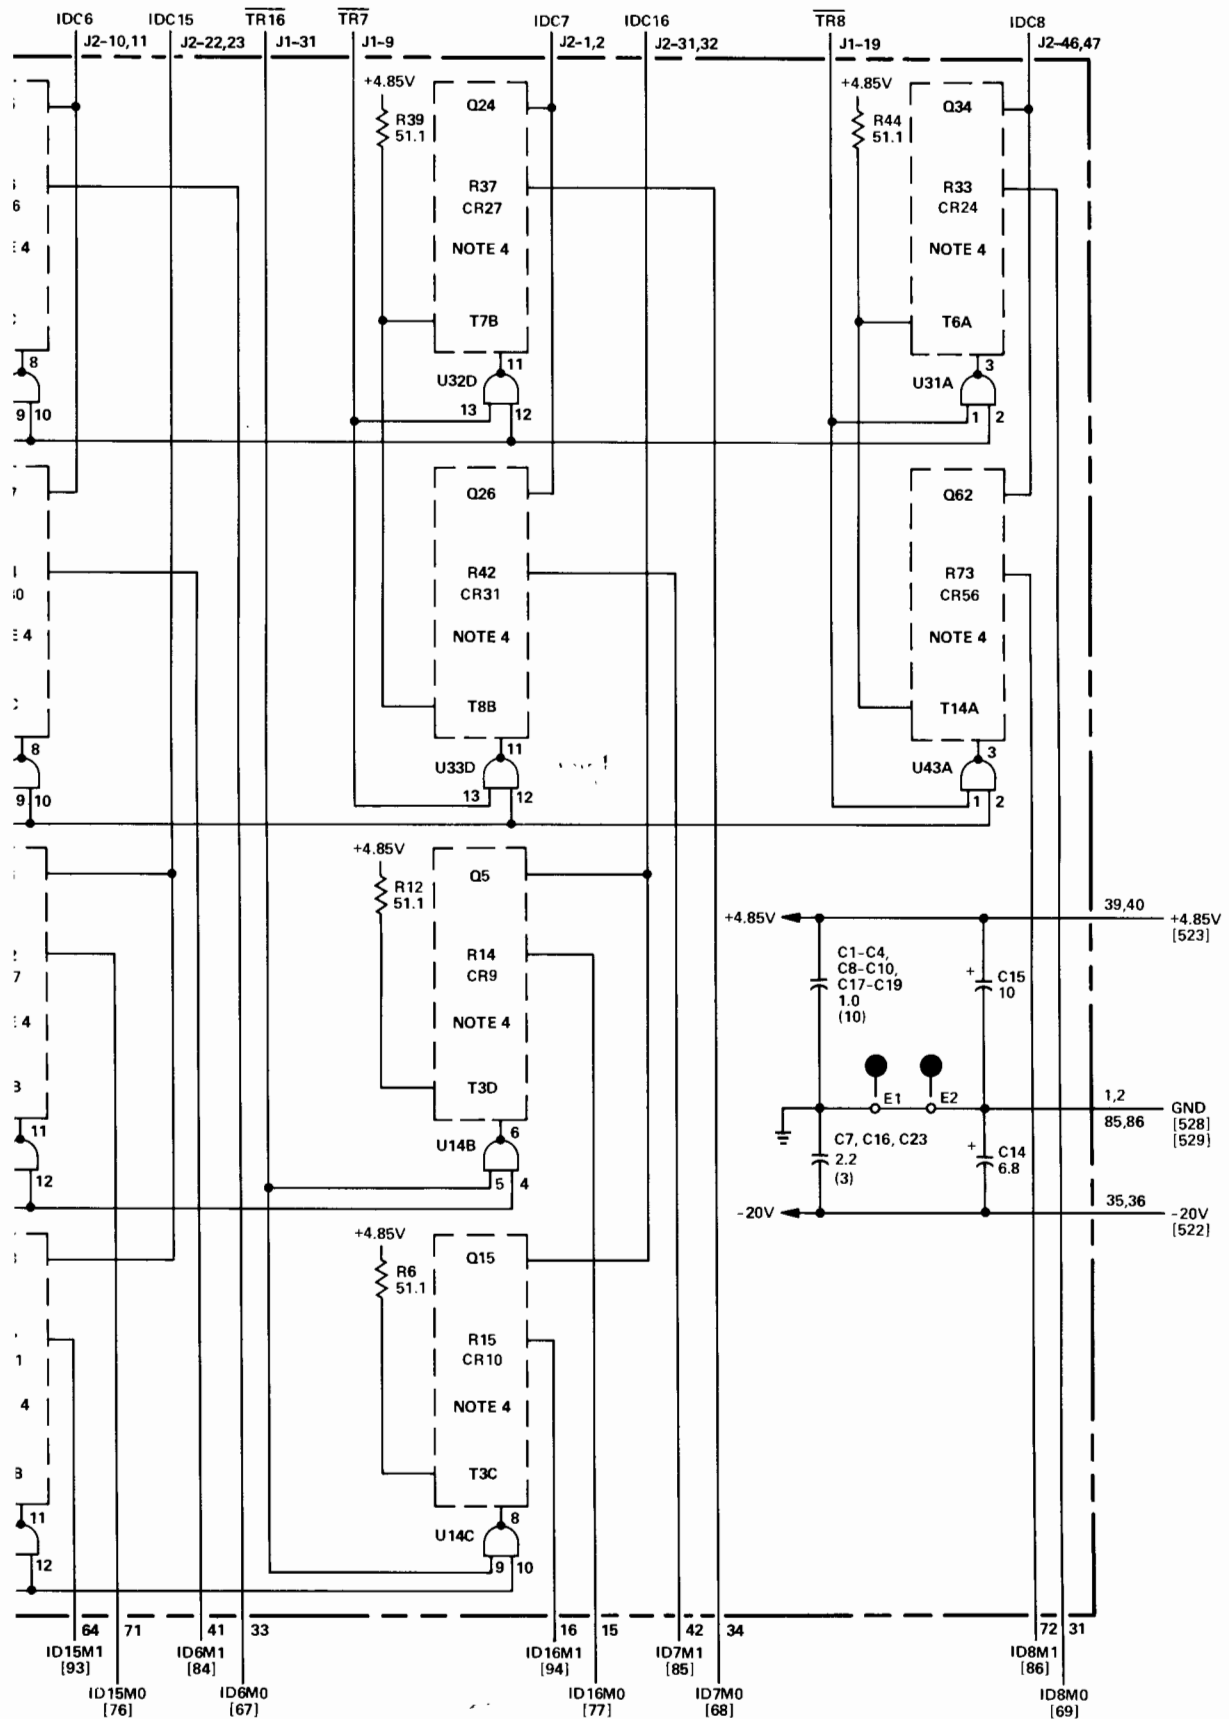


Figure 4-22. A105 Inhibit Driver Card (8K), Parts Location and Schematic Diagrams

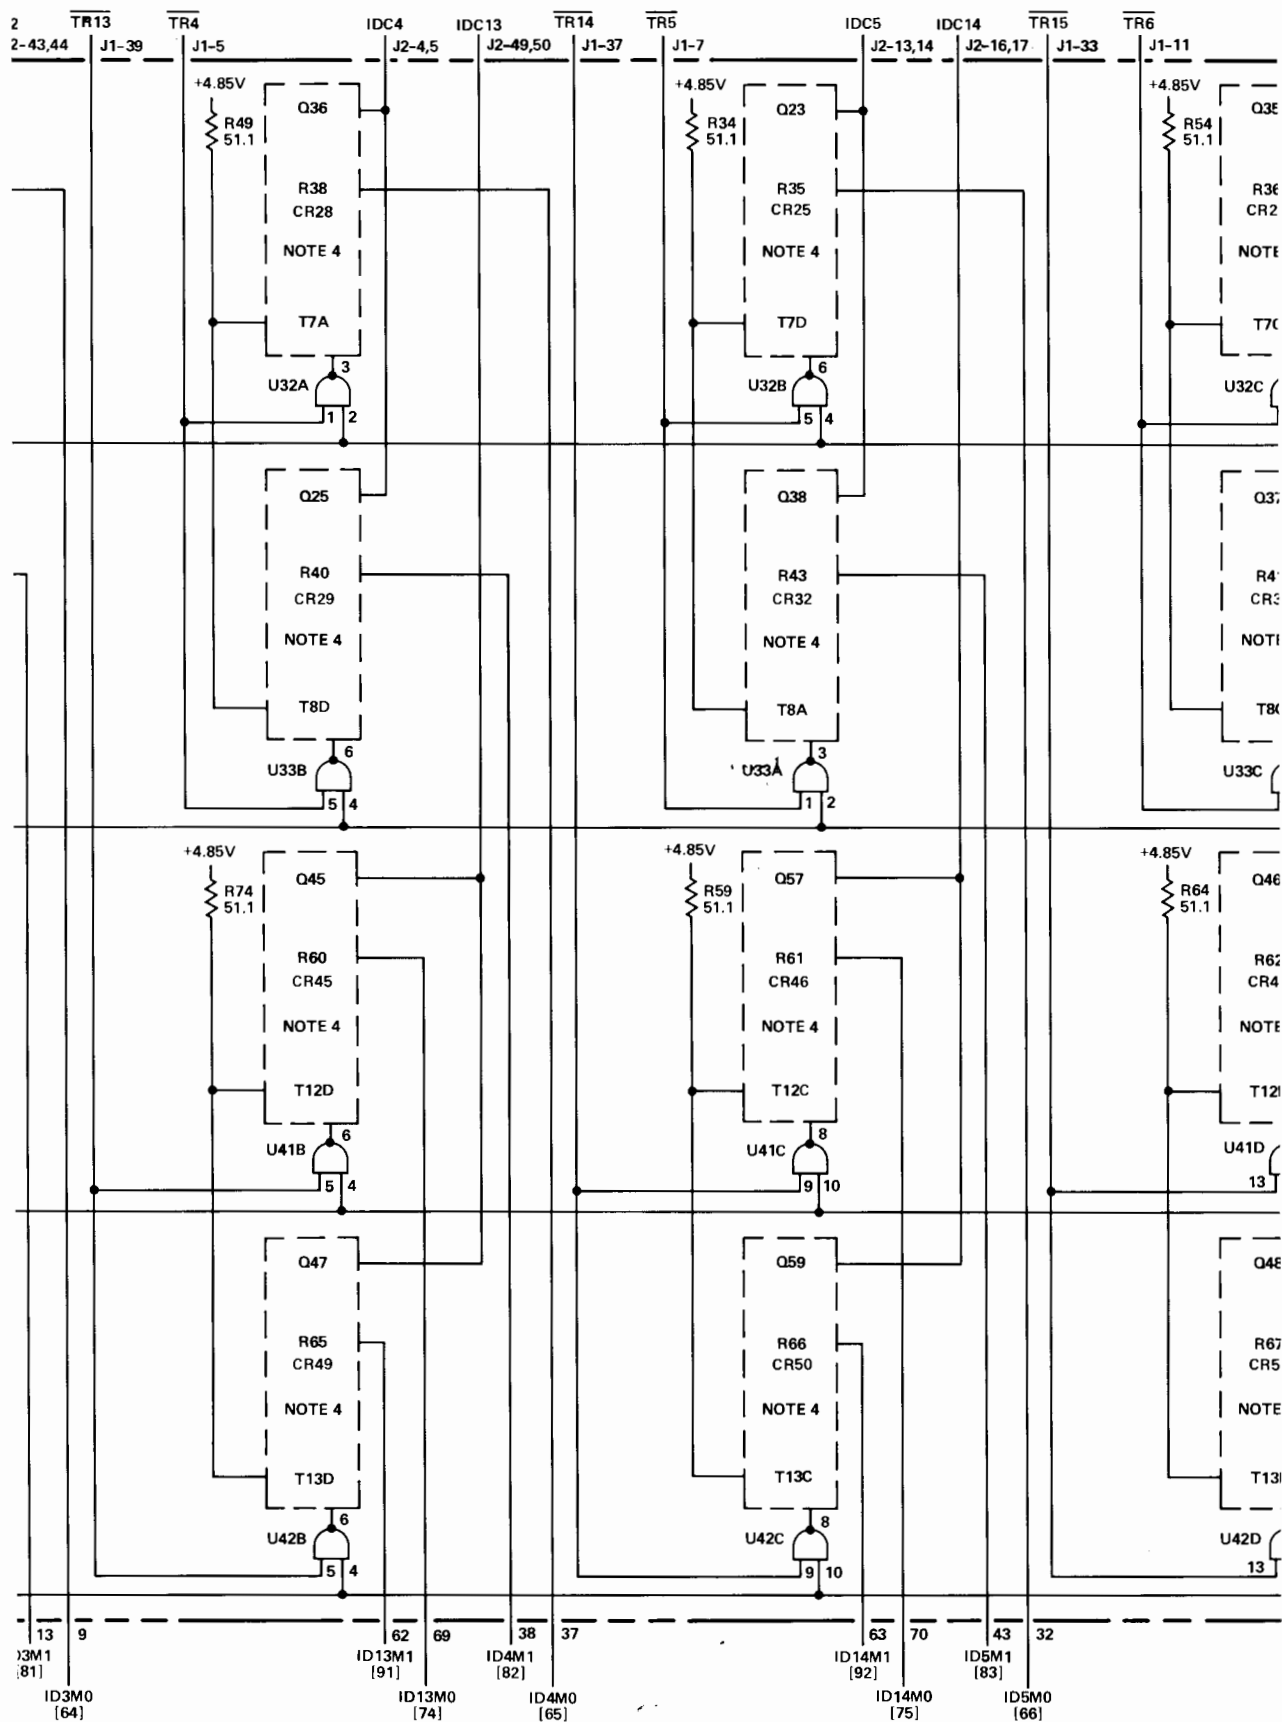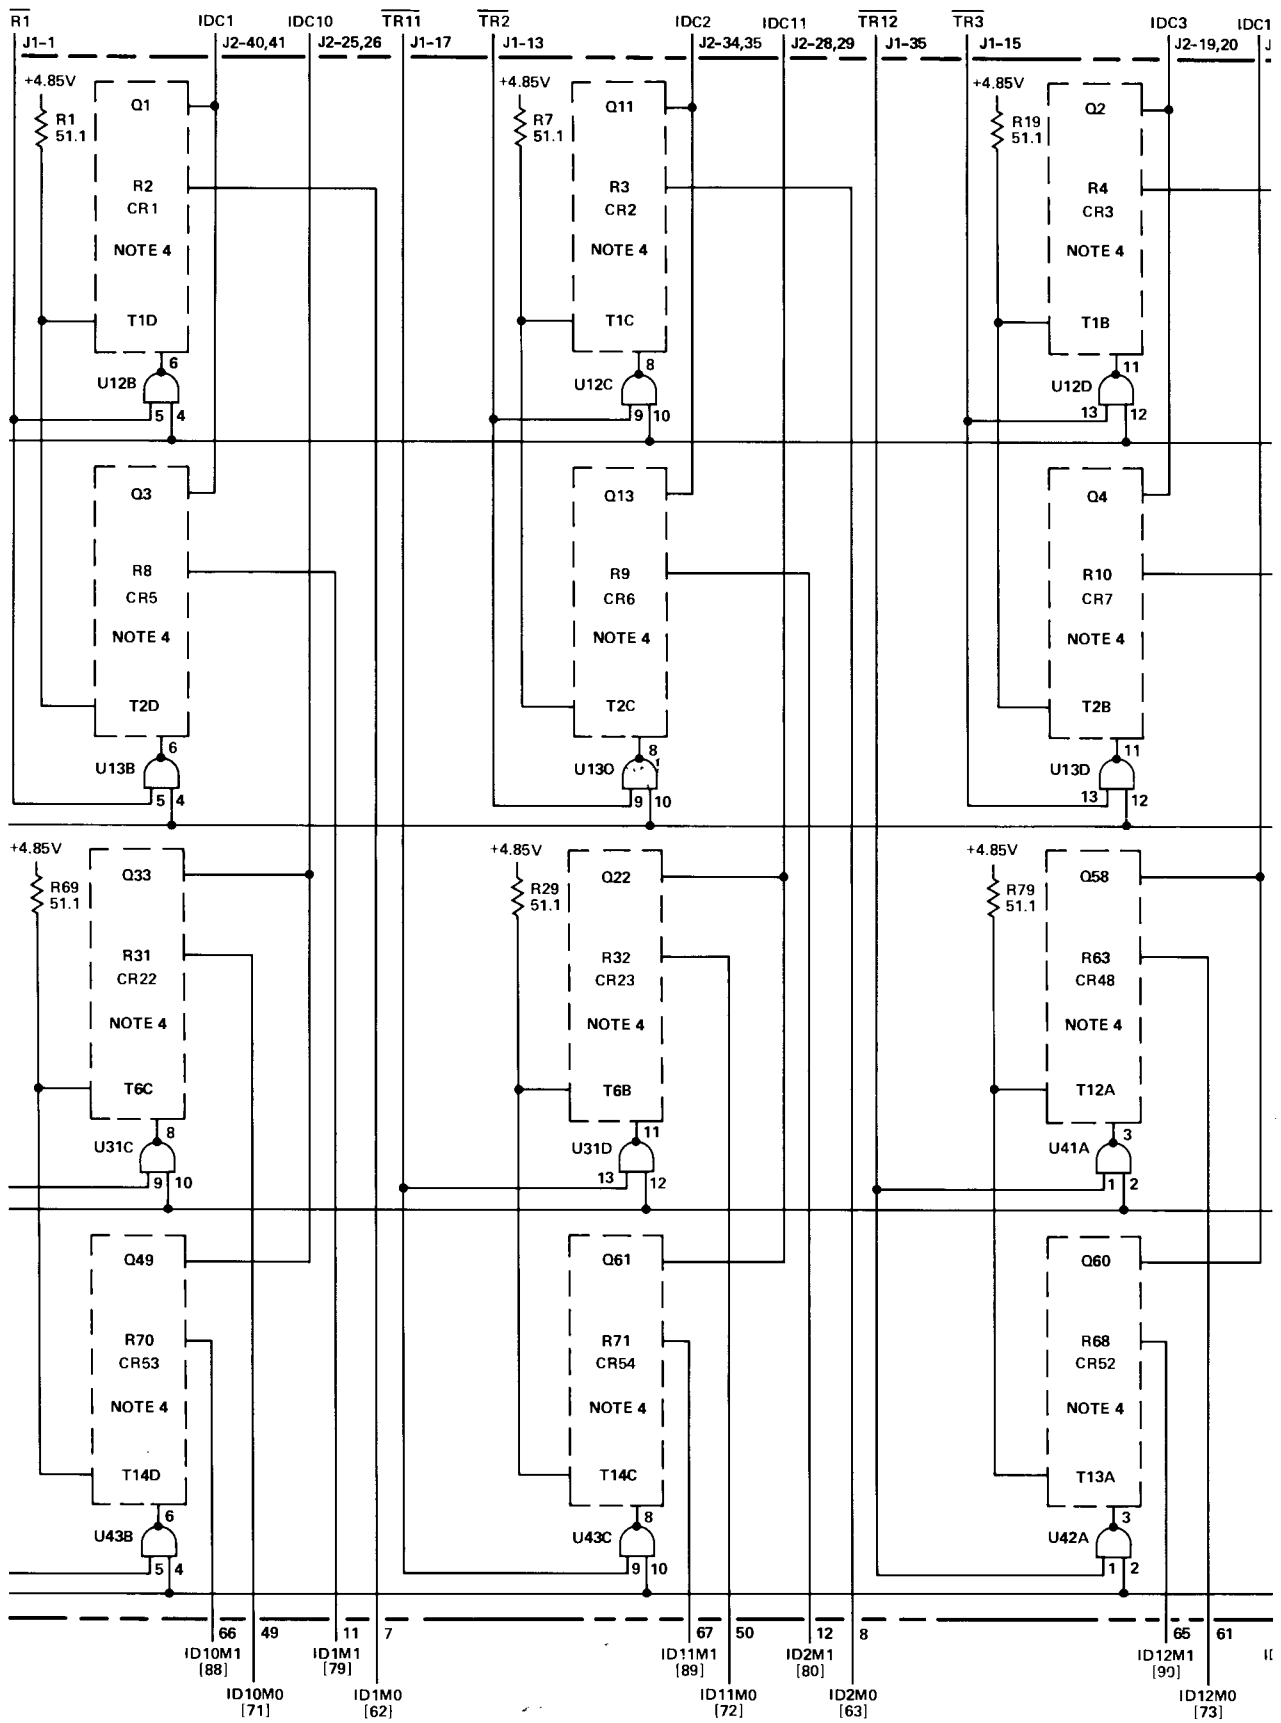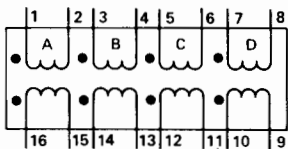

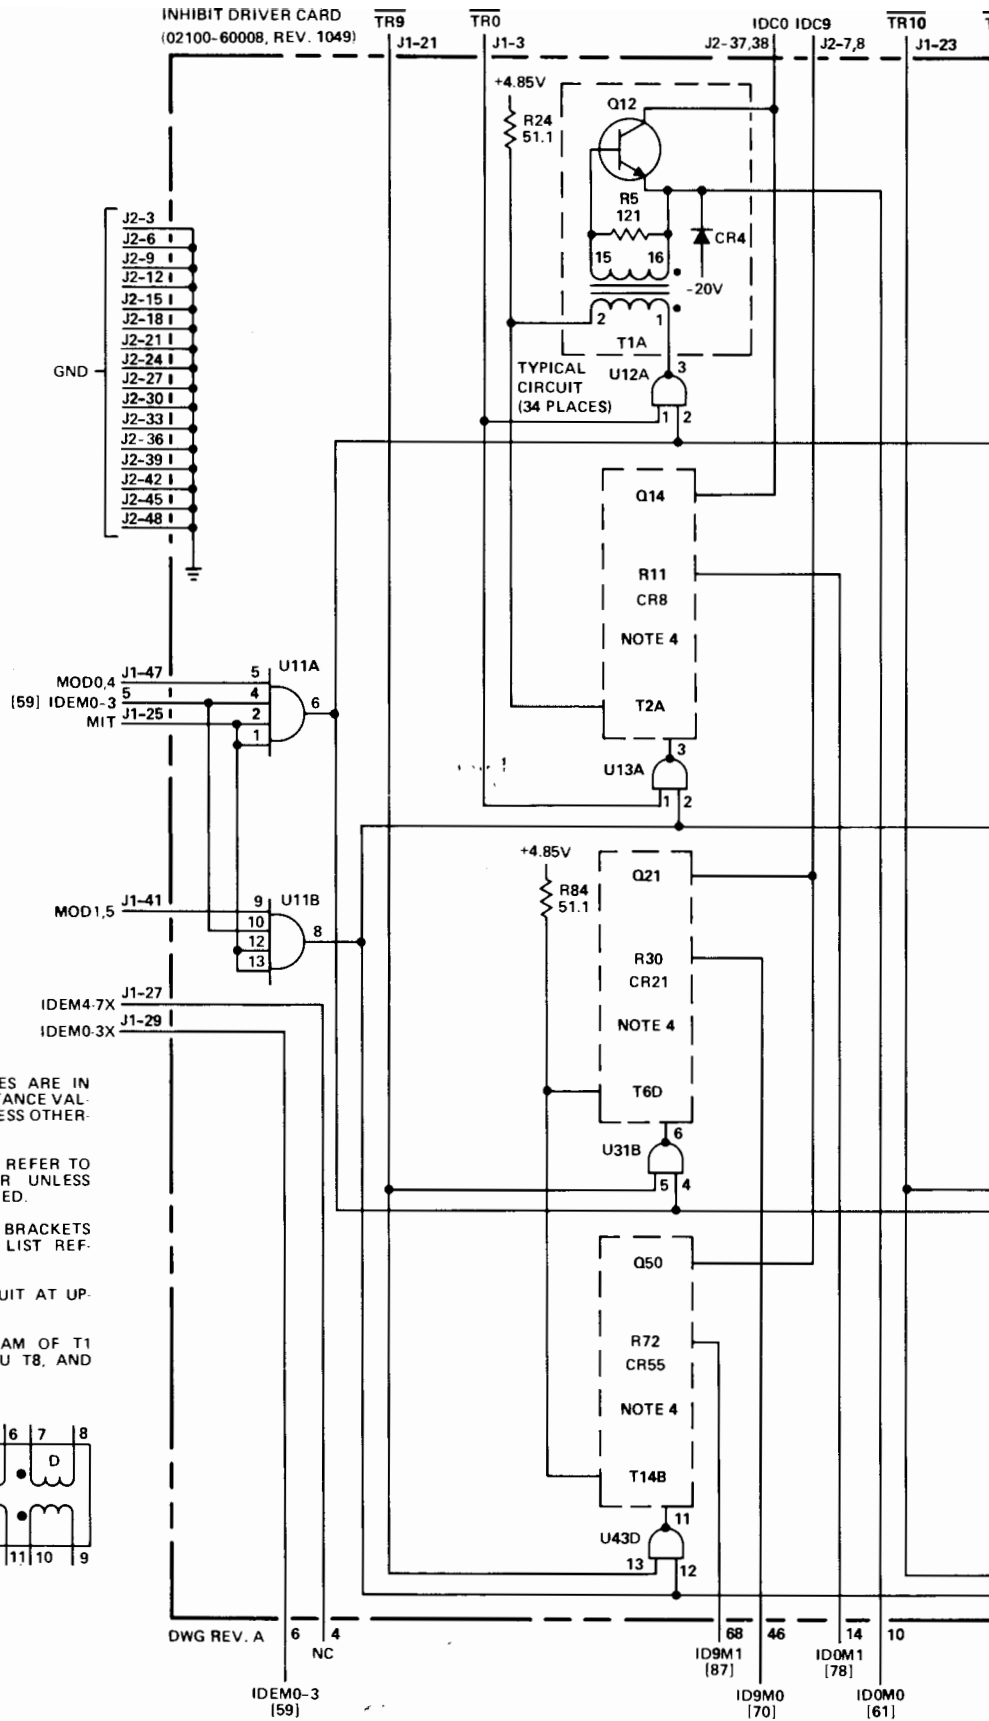

INHIBIT DRIVER CARD
(02100-60008, REV. 1049)



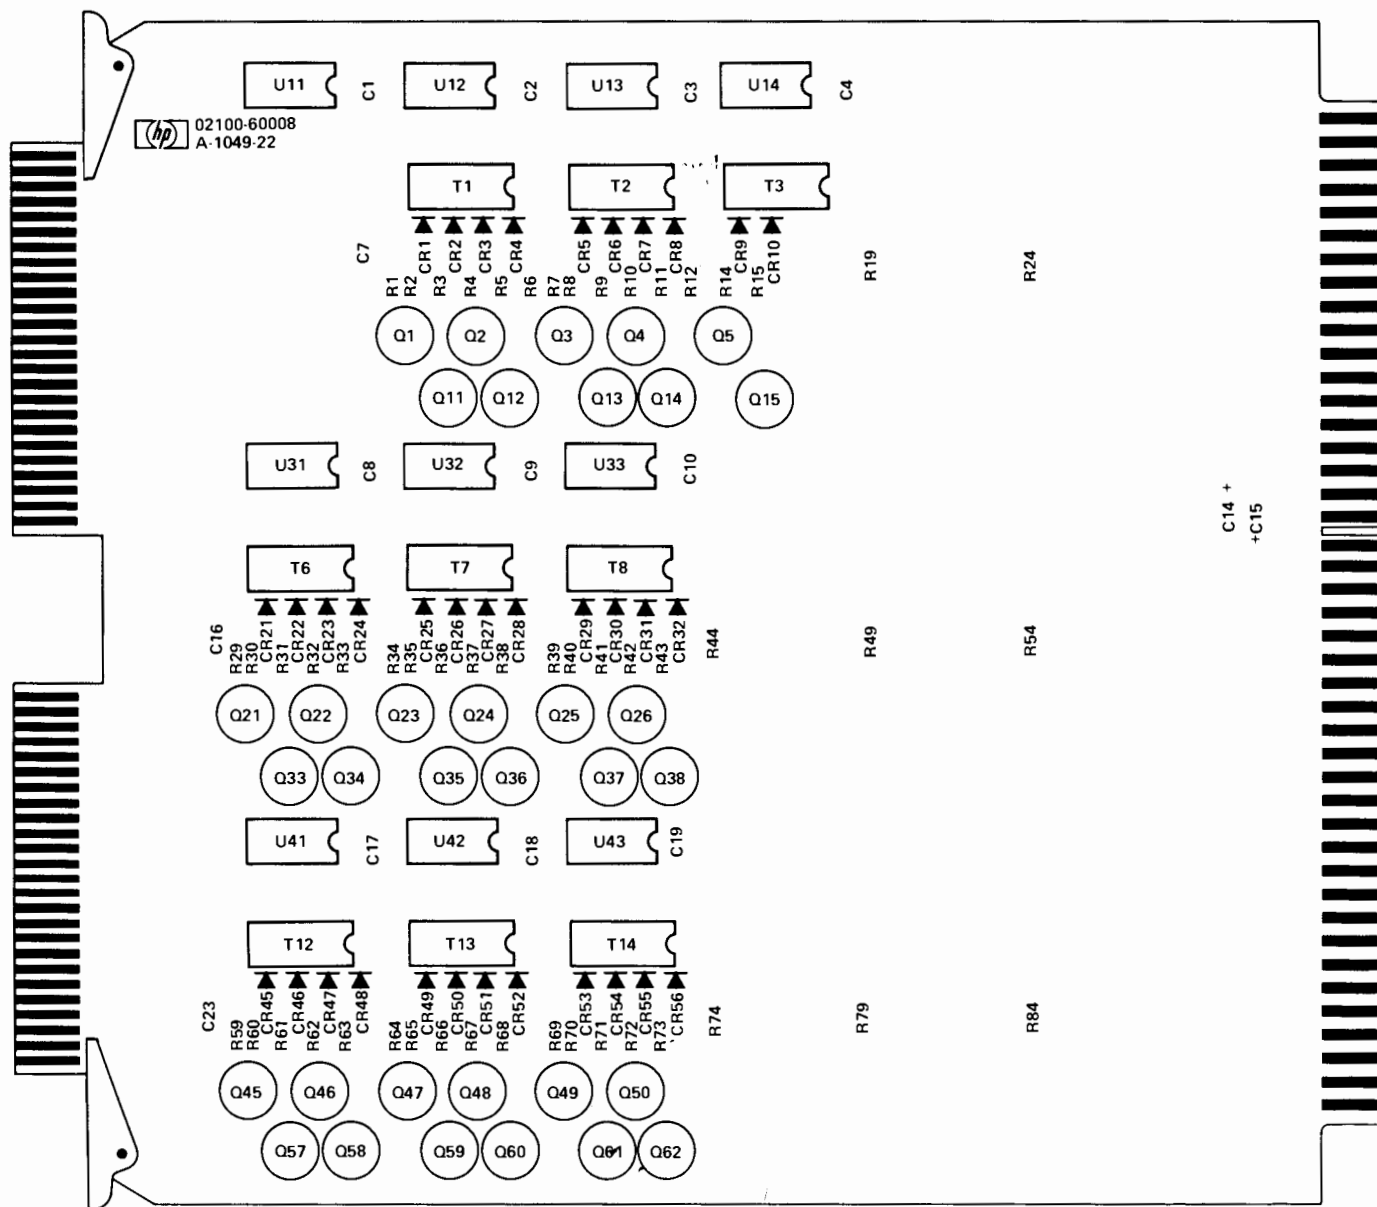


Table 4-19. A105, A108 Inhibit Driver Card (16K), Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A105	02100-60009	2	INHIBIT DRIVER CARD - 16K	28480	02100-60009
A105C1	0160-0127	18	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C2	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C3	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C4	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C5	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C6	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C7	0160-0128	3	C:FXD CER 2.2 UF 20% 25VDCW	56289	5C152C2S-CML
A105C8	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C9	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C10	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C11	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C12	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C13	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C14	0180-0116	1	C:FXD ELECT 6.8 UF 10% 35VDCW	56289	150D685X9035B2-DYS
A105C15	0180-0374	1	C:FXD TANT. 10 UF 10% 20VDCW	56289	150D106X9020B2-DYS
A105C16	0160-0128		C:FXD CER 2.2 UF 20% 25VDCW	56289	5C152C2S-CML
A105C17	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C18	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C19	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C20	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C21	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C22	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A105C23	0160-0128		C:FXD CER 2.2 UF 20% 25VDCW	56289	5C152C2S-CML
A105CR1 THRU A105CR68	1901-0620	68	DIODE BREAKDOWN	28480	1901-0620
A105Q1 THRU A105Q68	1854-0532	68	TSTR:SI NPN	02735	2N5262
A105R1	0757-0394	20	R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R2	0757-0403	68	R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R3	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R4	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R5	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R6	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R7	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R8	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R9	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R10	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R11	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R12	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R13	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R14	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R15	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R16	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R17	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R18	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R19	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R20	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R21	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R22	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R23	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R24	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R25	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R26	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R27	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R28	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R29	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R30	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R31	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R32	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R33	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R34	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R35	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R36	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R37	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R38	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R39	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R40	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R41	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R42	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R43	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R44	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R45	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403

Table 4-19. A105, A108 Inhibit Driver Card (16K), Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A105R46	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R47	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R48	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R49	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R50	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R51	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R52	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R53	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R54	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R55	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R56	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R57	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R58	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R59	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R60	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R61	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R62	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R63	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R64	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R65	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R66	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R67	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R68	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R69	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R70	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R71	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R72	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R73	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R74	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R75	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R76	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R77	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R78	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R79	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R80	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R81	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R82	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R83	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R84	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A105R85	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R86	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R87	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105R88	0757-0403		R:FXD MET FLM 121 OHM 1% 1/8W	28480	0757-0403
A105T1 THRU A105T17	9100-3180	17	TRANSFORMER	28480	9100-3180
A105U11	1820-0140	2	IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A105U12	1820-0621	17	IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U13	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U14	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U15	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U16	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U21	1820-0140		IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A105U31	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U32	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U33	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U34	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U35	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U36	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U41	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U42	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U43	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U44	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U45	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A105U46	1820-0621		IC:TTL QUAD 2-INPT NAND BUFFER W/OPEN C	01295	SN7438N
A108			SAME AS A105, USE PREFIX A108		

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE

A105 (16K)			
59	A105-5	A105-6	
61	A103-25	A105-10*	
62	A103-27	A105-7*	
63	A103-29	A105-8*	
64	A103-31	A105-9*	
65	A103-33	A105-37*	
66	A103-35	A105-32*	
67	A103-37	A105-33*	
68	A103-41	A105-34*	
69	A103-43	A105-31*	
70	A103-45	A105-46*	
71	A103-49	A105-49*	
72	A103-51	A105-50*	
73	A103-53	A105-61*	
74	A103-55	A105-69*	
75	A103-57	A105-70*	
76	A103-59	A105-71*	
77	A103-61	A105-15*	
78	A103-26	A105-14*	
79	A103-28	A105-11*	
80	A103-30	A105-12*	
81	A103-32	A105-13*	
82	A103-34	A105-38*	
83	A103-36	A105-43*	
84	A103-38	A105-41*	
85	A103-42	A105-42*	
86	A103-44	A105-72*	
87	A103-46	A105-68*	
88	A103-50	A105-66*	
89	A103-52	A105-67*	
90	A103-54	A105-65*	
91	A103-56	A105-62*	
92	A103-58	A105-63*	
93	A103-60	A105-64*	
94	A103-62	A105-16*	
95	A102-25	A105-26*	
96	A102-27	A105-19*	
97	A102-29	A105-25*	
98	A102-31	A105-24*	
99	A102-33	A105-53*	
100	A102-35	A105-60*	
101	A102-37	A105-59*	
102	A102-41	A105-58*	
103	A102-43	A105-52*	
104	A102-45	A105-44*	
105	A102-49	A105-51*	
106	A102-51	A105-45*	
107	A102-53	A105-76*	
108	A102-55	A105-73*	
109	A102-57	A105-74*	
110	A102-59	A105-75*	
111	A102-61	A105-17*	
112	A102-26	A105-20*	
113	A102-28	A105-23*	
114	A102-30	A105-22*	
115	A102-32	A105-21*	
116	A102-34	A105-57*	
117	A102-36	A105-54*	
118	A102-38	A105-56*	
119	A102-42	A105-55*	
120	A102-44	A105-78*	
121	A102-46	A105-79*	
122	A102-50	A105-81*	
123	A102-52	A105-80*	
124	A102-54	A105-84*	
125	A102-56	A105-77*	
126	A102-58	A105-83*	
127	A102-60	A105-82*	
128	A102-62	A105-18*	





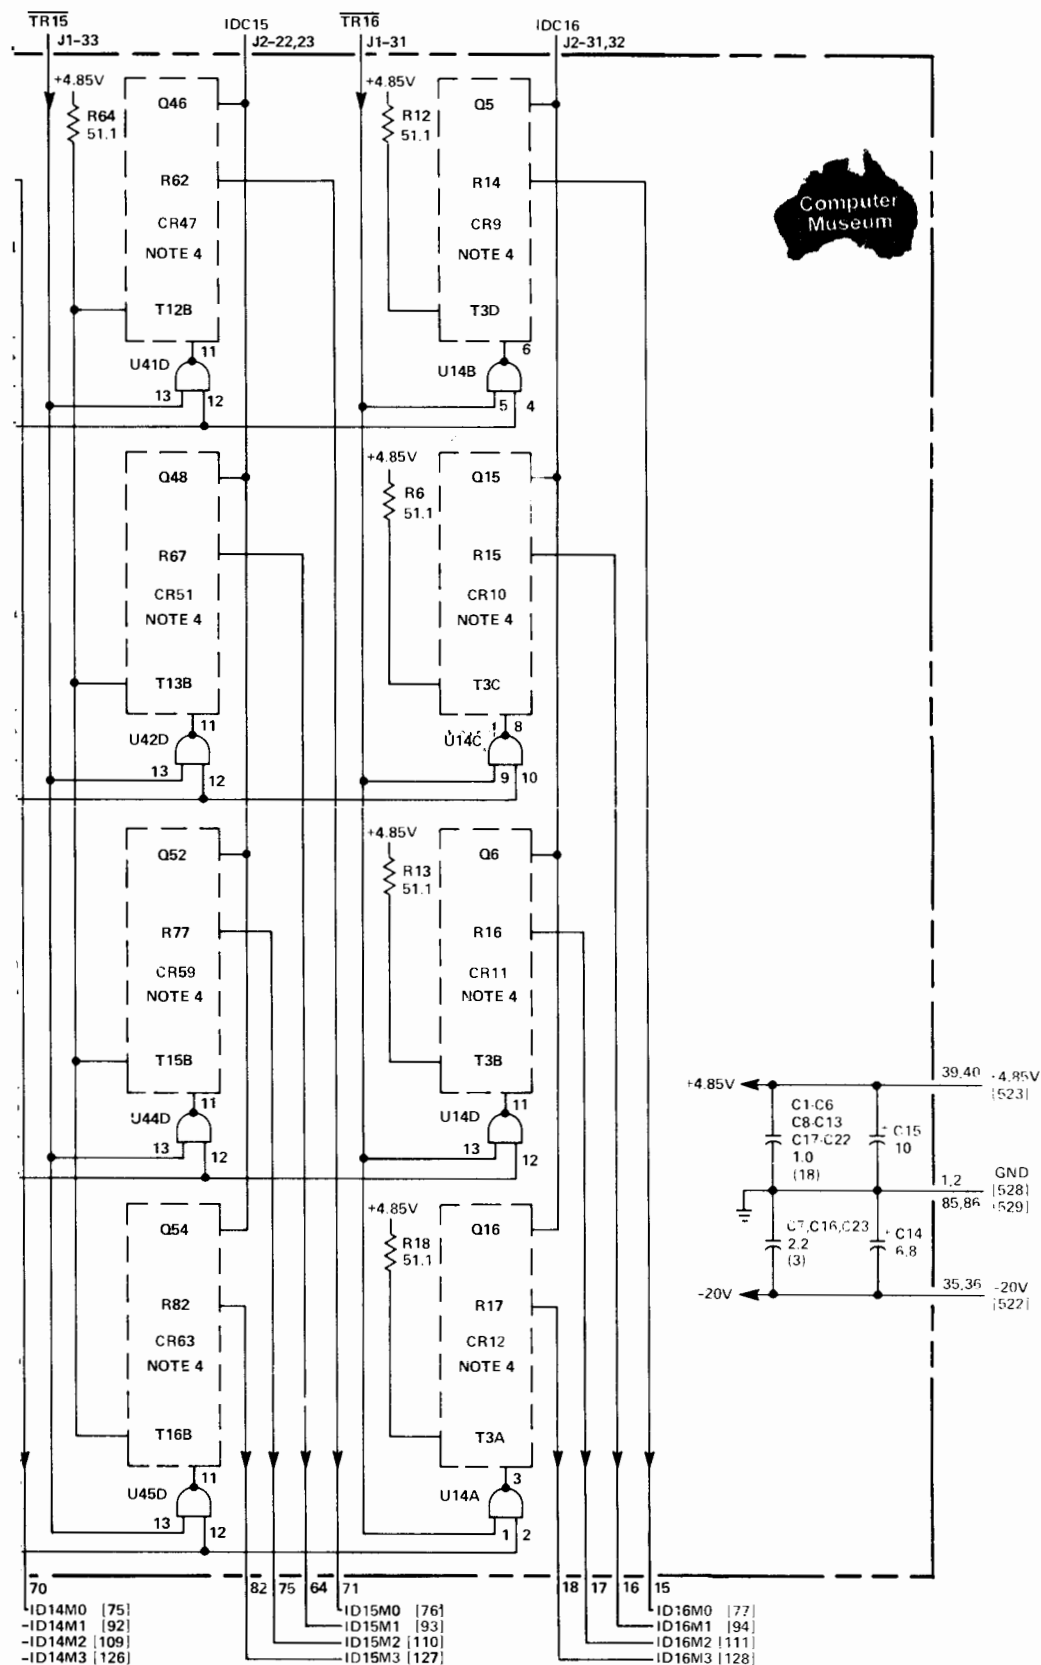


Figure 4-23. A105 Inhibit Driver Card (16K), Parts Location and Schematic Diagrams

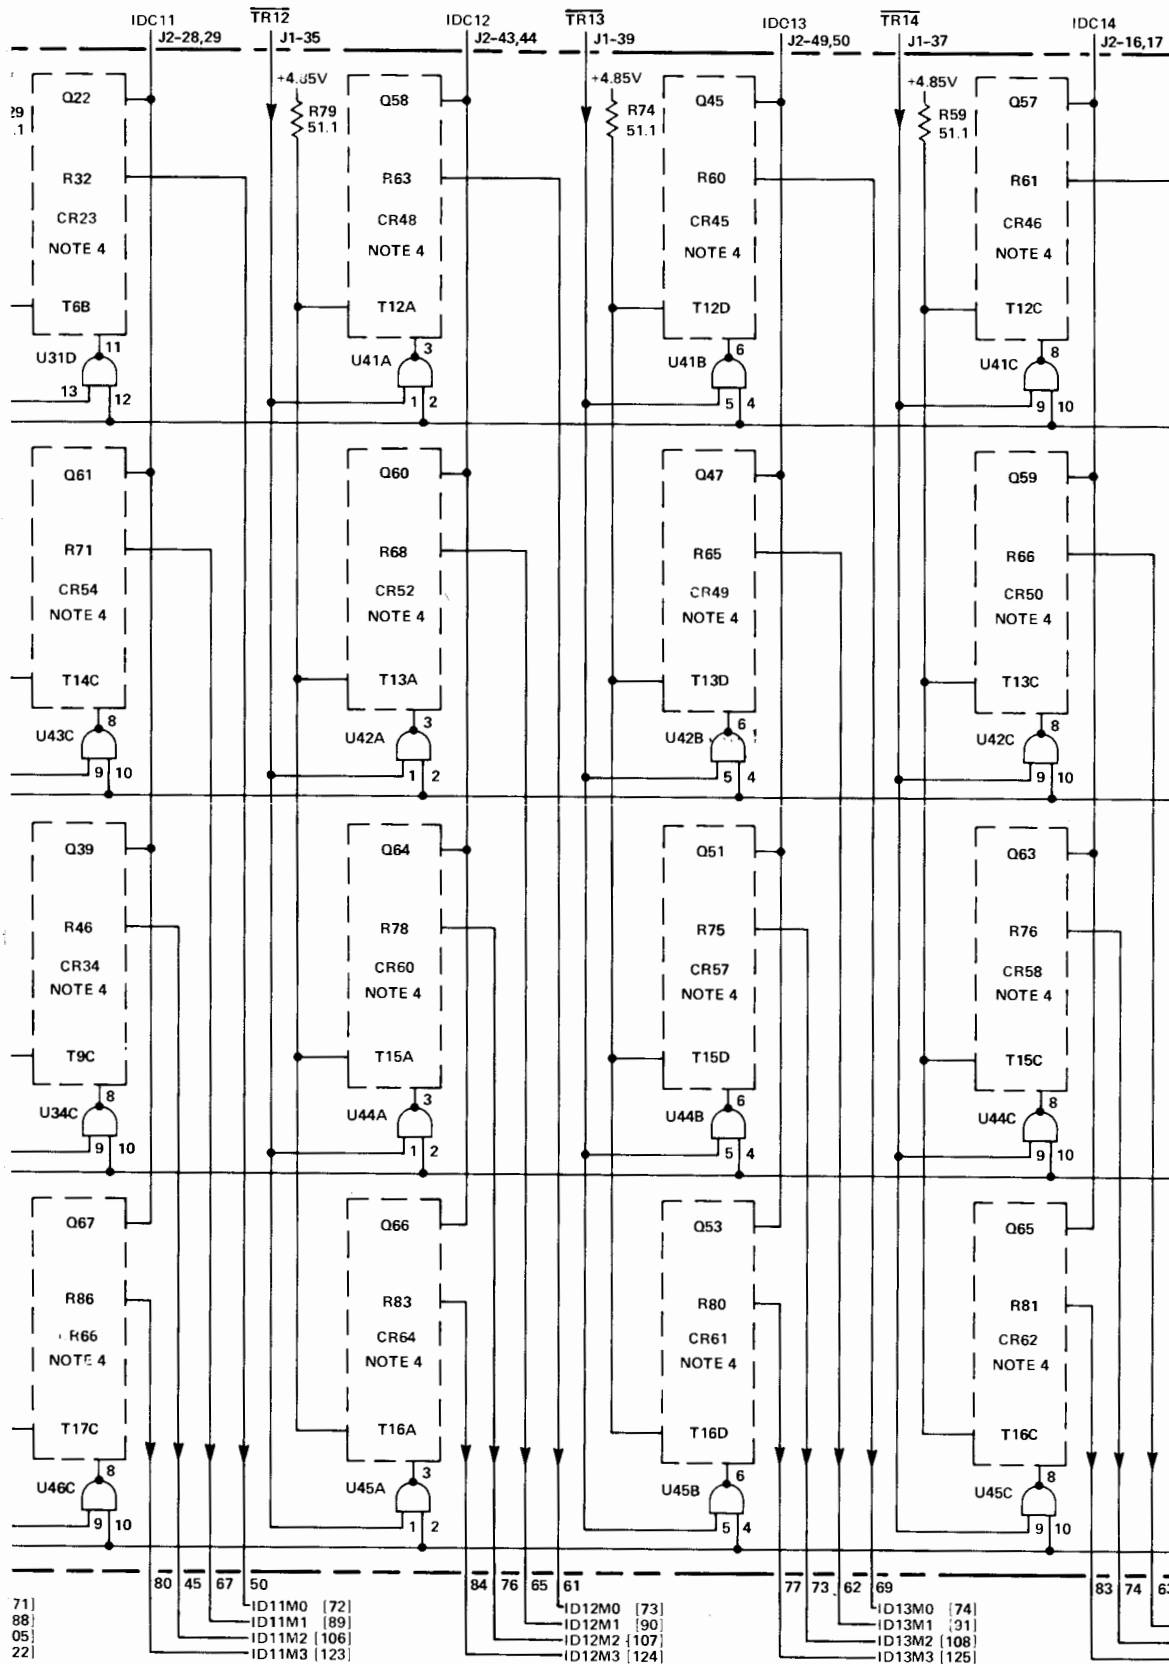


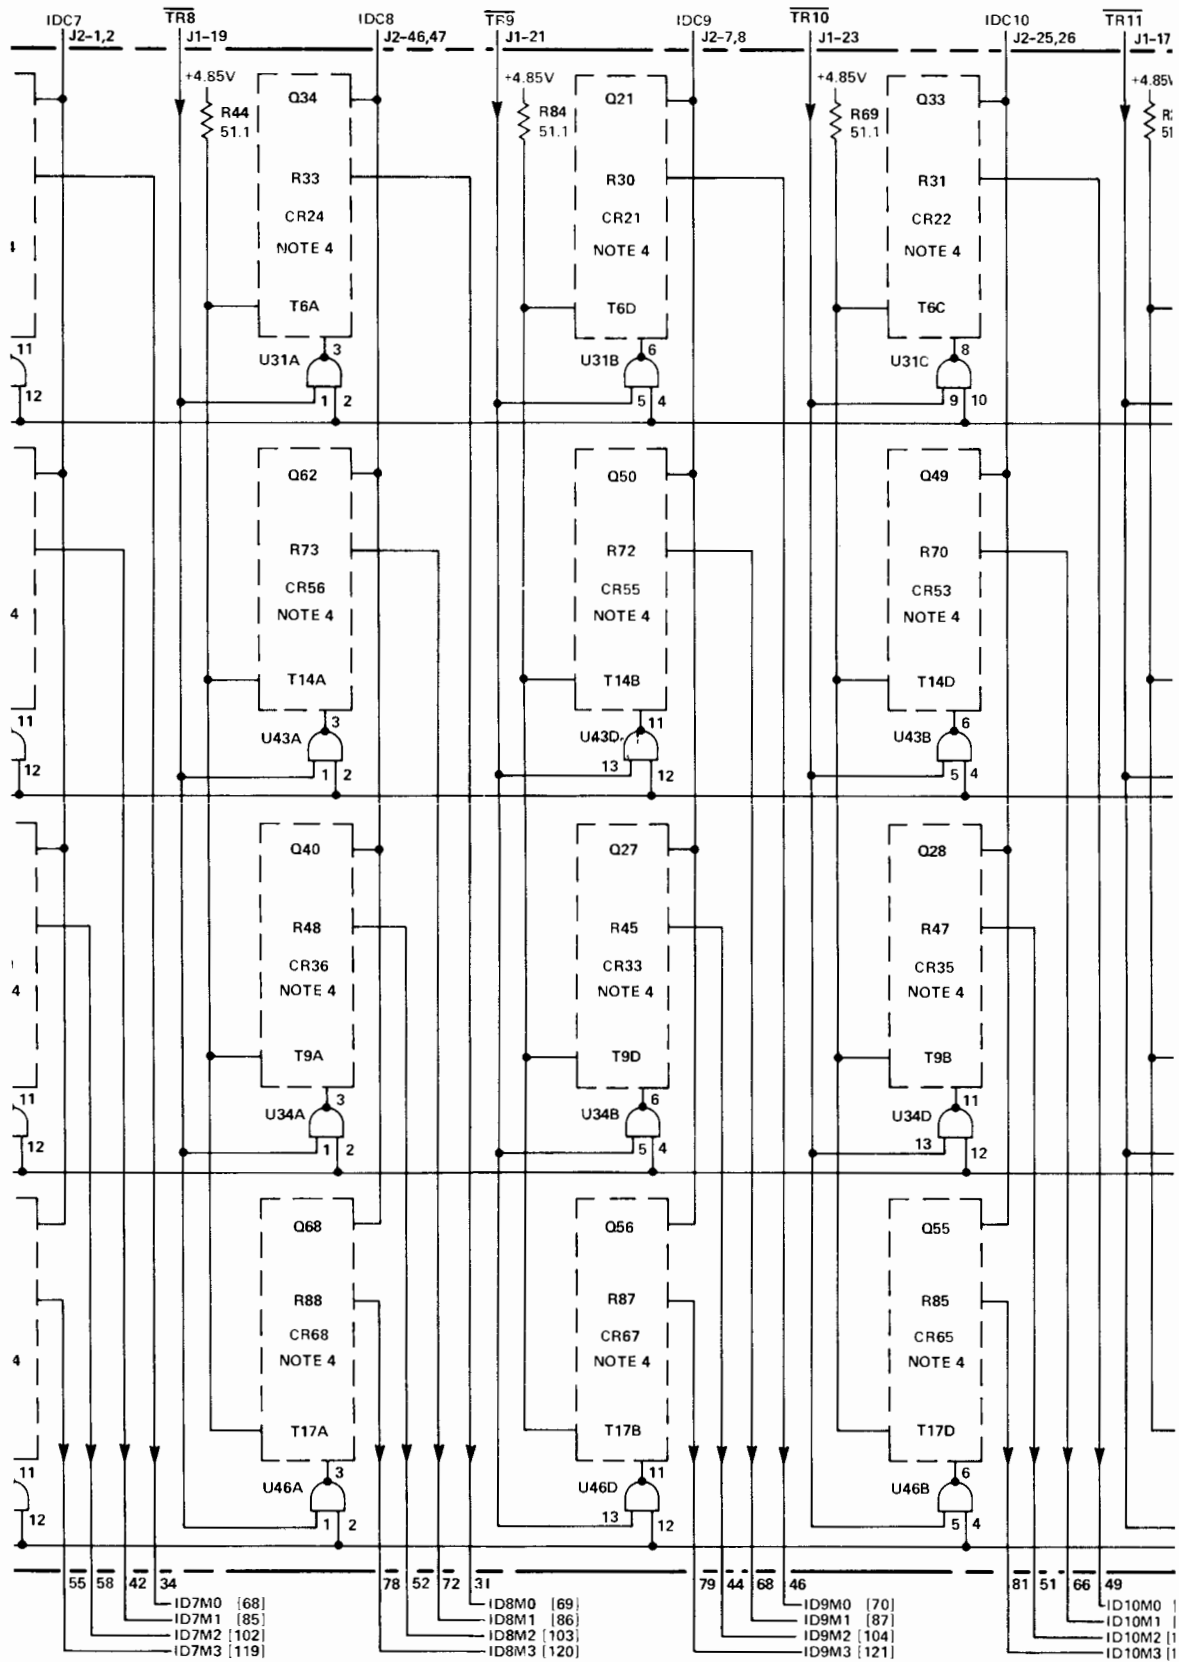

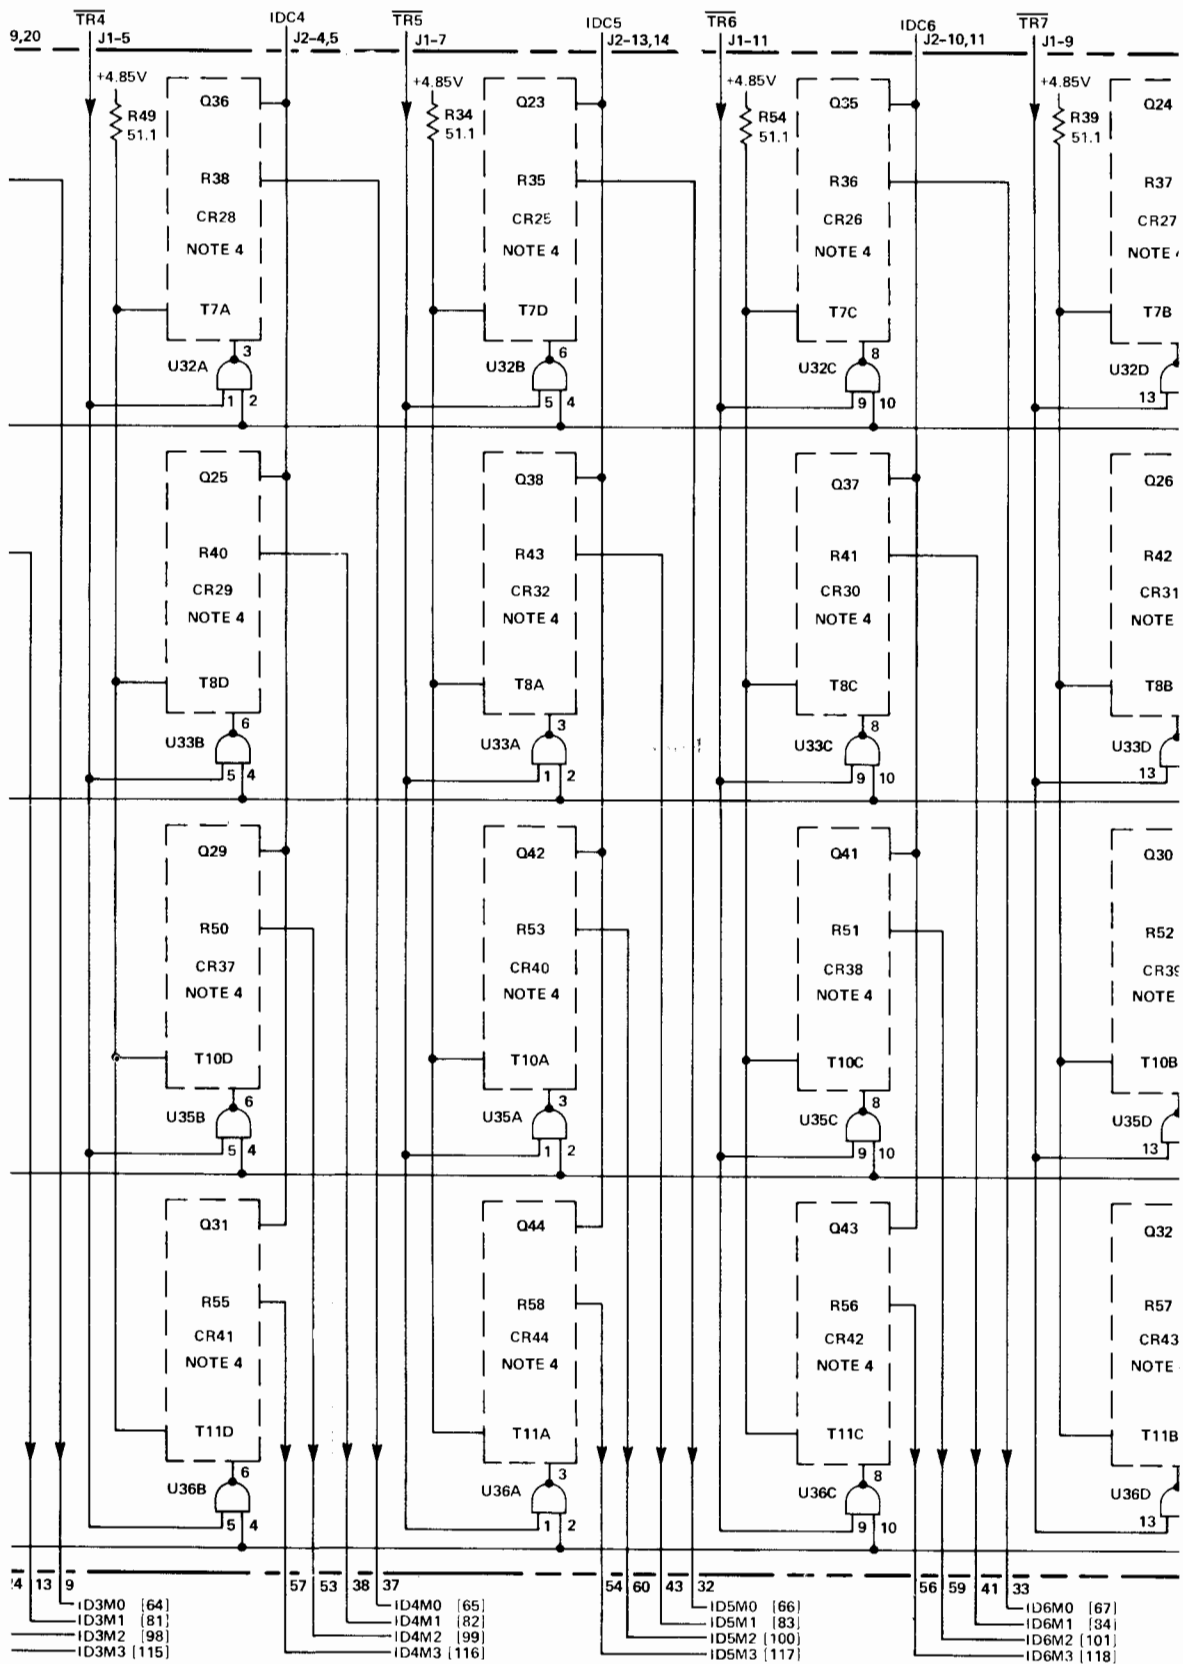

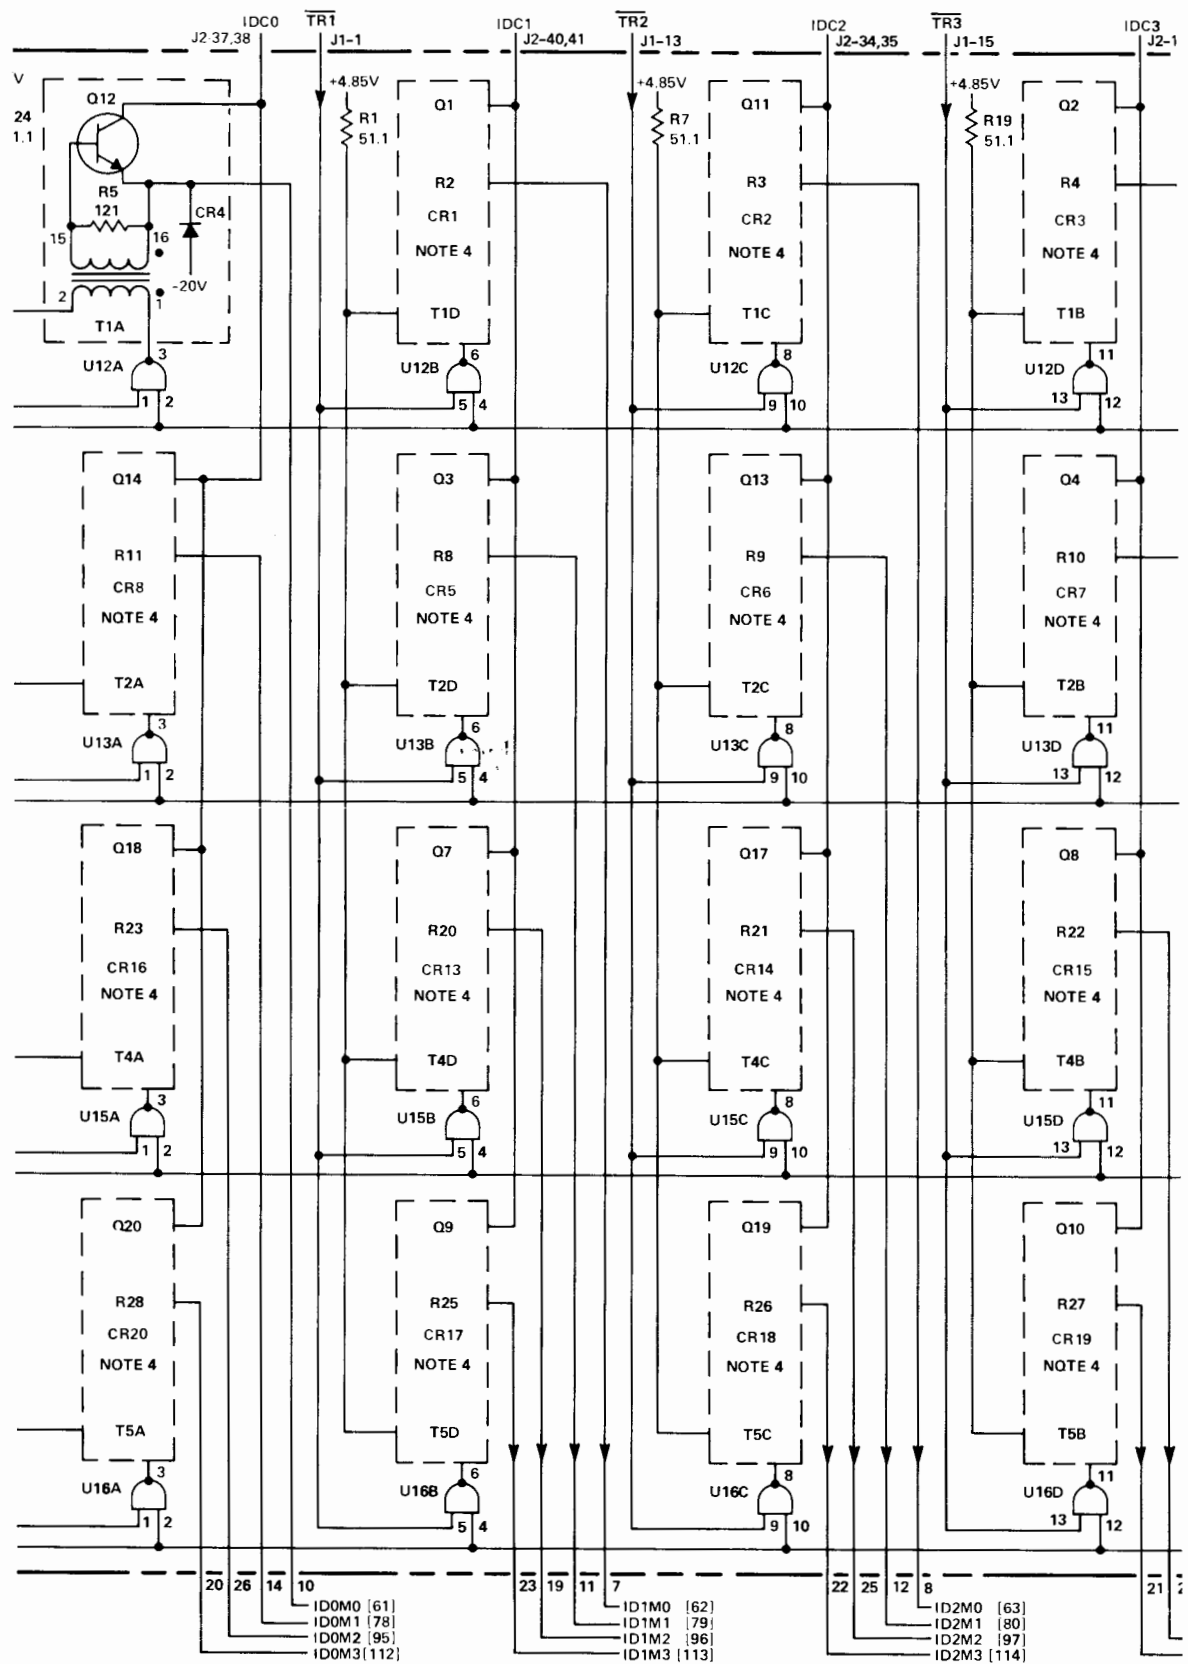



INHIBIT DRIVER CARD
(02100-60009, REV. 1049)

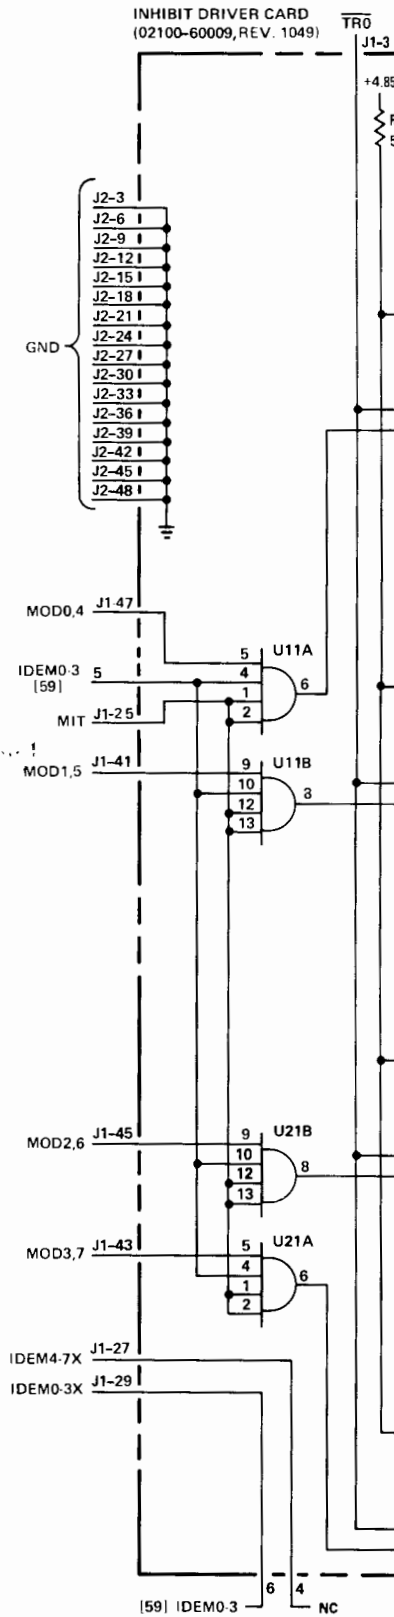

DWG. REV. A

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86 PIN CONNECTOR UNLESS OTHERWISE SPECIFIED.
3. NUMBERS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. SEE TYPICAL CIRCUIT AT UPPER LEFT CORNER.
5. SCHEMATIC DIAGRAM OF T1 THRU T17.

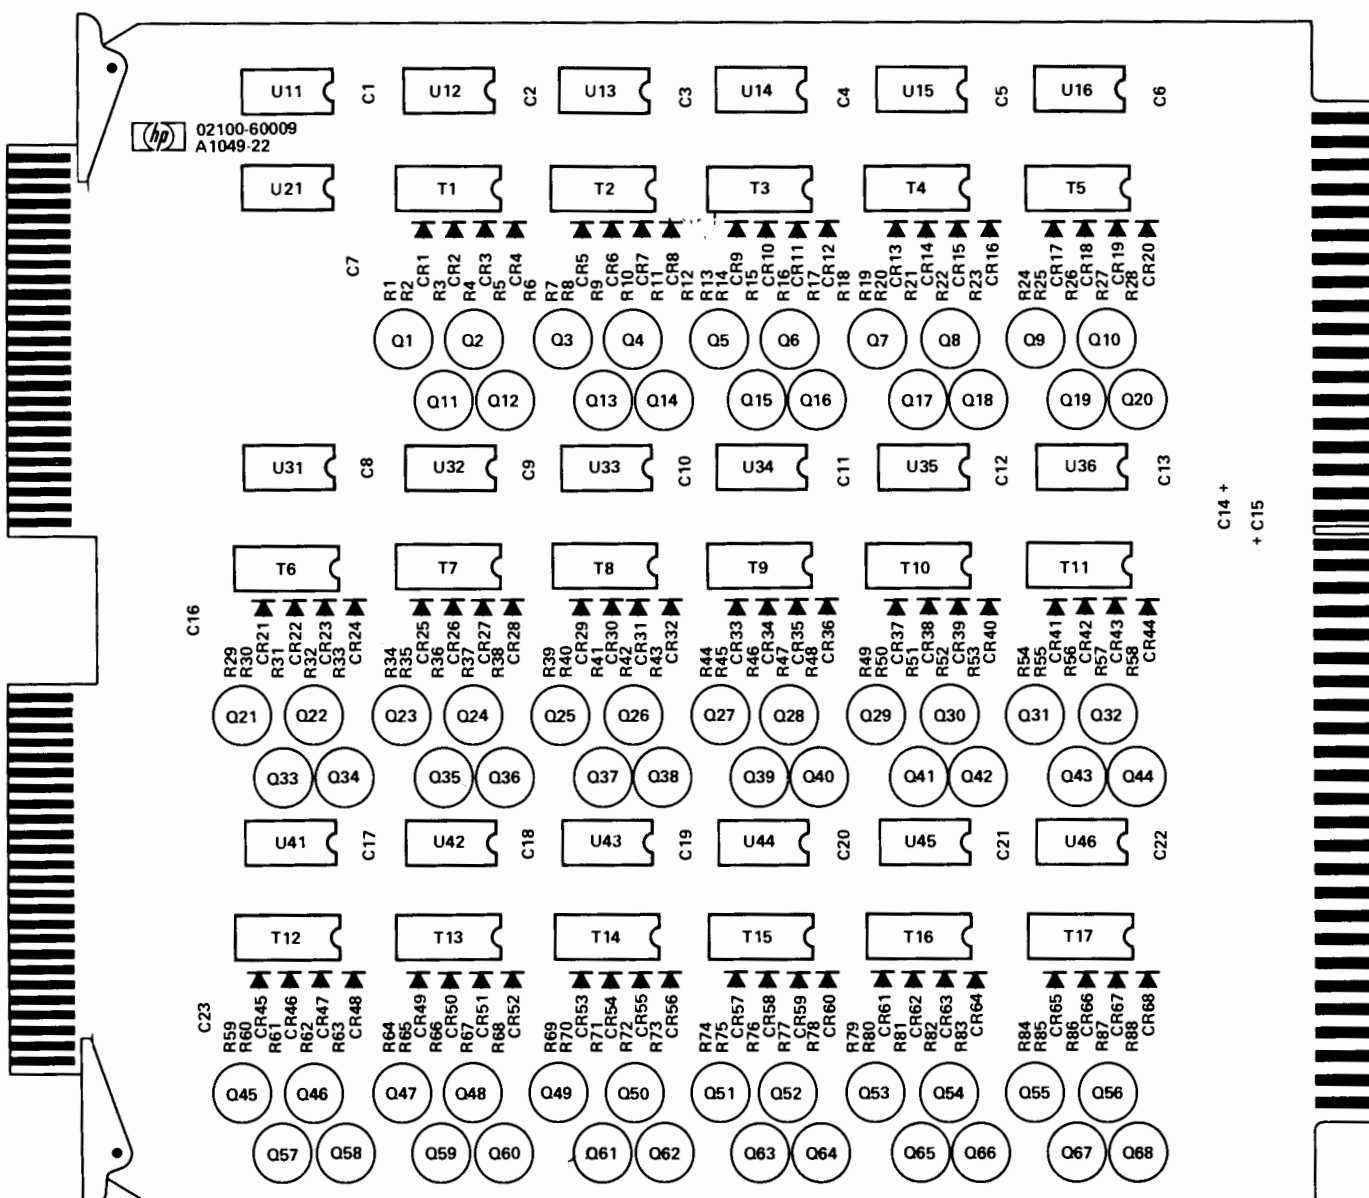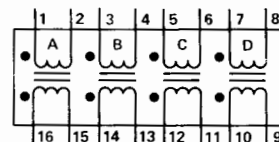

DWG REV. A

See table 4-19 for replaceable parts.

Table 4-20. A106 Inhibit Driver Load Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A106	C2100-60010	1	INHIBIT DRIVER LOAD CARD	28480	02100-60010
A106C1 THRU	0160-3871	17	C:FXD MICA 2000 PF 5% 100VDCW	72136	RDM19F202JIS
A106C17					
A106C18 THRU	0160-3901	17	C:FXD CER 2.2 UF 20% 25VDCW	56289	5C120-CML
A106C34					
A106C35	0180-0094	12	C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C36	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C37	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C38	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C39	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C40	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C41	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C42	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C43	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C44	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C45	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106C46	0180-0094		C:FXD ELECT 100 UF +75-10% 25VDCW	56289	30D107G025002-DSM
A106R1 THRU	0811-2988	17	R:FXD WW 22 OHM 1% 7W	28480	0811-2988
A106R17					
A106R18	0811-2031	1	R:FXD WW 815 OHM 3% 1/4W	28480	0811-2031


 Computer
Museum

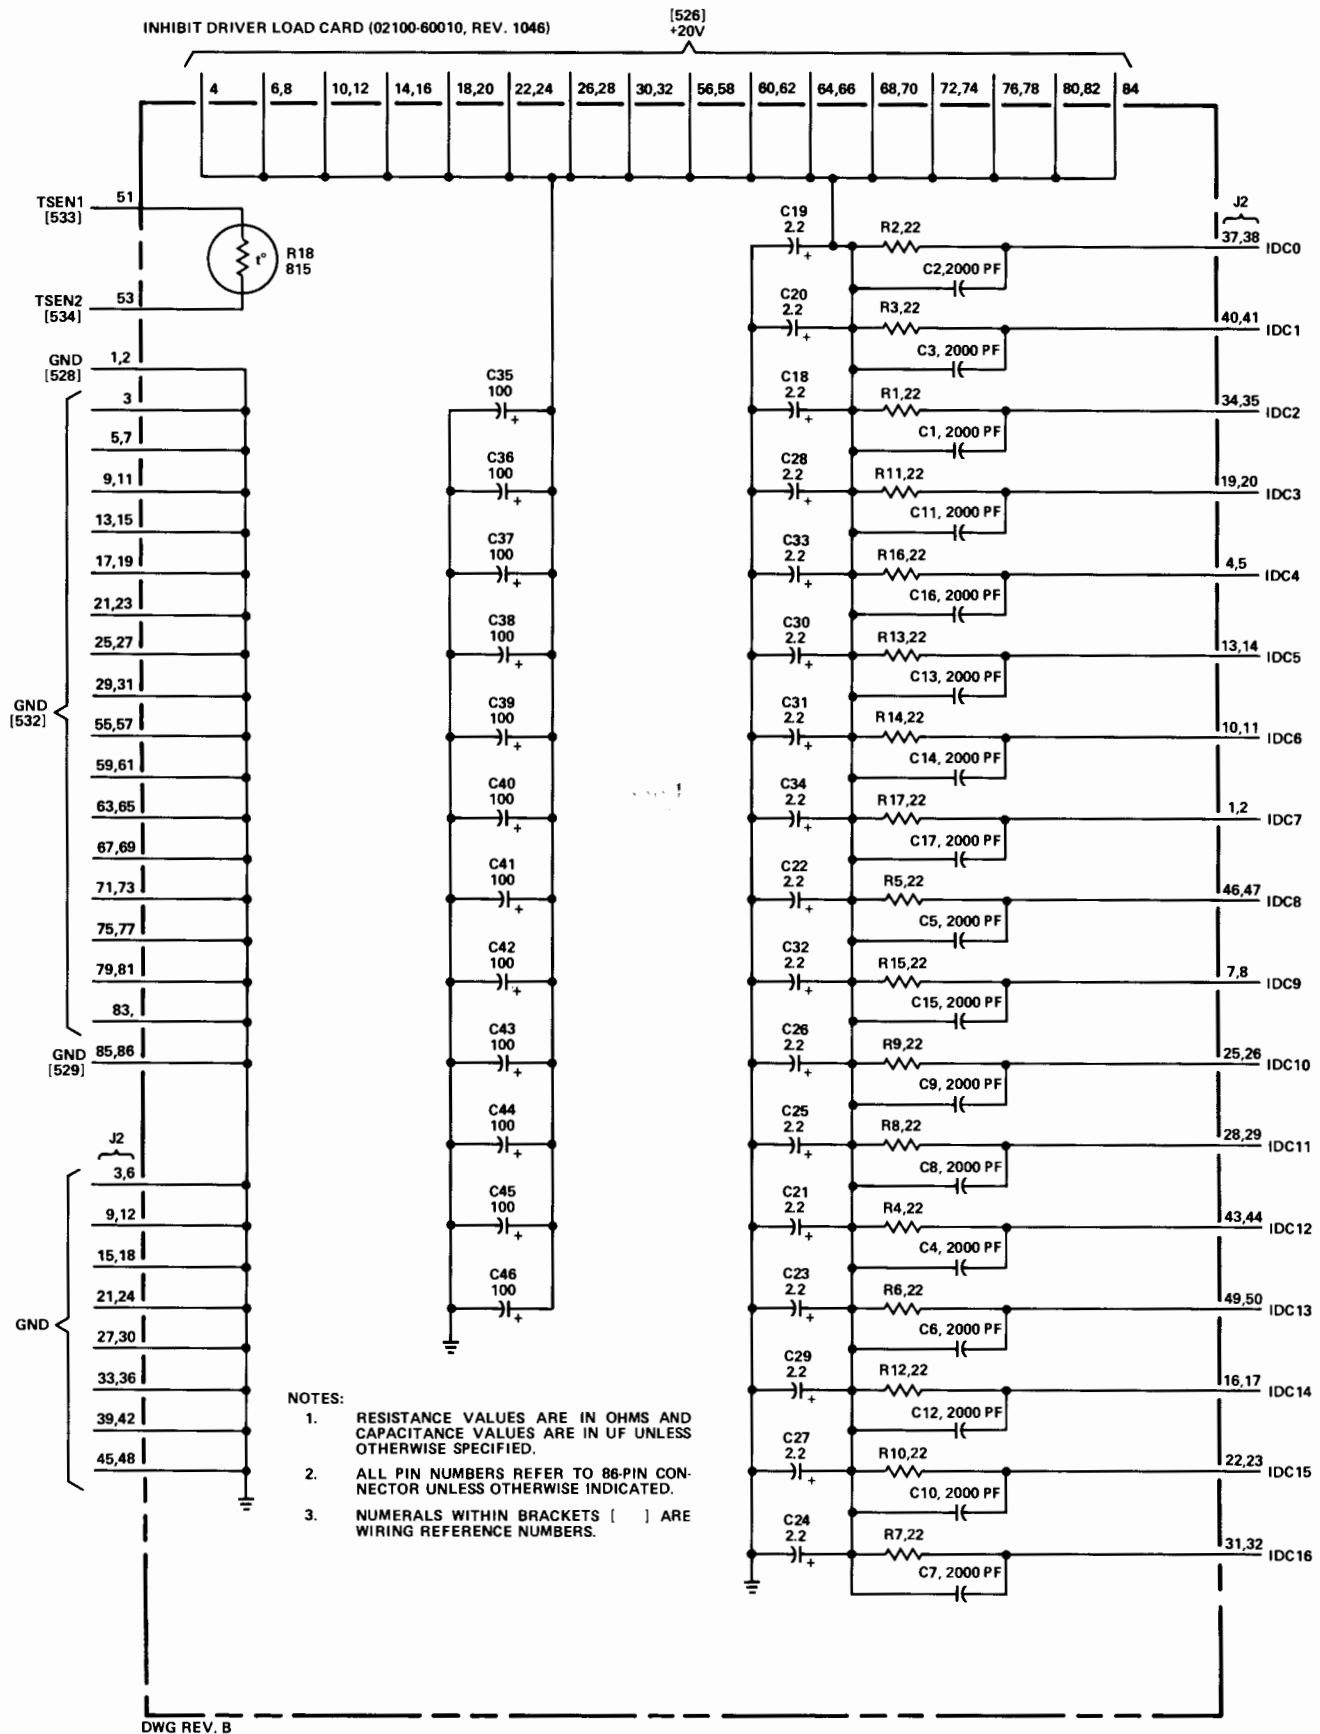


Figure 4-24. A106 Inhibit Driver Load Card, Parts Location and Schematic Diagrams

REF.
NO.


BACKPLANE LOCATION

* INDICATES SIGNAL SOURCE

A106

533 A25TB2-7 A106-51

534 A25TB2-9 A106-53

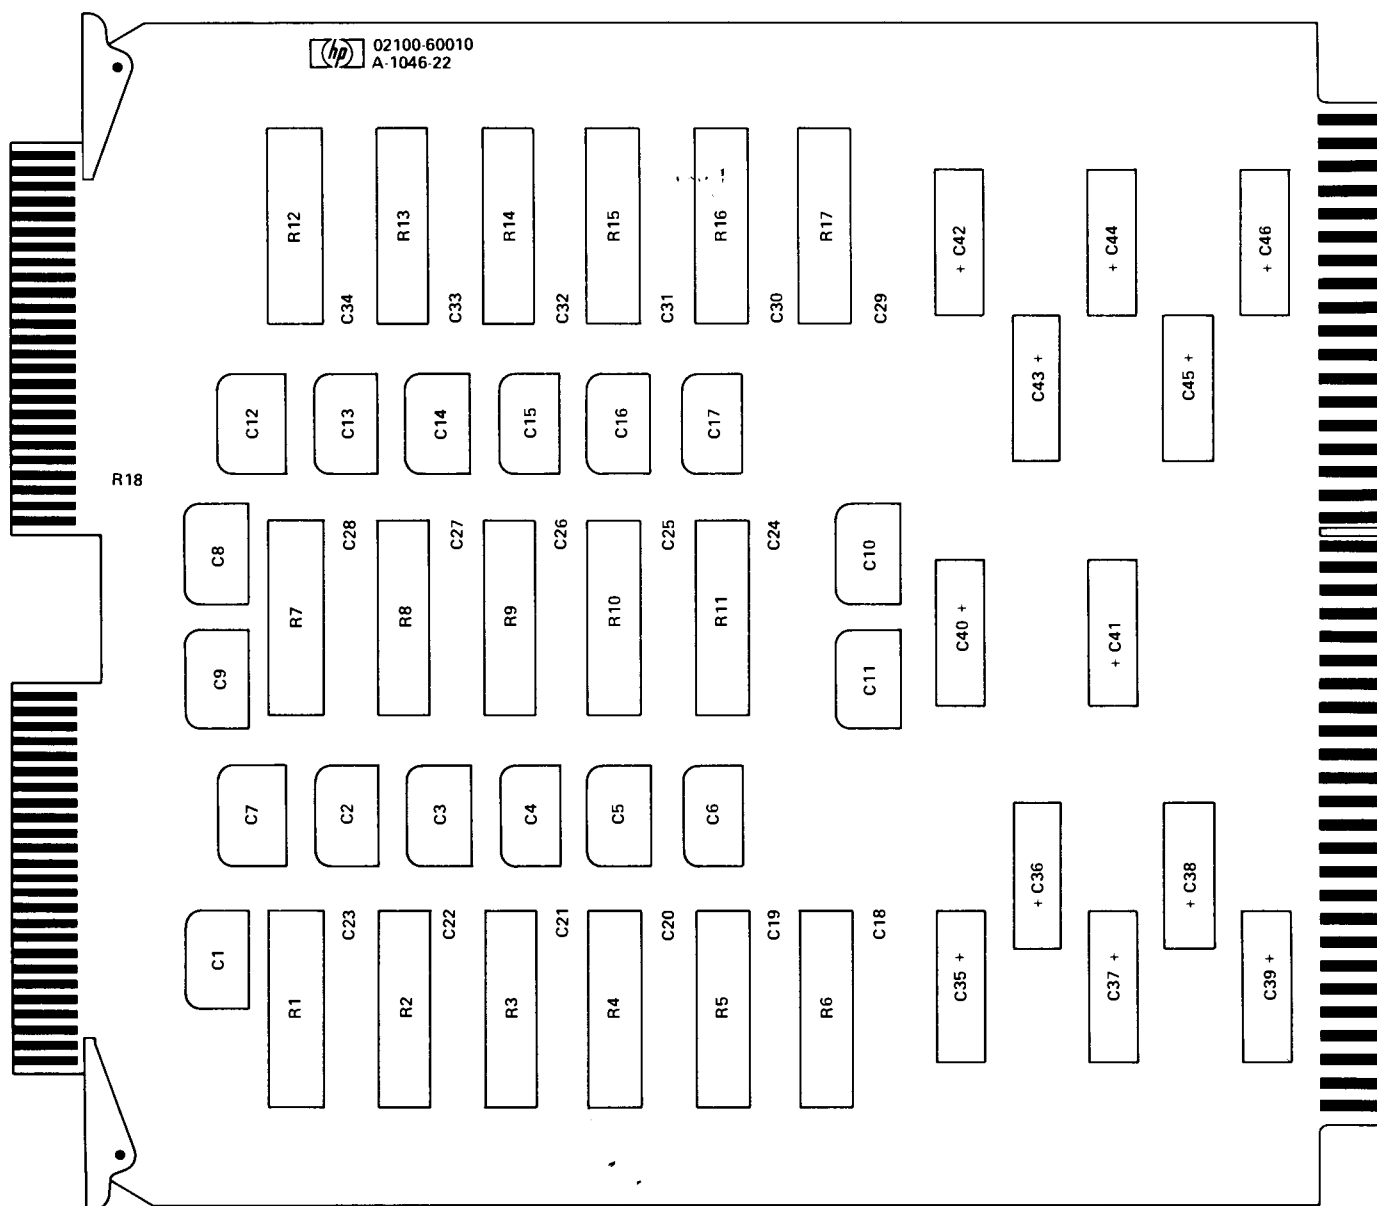

DWG REV. A

See table 4-20 for replaceable parts.

Table 4-21. A107 Data Control Card, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A107	C2100-60011	1	DATA CONTROL CARD	28480	02100-60011
A107C1	0160-2055	17	C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C2	C160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C3	0180-0197	6	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A107C4	C180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A107C5	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C7	0160-0127	7	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C9	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C10	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C11	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C12	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C13	0160-2199	2	C:FXD MICA 30 PF 5% 300VDCW	28480	0160-2199
A107C14	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C15	0160-2199		C:FXD MICA 30 PF 5% 300VDCW	28480	0160-2199
A107C16	0140-0196	1	C:FXD MICA 150 PF 5%	72136	RDM15F151J3C
A107C17	0140-0198	1	C:FXD MICA 200 PF 5%	72136	RDM15F201J3C
A107C19	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C20	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A107C21	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C22	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C23	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A107C24	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C25	0160-0127		C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13CS-CML
A107C26	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C27	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A107C28	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A107C29	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C30	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C31	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C32	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C33	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C34	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107C35	0140-0199	1	C:FXD MICA 240 PF 5%	28480	0140-0199
A107C36	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103ZS22-CDH
A107CR1	1910-0016	5	DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A107CR2	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A107CR3	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A107CR4	1990-0326	1	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0326
A107CR5	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A107CR6	1910-0016		DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A107CR7	5080-0059	7	PIN:DIODE	28480	5080-0059
A107CR8	5080-0059		PIN:DIODE	28480	5080-0059
A107CR9	5080-0059		PIN:DIODE	28480	5080-0059
A107CR10	5080-0059		PIN:DIODE	28480	5080-0059
A107CR11	5080-0059		PIN:DIODE	28480	5080-0059
A107CR12	5080-0059		PIN:DIODE	28480	5080-0059
A107CR13	5080-0059		PIN:DIODE	28480	5080-0059
A107DL1	1810-0064	1	DELAY LINE:	01961	GG4
A107E1 THRU A107E9	0360-0294	9	TERMINAL:SOLDER POINT	28480	0360-0294
A107Q2	1854-0019	7	TSTR:SI NPN	28480	1854-0019
A107Q3	1854-0019		TSTR:SI NPN	28480	1854-0019
A107Q4	1854-0019		TSTR:SI NPN	28480	1854-0019
A107Q5	1854-0019		TSTR:SI NPN	28480	1854-0019
A107Q6	1854-0019		TSTR:SI NPN	28480	1854-0019
A107Q7	1854-0019		TSTR:SI NPN	28480	1854-0019
A107Q8	1854-0019		TSTR:SI NPN	28480	1854-0019
A107R3	0698-0082	21	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R4	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R7	0698-3444	17	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R8	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R9	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R10	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R11	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R12	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R13	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R17(NOTE 2)	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R17(NOTE 3)	0698-3444	1	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3444
A107R18	0757-0280	13	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R19	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280

NOTES: 2. Used on card Rev. 1132.

3. First used on card Rev. 1312.

Table 4-21. A107 Data Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A107R22	0698-0082	1	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R23	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R24	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R25	0698-3443		R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A107R26	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R27	0698-0082	1	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R28	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R29	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R30	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R33	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R36	0757-0401	5	R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A107R37	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A107R38	0698-3442	3	R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A107R40	0698-3151	5	R:FXD MET FLM 2.87K OHM 1% 1/8W	28480	0698-3151
A107R41	0698-3157	5	R:FXD MET FLM 19.6K OHM 1% 1/8W	28480	0698-3157
A107R42	0698-3151	3	R:FXD MET FLM 2.87K OHM 1% 1/8W	28480	0698-3151
A107R43	0698-3157		R:FXD MET FLM 19.6K OHM 1% 1/8W	28480	0698-3157
A107R44	0757-0441		R:FXD MET FLM 8.25K OHM 1% 1/8W	28480	0757-0441
A107R45	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R46	0757-0441		R:FXD MET FLM 8.25K OHM 1% 1/8W	28480	0757-0441
A107R47	0757-0280	2	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R48	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A107R49	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A107R50	0698-3446		R:FXD MET FLM 383 OHM 1% 1/8W	28480	0698-3446
A107R52	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R53	0698-3444	1	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R54	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R55	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R56	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R57	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R58	0698-3444	1	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R59	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R60	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R61	0757-0284		R:FXD MET FLM 150 OHM 1% 1/8W	28480	0757-0284
A107R62	0698-0083		R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698-0083
A107R63	0698-0083	2	R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698-0083
A107R64	0698-0083		R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698-0083
A107R65	0698-0083		R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698-0083
A107R66	0698-3151		R:FXD MET FLM 2.87K OHM 1% 1/8W	28480	0698-3151
A107R67	2100-1738		R:VAR FLM 10K OHM 10% LIN 1/2W	28480	2100-1738
A107R68	2100-1738	1	R:VAR FLM 10K OHM 10% LIN 1/2W	28480	2100-1738
A107R69	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A107R70	0698-3157		R:FXD MET FLM 19.6K OHM 1% 1/8W	28480	0698-3157
A107R71	0698-3151		R:FXD MET FLM 2.87K OHM 1% 1/8W	28480	0698-3151
A107R72	0698-3157		R:FXD MET FLM 19.6K OHM 1% 1/8W	28480	0698-3157
A107R73	0698-3151	1	R:FXD MET FLM 2.87K OHM 1% 1/8W	28480	0698-3151
A107R74	0698-3157		R:FXD MET FLM 19.6K OHM 1% 1/8W	28480	0698-3157
A107R75	0698-0083		R:FXD MET FLM 1.96K OHM 1% 1/8W	28480	0698-0083
A107R76	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R77	0757-0441		R:FXD MET FLM 8.25K OHM 1% 1/8W	28480	0757-0441
A107R78	0757-0280	1	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R79	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R80	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R81	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R82	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R83	0757-0280	1	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R84	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R85	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R86	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A107R87	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R88	0698-0082	1	R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R89	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R90	0757-0316		R:FXD MET FLM 42.2 OHM 1% 1/8W	28480	0757-0316
A107R91	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A107R92	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R93	0757-0274	2	R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A107R94	0757-0274		R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A107R96	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A107R97	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R98	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A107R99	0757-0416	4	R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A107R101	0698-3442		R:FXD MET FLM 237 OHM 1% 1/8W	28480	0698-3442
A107R102	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082
A107R103	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A107R104	0698-0082		R:FXD MET FLM 464 OHM 1% 1/8W	28480	0698-0082

Table 4-21. A107 Data Control Card, Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A107R1G5	0698-3438	1	R:FXD MET FLM 147 OHM 1% 1/8W	28480	0698-3438
A107R106	0698-3445	9	R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R107	0757-0416		R:FXD MET FLM 511 OHM 1% 1/8W	28480	0757-0416
A107R108	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R109	0698-3132	2	R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A107R110	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R111	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R112	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R113	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R114	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R115	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R116	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R117	0698-3445		R:FXD MET FLM 348 OHM 1% 1/8W	28480	0698-3445
A107R118	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A107R119	0698-3132		R:FXD FLM 261 OHM 1% 1/8W	28480	0698-3132
A107S1	3101-1213	1	SWITCH:TOGGLE DPST-DB SUB-MINIATURE	81640	T8001
A107U11	1820-0971	8	IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U12	1820-0435	2	IC:TTL 8-BIT ODD/EVEN GEN./CHECKER	01295	SN74180N
A107U13	1820-0301	4	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A107U14	1820-0571		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U16	1820-0485	3	IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A107U17	1820-0233	4	IC:TTL SYNUP-CN 4-BIT BINARY COUNTER	01295	SN74193N
A107U21	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U22	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A107U23	1820-0616	4	IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A107U24	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U25	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A107U26	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A107U27	1820-0233		IC:TTL SYNUP-CN 4-BIT BINARY COUNTER	01295	SN74193N
A107U32	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A107U35	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A107U36	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U37	1820-0233		IC:TTL SYNUP-CN 4-BIT BINARY COUNTER	01295	SN74193N
A107U42	1820-0140	1	IC:TTL DUAL 4-INPT AND BUFFER	04713	MC3026P
A107U43	1820-0207	3	IC:TTL MONOSTABLE MULTIVIBRATOR	28480	1820-0207
A107U44	1820-0424	2	IC:TTL HS HEX INVERTER	04713	SN74H04N
A107U45	1820-0376	1	IC:TTL DUAL 4-INPT NAND POWER GATE	01295	SN74H40N
A107U46	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U47	1820-0233		IC:TTL SYNUP-CN 4-BIT BINARY COUNTER	01295	SN74193N
A107U53	1820-0207		IC:TTL MONOSTABLE MULTIVIBRATOR	28480	1820-0207
A107U54	1820-0966	1	IC:CTL DUAL 2-INPT AND 2W AND/OR GATE	14433	MIC 966
A107U55	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A107U56	1820-0435		IC:TTL 8-BIT ODD/EVEN GEN./CHECKER	01295	SN74180N
A107U57	1820-0205	3	IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A107U63	1820-0207		IC:TTL MONOSTABLE MULTIVIBRATOR	28480	1820-0207
A107U64	1820-0328	1	IC:TTL QUAD 2-INPT NOR GATE	04713	SN7402N
A107U65	1820-0616		IC:TTL 4-BIT 2-INPT MULTIPLEXER	07263	U78932259X
A107U66	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U67	1820-0485		IC:CTL HEX LEVEL RESTORER	07263	U6B981649X
A107U73	1820-0372	1	IC:TTL TRIPLE 3-INPT AND GATE	28480	1820-0372
A107U74(NOTE 1)	1820-0451	3	IC:TTL DUAL J-K F/F	04713	MC3062P
A107U76	1820-0187	2	IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X
A107U81	1820-0370	2	IC:TTL QUAD 2-INPT NAND GATE	01295	SN74H00N
A107U82	1820-0141	2	IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A107U83	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A107U84	1820-0186	2	IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A107U85	1820-0971		IC:CTL DUAL 2W-2-INPT AND/OR GATE	07263	U6A997179X
A107U86	1820-0187		IC:CTL DUAL 2-INPT NOR GATE	07263	U6A985249X
A107U91	1820-0371	2	IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A107U92	1820-0371		IC:TTL HS TRIPLE 3-INPT NAND GATE	01295	SN74H10N
A107U93	1820-0424		IC:TTL HS HEX INVERTER	04713	SN74H04N
A107U95	1820-0141		IC:TTL QUAD 2-INPT AND GATE	04713	MC3001P
A107U96	1820-0482	1	IC:CTL 1 OF 8 DECODER	07263	U6B983849X
A107U101	1820-0370		IC:TTL HS QUAD 2-INPT NAND GATE	01295	SN74H00N
A107U102(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A107U103	1820-0619	1	IC:TTL HS DUAL 4-INPT NAND GATE(CPEN C)	01295	SN74H22N
A107U104	1820-0186		IC:CTL DUAL 2-INPT AND GATE	07263	U6A985649X
A107U105(NOTE 1)	1820-0451		IC:TTL DUAL J-K F/F	04713	MC3062P
A107U106	1820-0205		IC:TTL QUAD 2-INPT OR GATE	28480	1820-0205
A107W1	5080-0058	1	CONDUCTOR ASSY	28480	5080-0058

NOTES: 1. Part no. 1820-0695 used on some cards; the two parts are interchangeable.

REF. NO.	BACKPLANE LOCATION						* INDICATES SIGNAL SOURCE
A107							
22	A1-78*	A3-81	A7-56	A8-42	A9-76	A24-64	
	A107-69						
32	A6-73*	A9-36*	A24-55*	A107-76			
35	A3-25	A24-76	A107-81*				
256	A8-76	A107-78*					
258	A3-29	A24-78	A107-77*				
272	A102-5*	A103-5*	A107-80	A110-5*	A111-5*		
289	A107-84*	A101-54,57	A104-54,57	A109-54,57	A112-54,57		
290	A102-6	A103-6	A107-83*	A110-6	A111-6		
291	A107-28*	A101-50,58	A104-50,58	A109-50,58	A112-50,58		
334	A1-54*	A3-28*	A4-27	A9-31*	A24-77*	A107-72	
335	A1-8*	A2-70	A4-30	A6-9	A7-20	A8-75	
	A107-82						
376	A6-74*	A9-34*	A24-57*	A107-75			
394	A102-72*	A103-72*	A107-71	A110-72*	A111-72*		
431	A1-53*	A3-22*	A8-60	A9-35*	A24-42*	A107-66	
432	A3-30*	A4-59*	A9-41*	A107-74			
477	A3-53*	A9-38*	A24-73	A107-73			
493	A107-65*	A101-30,38	A104-30,38	A109-30,38	A112-30,38		
494	A107-64*	A101-29,34	A104-29,34	A109-29,34	A112-29,34		






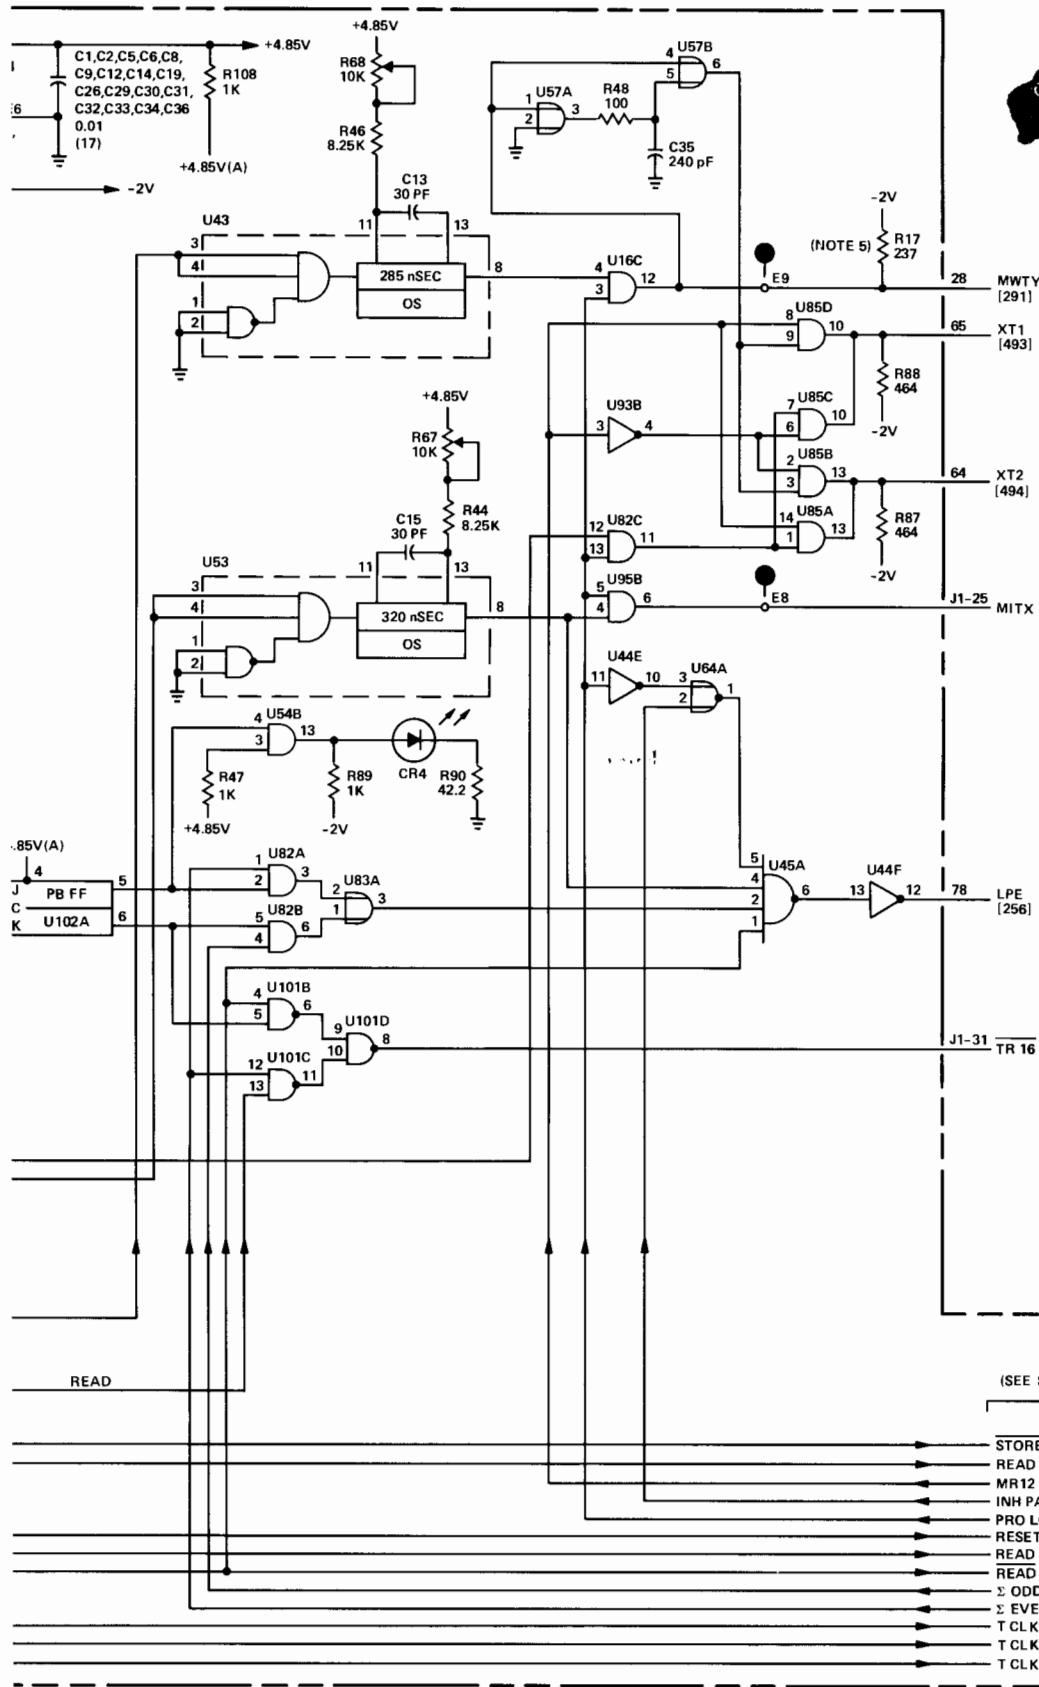


Figure 4-25. A107 Data Control Card, Parts Location and Schematic Diagrams (Sheet 1 of 2)

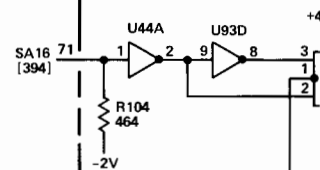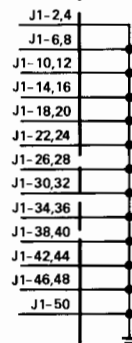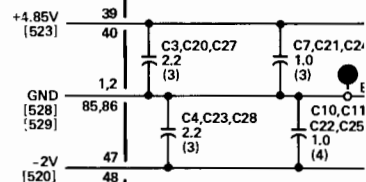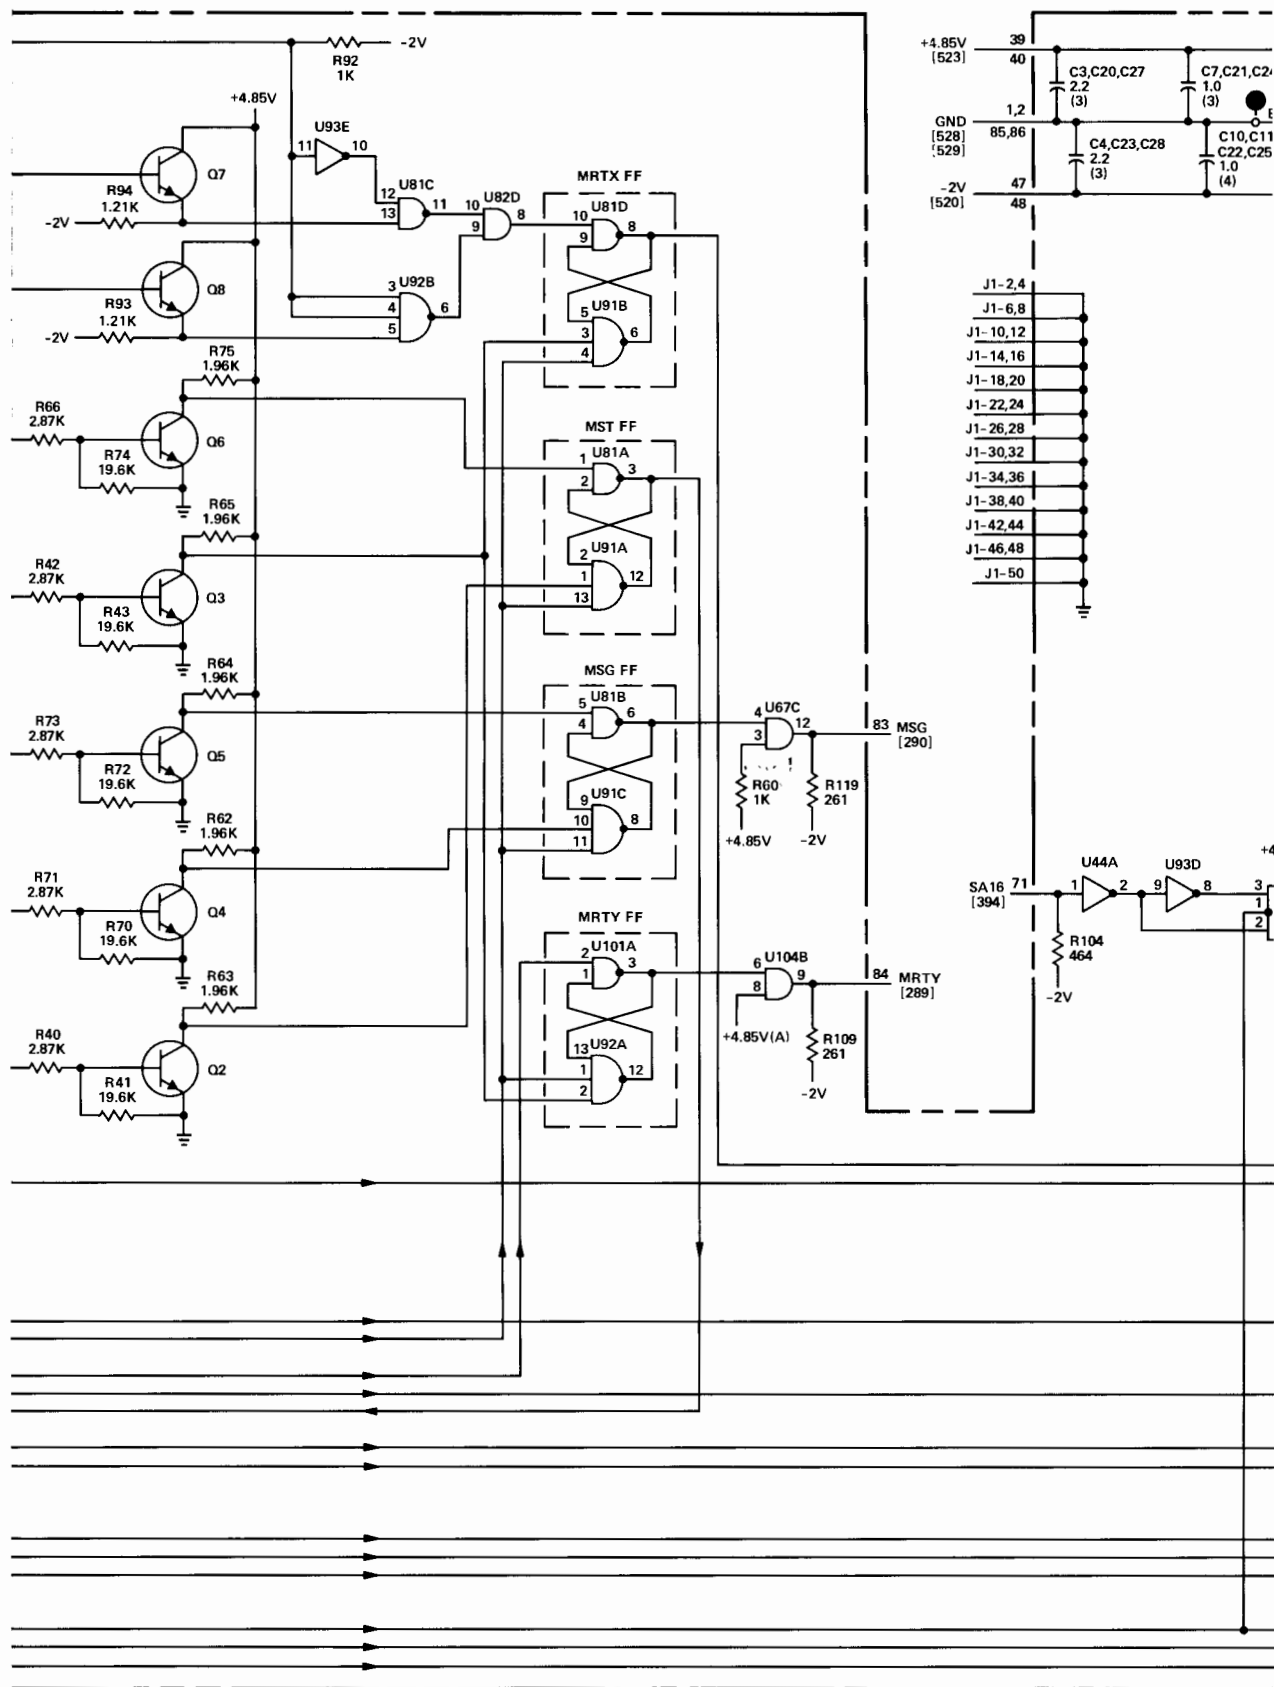

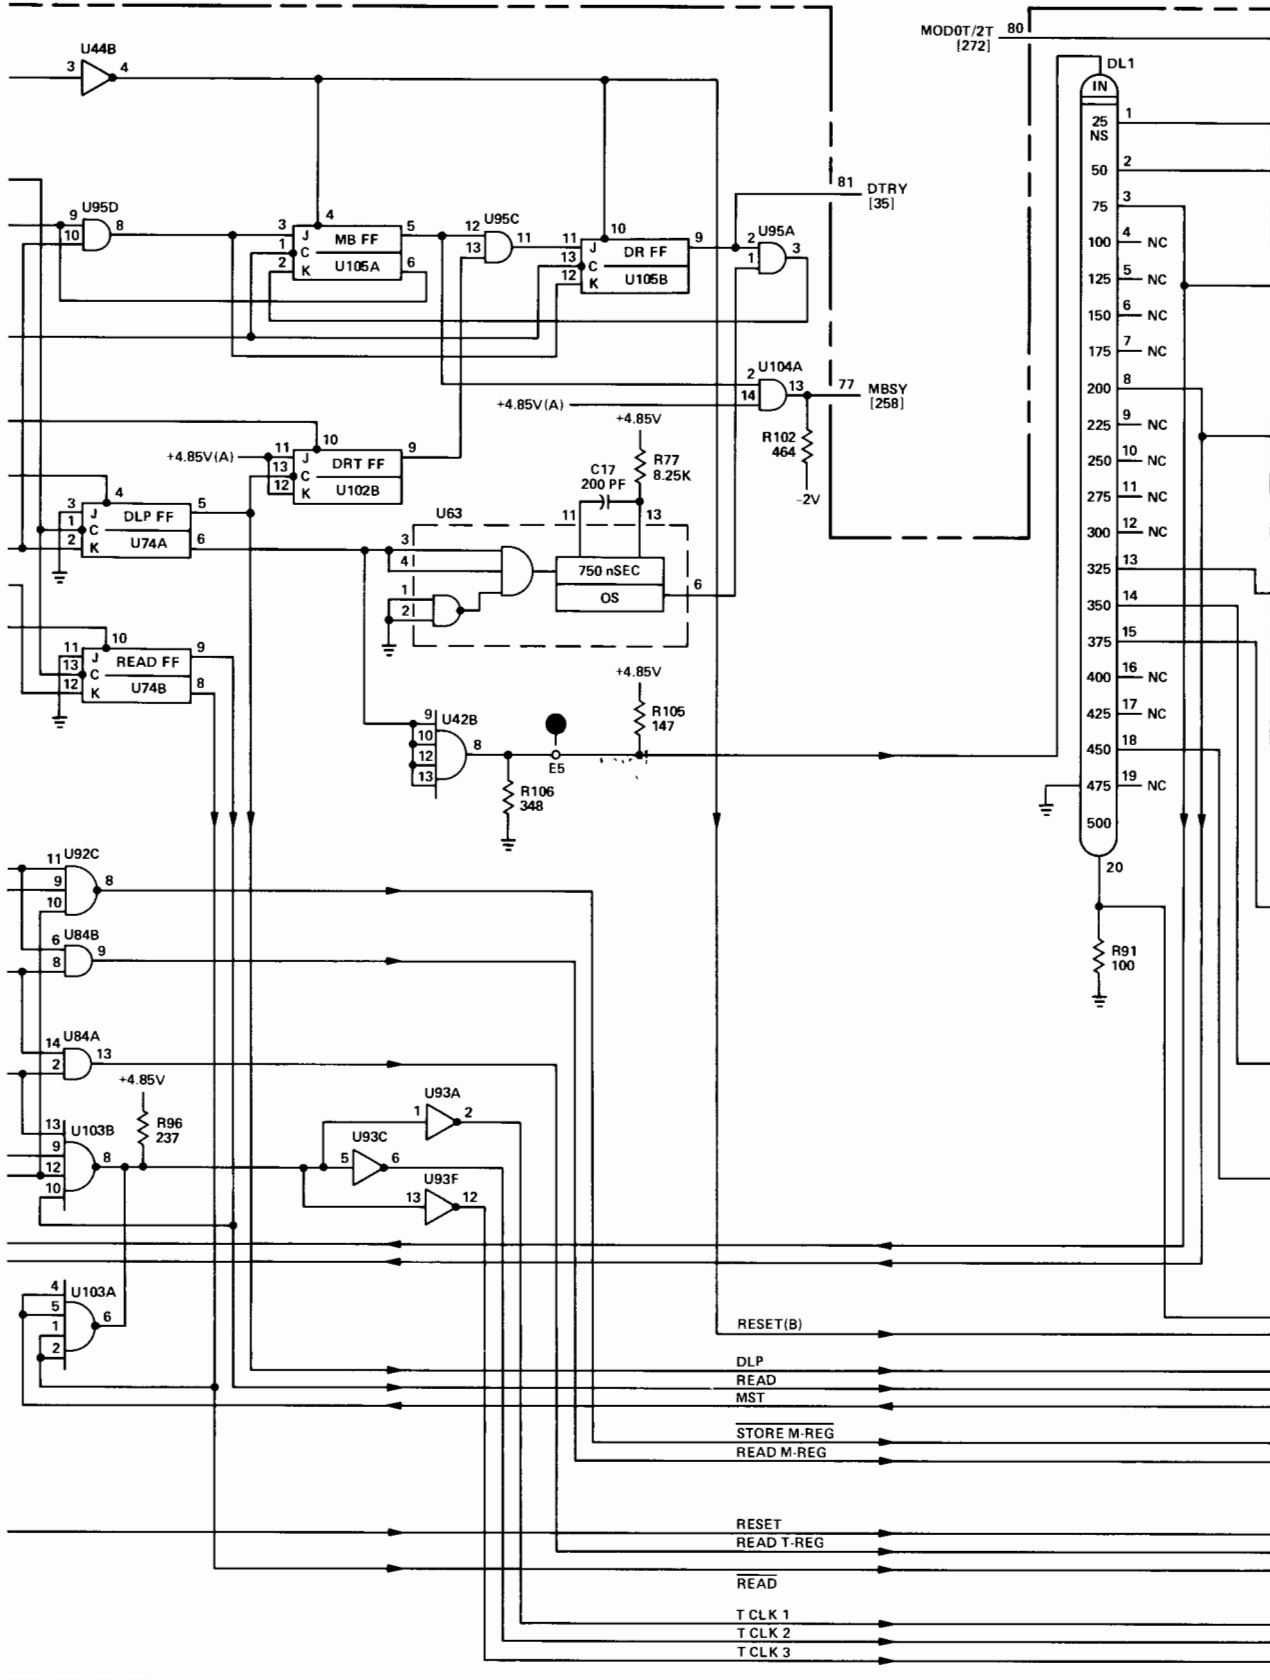



FF DEFINITIONS

DLP = DELAY PULSE
 DR = DATA READY
 DRT = DATA READY TIME
 MB = MEMORY BUSY
 MRTY = MEMORY READ TIME Y DRIVE LINE
 MRTX = MEMORY READ TIME X DRIVE LINE
 MSG = MEMORY SENSE GATE
 MST = MEMORY STROBE TIME
 PB = PARITY BIT

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE INDICATED.
3. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. PIN 5 OF U11, U14, U21, U24, U36, U46, U54, U66 AND U85 IS NORMAL GROUND CONNECTION AND IS NOT SHOWN ELSEWHERE ON THIS DIAGRAM.
5. R17 IS 464 OHMS ON CARD REV. 1132.

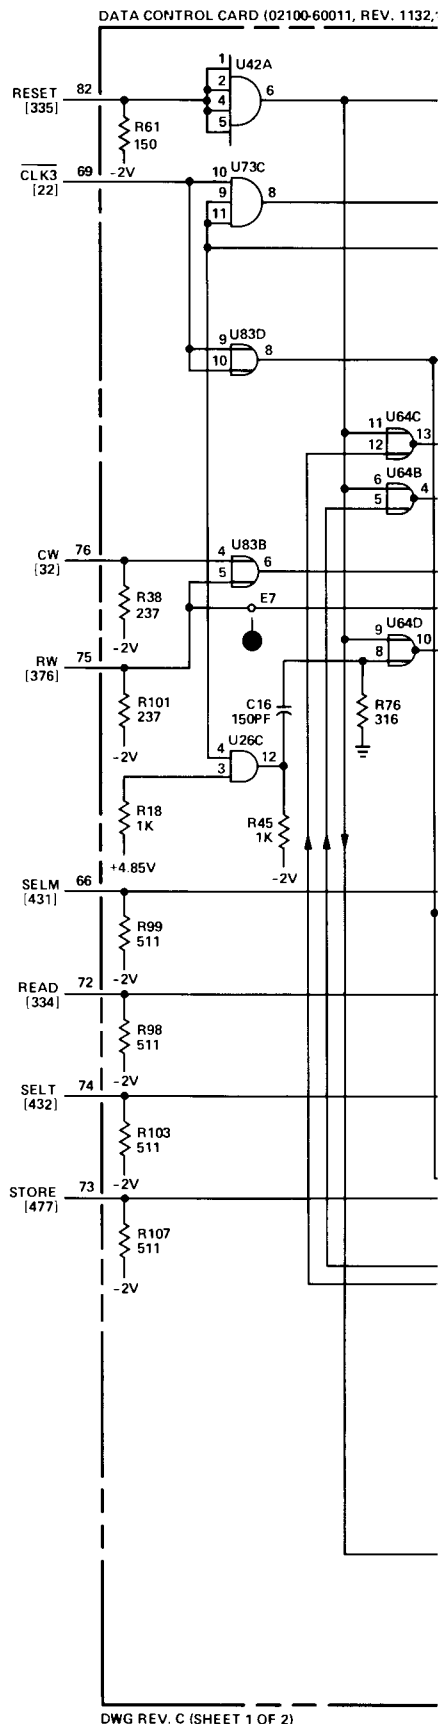

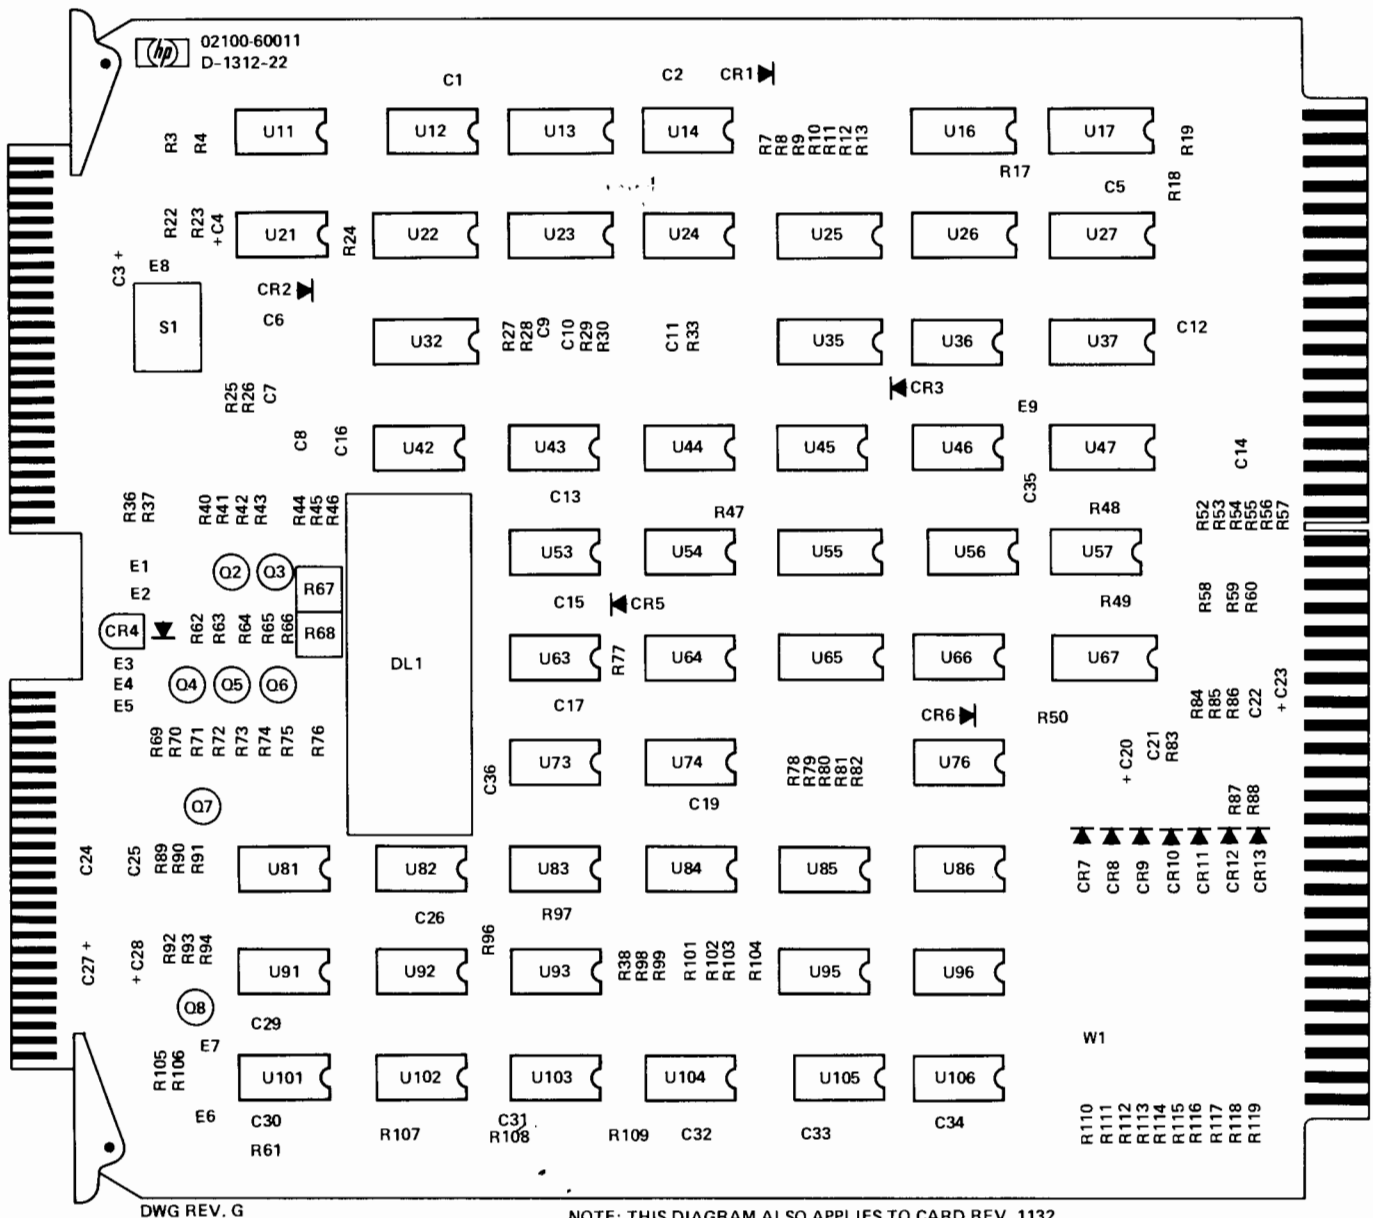

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE		

A107						
33	A1-42	A24-60*	A107-6			
200	A1-37	A24-33*	A107-79			
260	A103-3	A107-68*				
261	A103-4	A107-63*				
262	A102-3	A107-55*				
263	A102-4	A107-56*				
264	A107-57*	A110-3				
265	A107-58*	A110-4				
266	A107-54*	A111-3				
267	A107-53*	A111-4				
268	A104-46	A107-59*				
269	A101-46	A107-60*				
270	A107-62*	A109-46				
271	A107-61*	A112-46				
277	A101-35	A104-35	A107-3*	A109-35	A112-35	
278	A101-36	A104-36	A107-5*	A109-36	A112-36	
279	A101-37	A104-37	A107-8*	A109-37	A112-37	
280	A101-33	A104-33	A107-10*	A109-33	A112-33	
281	A101-32	A104-32	A107-24*	A109-32	A112-32	
282	A101-31	A104-31	A107-23*	A109-31	A112-31	
283	A101-49	A104-49	A107-25*	A109-49	A112-49	
284	A101-52	A104-52	A107-26*	A109-52	A112-52	
285	A101-51	A104-51	A107-27*	A109-51	A112-51	
286	A101-53	A104-53	A107-4*	A109-53	A112-53	
287	A101-56	A104-56	A107-30*	A109-56	A112-56	
288	A101-55	A104-55	A107-32*	A109-55	A112-55	
305	A1-6	A7-8*	A24-67	A104-42	A107-70	
	A10-66 THRU A23-66					
378	A102-15*	A103-15*	A107-13	A110-15*	A111-15*	
379	A102-18*	A103-18*	A107-11	A110-18*	A111-18*	
380	A102-17*	A103-17*	A107-7	A110-17*	A111-17*	
381	A102-20*	A103-20*	A107-9	A110-20*	A111-20*	
382	A102-19*	A103-19*	A107-17	A110-19*	A111-19*	
383	A102-22*	A103-22*	A107-15	A110-22*	A111-22*	
384	A102-21*	A103-21*	A107-19	A110-21*	A111-21*	
385	A102-63*	A103-63*	A107-21	A110-63*	A111-63*	
386	A102-64*	A103-64*	A107-31	A110-64*	A111-64*	
387	A102-65*	A103-65*	A107-33	A110-65*	A111-65*	
388	A102-66*	A103-66*	A107-35	A110-66*	A111-66*	
389	A102-67*	A103-67*	A107-37	A110-67*	A111-67*	
390	A102-68*	A103-68*	A107-41	A110-68*	A111-68*	
391	A102-69*	A103-69*	A107-43	A110-69*	A111-69*	
392	A102-70*	A103-70*	A107-45	A110-70*	A111-70*	
393	A102-71*	A103-71*	A107-49	A110-71*	A111-71*	
396	A2-46*	A5-78*	A6-32	A7-62*	A8-3*	A9-16*
	A107-16					
397	A2-44*	A5-80*	A6-60	A7-61*	A8-4*	A9-14*
	A107-18					
398	A2-29*	A5-76*	A6-61	A7-60*	A8-5*	A9-18*
	A107-12					
399	A2-30*	A5-59*	A6-33	A7-59*	A8-6*	A9-13*
	A107-14					
400	A2-19*	A5-52*	A6-65	A7-64*	A8-7*	A9-12*
	A107-29					
401	A2-20*	A5-51*	A6-64	A7-57*	A8-8*	A9-10*
	A107-38					
402	A2-12*	A5-49*	A6-67	A8-9*	A9-20*	A107-20
403	A2-9*	A5-43*	A6-66	A8-24*	A9-11*	A107-22
404	A2-53*	A5-31*	A6-52	A8-14*	A9-5*	A107-44
405	A2-54*	A5-32*	A6-51	A8-18*	A9-3*	A107-46
406	A2-43*	A5-29*	A6-54	A8-19*	A9-9*	A107-34
407	A2-49*	A5-30*	A6-53	A8-20*	A9-7*	A107-36
408	A2-31*	A5-10*	A6-38	A8-21*	A9-8*	A107-51
409	A2-21*	A5-8*	A6-37	A8-22*	A9-4*	A107-42
410	A2-10*	A5-6*	A6-42	A8-23*	A9-6*	A107-50
411	A1-14	A2-11*	A4-75	A5-4*	A6-41	A8-33*
	A9-84*	A107-52				
495	A24-9*	A107-67				



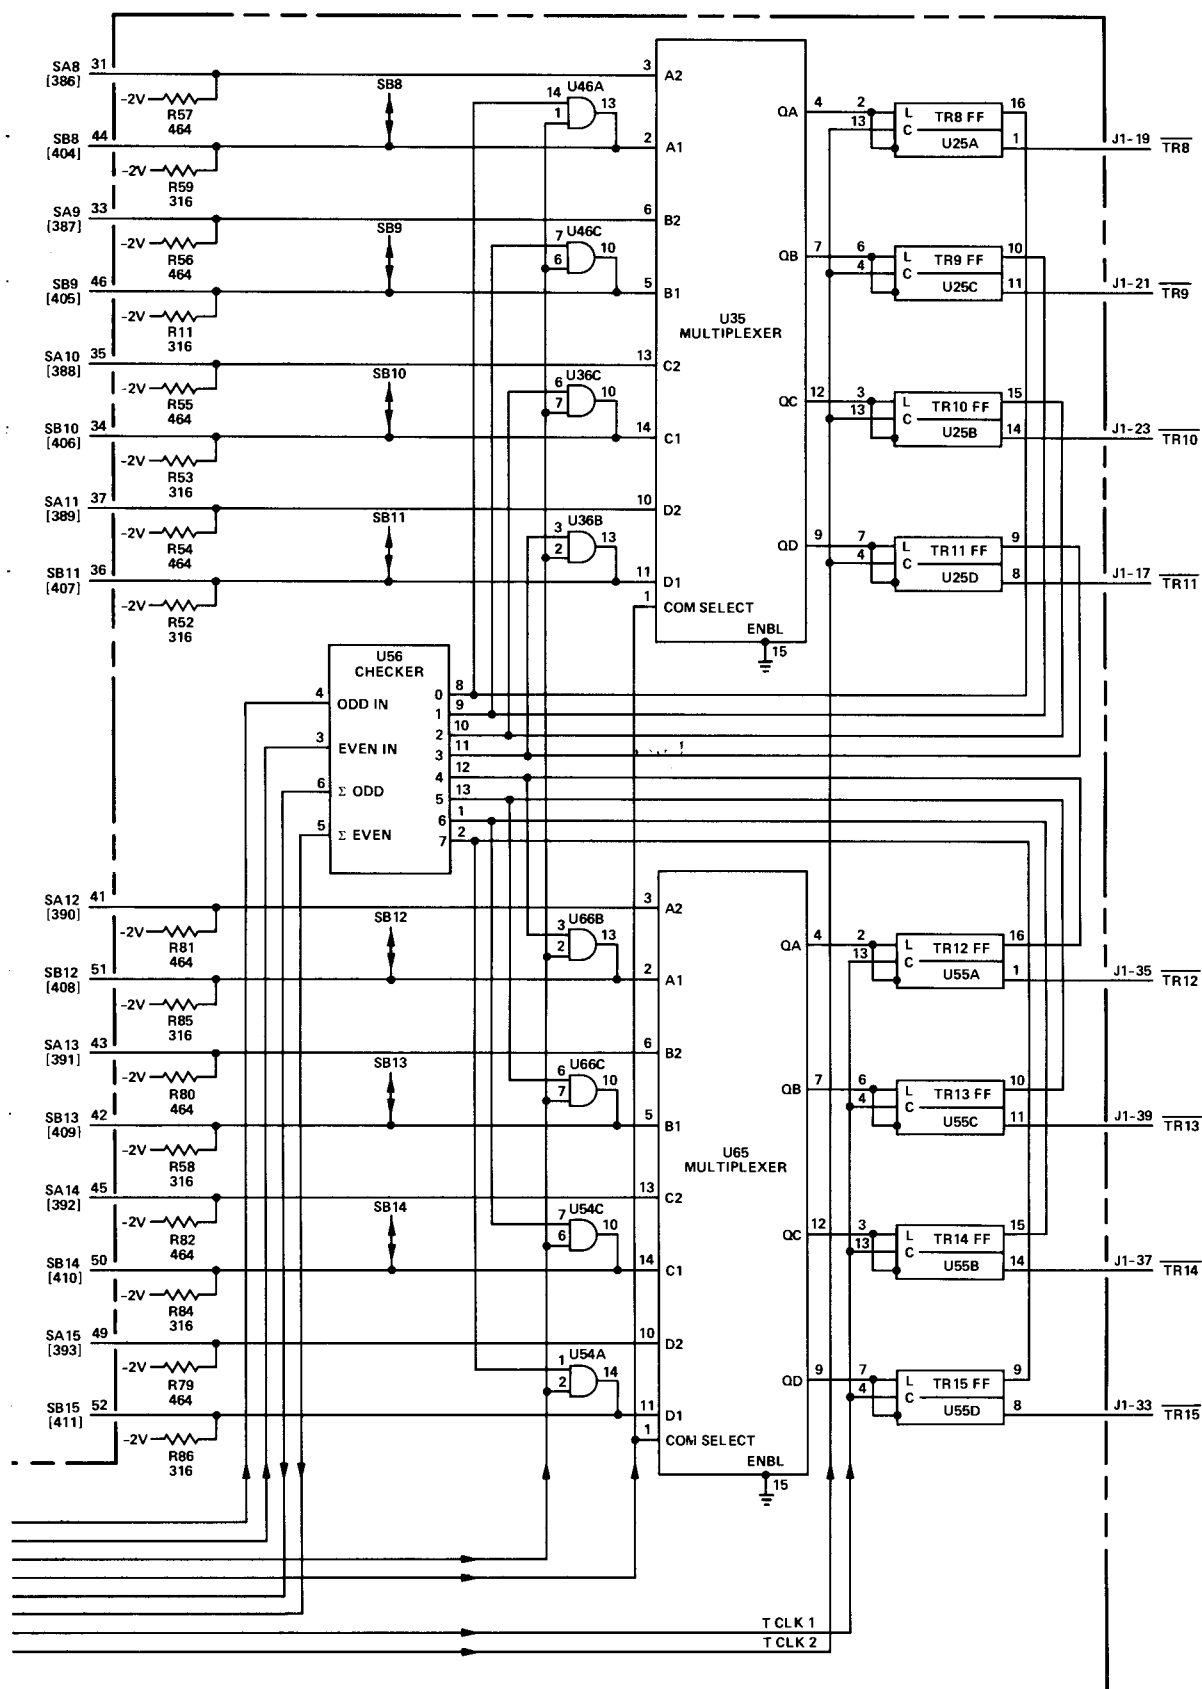


Figure 4-25. A107 Data Control Card, Parts Location and Schematic Diagrams (Sheet 2 of 2)

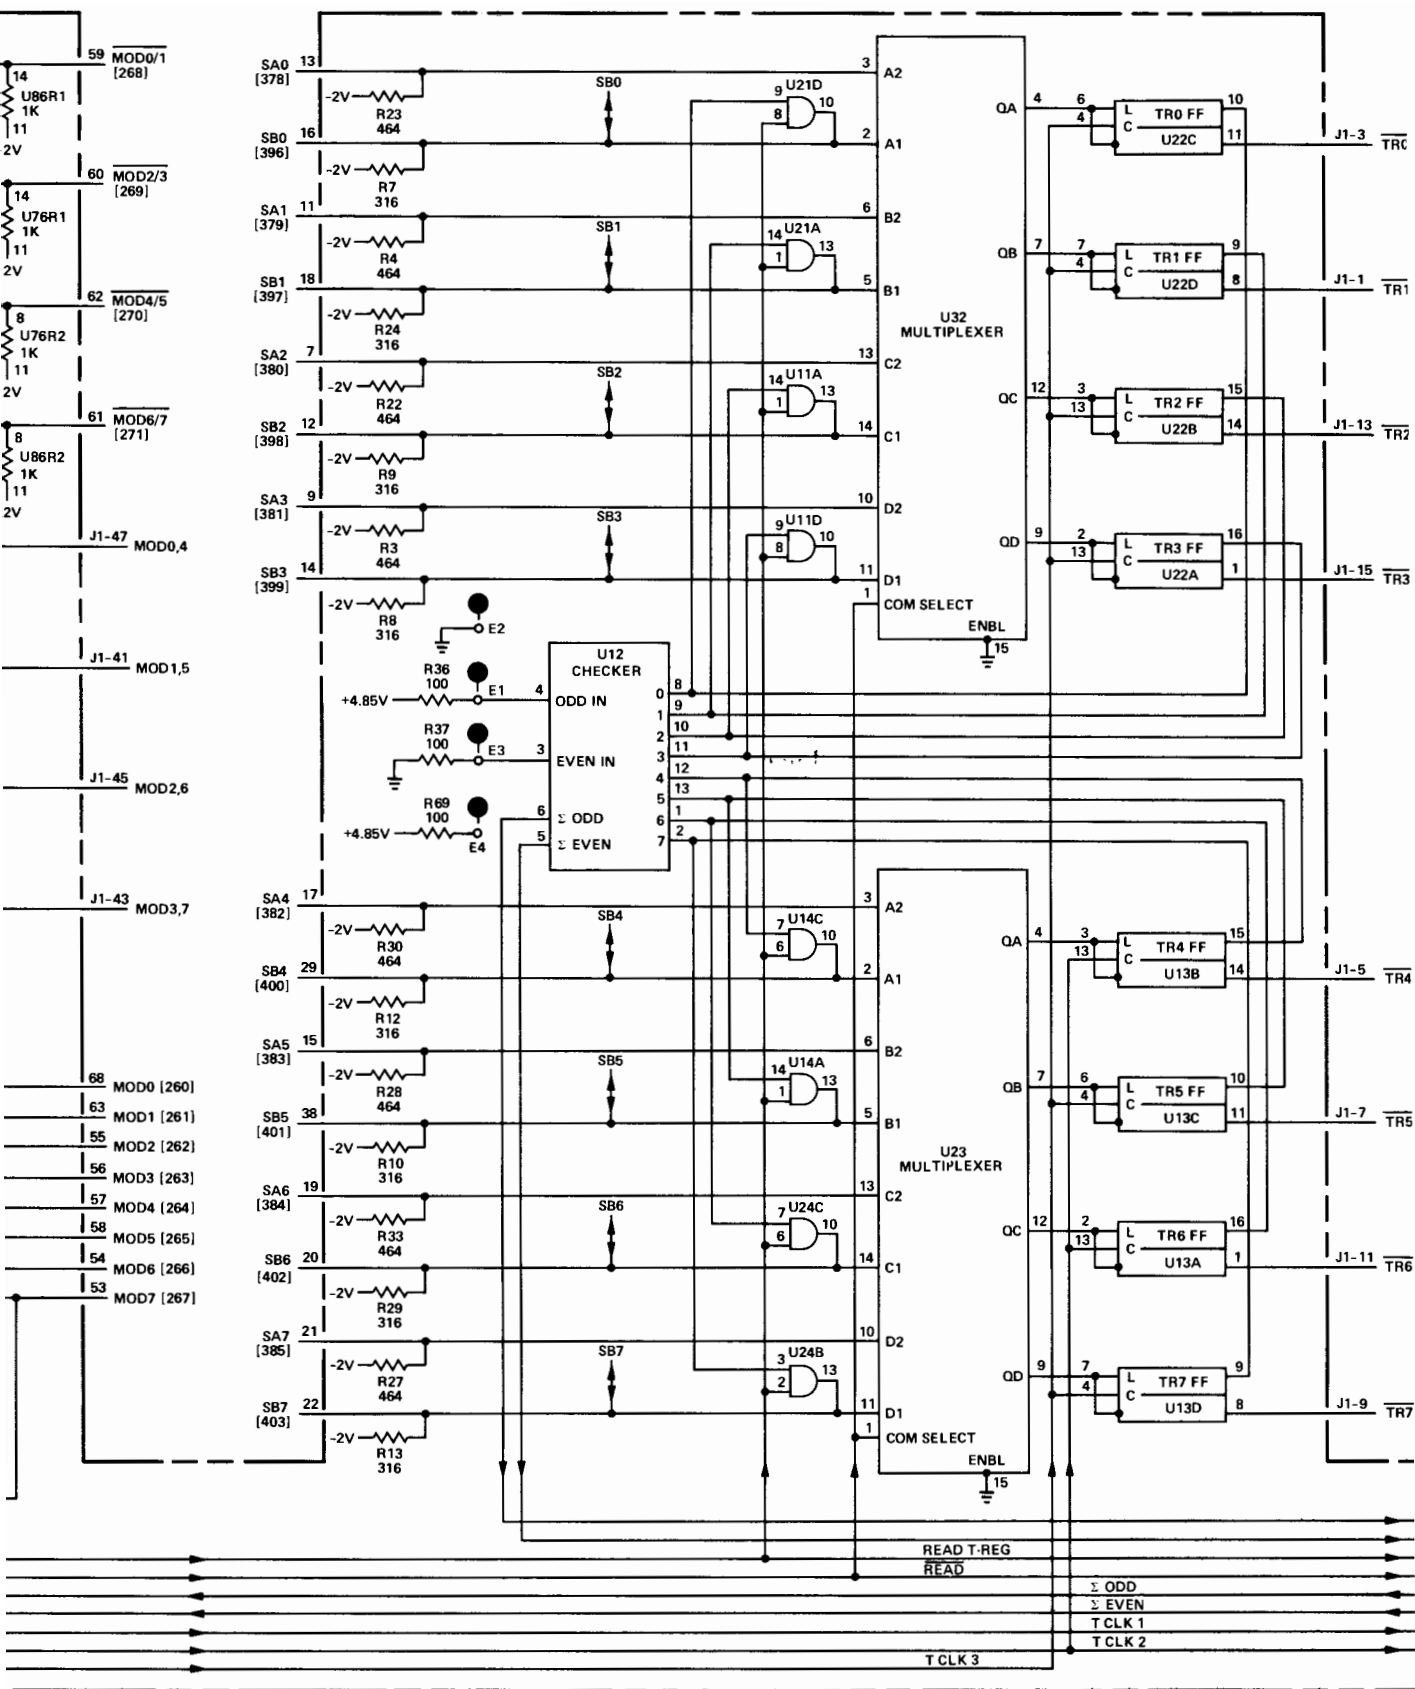

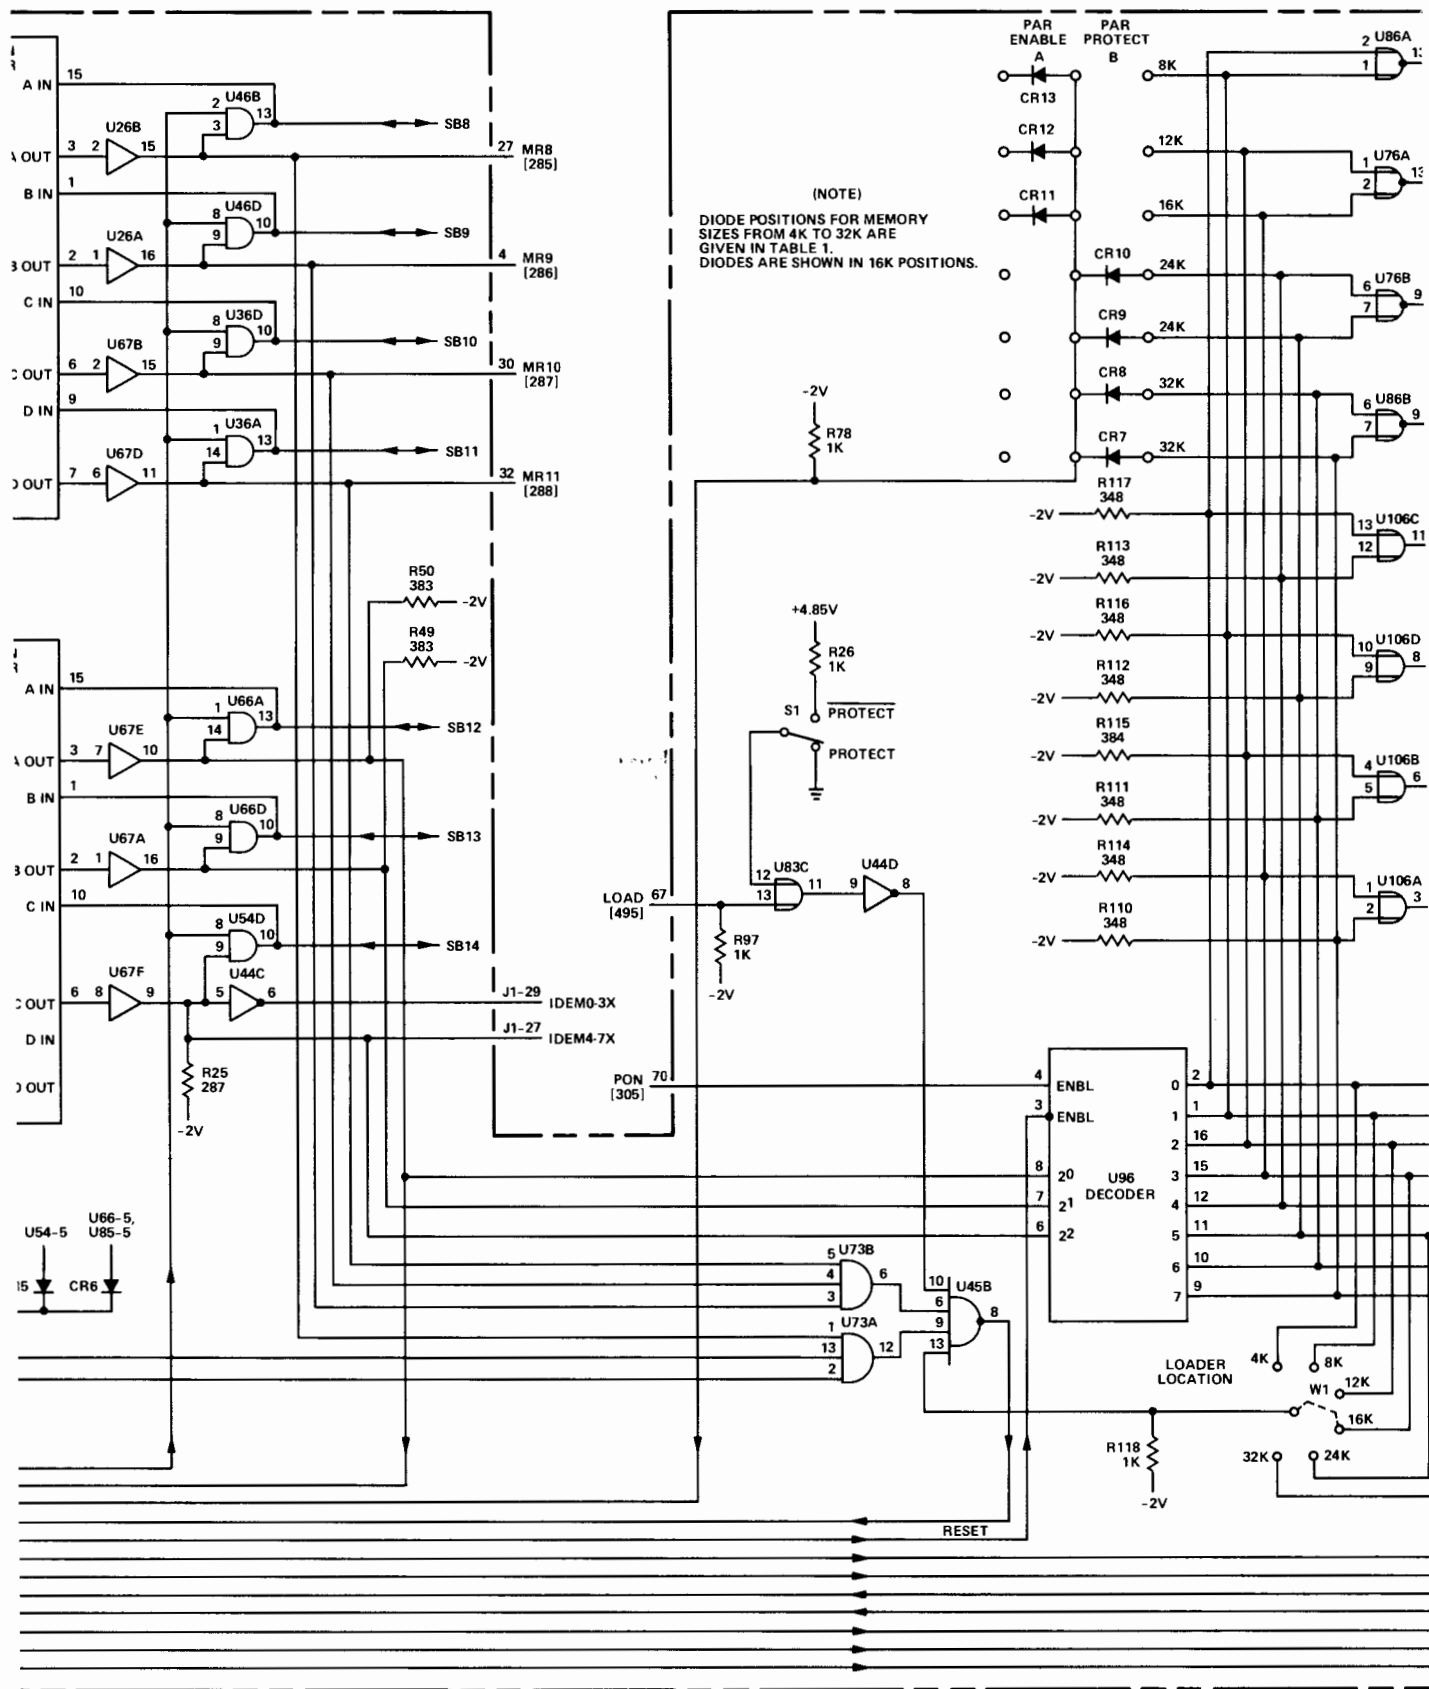



FF DEFINITIONS

TR0 THRU TR15 = TRANSFER REGISTER BIT 0 THRU
TRANSFER REGISTER BIT 15.

TABLE 1

MEMORY SIZE	DIODE POSITIONS						
	CR7	CR8	CR9	CR10	CR11	CR12	CR13
4K	B	B	B	B	B	B	B
8K	B	B	B	B	B	B	A
12K	B	B	B	B	B	A	A
16K	B	B	B	B	A	A	A
24K	B	B	A	A	A	A	A
32K	A	A	A	A	A	A	A

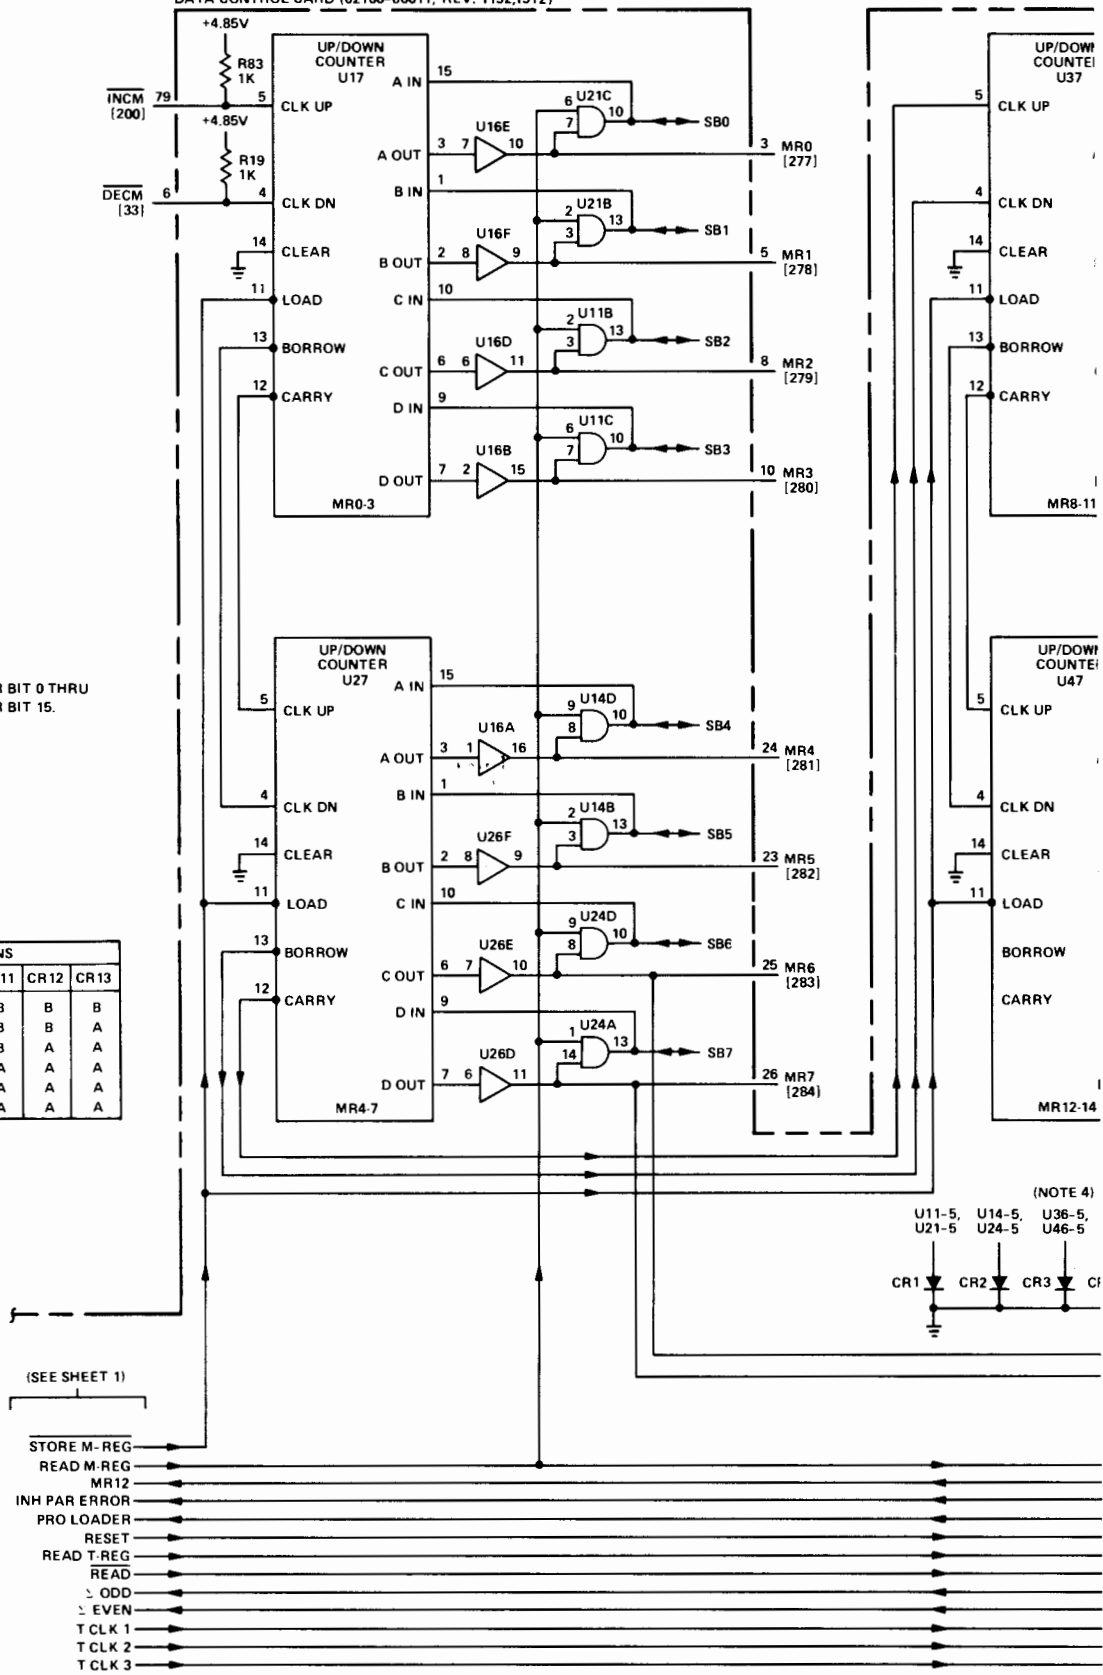

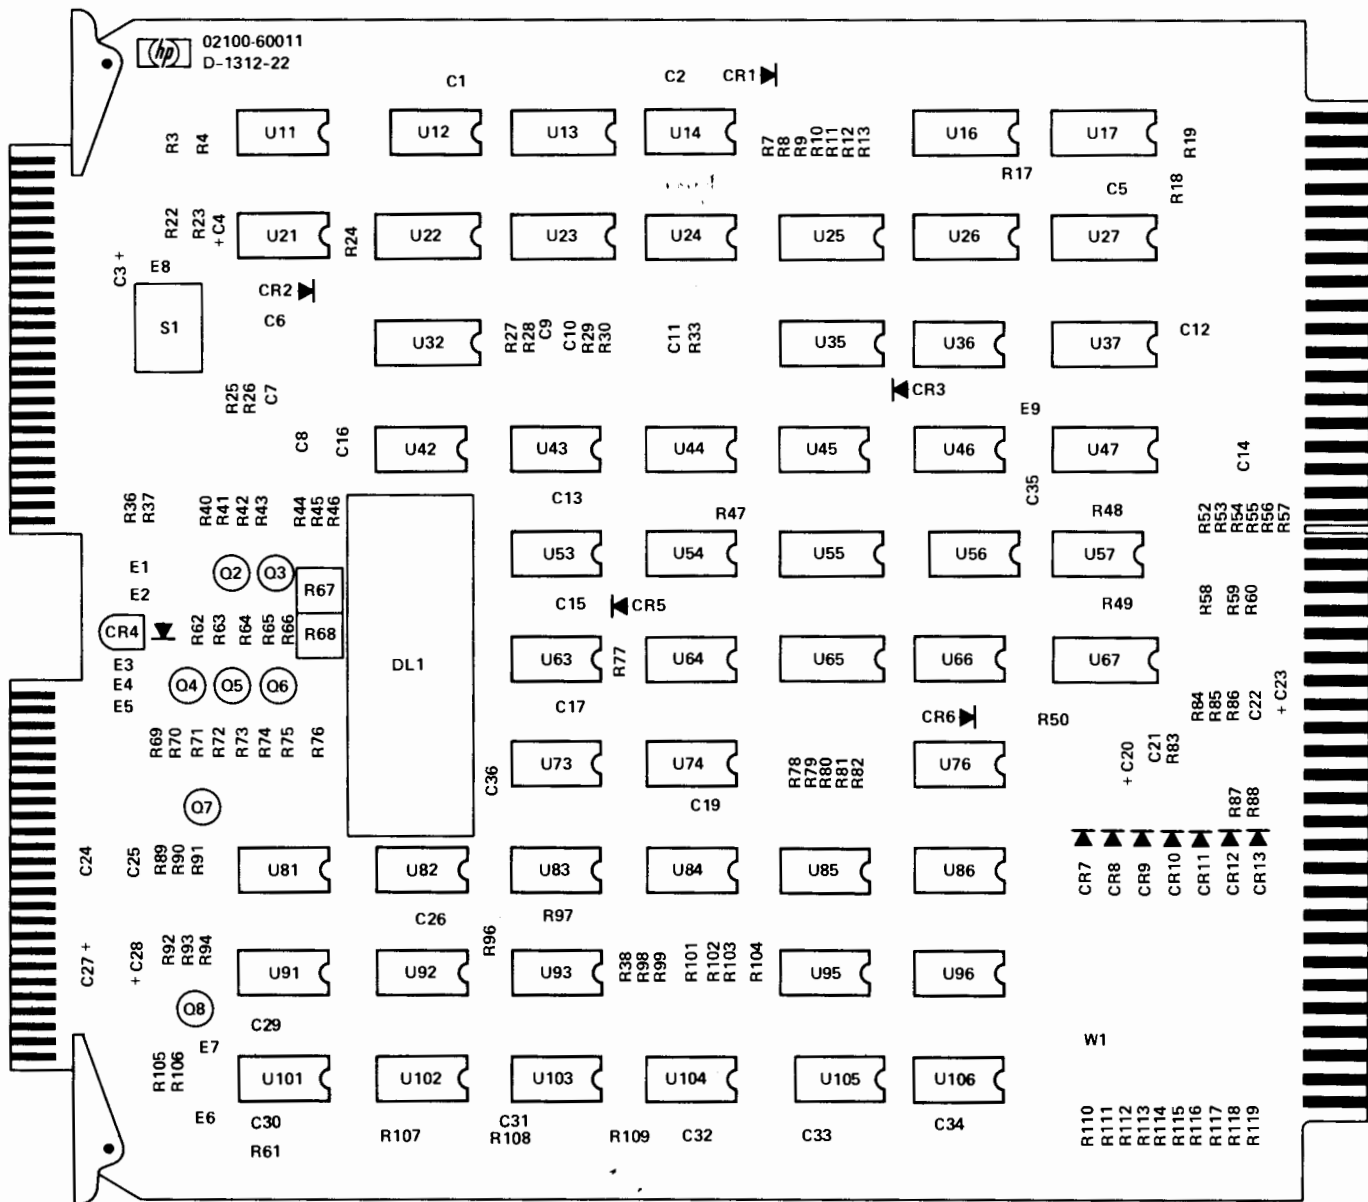

DWG REV. G

See table 4-21 for replaceable parts.

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE

A108 (16K)			
60	A108-4	A108-5	
129	A108-10*	A110-25	
130	A108-7*	A110-27	
131	A108-8*	A110-29	
132	A108-9*	A110-31	
133	A108-37*	A110-33	
134	A108-32*	A110-35	
135	A108-33*	A110-37	
136	A108-34*	A110-41	
137	A108-31*	A110-43	
138	A108-46*	A110-45	
139	A108-49*	A110-49	
140	A108-50*	A110-51	
141	A108-61*	A110-53	
142	A108-69*	A110-55	
143	A108-70*	A110-57	
144	A108-71*	A110-59	
145	A108-15*	A110-61	
146	A108-14*	A110-26	
147	A108-11*	A110-28	
148	A108-12*	A110-30	
149	A108-13*	A110-32	
150	A108-38*	A110-34	
151	A108-43*	A110-36	
152	A108-41*	A110-38	
153	A108-42*	A110-42	
154	A108-72*	A110-44	
155	A108-68*	A110-46	
156	A108-66*	A110-50	
157	A108-67*	A110-52	
158	A108-65*	A110-54	
159	A108-62*	A110-56	
160	A108-63*	A110-58	
161	A108-64*	A110-60	
162	A108-16*	A110-62	
163	A108-26*	A111-25	
164	A108-19*	A111-27	
165	A108-25*	A111-29	
166	A108-24*	A111-31	
167	A108-53*	A111-33	
168	A108-60*	A111-35	
169	A108-59*	A111-37	
170	A108-58*	A111-41	
171	A108-52*	A111-43	
172	A108-44*	A111-45	
173	A108-51*	A111-49	
174	A108-45*	A111-51	
175	A108-76*	A111-53	
176	A108-73*	A111-55	
177	A108-74*	A111-57	
178	A108-75*	A111-59	
179	A108-17*	A111-61	
180	A108-20*	A111-26	
181	A108-23*	A111-28	
182	A108-22*	A111-30	
183	A108-21*	A111-32	
184	A108-57*	A111-34	
185	A108-54*	A111-36	
186	A108-56*	A111-38	
187	A108-55*	A111-42	
188	A108-78*	A111-44	
189	A108-79*	A111-46	
190	A108-81*	A111-50	
191	A108-80*	A111-52	
192	A108-84*	A111-54	
193	A108-77*	A111-56	
194	A108-83*	A111-58	
195	A108-82*	A111-60	
196	A108-18*	A111-62	




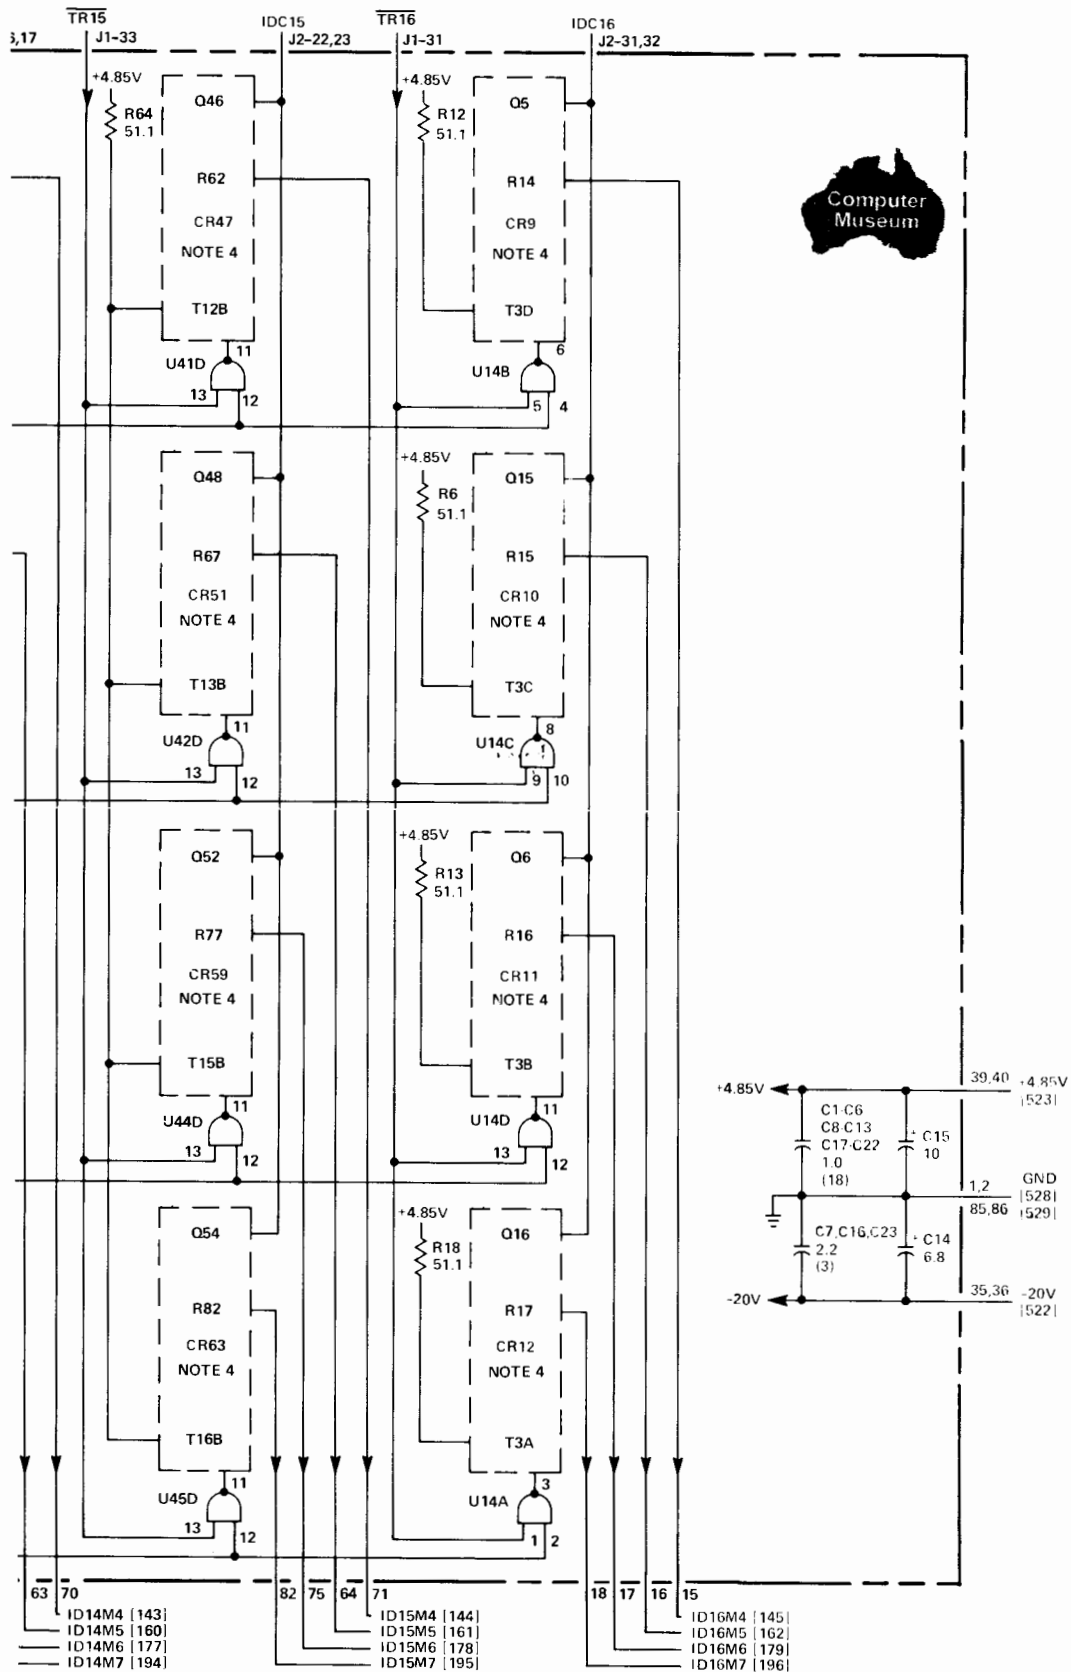



Figure 4-26. A108 Inhibit Driver Card (16K), Parts Location and Schematic Diagrams

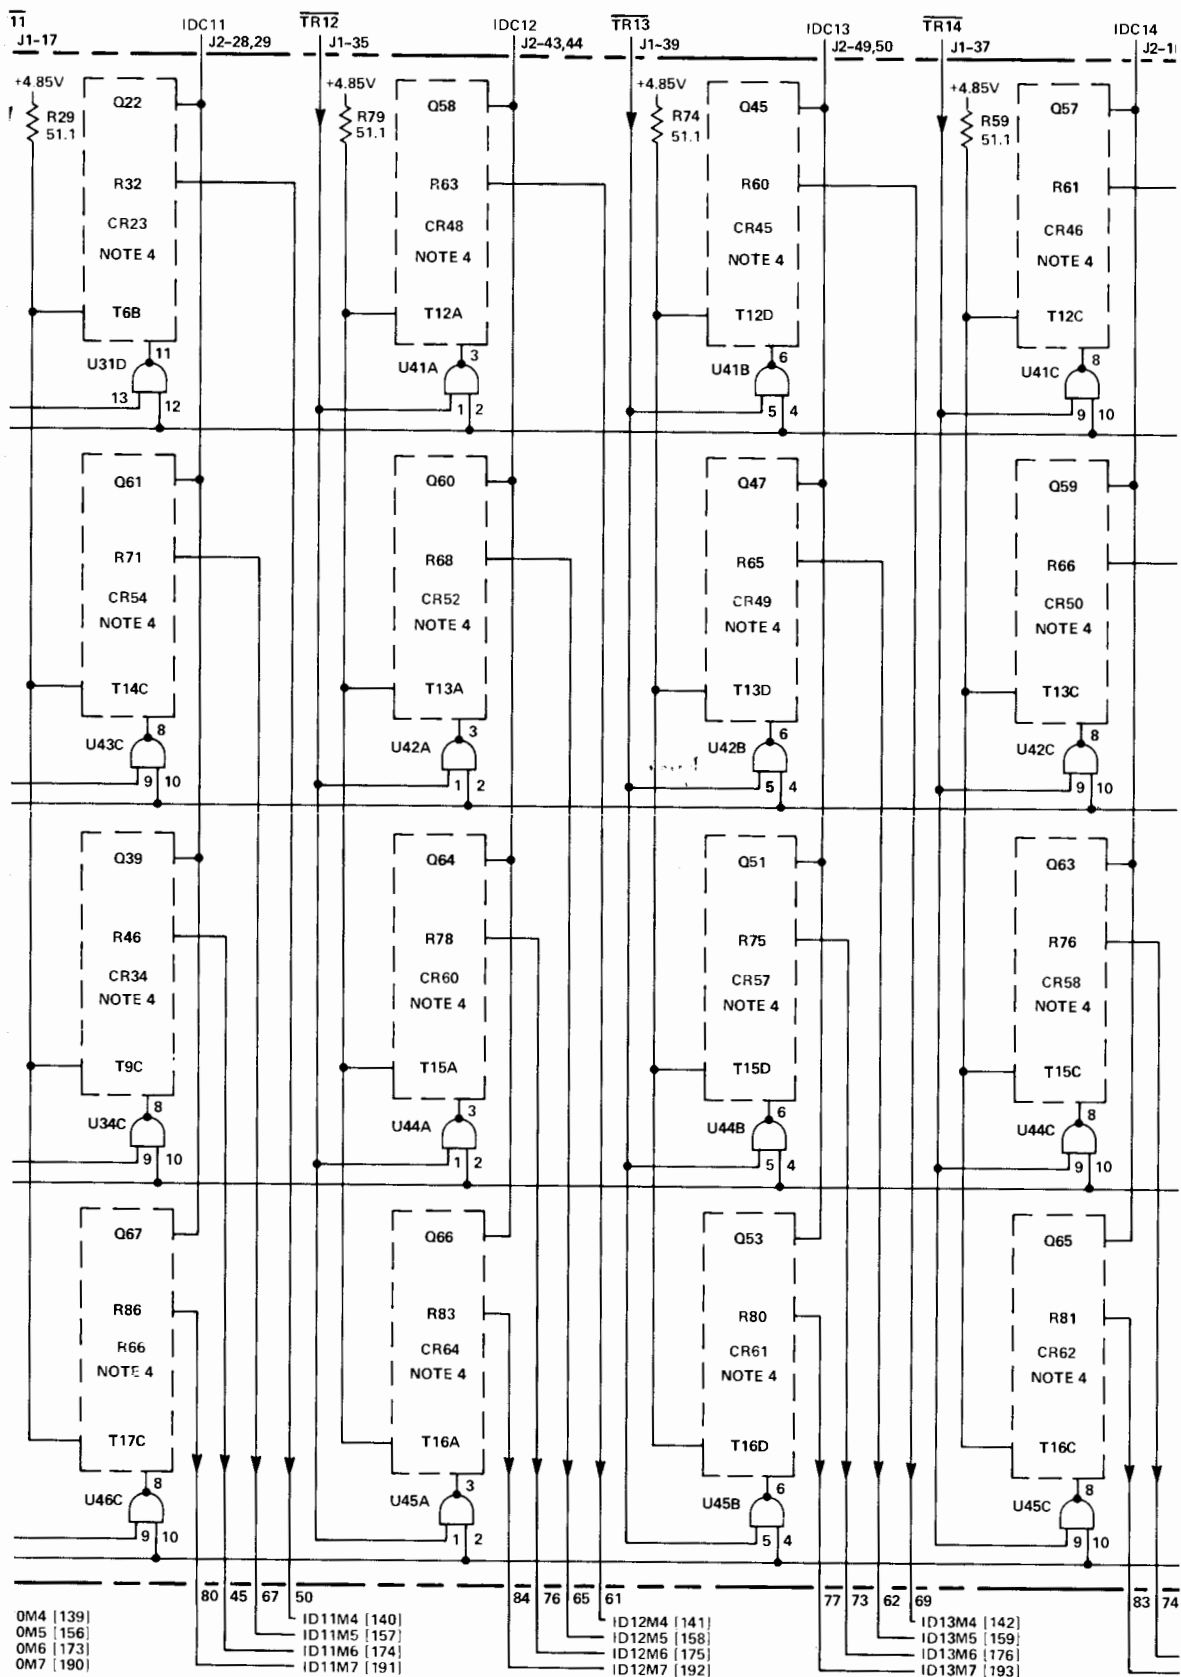

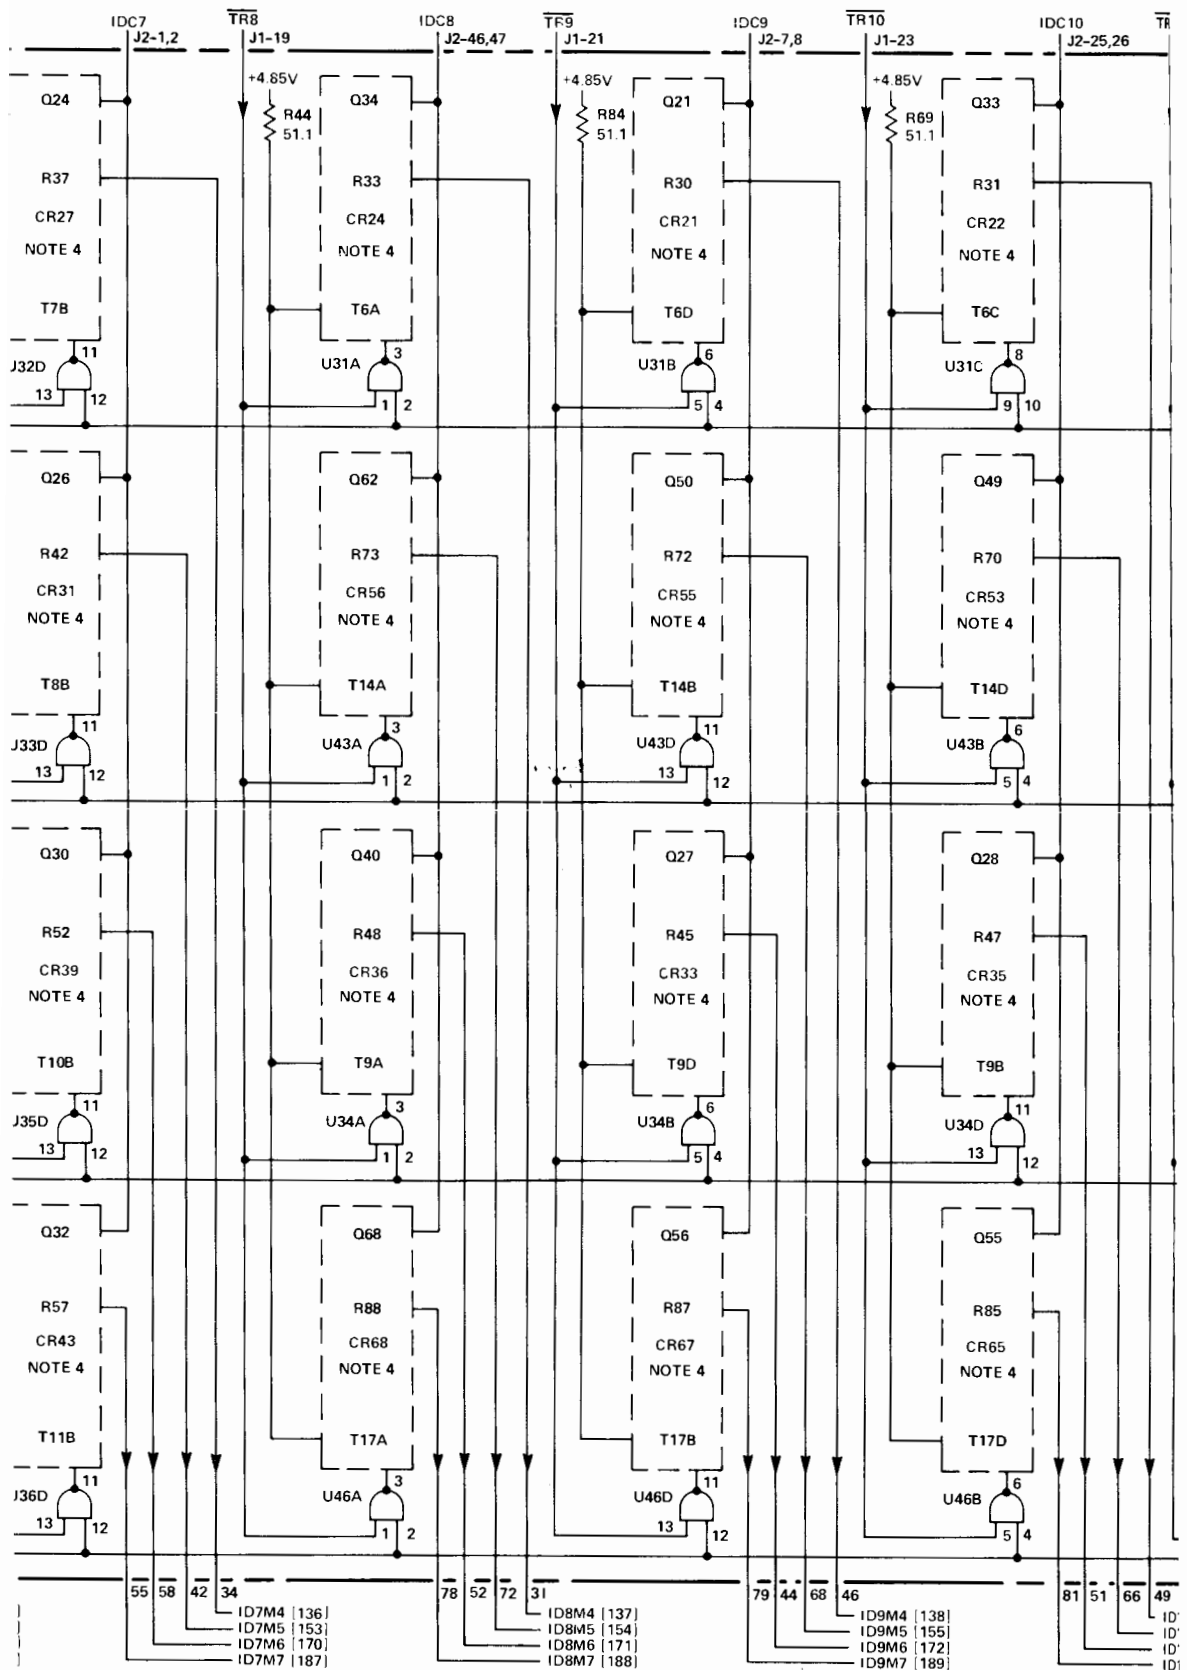


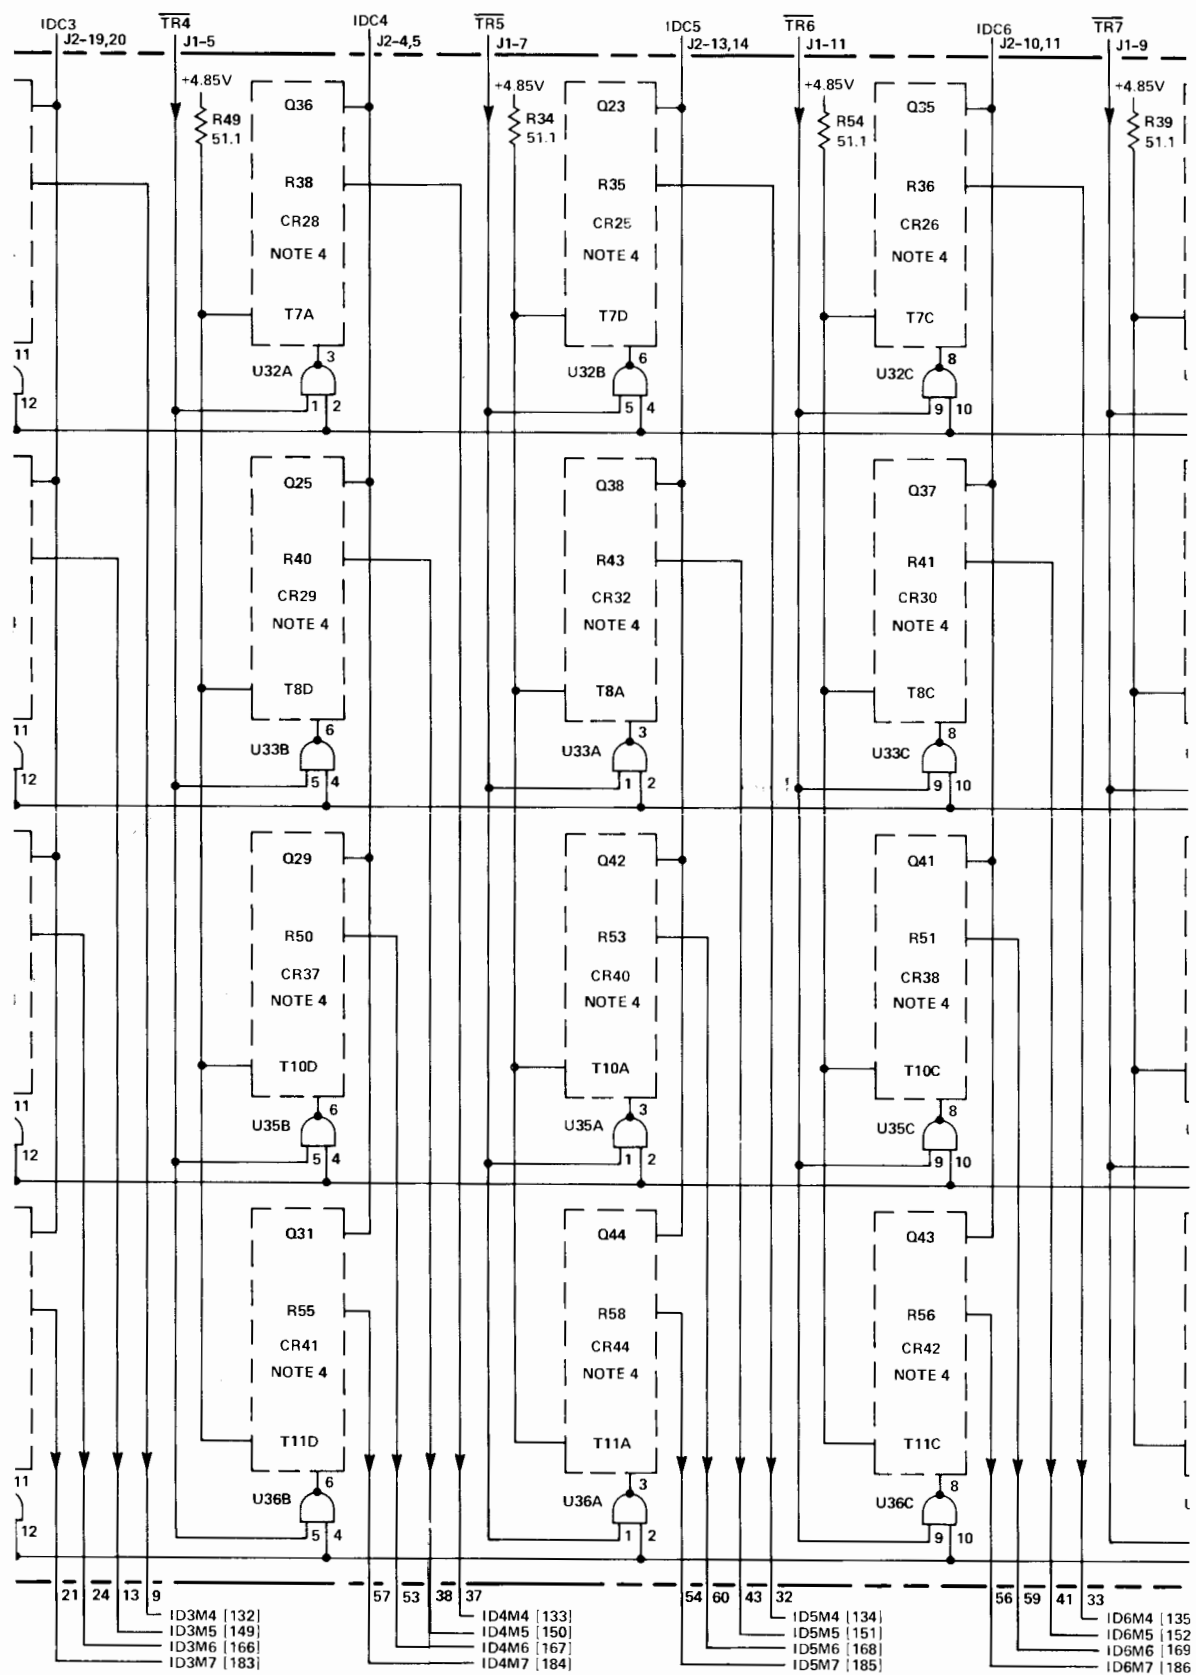


INHIBIT DRIVER CARD
(02100-60009, REV. 1049)

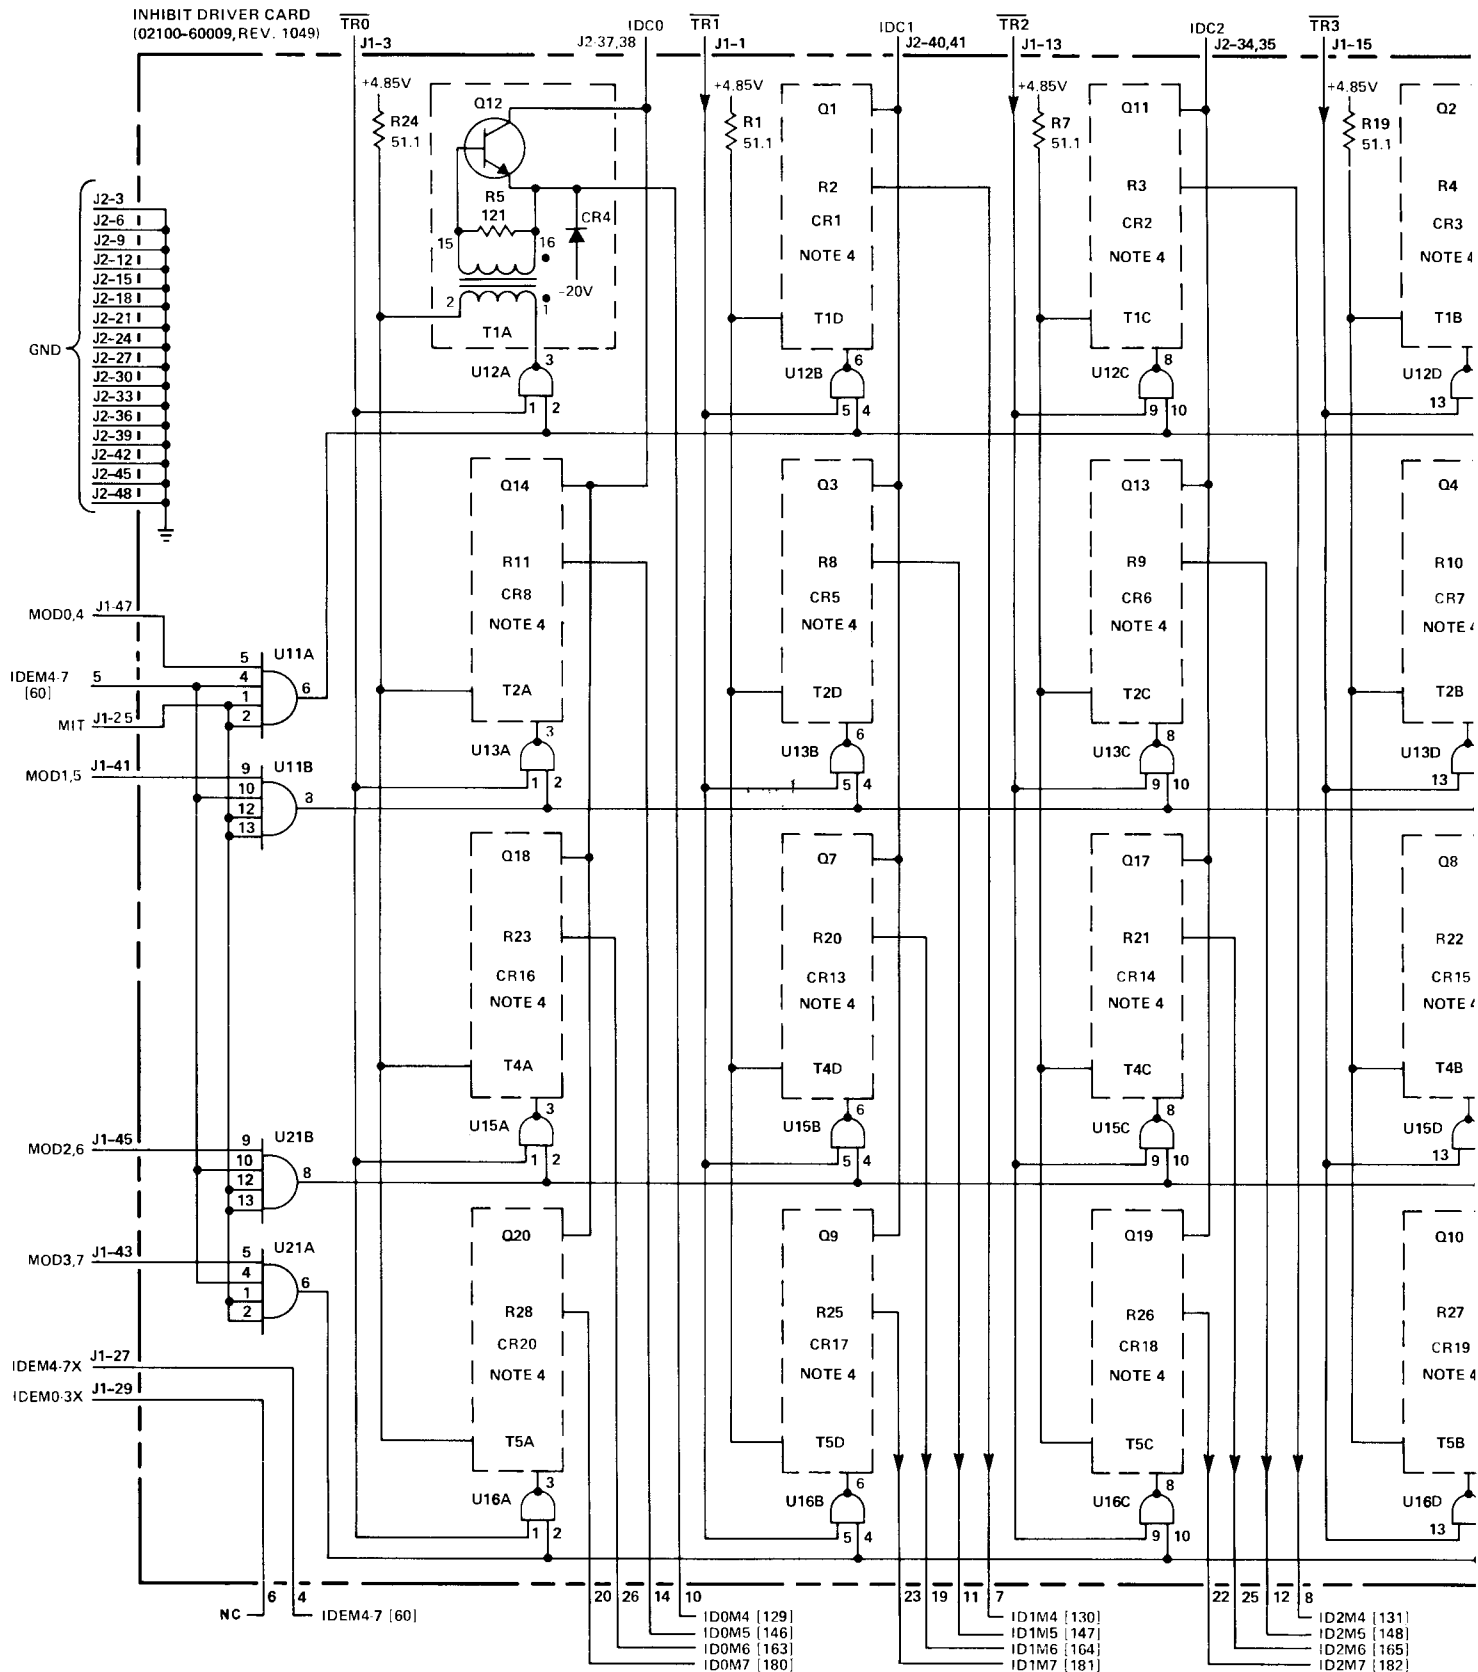

NOTES:

1. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
2. ALL PIN NUMBERS REFER TO 86-PIN CONNECTOR UNLESS OTHERWISE SPECIFIED.
3. NUMBERS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
4. SEE TYPICAL CIRCUIT AT UPPER LEFT CORNER.
5. SCHEMATIC DIAGRAM OF T1 THRU T17.

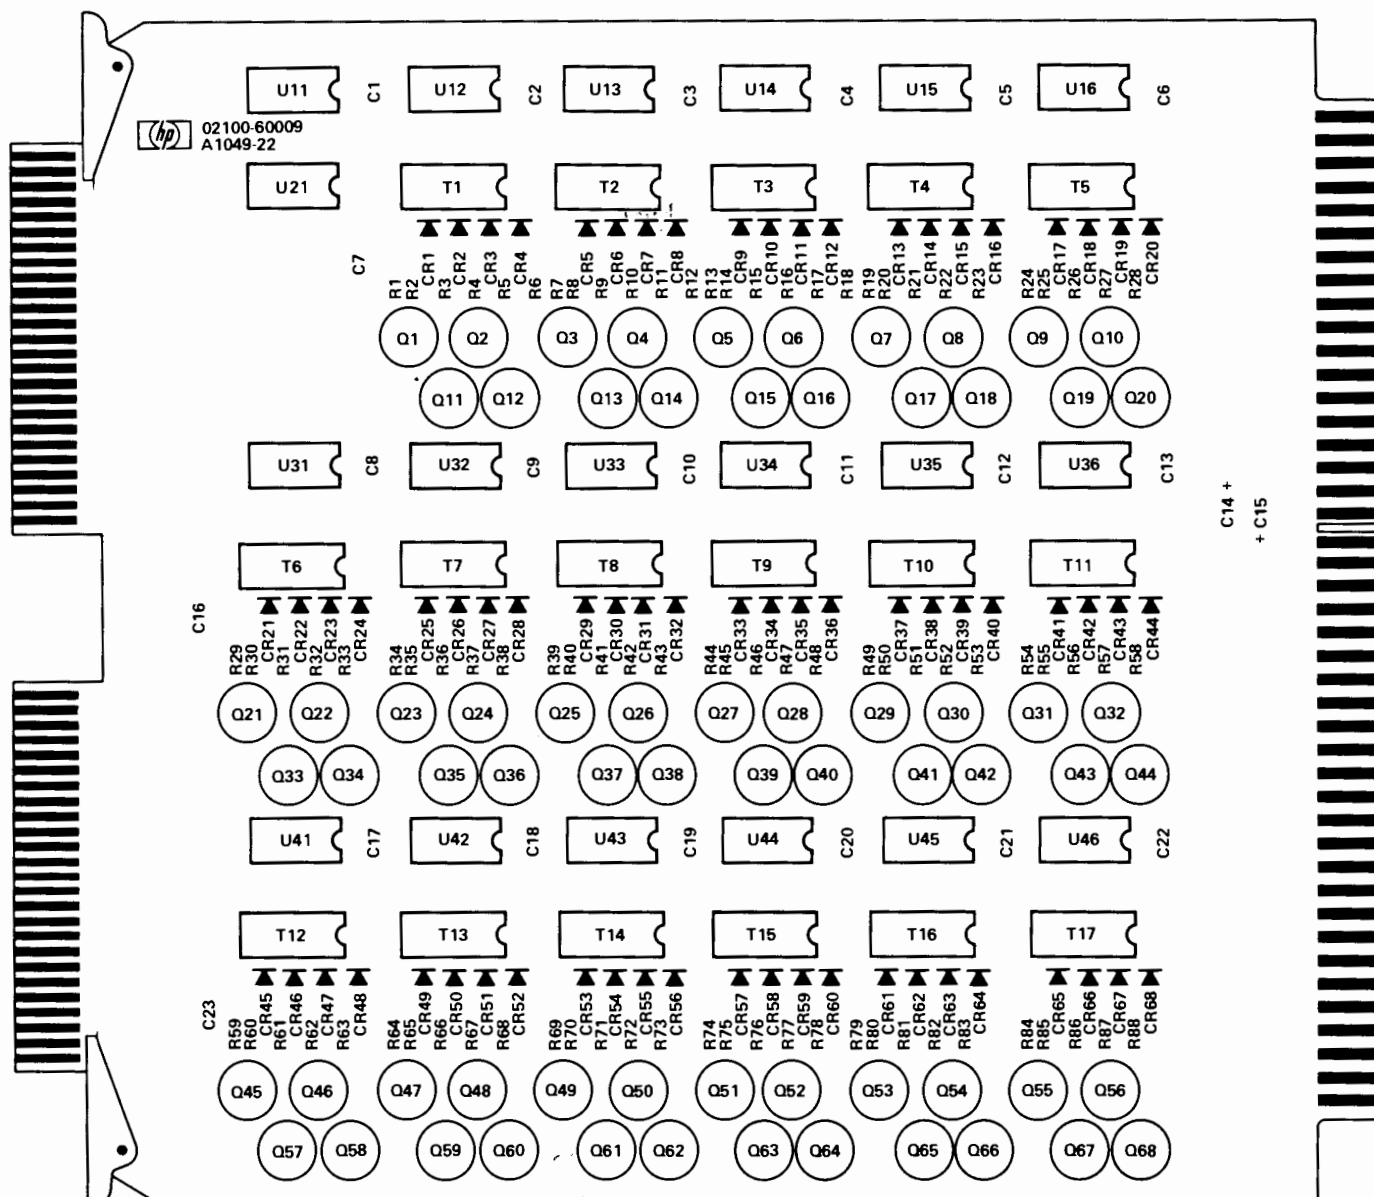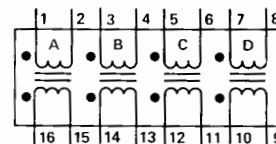

DWG REV. A

See table 4-19 for replaceable parts.



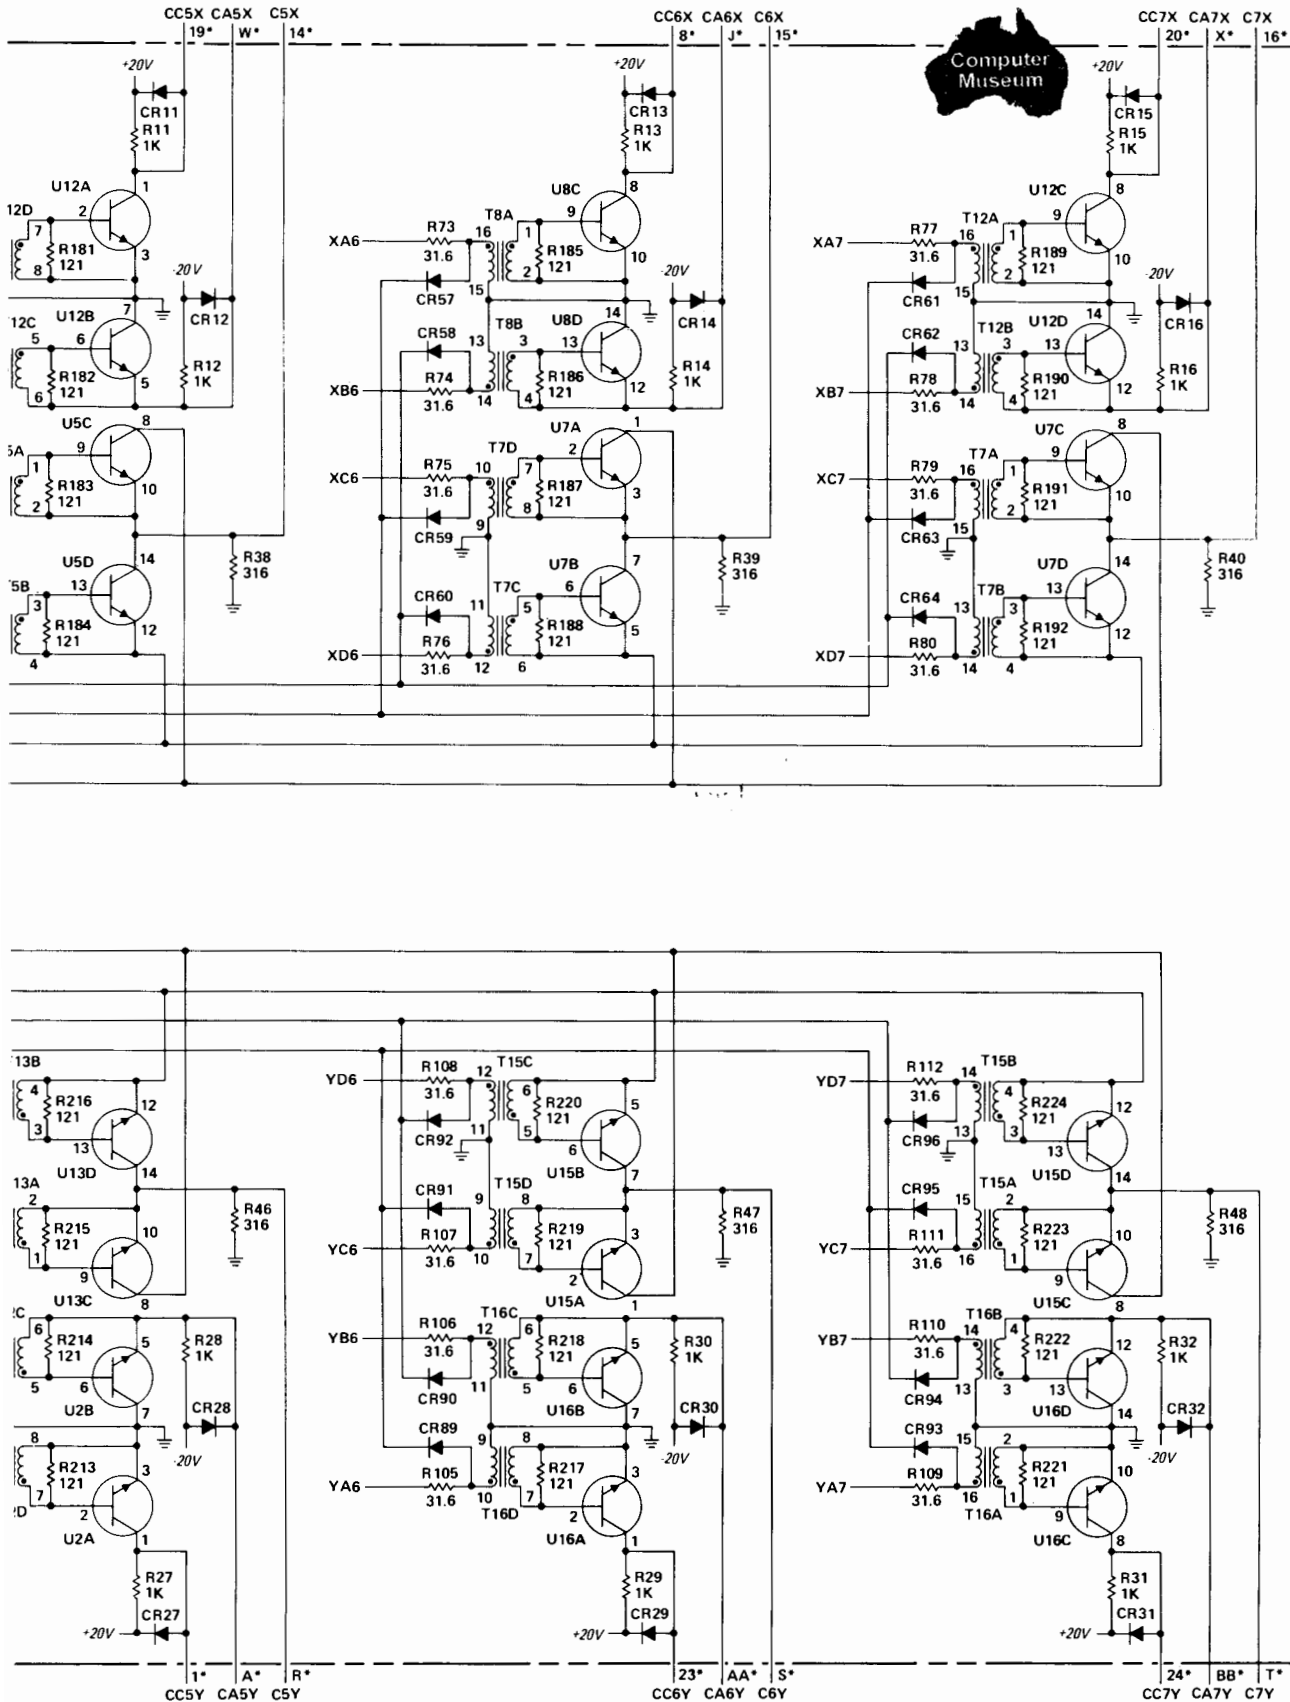


Figure 4-27. A109 X-Y Driver/Switch Card, Parts Location and Schematic Diagrams

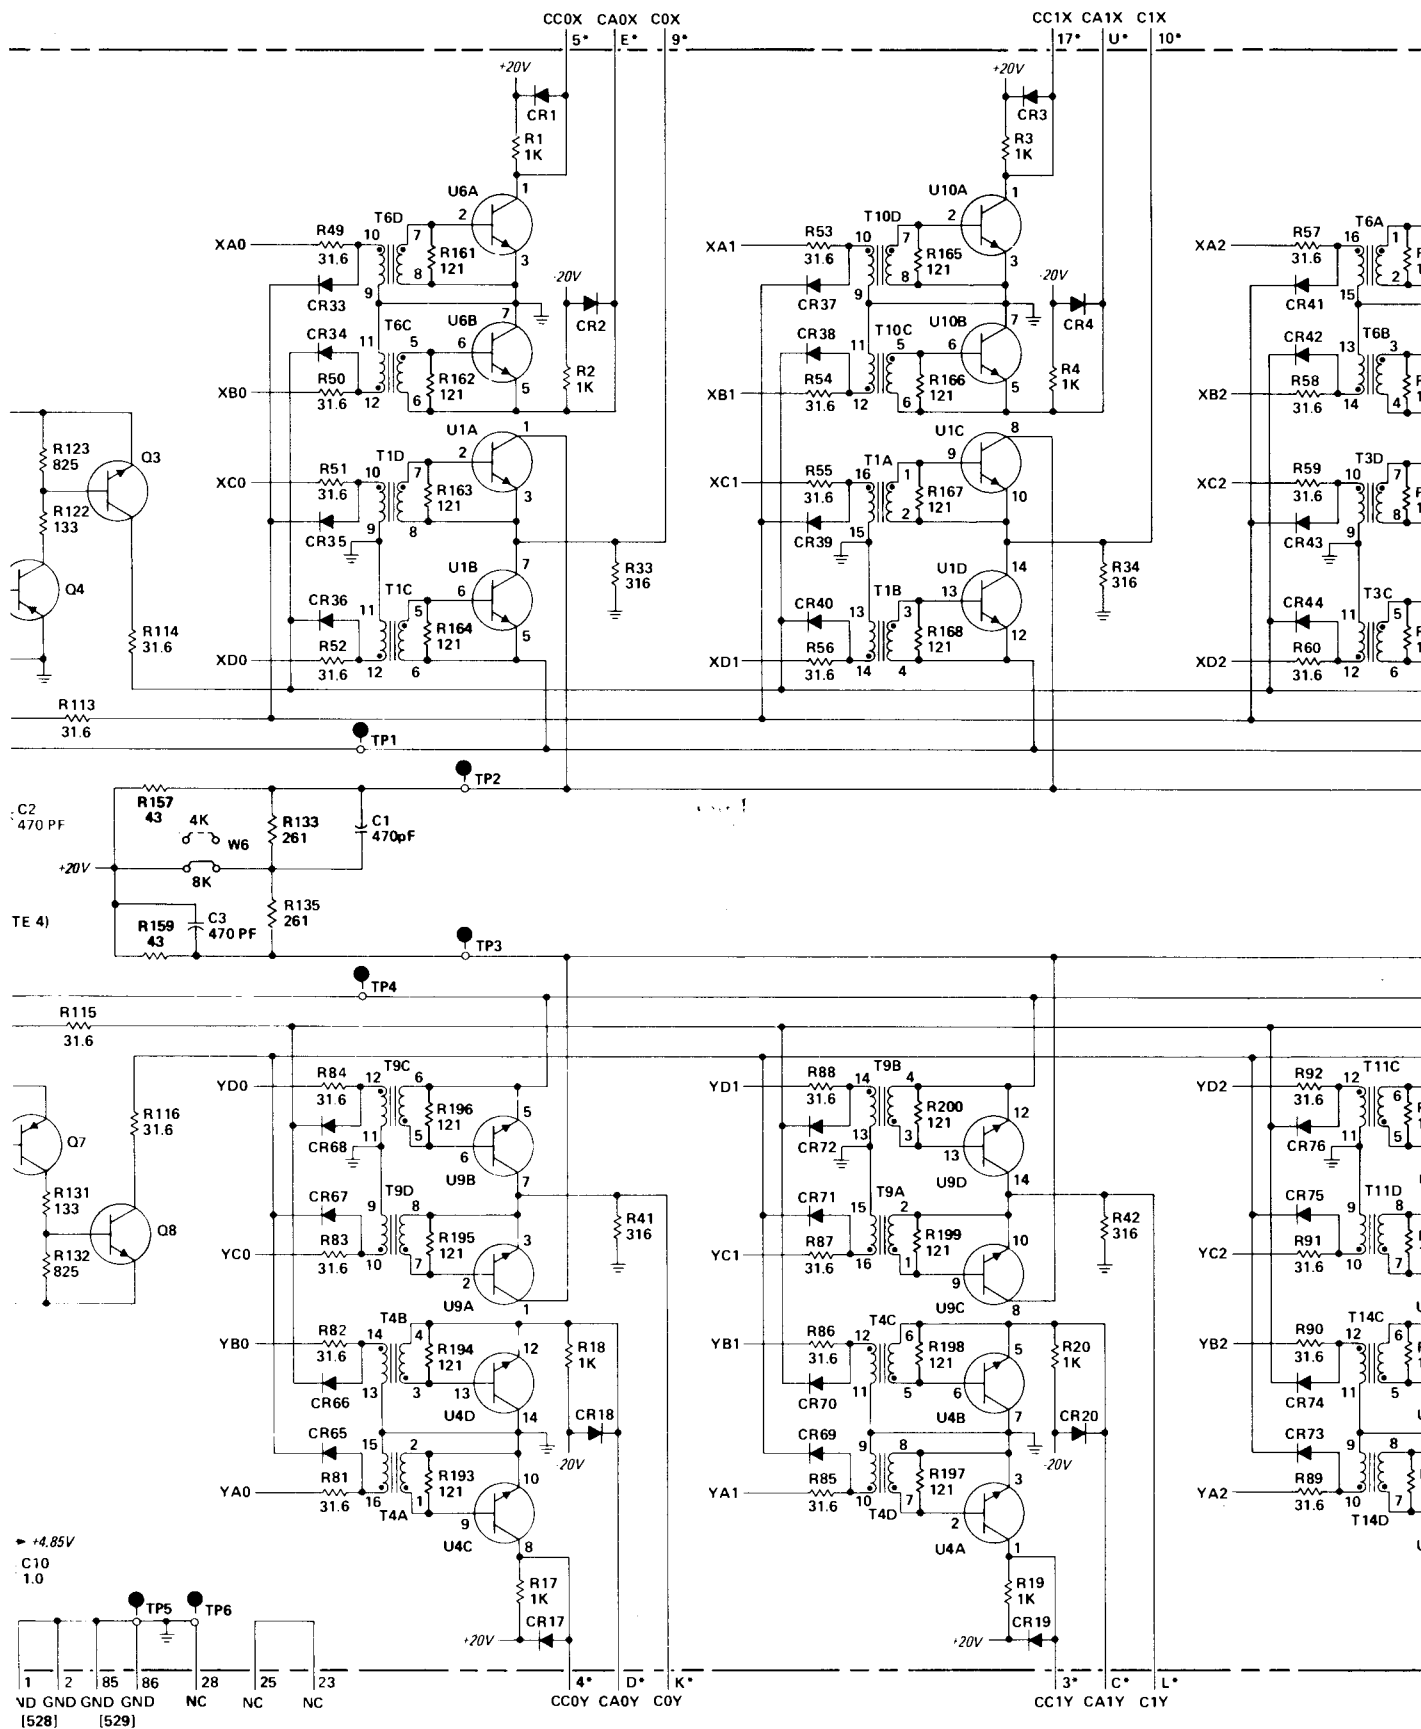

X-Y DRIVER/SWITCH CARD (02100-60012, REV. 1121, 1132, 1152)

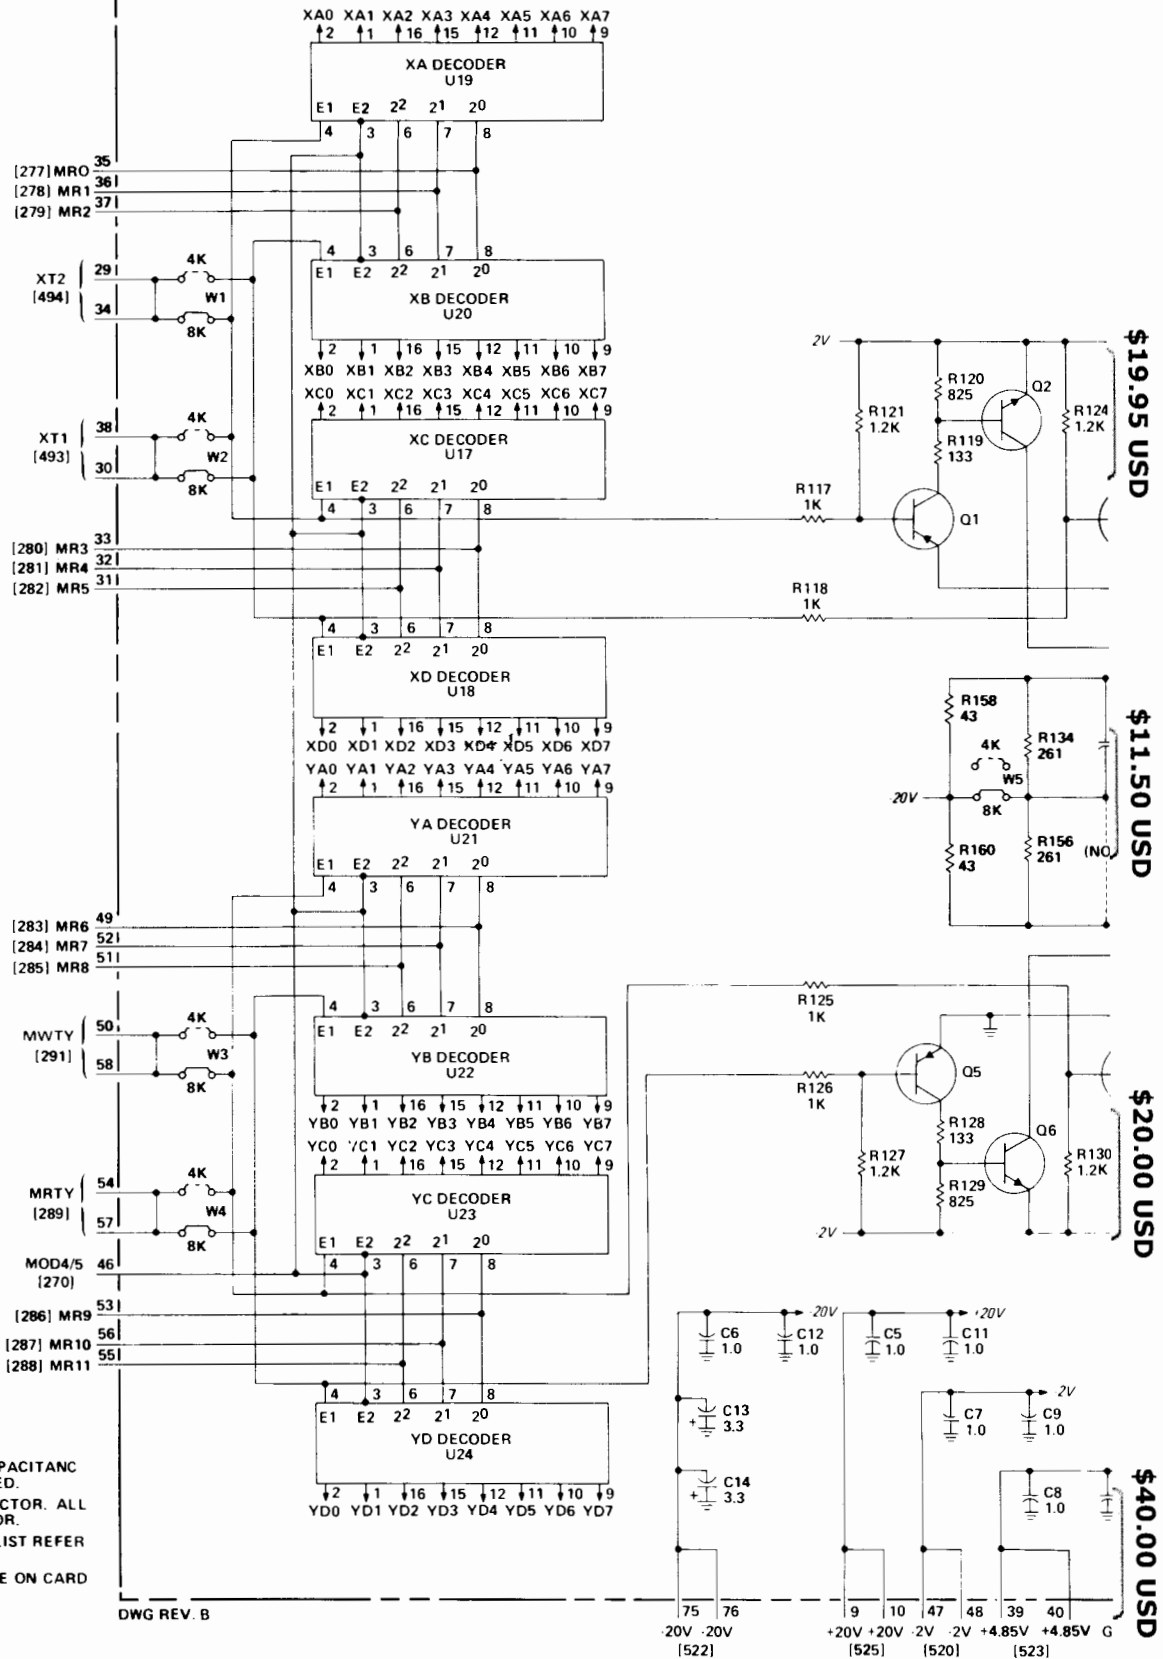

RESISTOR VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN MICROFARADS (UF) UNLESS OTHERWISE SPECIFIED.
 ALL PIN NUMBERS ARE FOR 86-PIN CONNECTOR. ALL PIN NUMBERS IN BRACKETS [] ARE WIRING LIST REFERENCERS.
 IN POSITION SHOWN BY DASHED LINE ON CARD AND 1121.

DWG REV. B

DWG REV. D

See table 4-15 for replaceable parts.

(Information continues on next page)

REF. NO.	BACKPLANE LOCATION			* INDICATES SIGNAL SOURCE	

A110					
129	A108-10*	A110-25			
130	A108-7*	A110-27			
131	A108-8*	A110-29			
132	A108-9*	A110-31			
133	A108-37*	A110-33			
134	A108-32*	A110-35			
135	A108-33*	A110-37			
136	A108-34*	A110-41			
137	A108-31*	A110-43			
138	A108-46*	A110-45			
139	A108-49*	A110-49			
140	A108-50*	A110-51			
141	A108-61*	A110-53			
142	A108-69*	A110-55			
143	A108-70*	A110-57			
144	A108-71*	A110-59			
145	A108-15*	A110-61			
146	A108-14*	A110-26			
147	A108-11*	A110-28			
148	A108-12*	A110-30			
149	A108-13*	A110-32			
150	A108-38*	A110-34			
151	A108-43*	A110-36			
152	A108-41*	A110-38			
153	A108-42*	A110-42			
154	A108-72*	A110-44			
155	A108-68*	A110-46			
156	A108-66*	A110-50			
157	A108-67*	A110-52			
158	A108-65*	A110-54			
159	A108-62*	A110-56			
160	A108-63*	A110-58			
161	A108-64*	A110-60			
162	A108-16*	A110-62			
264	A107-57*	A110-3			
265	A107-58*	A110-4			
272	A102-5*	A103-5*	A107-80	A110-5*	A111-5*
290	A102-6	A103-6	A107-83*	A110-6	A111-6
378	A102-15*	A103-15*	A107-13	A110-15*	A111-15*
379	A102-18*	A103-18*	A107-11	A110-18*	A111-18*
380	A102-17*	A103-17*	A107-7	A110-17*	A111-17*
381	A102-20*	A103-20*	A107-9	A110-20*	A111-20*
382	A102-19*	A103-19*	A107-17	A110-19*	A111-19*
383	A102-22*	A103-22*	A107-15	A110-22*	A111-22*
384	A102-21*	A103-21*	A107-19	A110-21*	A111-21*
385	A102-63*	A103-63*	A107-21	A110-63*	A111-63*
386	A102-64*	A103-64*	A107-31	A110-64*	A111-64*
387	A102-65*	A103-65*	A107-33	A110-65*	A111-65*
388	A102-66*	A103-66*	A107-35	A110-66*	A111-66*
389	A102-67*	A103-67*	A107-37	A110-67*	A111-67*
390	A102-68*	A103-68*	A107-41	A110-68*	A111-68*
391	A102-69*	A103-69*	A107-43	A110-69*	A111-69*
392	A102-70*	A103-70*	A107-45	A110-70*	A111-70*
393	A102-71*	A103-71*	A107-49	A110-71*	A111-71*
394	A102-72*	A103-72*	A107-71	A110-72*	A111-72*


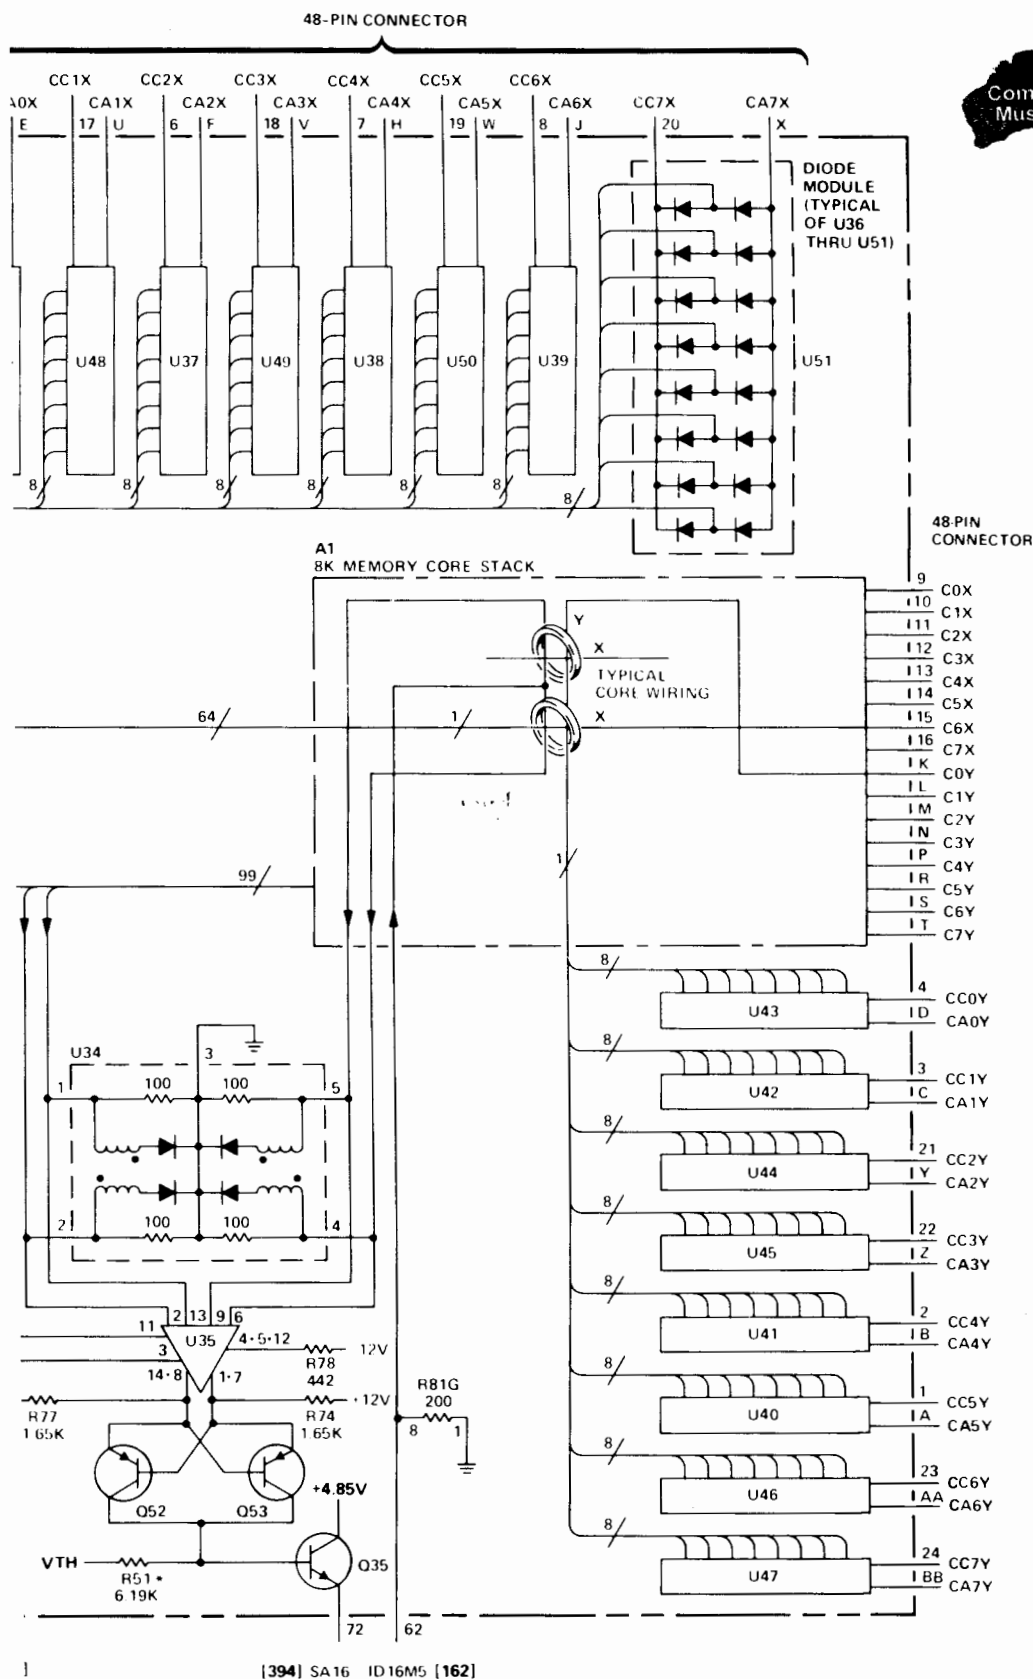



Figure 4-28. A110 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams

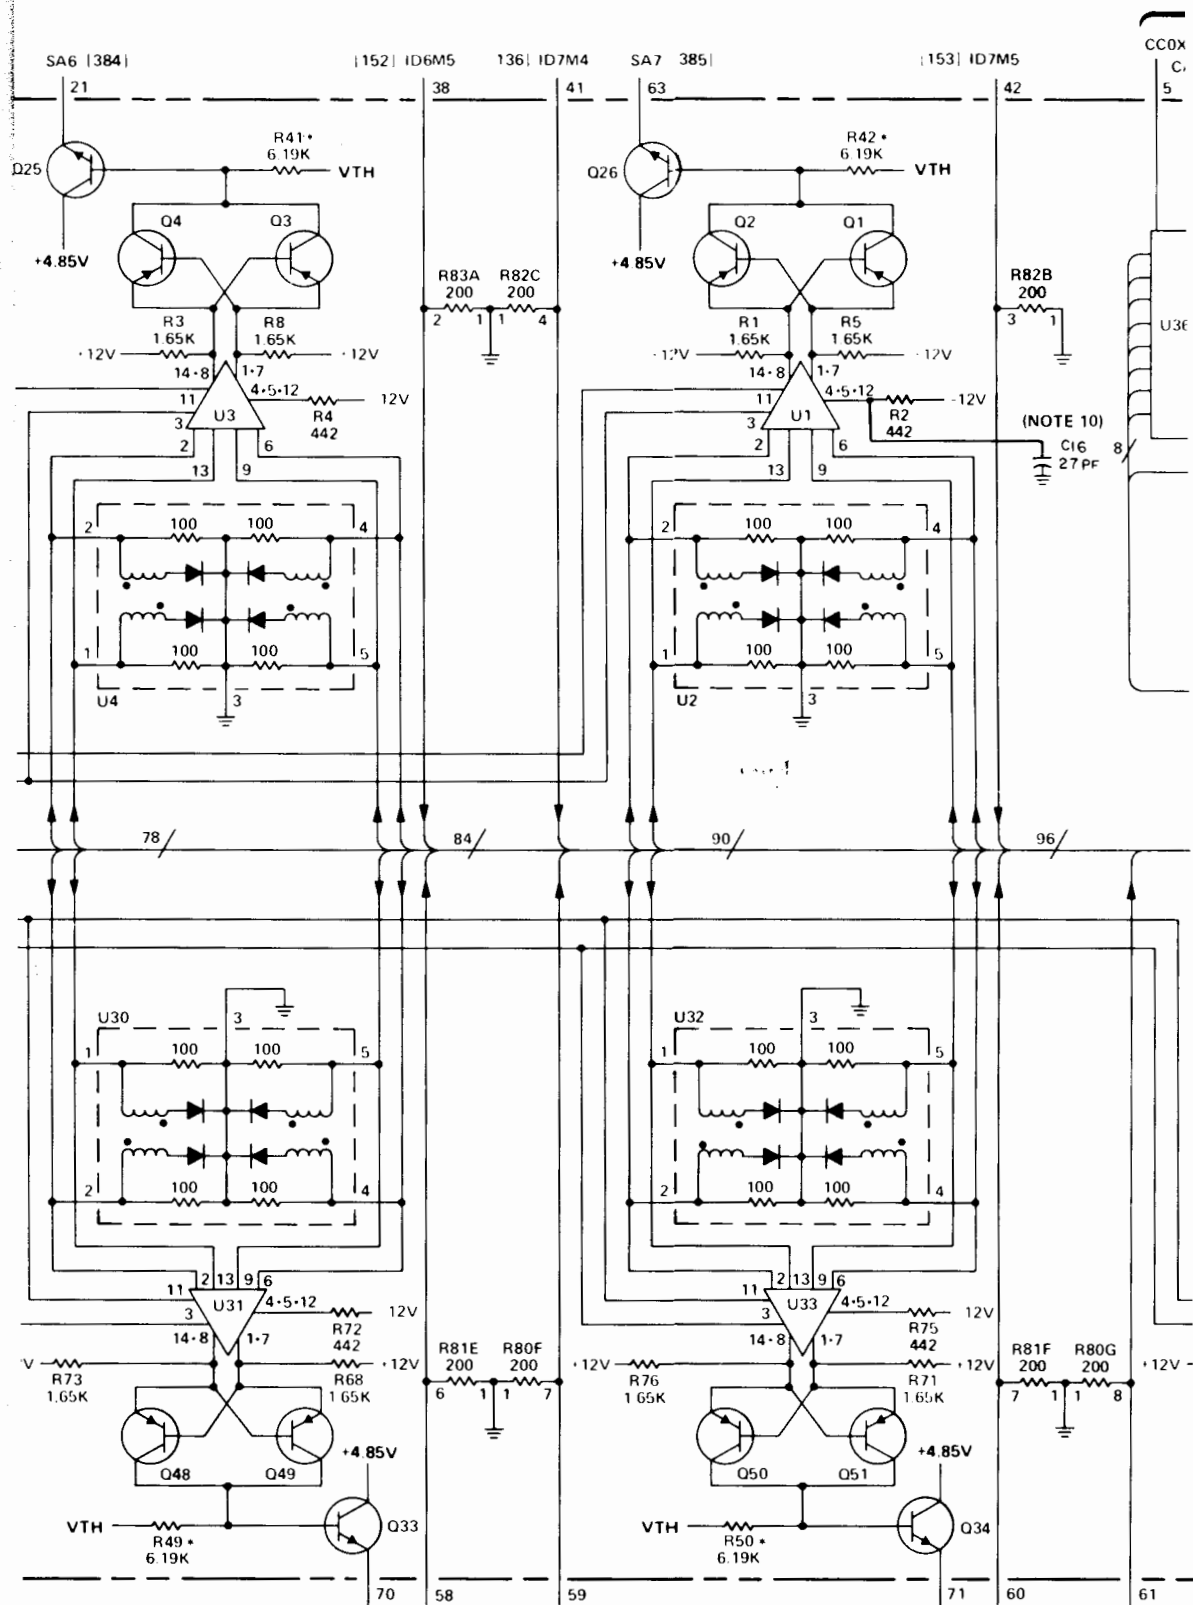


143]


[392] SA14 ID14M5 [160] ID15M4 [144]

[393] SA15 ID15M5 [161] ID16M4 [145]

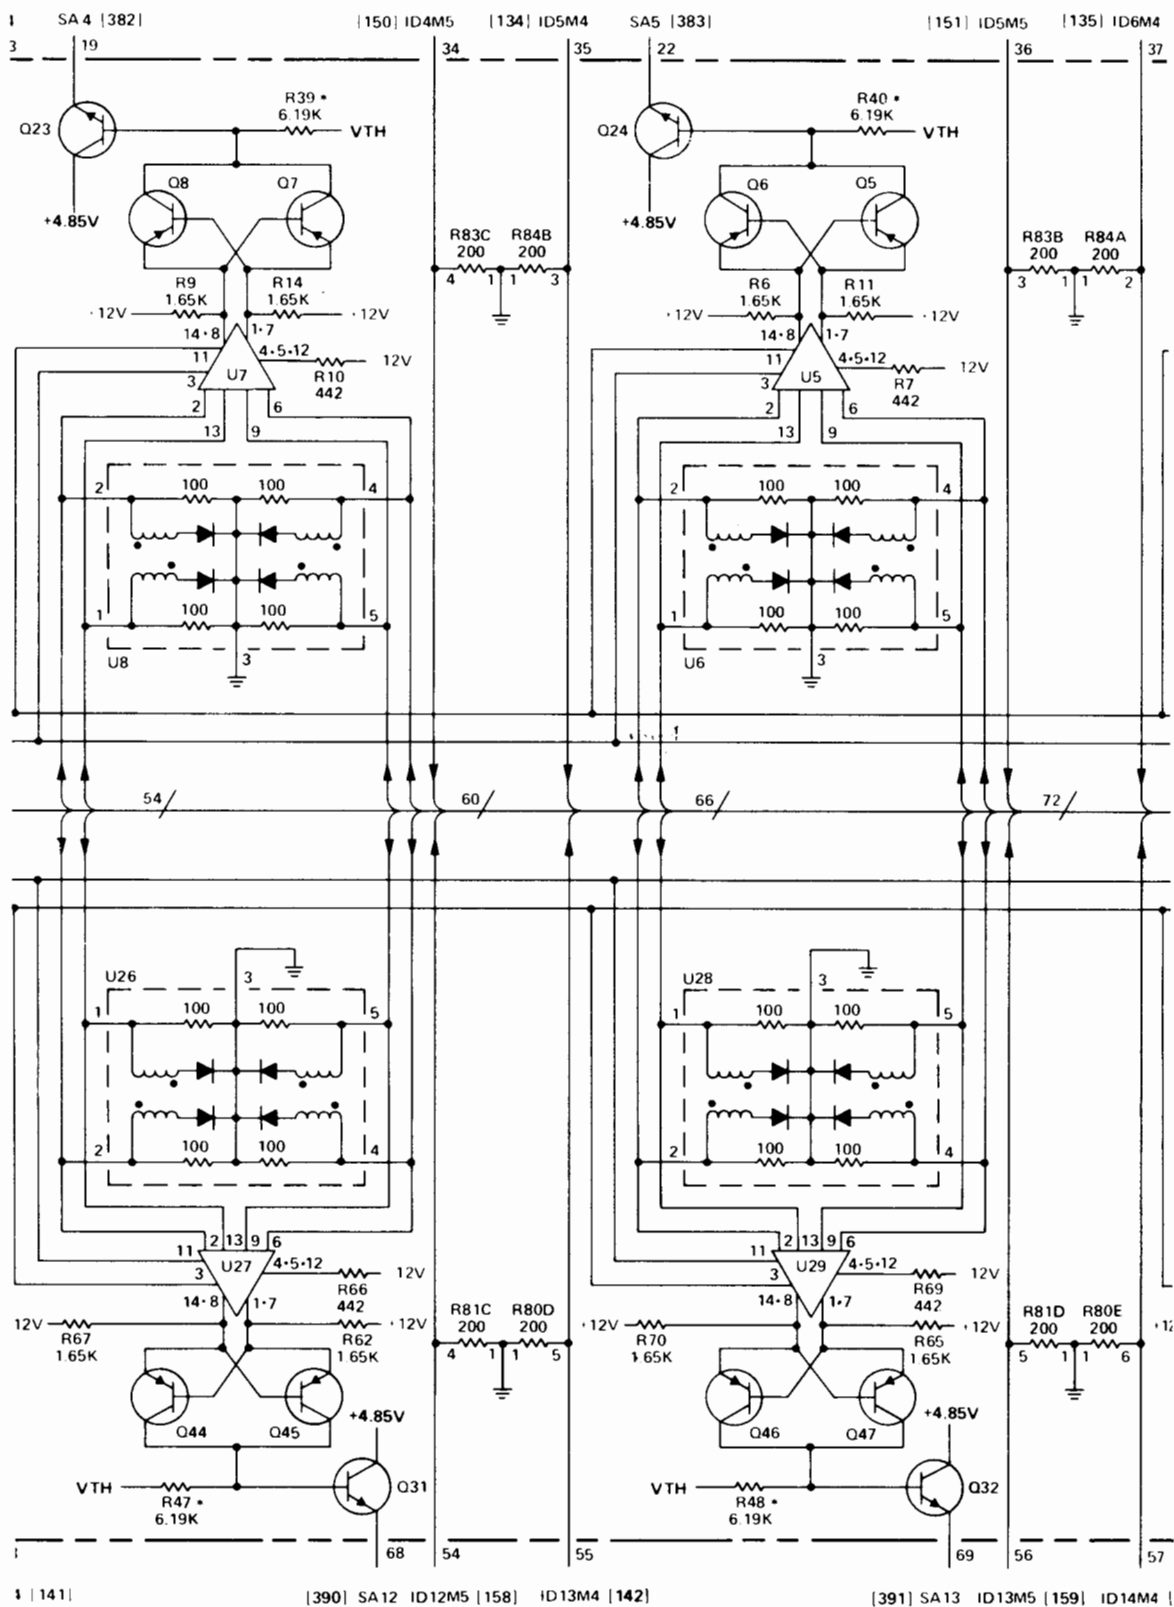

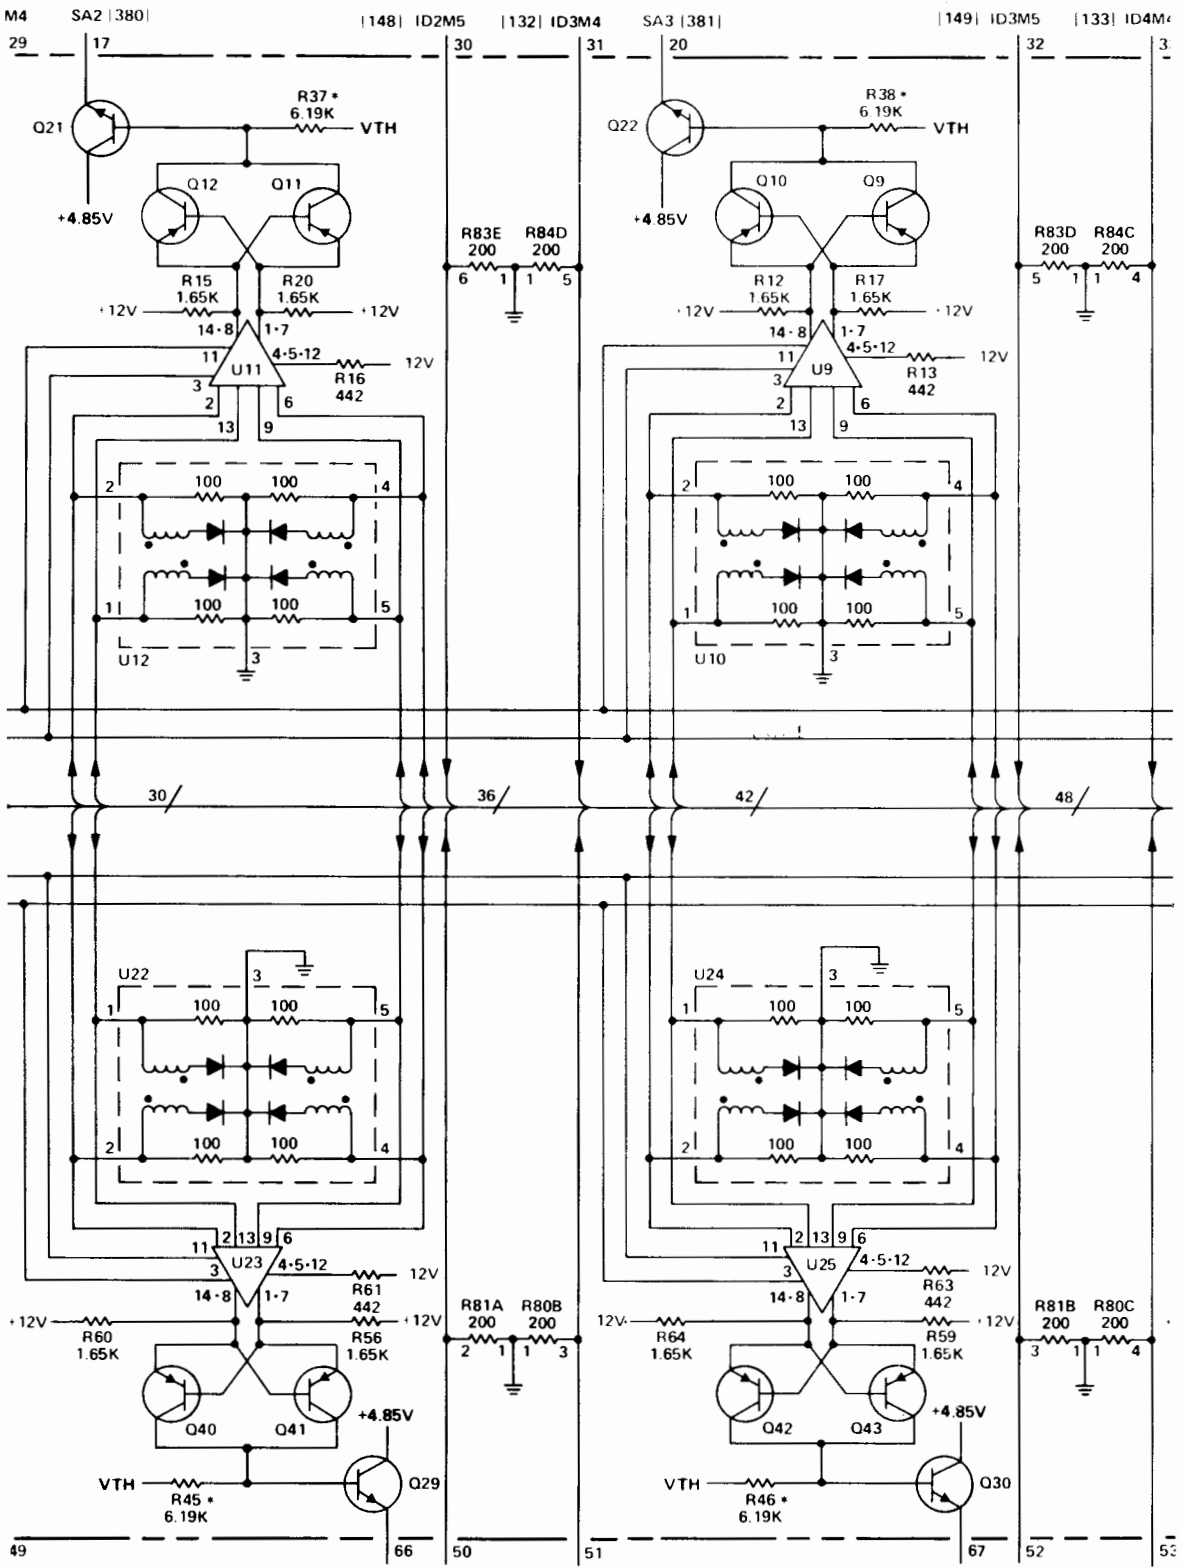


M4 [139] [388] SA10 ID10M5 [156] ID11M4 [140] [389] SA11 ID11M5 [157] ID12M4

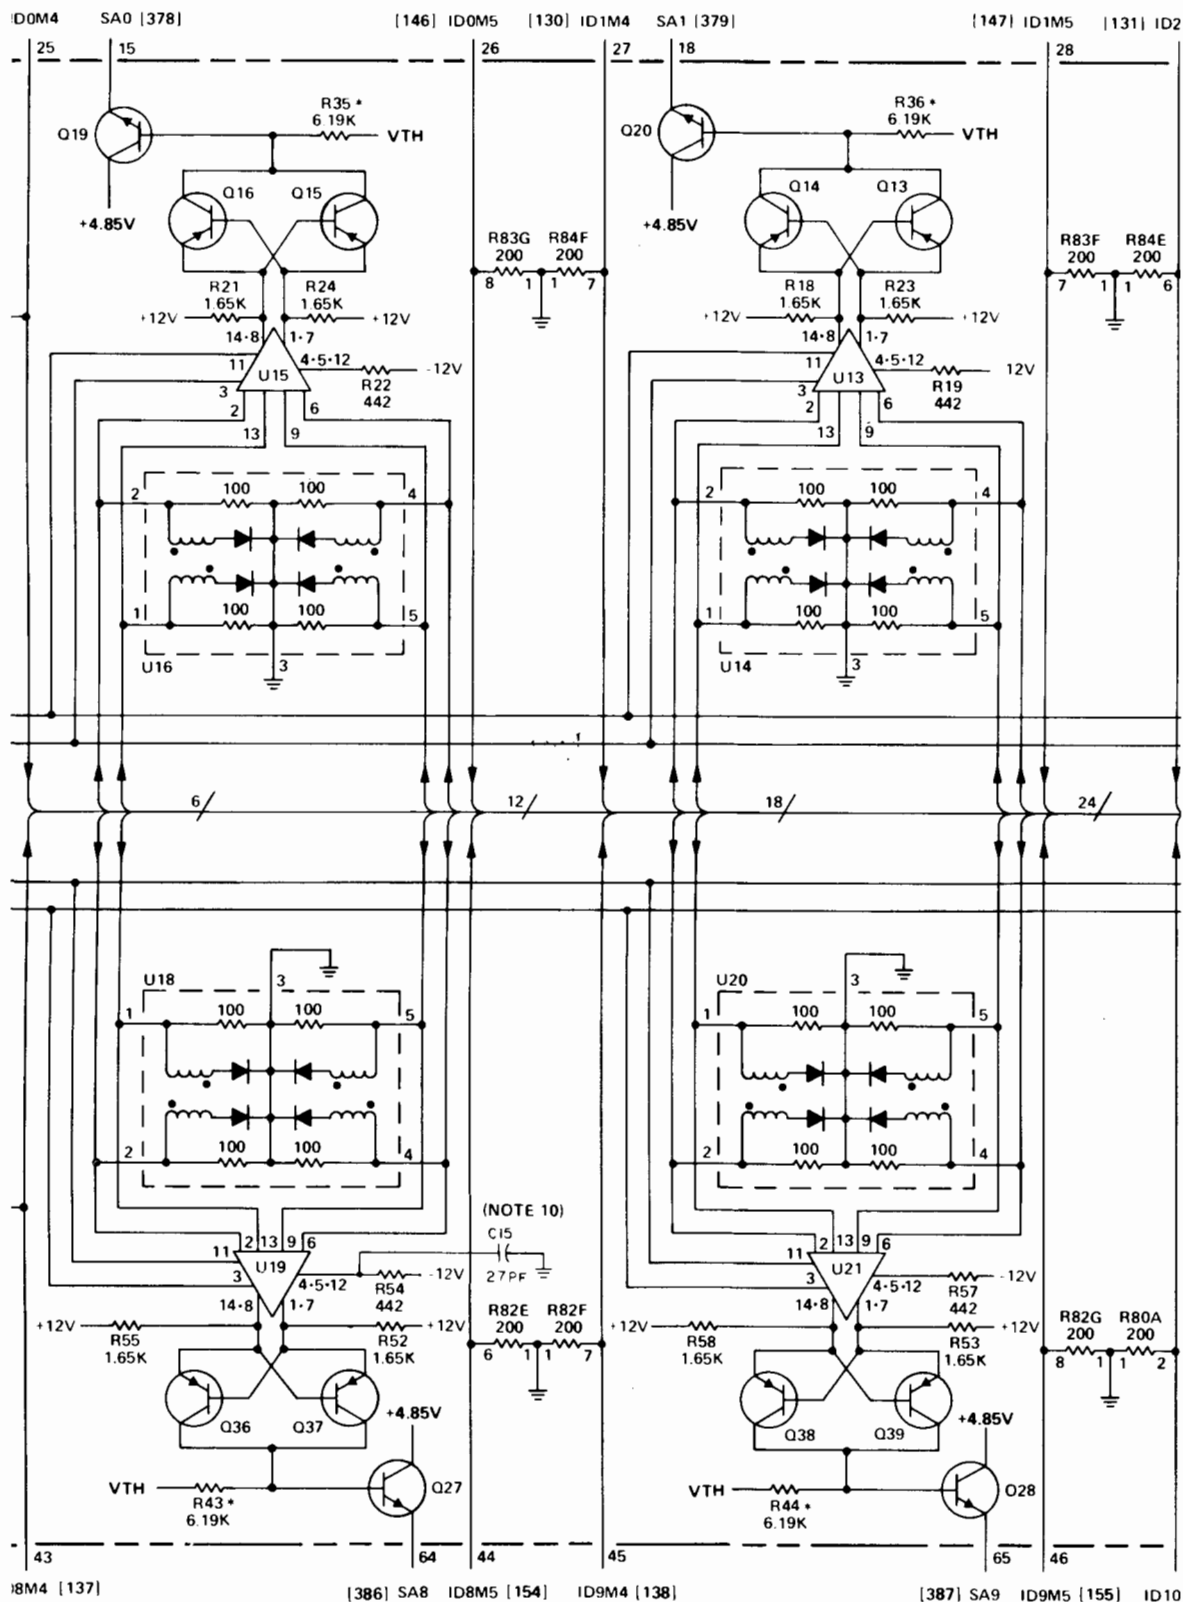

CORE STACK/SENSE AMPLIFIER CARD
(5060-8324, REV. 1126, 1136) AND
(5060-8331, REV. 1208, 1301)

[129]

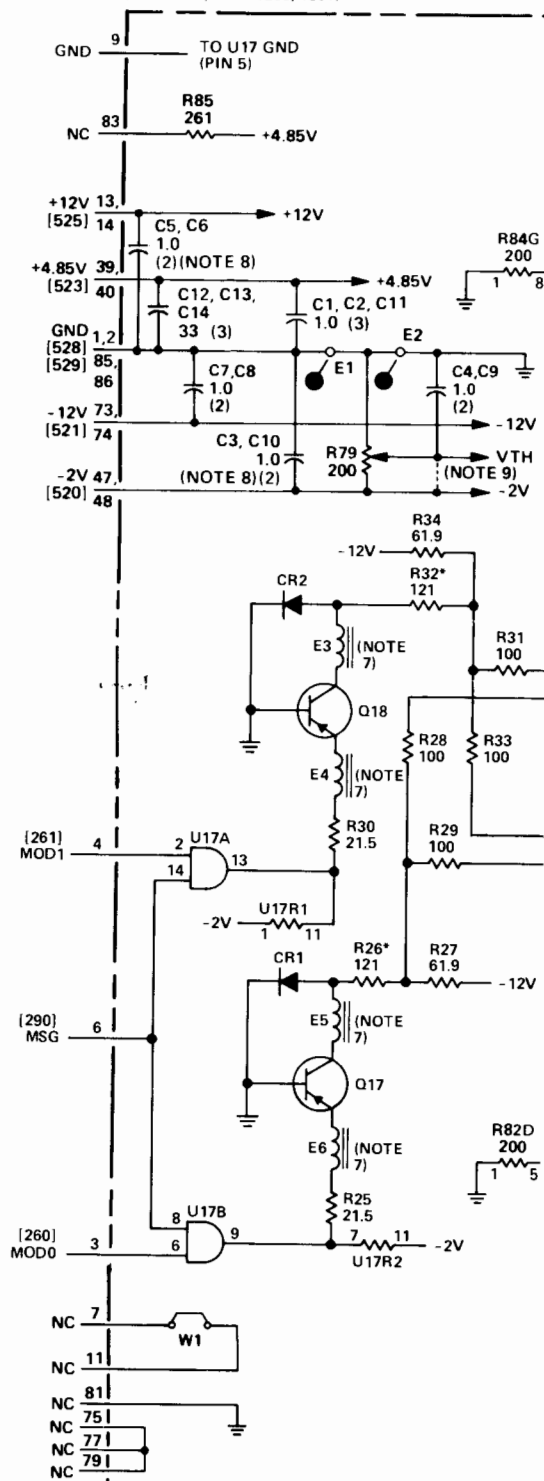

DWG 02100-90125, REV B

IC


CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR.
FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE
WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT
PRESS ON THE TOP OR BOTTOM OF THE STACK.

NOTES:

1. THIS CARD MUST NOT BE REPAIRED IN THE FIELD.
FIELD REMOVAL OR REPLACEMENT OF ANY COMPONENT VOIDS THE WARRANTY ON THE CARD.
2. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
3. ALL PIN NUMBERS REFER TO 86 PIN CONNECTOR UNLESS OTHERWISE INDICATED.
4. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
5. DIODES ARE MOUNTED WITH CATHODE END AWAY FROM CARD.
6. * INDICATES SELECTED RESISTOR. R26, R32 ARE SELECTED FROM 100, 110, 121, 130, 140, OR 150. R35 THRU R51 ARE SELECTED FROM 5.11K, 5.62K, 6.19K, 6.81K, 7.50K OR 8.25K.
7. E3 THRU E6 USED ONLY ON CARD 5060-8324, REV. 1136.
8. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
9. R79 IS NOT USED ON ALL CARDS. WHEN R79 IS NOT USED, VTH IS CONNECTED TO 2V AS SHOWN BY DOTTED LINE.
10. C15 AND C16 FIRST USED ON CARD REV. 1301.

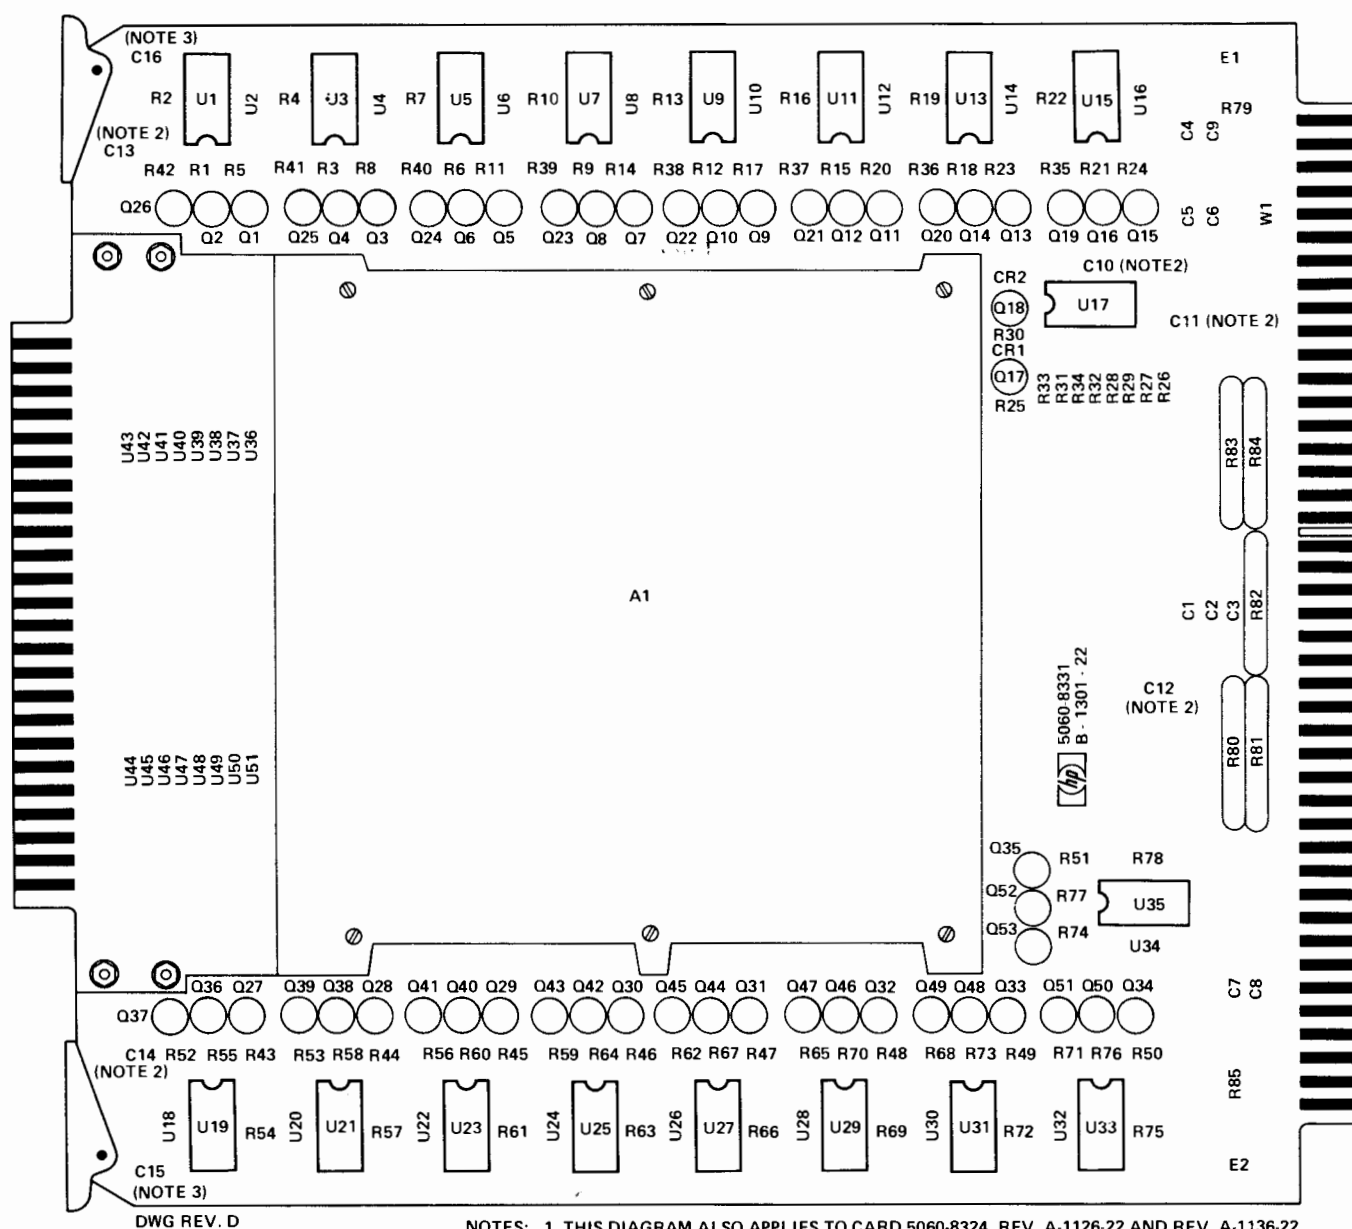

DWG REV. D

- NOTES: 1. THIS DIAGRAM ALSO APPLIES TO CARD 5060-8324, REV. A-1126-22 AND REV. A-1136-22.
2. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
3. C15 AND C16 FIRST USED ON CARD 5060-8331, REV. A-1301-22.

See table 4-17 for replaceable parts.



(Information continues on next page)

REF. NO.	BACKPLANE LOCATION		* INDICATES SIGNAL SOURCE		

A111					
163	A108-26*	A111-25			
164	A108-19*	A111-27			
165	A108-25*	A111-29			
166	A108-24*	A111-31			
167	A108-53*	A111-33			
168	A108-60*	A111-35			
169	A108-59*	A111-37			
170	A108-58*	A111-41			
171	A108-52*	A111-43			
172	A108-44*	A111-45			
173	A108-51*	A111-49			
174	A108-45*	A111-51			
175	A108-76*	A111-53			
176	A108-73*	A111-55			
177	A108-74*	A111-57			
178	A108-75*	A111-59			
179	A108-17*	A111-61			
180	A108-20*	A111-26			
181	A108-23*	A111-28			
182	A108-22*	A111-30			
183	A108-21*	A111-32			
184	A108-57*	A111-34			
185	A108-54*	A111-36			
186	A108-56*	A111-38			
187	A108-55*	A111-42			
188	A108-78*	A111-44			
189	A108-79*	A111-46			
190	A108-81*	A111-50			
191	A108-80*	A111-52			
192	A108-84*	A111-54			
193	A108-77*	A111-56			
194	A108-83*	A111-58			
195	A108-82*	A111-60			
196	A108-18*	A111-62			
266	A107-54*	A111-3			
267	A107-53*	A111-4			
272	A102-5*	A103-5*	A107-80	A110-5*	A111-5*
290	A102-6	A103-6	A107-83*	A110-6	A111-6
378	A102-15*	A103-15*	A107-13	A110-15*	A111-15*
379	A102-18*	A103-18*	A107-11	A110-18*	A111-18*
380	A102-17*	A103-17*	A107-7	A110-17*	A111-17*
381	A102-20*	A103-20*	A107-9	A110-20*	A111-20*
382	A102-19*	A103-19*	A107-17	A110-19*	A111-19*
383	A102-22*	A103-22*	A107-15	A110-22*	A111-22*
384	A102-21*	A103-21*	A107-19	A110-21*	A111-21*
385	A102-63*	A103-63*	A107-21	A110-63*	A111-63*
386	A102-64*	A103-64*	A107-31	A110-64*	A111-64*
387	A102-65*	A103-65*	A107-33	A110-65*	A111-65*
388	A102-66*	A103-66*	A107-35	A110-66*	A111-66*
389	A102-67*	A103-67*	A107-37	A110-67*	A111-67*
390	A102-68*	A103-68*	A107-41	A110-68*	A111-68*
391	A102-69*	A103-69*	A107-43	A110-69*	A111-69*
392	A102-70*	A103-70*	A107-45	A110-70*	A111-70*
393	A102-71*	A103-71*	A107-49	A110-71*	A111-71*
394	A102-72*	A103-72*	A107-71	A110-72*	A111-72*


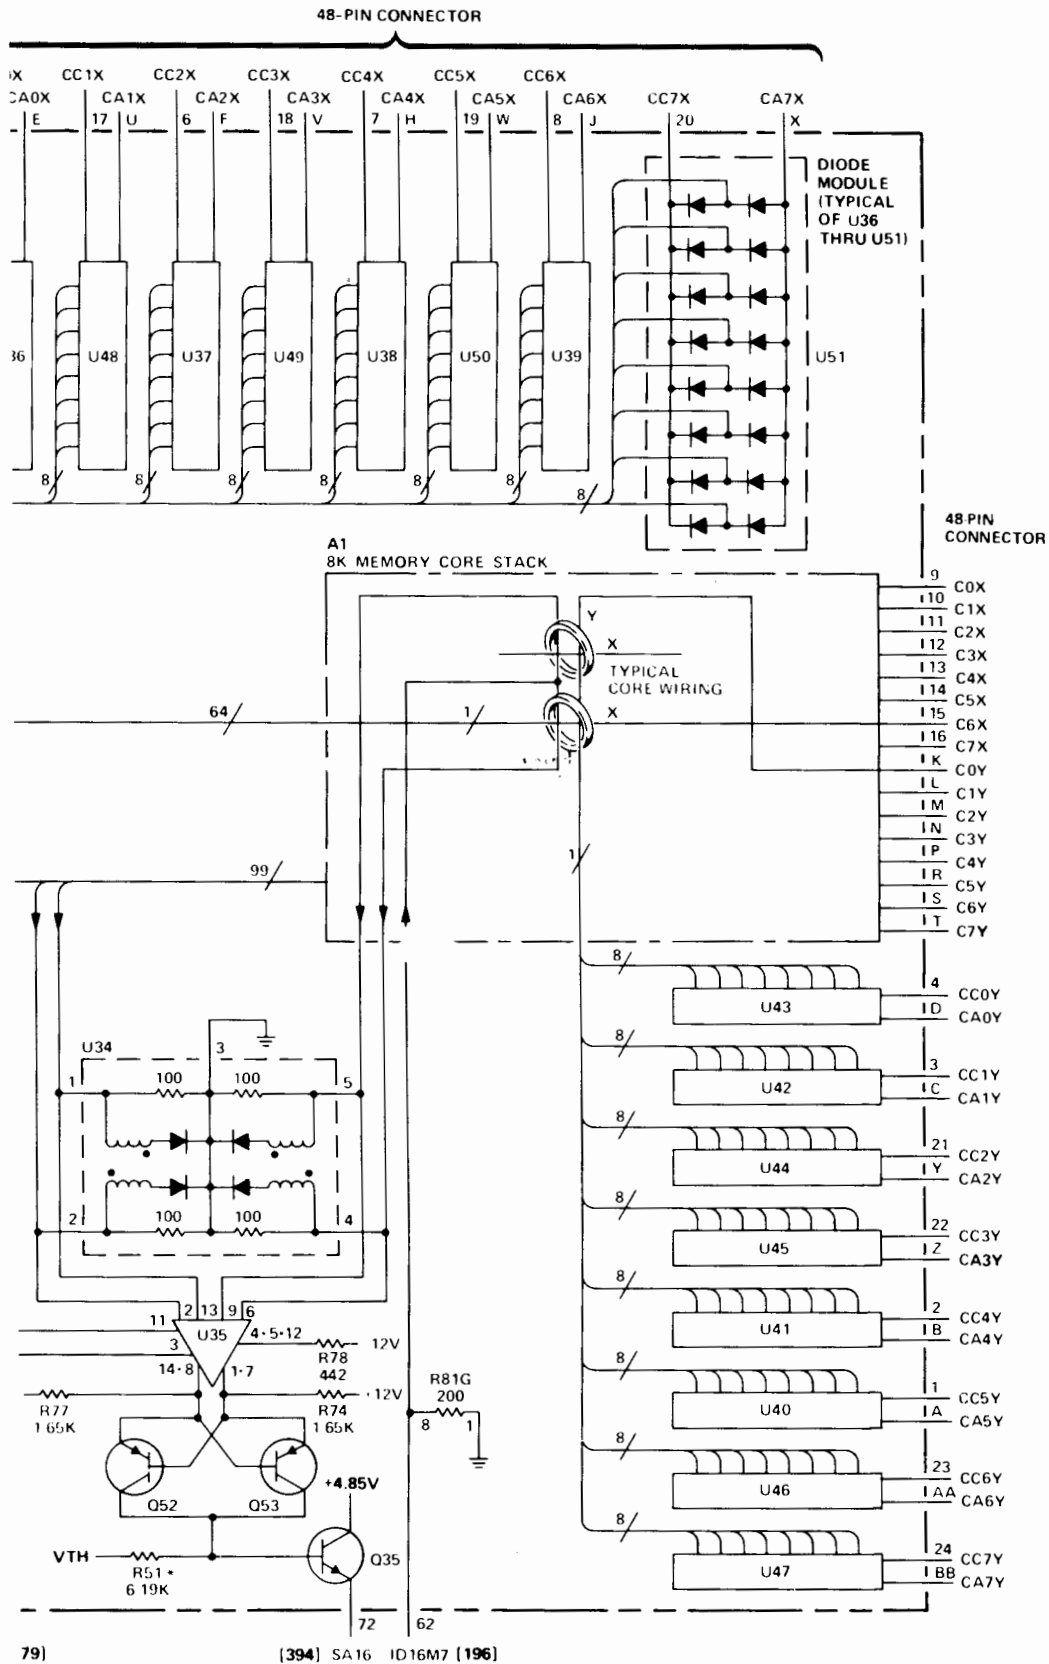



Figure 4-29. A111 Core Stack/Sense Amplifier Card (8K), Parts Location and Schematic Diagrams

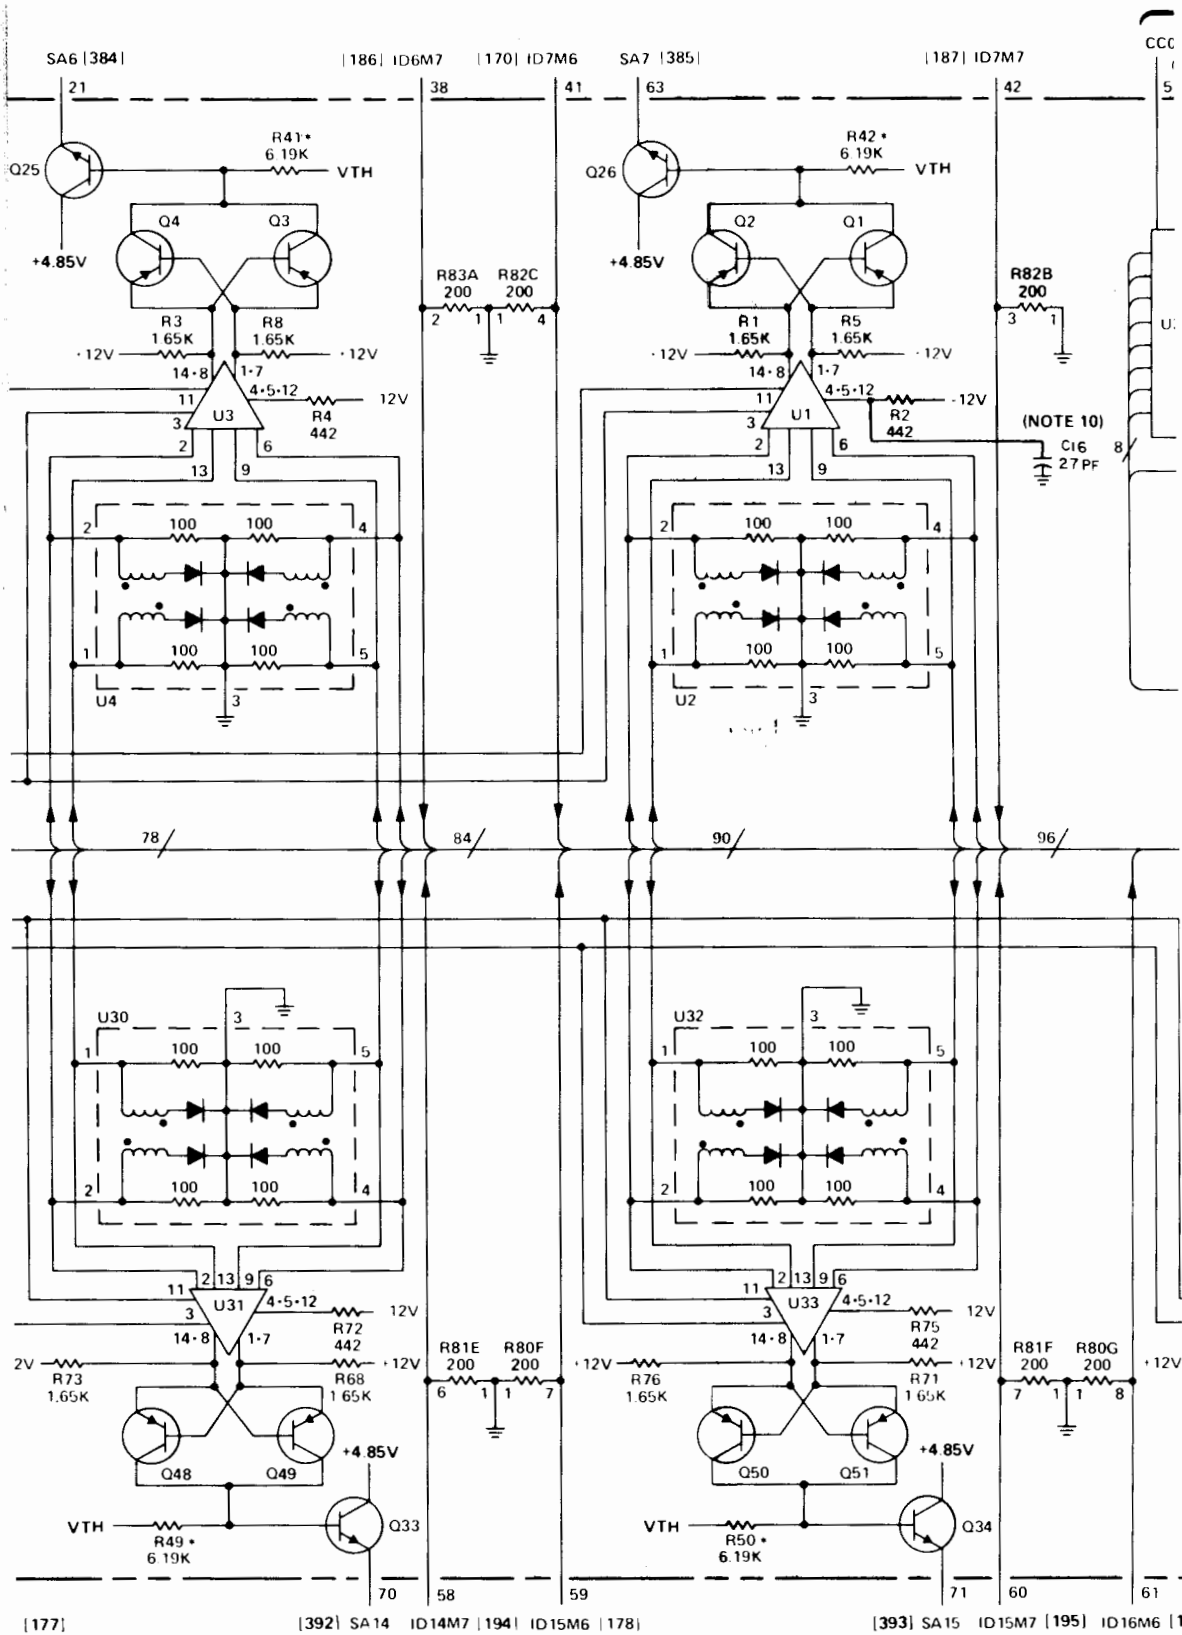



[177]

[392] SA14 ID14M7 [194] ID15M6 [178]

[393] SA15 ID15M7 [195] ID16M6 [1

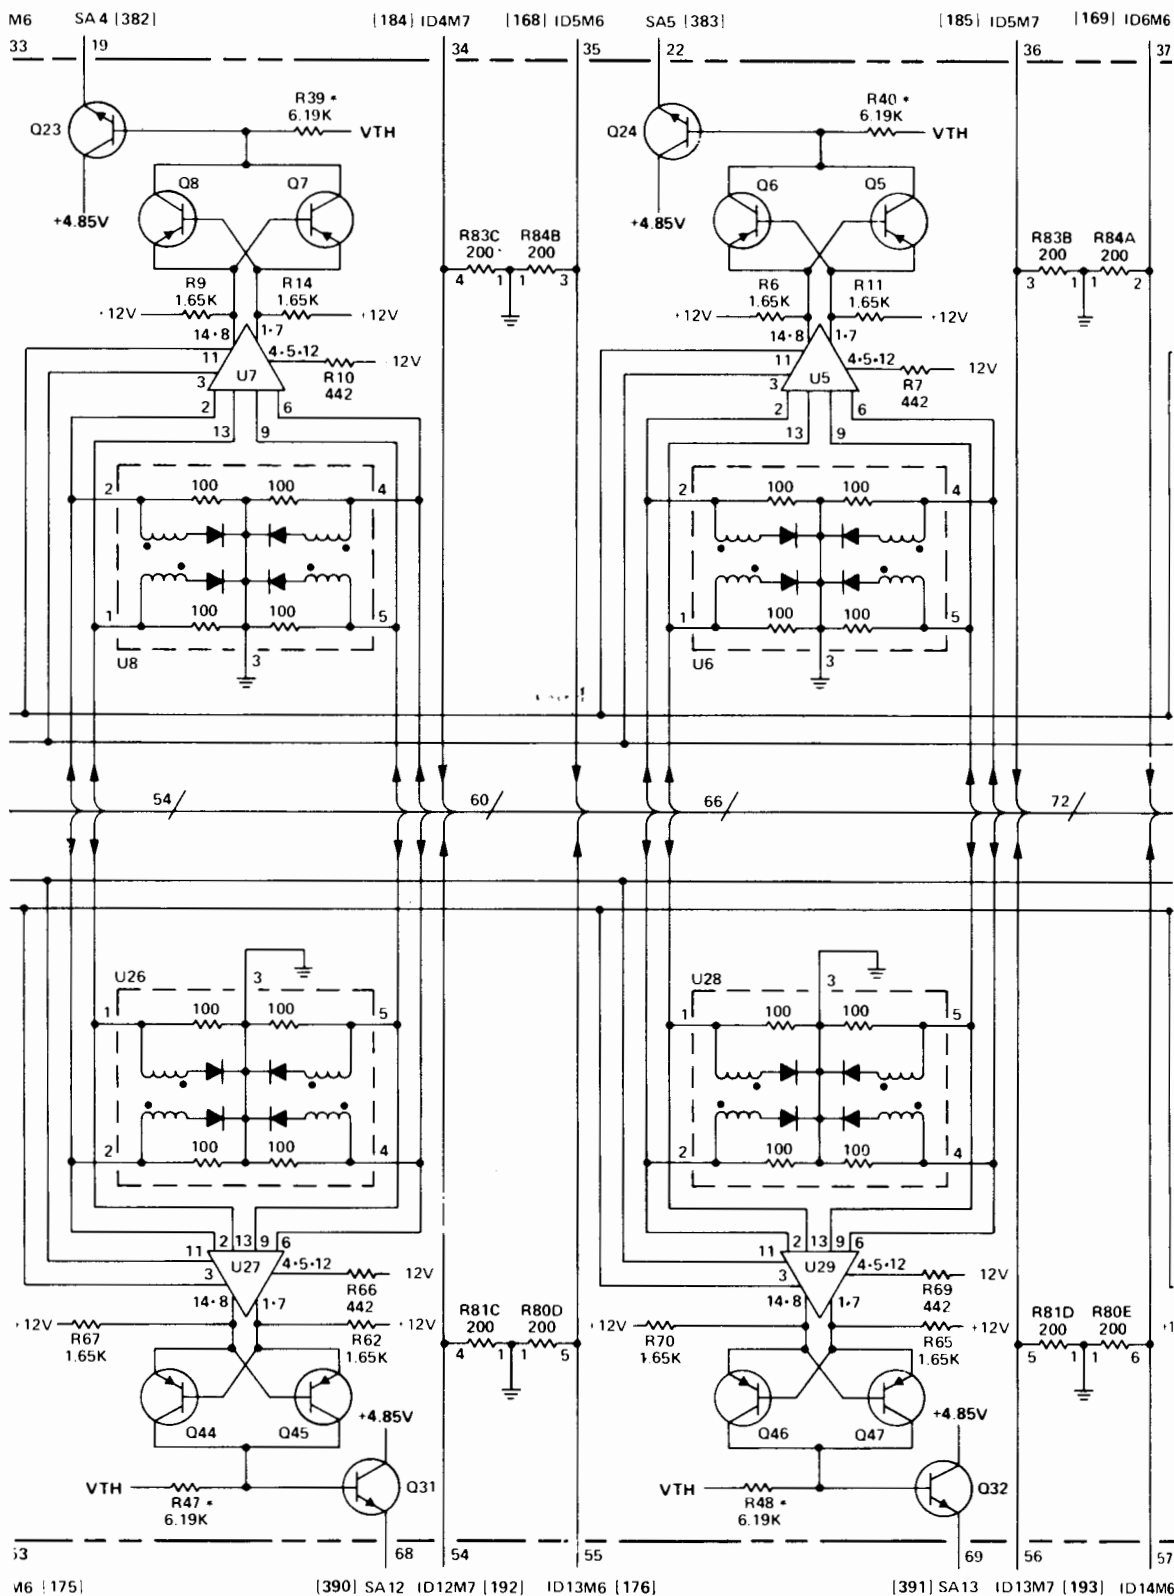


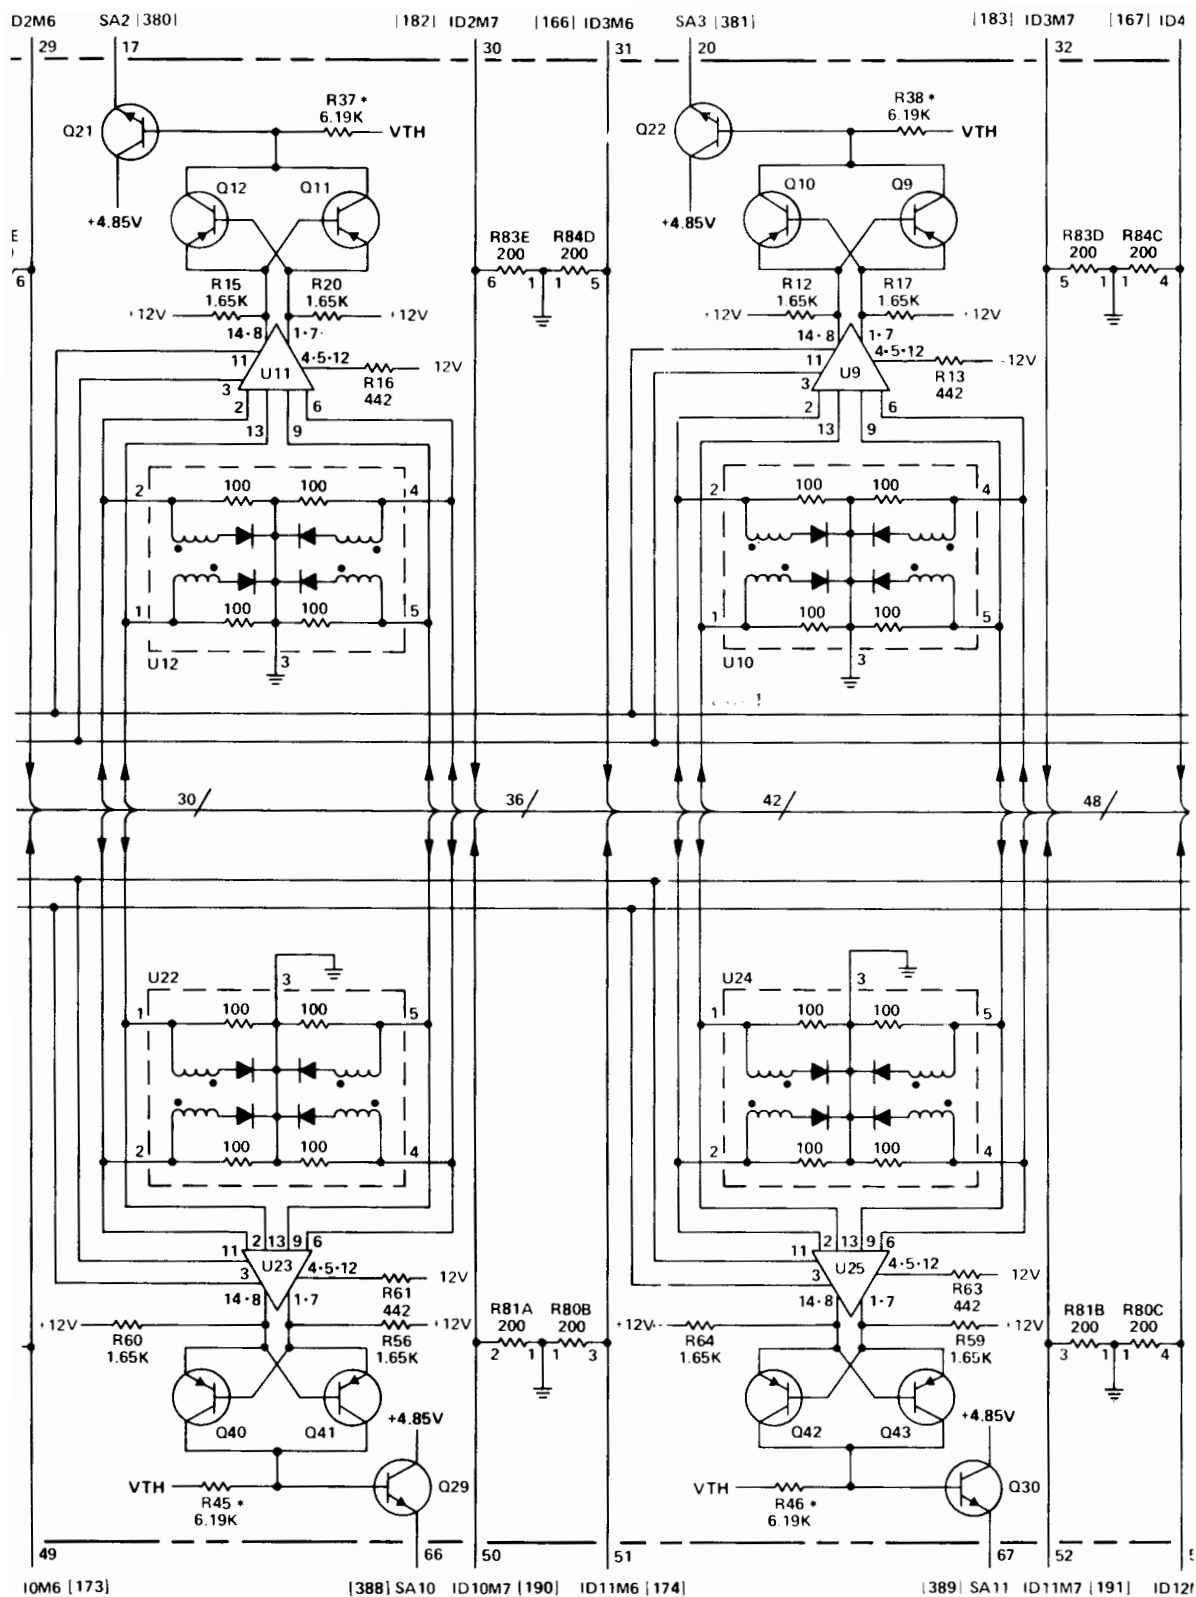

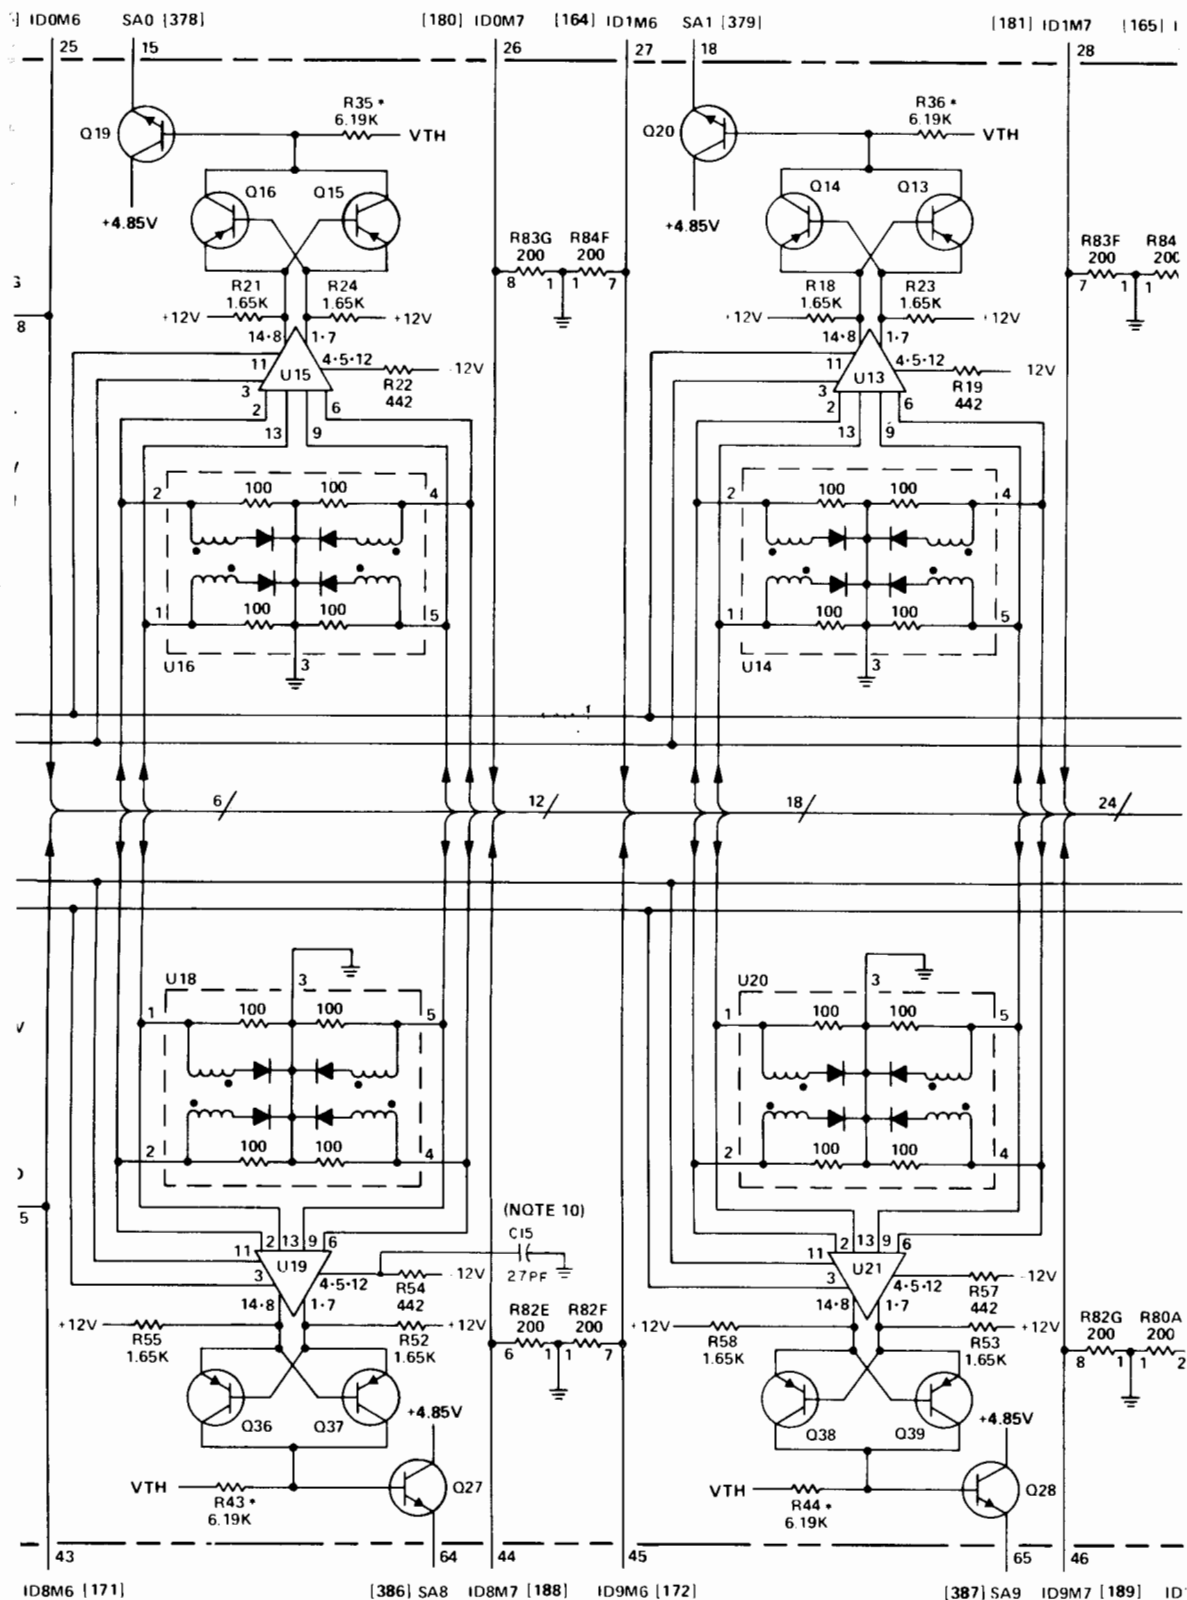

CORE STACK/SENSE AMPLIFIER CARD
(5060-8324, REV. 1126, 1136) AND
(5060-8331, REV. 1208, 1301)

[163]

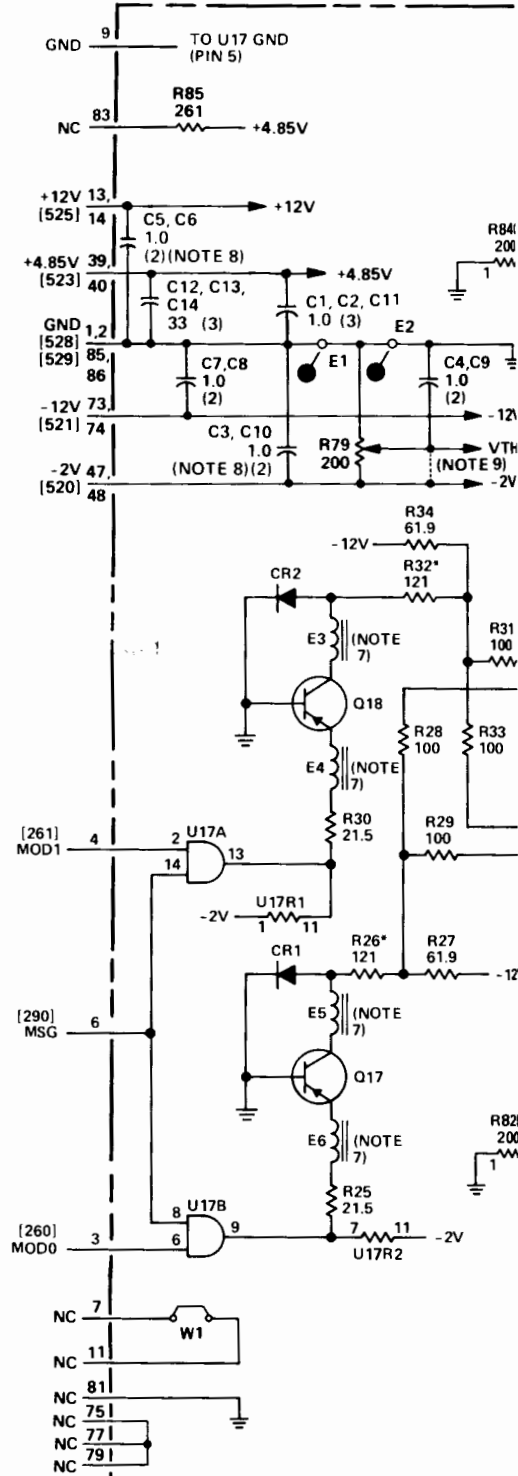

DWG 02100-90125, REV B


NOTES:

1. THIS CARD MUST NOT BE REPAIRED IN THE FIELD
FIELD REMOVAL OR REPLACEMENT OF ANY COMPONENT
VOIDS THE WARRANTY ON THE CARD.
2. RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED
3. ALL PIN NUMBERS REFER TO 86 PIN CONNECTOR UNLESS OTHERWISE INDICATED
4. NUMERALS WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS
5. DIODES ARE MOUNTED WITH CATHODE END AWAY FROM CARD
6. * INDICATES SELECTED RESISTOR. R26, R32 ARE SELECTED FROM 100, 110, 121, 130, 140, OR 150. R35 THRU R51 ARE SELECTED FROM 5 11K, 5 62K, 6 19K, 6 81K, 7 50K OR 8.25K.
7. E3 THRU E6 USED ONLY ON CARD 5060-8324, REV. 1136.
8. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
9. R79 IS NOT USED ON ALL CARDS. WHEN R79 IS NOT USED, VTH IS CONNECTED TO 2V AS SHOWN BY DOTTED LINE.
10. C15 AND C16 FIRST USED ON CARD REV. 1301.

CAUTION

RETURN THIS CIRCUIT CARD TO THE FACTORY FOR REPAIR. FIELD REPLACEMENT OF ANY COMPONENT WILL VOID THE WARRANTY ON THE CARD.

TO AVOID BREAKING WIRES IN CORE STACK A1, DO NOT PRESS ON THE TOP OR BOTTOM OF THE STACK.

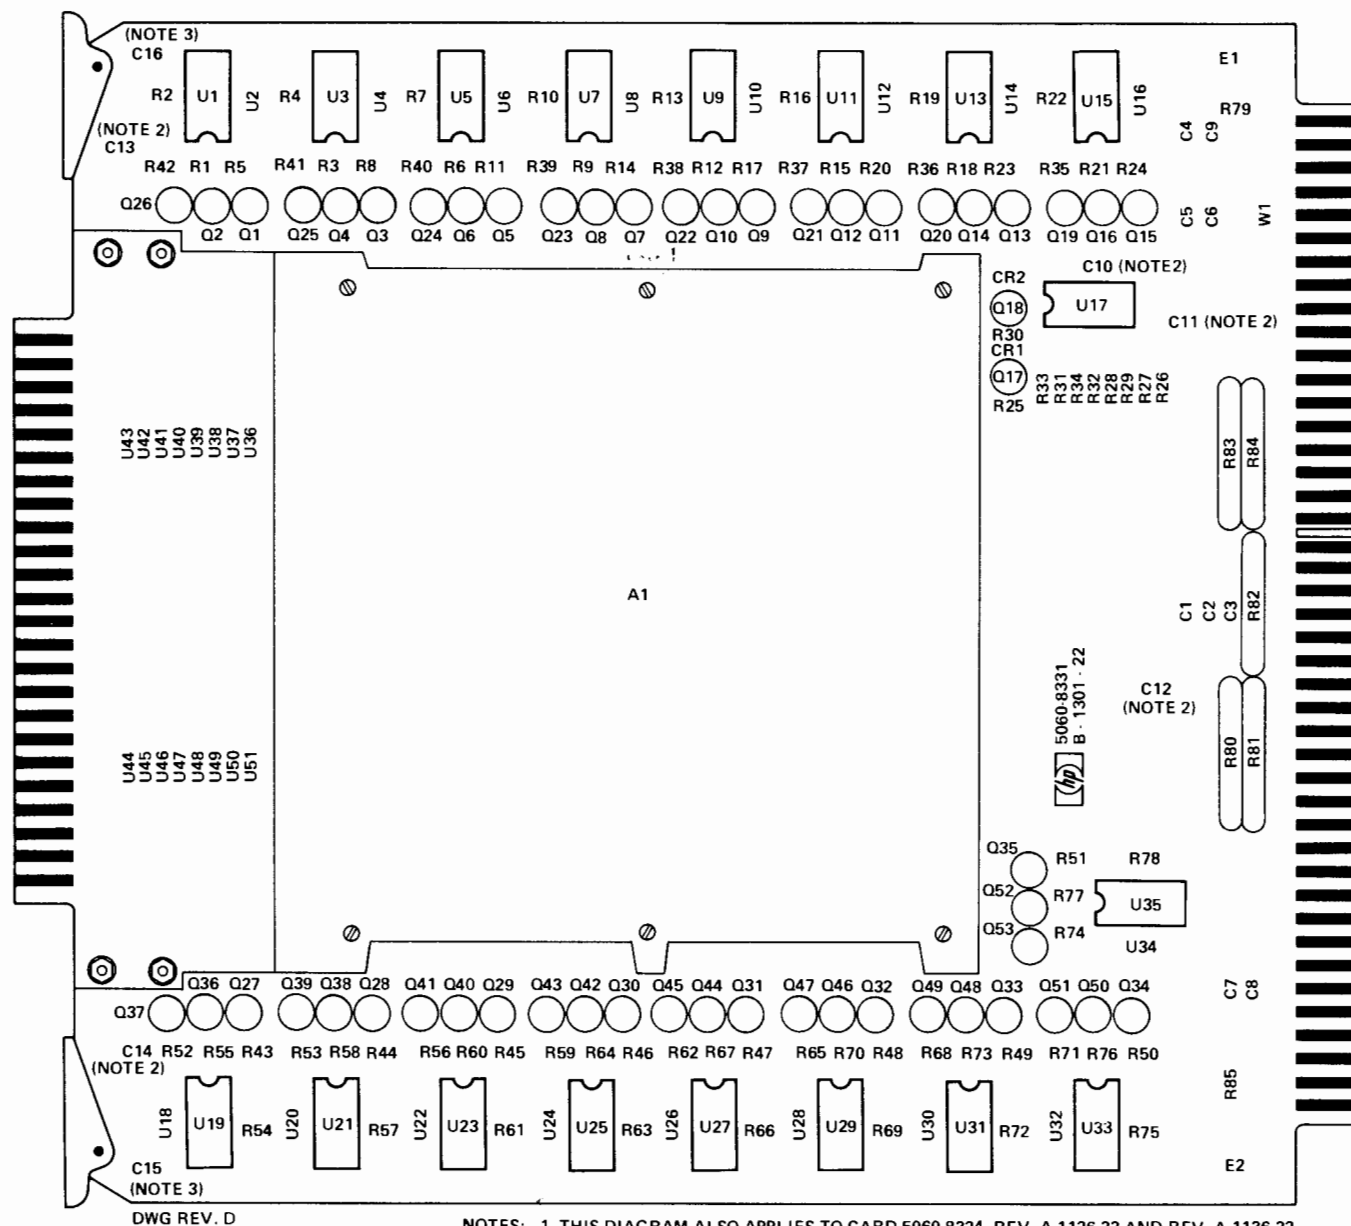

- NOTES: 1. THIS DIAGRAM ALSO APPLIES TO CARD 5060-8324, REV. A-1126-22 AND REV. A-1136-22.
2. CAPACITORS C10, C11, C12, C13, AND C14 NOT USED ON CARD 5060-8324.
3. C15 AND C16 FIRST USED ON CARD 5060-8331, REV. A-1301-22.

See table 4-17 for replaceable parts.



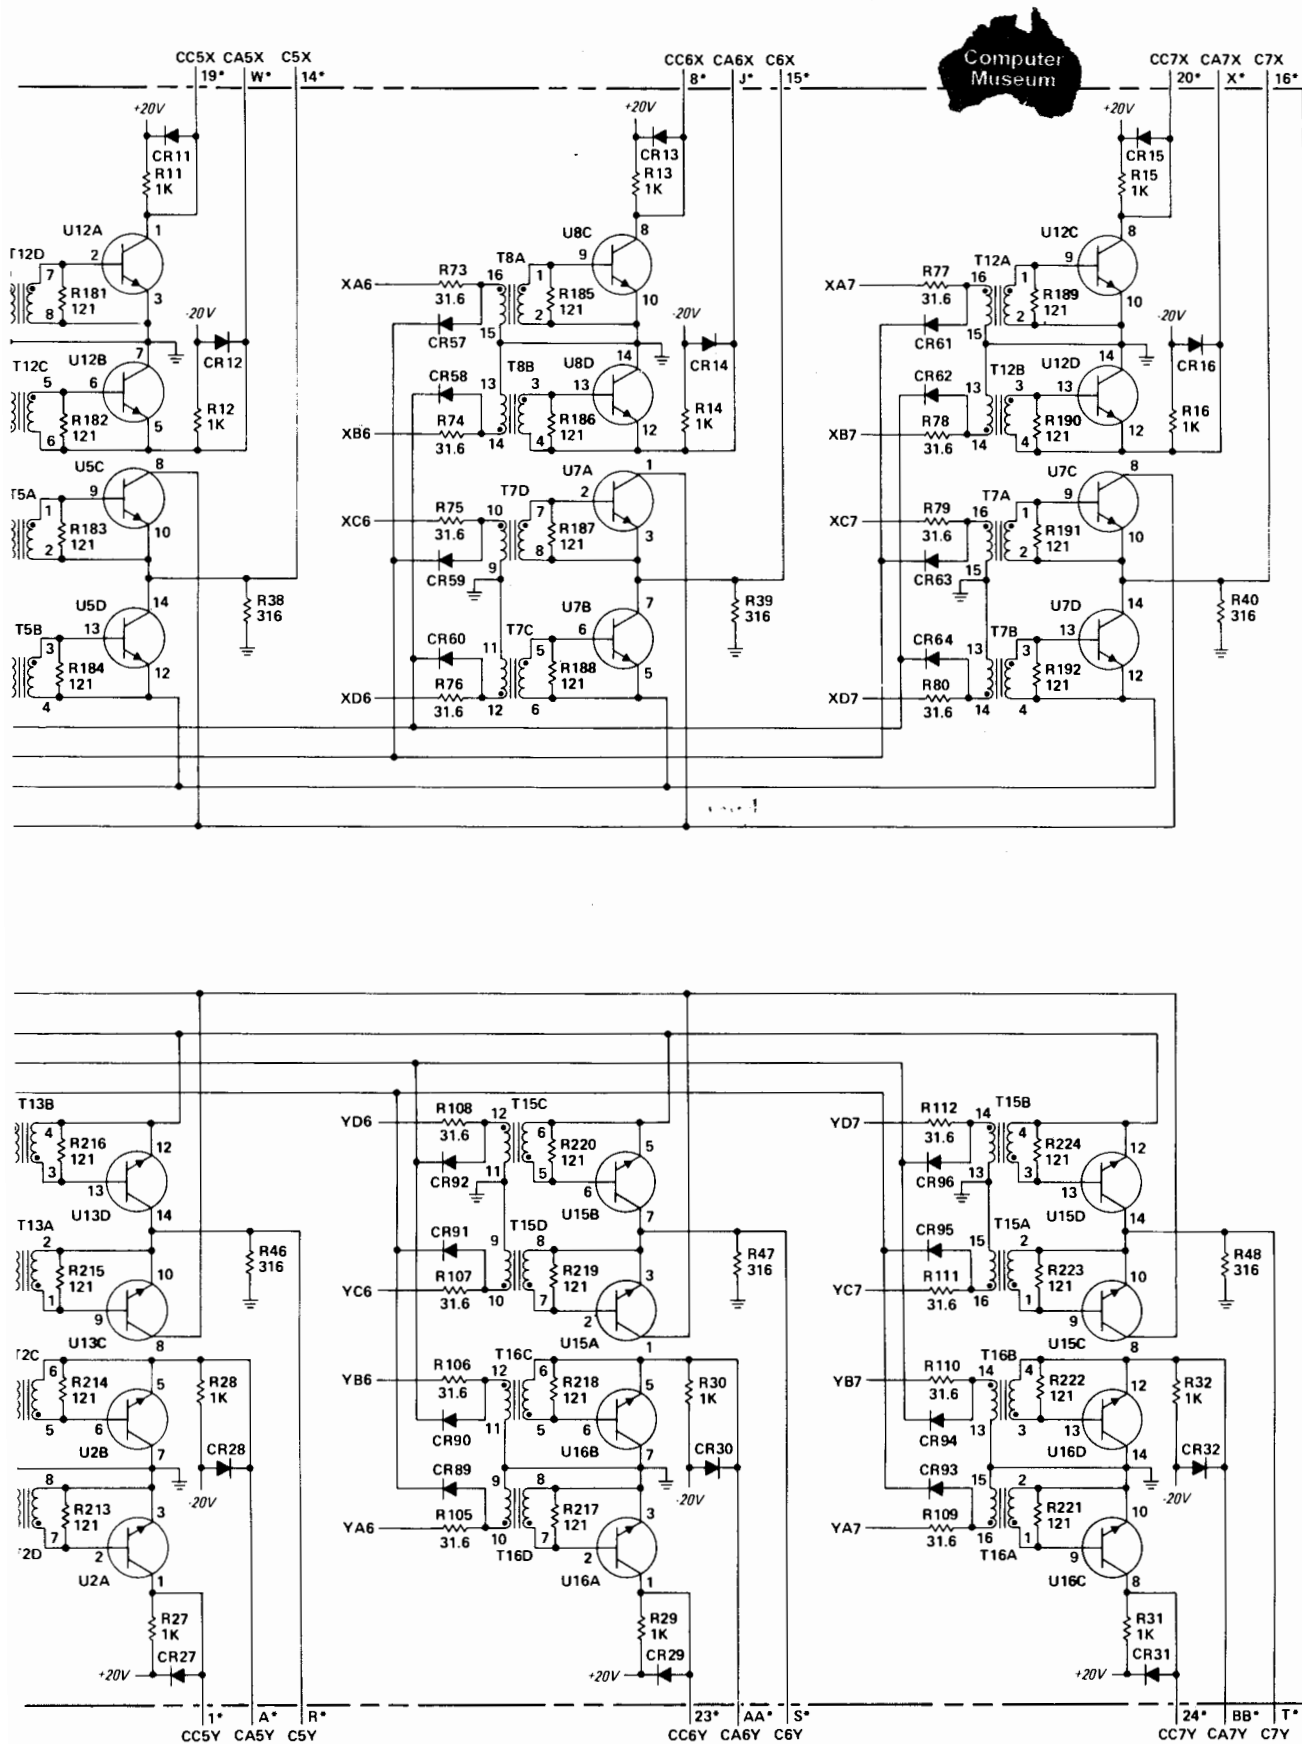


Figure 4-30. A112 X-Y Driver/Switch Card, Parts Location and Schematic Diagrams

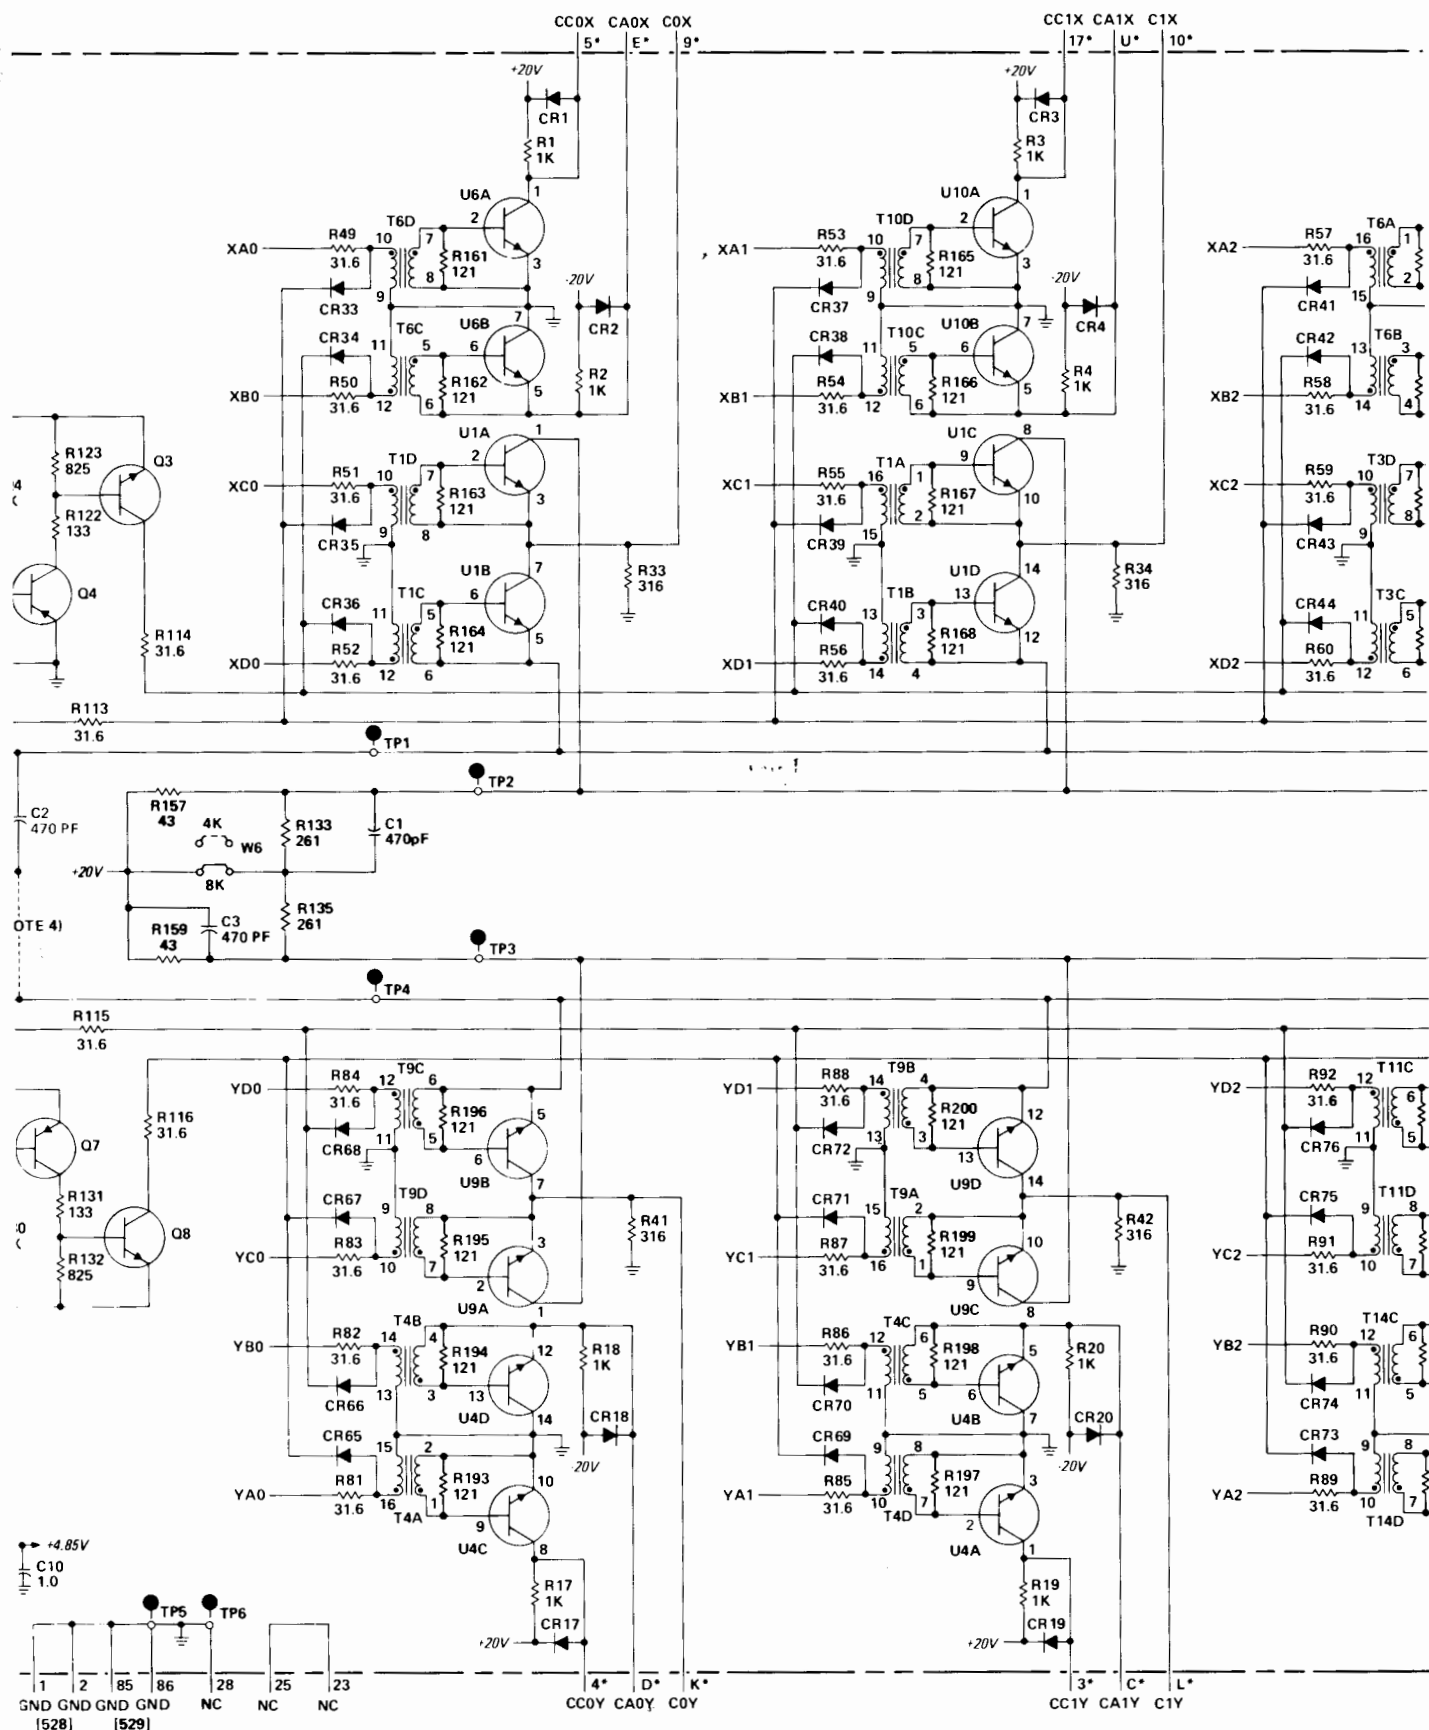

X-Y DRIVER/SWITCH CARD (02100-60012, REV. 1121, 1132, 1152)

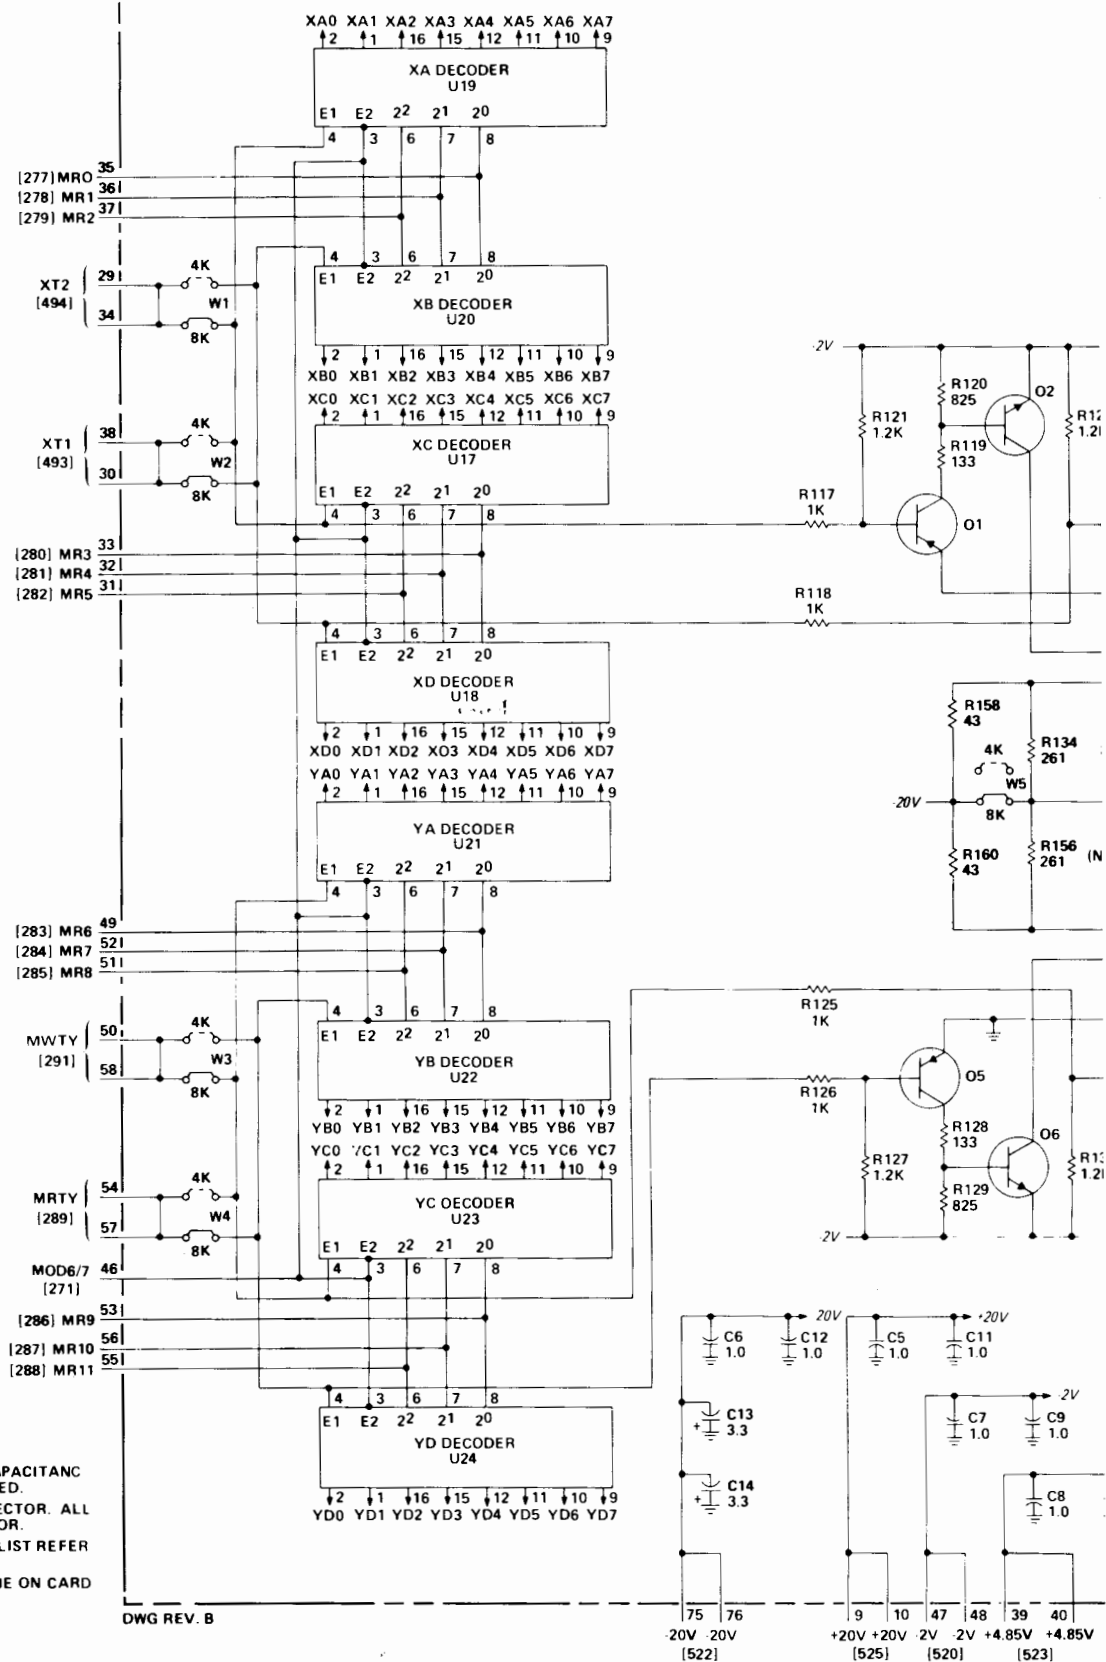

RESISTOR VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN UF UNLESS OTHERWISE SPECIFIED.
 PIN NUMBERS OF 48 PIN CONNECTOR. ALL N NUMBERS ARE FOR 86 PIN CONNECTOR.
 VALUES WITHIN BRACKETS [] ARE WIRING LIST REFERENCE NUMBERS.
 CARD IN POSITION SHOWN BY DASHED LINE ON CARD 1121 AND 1122.

REF.
NO.

BACKPLANE LOCATION

* INDICATES SIGNAL SOURCE

A112

271	A107-61*	A112-46			
277	A101-35	A104-35	A107-3*	A109-35	A112-35
278	A101-36	A104-36	A107-5*	A109-36	A112-36
279	A101-37	A104-37	A107-8*	A109-37	A112-37
280	A101-33	A104-33	A107-10*	A109-33	A112-33
281	A101-32	A104-32	A107-24*	A109-32	A112-32
282	A101-31	A104-31	A107-23*	A109-31	A112-31
283	A101-49	A104-49	A107-25*	A109-49	A112-49
284	A101-52	A104-52	A107-26*	A109-52	A112-52
285	A101-51	A104-51	A107-27*	A109-51	A112-51
286	A101-53	A104-53	A107-4*	A109-53	A112-53
287	A101-56	A104-56	A107-30*	A109-56	A112-56
288	A101-55	A104-55	A107-32*	A109-55	A112-55
289	A107-84*	A101-54,57	A104-54,57	A109-54,57	A112-54,57
291	A107-28*	A101-50,58	A104-50,58	A109-50,58	A112-50,58
493	A107-65*	A101-30,38	A104-30,38	A109-30,38	A112-30,38
494	A107-64*	A101-29,34	A104-29,34	A109-29,34	A112-29,34

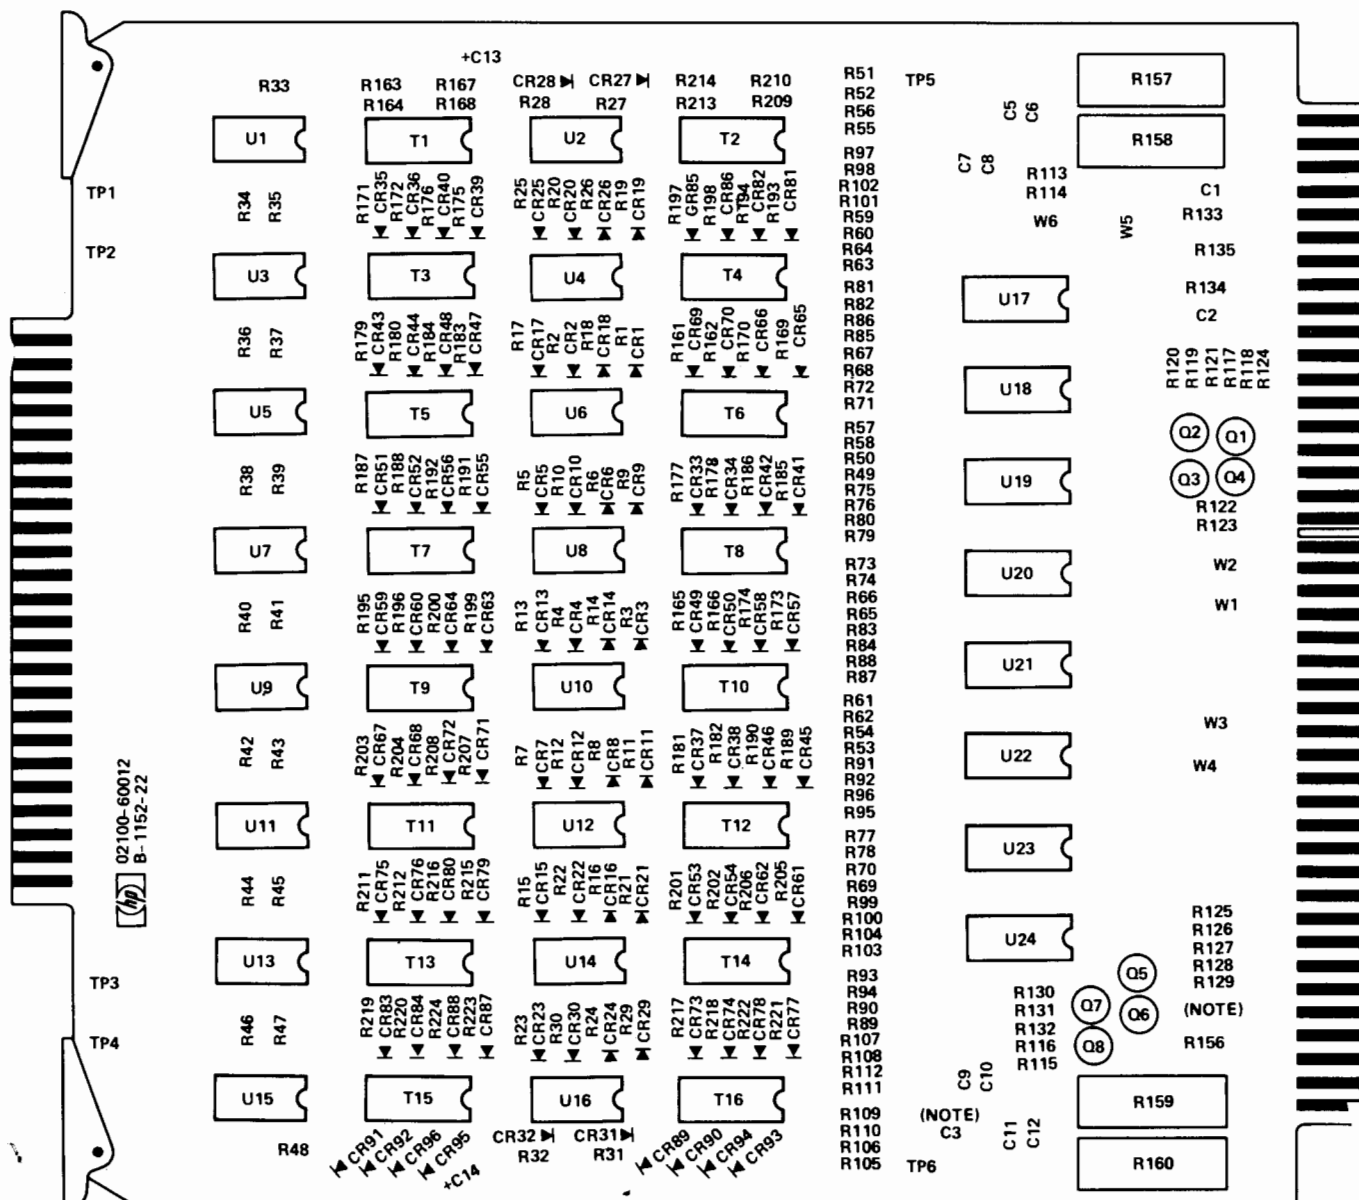


Table 4-22. A26 Plenum Chamber, Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A26B1	3160-0224	2	FAN:TUBE AXIAL	28480	3160-0224
A26B2	3160-0224		FAN:TUBE AXIAL	28480	3160-0224
A26C1	0150-0096	1	C:FXD CER 0.05 UF +80-20% 100VDCW	91418	TA
A26C2	0160-0904	1	C:FXD CER 0.05 UF 20% 1000VDCW	56289	41C 169A4-CDH
A26C3	0160-0566	1	C:FXD PAPER 1 UF 10% 660VAC RMS	82047	49F 6541
A26FL1	9100-3317	1	FILTER:LINE 20A 50-400 HZ	05245	20B1-F1388
A26F1	2110-0249	1	FUSE:CARTRIDGE 12A 250V	75915	314012
A26F2	2110-0002	1	FUSE:CARTRIDGE 2 AMP 3 AG	75915	312.002
A26J1	1250-0118	1	CONNECTOR:BNC	24931	28JR 128-1
A26R1 (NOTE 1)	0698-3391	1	R:FXD MET FLM 21.5 OHM 1% 1/2W	28480	0698-3391
A26R1 (NOTE 2)	0698-3609	1	R:FXD MET OX 22 OHM 5% 2W	28480	0698-3609
A26R1 (NOTE 3)	0811-2988	1	R:FXD WW 22 OHM 1% 7W	28480	0811-2988
A26A1	02100-60050	1	TEST POINT BOARD ASSY	28480	02100-60050
A26A1R1	0757-0818	2	R:FXD MET FLM 825 OHM 1% 1/2W	28480	0757-0818
A26A1R2	0757-1092	2	R:FXD MET FLM 287 OHM 1% 1/2W	28480	0757-1092
A26A1R3	0757-1000	2	R:FXD MET FLM 51.1 OHM 1% 1/2W	28480	0757-1000
A26A1R4	0757-1000		R:FXD MET FLM 51.1 OHM 1% 1/2W	28480	0757-1000
A26A1R5	0757-1092		R:FXD MET FLM 287 OHM 1% 1/2W	28480	0757-1092
A26A1R6	0757-0818		R:FXD MET FLM 825 OHM 1% 1/2W	28480	0757-0818
A26A1R7	0698-0089	1	R:FXD MET FLM 1780 OHM 1% 1/2W	28480	0698-0089



NOTES: 1. Used on computers with serial numbers prefixed 1136 and 1140.
 2. Used on computers with serial numbers prefixed 1145 and 1146.
 3. Used on computers with serial numbers prefixed 1147 and higher.

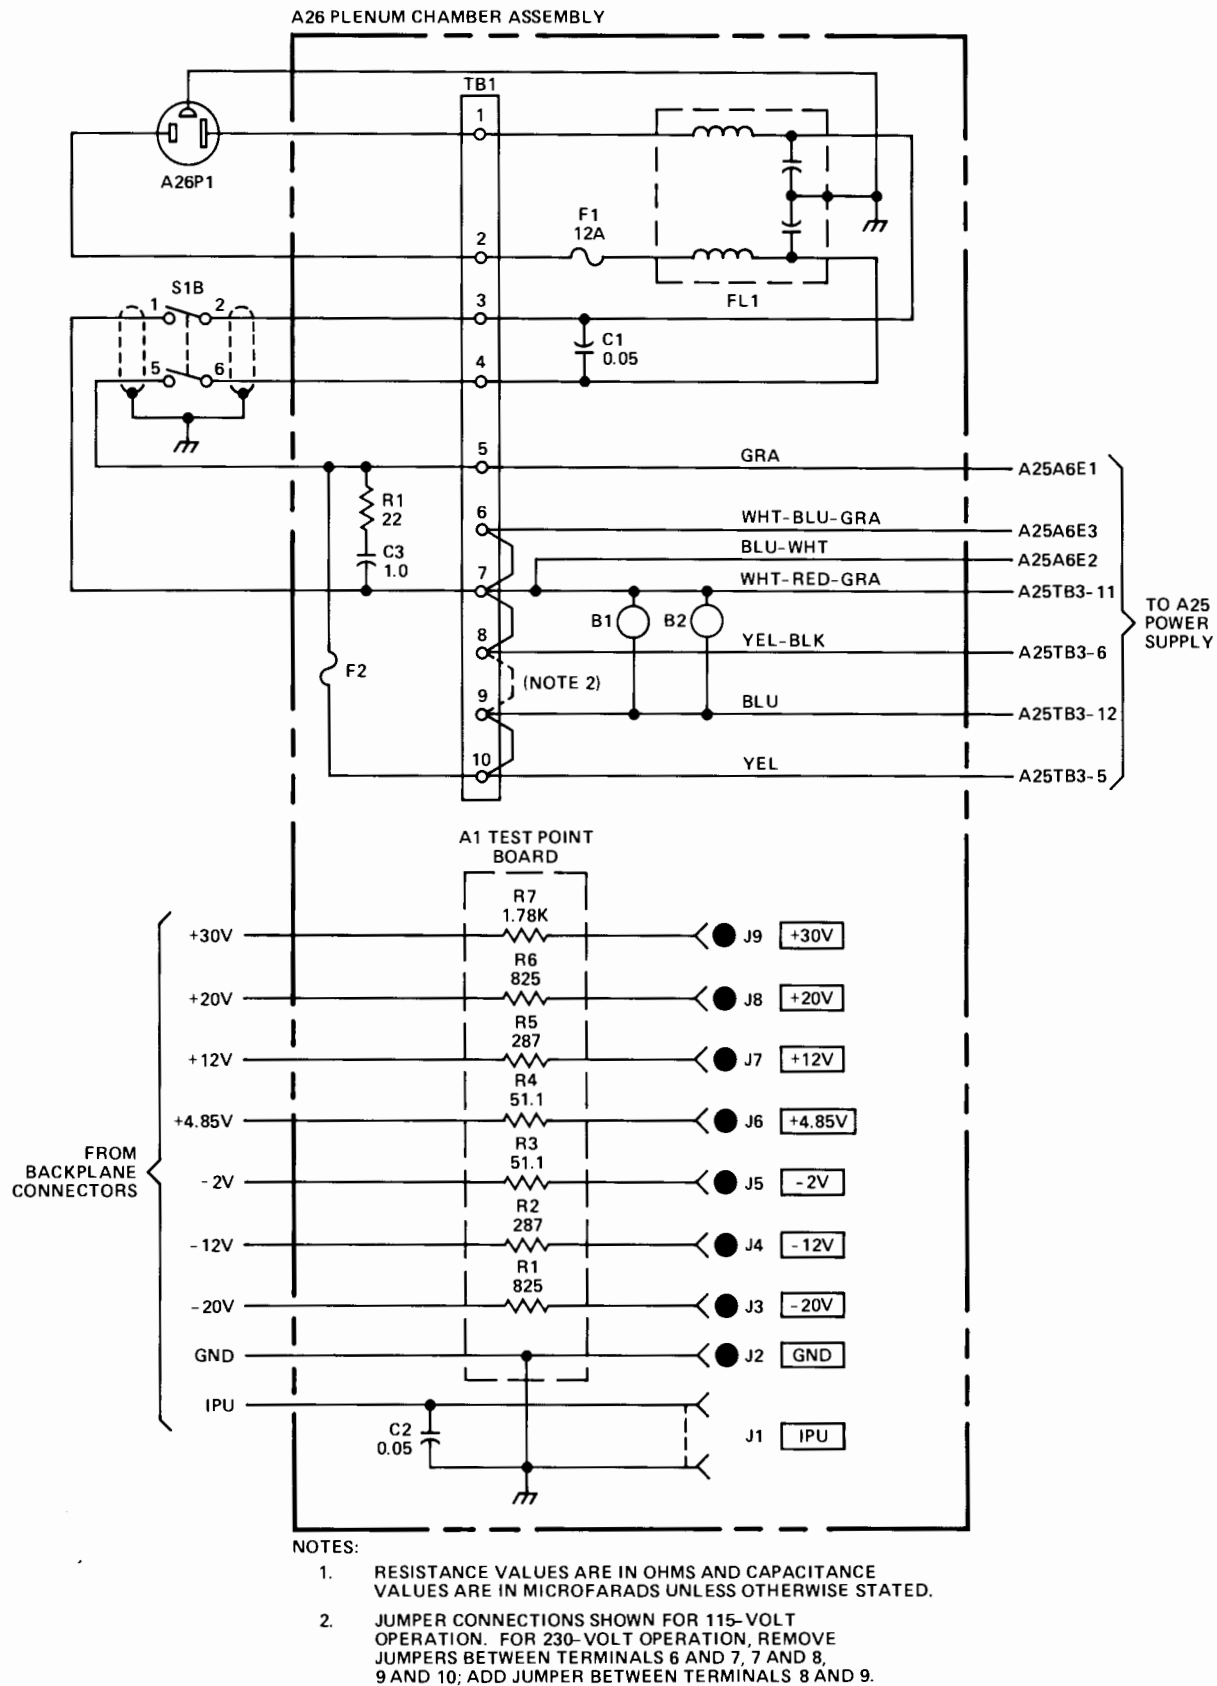


Figure 4-31. A26 Plenum Chamber Assembly, Schematic Diagram