

## 9.1 CD-ROM Drive: SunCD Plus and SunCD 2Plus

### 9.1.1 Removal

The CD-ROM drive (SunCD) is located on the bottom left side of the SCSI tray assembly.

1. **Disconnect the power and SCSI-2 cables from the rear of the drive.**
2. **Remove two screws (SCSI tray rear - near the bottom) securing the bracket to the tray. Remove the 5 1/4-inch device bracket from the tray.**  
See Figure 9-1.

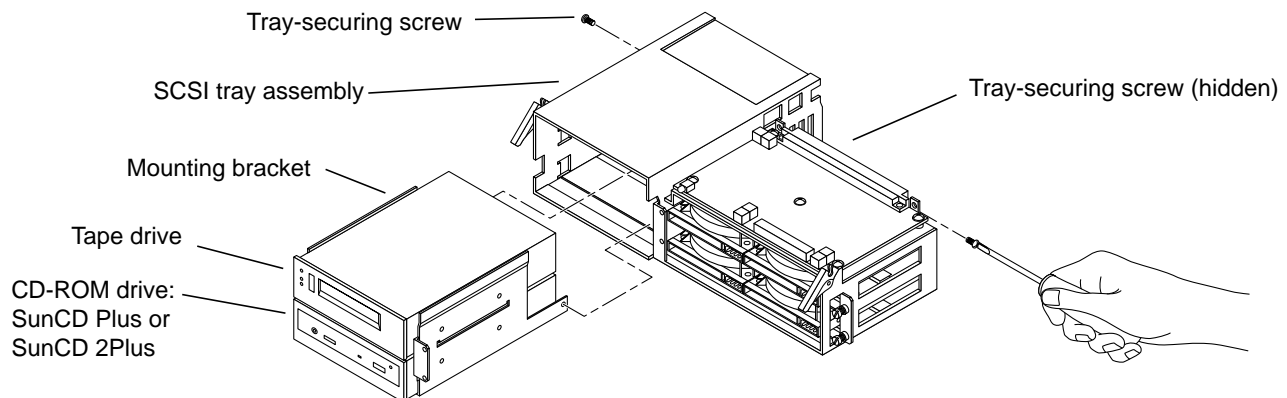


Figure 9-1 Removing the Mounting Bracket from the SCSI Tray

3. **Slide the bracket out of the tray from the front.**
4. **Remove four screws that secure the CD-ROM drive to the bracket.**  
See Figure 9-2.
5. **Remove the CD-ROM drive from the 5 1/4-inch device bracket.**

---

**Note** – Slide the drive out from the front if a tape drive is mounted above it.

---